

SERIES
4

LCD TV

quick start guide

imagine the possibilities

Thank you for purchasing a Samsung product.
To receive a more complete service, please
register your product at

www.samsung.com/global/register

 


connections

⚠ Caution

- When connecting an external device, match the colour of the connection terminal to the cable.
- The product colour and shape may vary depending on the model.
- Each Cable Box/Satellite receiver (Set-Top Box) has a different back panel configuration.
- Whenever you connect an external device to your TV, make sure that power on the unit is turned off.


CONNECTING A CABLE BOX/SATELLITE RECEIVER (SET-TOP BOX) VIA HDMI

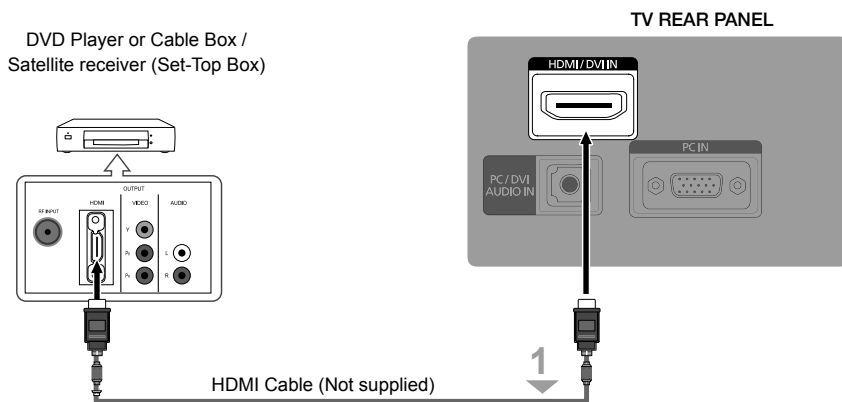

1. Connect an HDMI Cable(Not supplied) between the HDMI / DVI IN jack on the TV and the HDMI jack on the Cable Box/Satellite receiver (Set-Top Box).


- No additional Audio connection is needed for an HDMI to HDMI connection.
- When using an HDMI/DVI cable connection, you must use the HDMI / DVI IN jack.

 CONNECTING A CABLE BOX/SATELLITE RECEIVER (SET-TOP BOX) VIA DVI

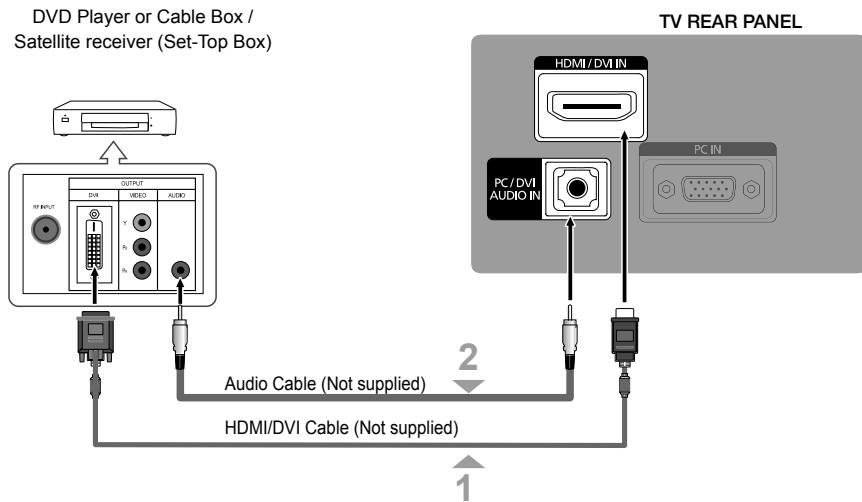

1. Connect an HDMI Cable(Not supplied) between the HDMI / DVI IN jack on the TV and the HDMI jack on the Cable Box/Satellite receiver (Set-Top Box).
 2. Connect Audio Cables(Not supplied) between the DVI AUDIO IN jack on the TV and the Cable Box/Satellite receiver (Set-Top Box).
- When using an HDMI/DVI cable(Not supplied) connection, you must use the HDMI / DVI IN jack.
-

 
CONNECTING A CABLE BOX/SATELLITE RECEIVER (SET-TOP BOX) VIA COMPONENT CABLES

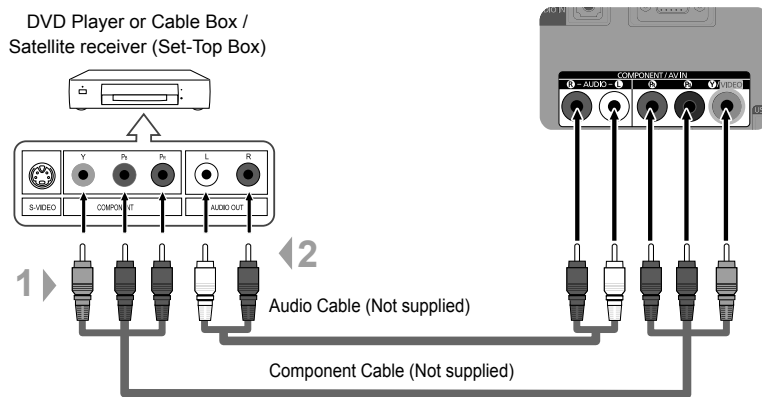

1. Connect a Component Cable(Not supplied) between the COMPONENT IN [Y, Pb, Pr] jacks on the TV and the COMPONENT jacks on the Cable Box/Satellite receiver (Set-Top Box).
 2. Connect Audio Cables(Not supplied) between the COMPONENT IN [R-AUDIO-L] jacks on the TV and the AUDIO OUT jacks on the Cable Box/Satellite receiver (Set-Top Box).
-

How to Navigate Menus

 Before using the TV, follow the steps below to learn how to navigate the menu and select and adjust different functions.

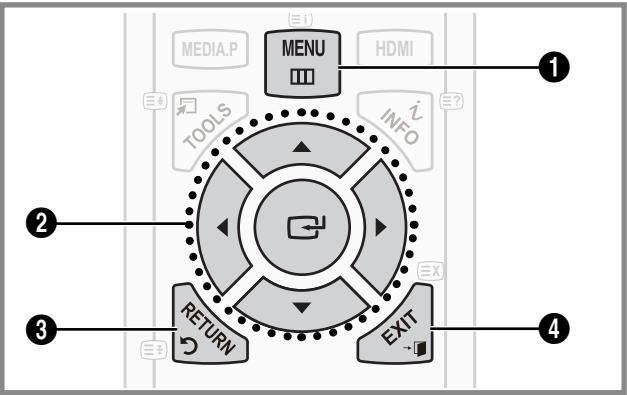

- ➊ **MENU** button: Displays the main on-screen menu.
- ➋ **ENTER** / Direction button: Move the cursor and select an item. Confirm the setting.
- ➌ **RETURN** button: Returns to the previous menu.
- ➍ **EXIT** button: Exits the on-screen menu.

HOW TO OPERATE THE OSD (ON SCREEN DISPLAY)

The access step may differ depending on the selected menu.

➊	MENU	The main menu options appears on the screen: Picture, Sound, Channel, Setup, Input.	➍	ENTER	Press ENTER to access the sub-menu.
➋	▲ / ▼	Select an icon with the ▲ or ▼ button.	➎	▲ / ▼	Adjust the value of an item with the ▲ or ▼ button. The adjustment in the OSD tmenu.
➌	ENTER	Press ENTER to access the sub-menu.	➏	ENTER	Press ENTER to complete the configuration.
➍	▲ / ▼	Select the desired submenu with the ▲ or ▼ button.	➐	EXIT	Press EXIT.



Contact SAMSUNG WORLDWIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

Country	Customer Care Centre ☎	Web Site
AUSTRALIA	1300 362 603	www.samsung.com
NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com
CHINA	400-810-5858	www.samsung.com
HONG KONG	(852) 3698-4698	www.samsung.com/hk
INDIA	3030 8282 1800 3000 8282	www.samsung.com
INDONESIA	0800-112-8888 021-5699-7777	www.samsung.com
JAPAN	0120-327-527	www.samsung.com
MALAYSIA	1800-88-9999	www.samsung.com
PHILIPPINES	1-800-10-SAMSUNG(726-7864) 1-800-3-SAMSUNG(726-7864) 1-800-8-SAMSUNG(726-7864) 02-5805777	www.samsung.com
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com
THAILAND	1800-29-3232 02-689-3232	www.samsung.com
TAIWAN	0800-329-999	www.samsung.com
VIETNAM	1 800 588 889	www.samsung.com