

quick start guide

English

RF4287H***
RFG28M***

Product features



Surround Multi Flow

Uniform cooling for each shelf and even in corner in fresh food compartment by centerpositioned fan and duct with multiple flow effluences.



Counter Height Design

The Independent Mid Drawer (Flex zone) is counter Height to fit contemporary kitchen.



Twin Cooling System

The refrigerator and the freezer have two evaporators. Given this independent system, the freezer and the refrigerator are cooled individually as required and are, therefore, more efficient. Food odor from the refrigerator does not affect food in the freezer due to separate air flow circulation.



Two Lever Dispenser

Two lever dispenser can be get ice or water easily.



Flex Zone

 
The Flex Zone is a full-width independent mid drawer with adjustable temperature control.



Secure Auto Close Door System

- Secure Auto Close Door System
- Cool tight doors
- Energy saving
- Preventing sweat on fridge doors

The installation space

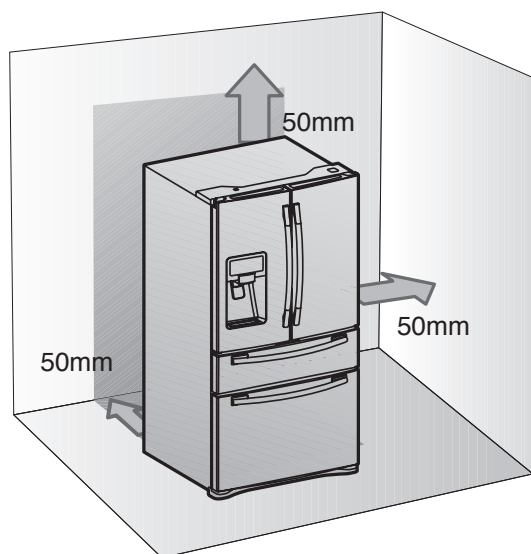

Selecting the best location for the refrigerator

- A location with easy access to the water supply.
- A location without direct exposure to sunlight.
- A location with level (or nearly level) flooring.
- A location with enough space for the Refrigerator doors to open easily.
- Allow sufficient space to the right, left, back and top for air circulation.
If the Refrigerator does not have enough space, the internal cooling system may not work properly.
- Please ensure that appliance can be moved freely in the event of maintenance & service.



- Allow clearance to the right, left, back and top when installing.
This will help reduce power consumption and keep your energy bills lower.
- Do not install the Refrigerator where the temperature will go below 50°F (10°C).



When moving your refrigerator

- To prevent floor damage be sure the front leveling legs are in the up position (above the floor).
Refer to 'ADJUSTING THE DOORS' in the manual.



FLOORING

 
For proper installation, this refrigerator must be placed on a leveled surface of hard material that is the same height as the rest of the flooring.

This surface should be strong enough to support a fully loaded refrigerator, or approximately 359lbs (165kg).

To protect the finish of the flooring, cut a large section of the cardboard carton and place it under the refrigerator where you are working.


When moving a refrigerator, you need to pull and push it straight forwards or back.

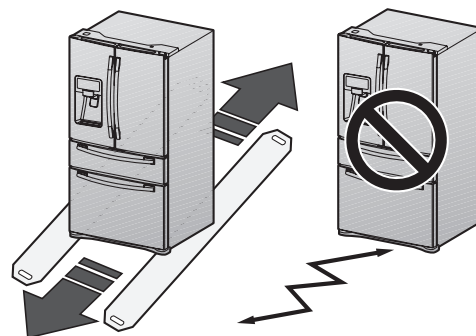


Do not wiggle it from side to side.



 Operating your samsung refrigerator

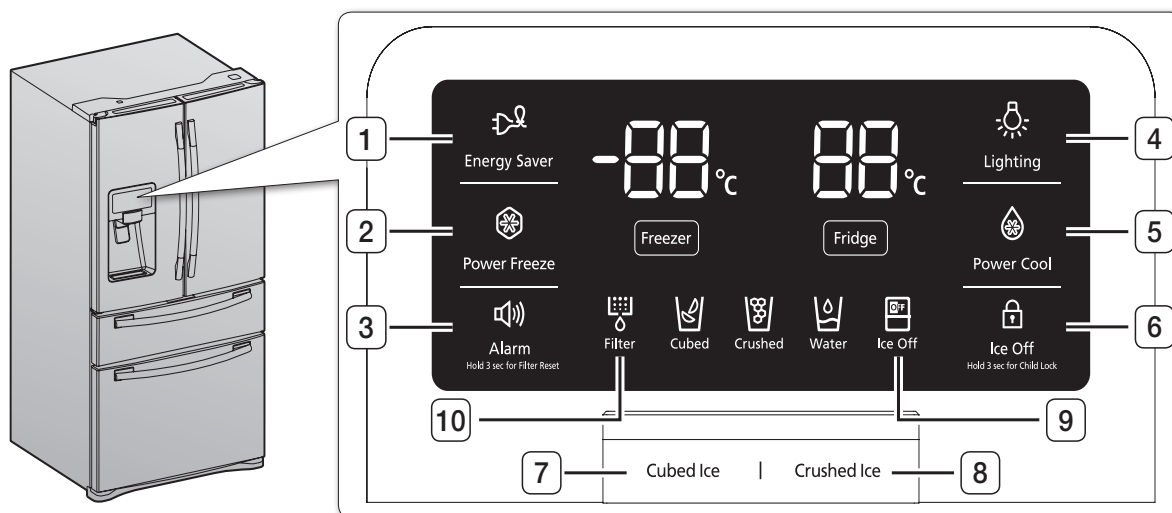










USING THE CONTROL PANEL



<p>(1) Energy Saver</p> 	<p>Press the Energy Saver button for better energy efficiency. The Energy Saver icon lights up when you press the Energy Saver button. The Energy Saver function is automatically set to “ON” when power is supplied to the refrigerator. If condensation or water drops appear on the doors, turn the Energy Saver mode off.</p>
<p>(2) Power Freeze</p> 	<p>The Power Freeze function substantially speeds up the freezer compressor, causing the freezer to cool down rapidly to a temperature you choose. When you press the Power Freeze button, the Power Freeze icon lights up. Power Freeze is useful if you need to quick freeze an item, to make a large quantity of ice, or to cool the freezer rapidly if it has warmed dramatically (for example, if the door was left open). To turn off Power Freeze, press the Power Freeze button again. Power Freeze turns off automatically after 72hours to decrease energy consumption. When you use this function the energy consumption of the refrigerator will increase. Remember to turn it off when you don’t need it and return the freezer to your original temperature setting. If you need to freeze large amount of food stuff, set the temperature of freezer compartment as the coldest temperature before you turn on the Power Freeze Button.</p>
<p>(3) Alarm / hold 3 sec for Filter Reset</p>  <p>(Filter Reset)</p>	<p>The Alarm/Hold 3 sec for Filter Reset button serves two purposes:</p> <ul style="list-style-type: none"> - To turn the door open alarm on and off - To reset the water filter life indicator. <p>1) Door Alarm Function If the door alarm is set to On, an alarm beeps if any refrigerator door is left open for more than three minutes. The beeping stops when you close the door. The door alarm function is pre-set to On in the factory. You can turn it off by pressing and then releasing the Alarm/Hold button. You can turn it back on in the same fashion. The icon lights up when the function is on.</p> <p>2) Water Filter Life Indicator Function After you replace the water filter, press and hold the Alarm/Hold 3 sec for Filter Reset button to re-set the water filter life indicator. The Filter icon will turn red to let you know it is time to change the water filter after six months (about 1135 L).</p>



Some areas have large amounts of lime in their water, which causes the water filter to clog more quickly. If this is the case in your area, you will have to change the filter more frequently than every six months.

<p>(4) Lighting</p> 	<p>Pressing the Lighting button turns on the Dispenser LED lamp (under the display) in continuous mode so that it stays on continuously. The button also lights up.</p> <p>If you want the Dispenser lamp to come on only when some one uses the dispenser, press the Lighting button to turn the continuous mode off.</p>
<p>(5) Power Cool</p> 	<p>The Power Cool function substantially speeds up the refrigerator compressor, causing the refrigerator to cool down rapidly to a temperature you choose.</p> <p>When you press the Power Cool button, the Power Cool icon lights up.</p> <p>Power Cool is useful if you need to quickly cool items or need to cool the refrigerator rapidly if it has warmed dramatically (for example, if the door was left open).</p> <p>To turn off Power Cool, press the Power Cool button again.</p> <p>Power Cool turns off automatically after 2 1/2 hours to decrease energy consumption.</p> <p> When you turn on Power Cool, the refrigerator's compressor speeds up and is louder than during normal operation.</p>
<p>(6) Ice Off (Hold 3 sec for Child lock)</p> 	<p>If you don't want to make more ice, press the Ice Off button.</p> <p>Pressing this button 3 second locks the display panel and dispenser buttons so the buttons can not be used.</p> <p>The Child Lock icon lights up to indicate you've activated the Child Lock function.</p>
<p>(7) Cubed Ice</p> <p>(8) Crushed Ice</p>   <p>(Cubed) (Crushed)</p>	<p>Press the Cubed Ice or Crushed Ice button to select the type of ice you want dispensed.</p> <p>Each time you press the button, the cubed and crushed ice modes alternate and the Cubed or Crushed ice icon lights up, indicating your selection.</p> <p>If you don't need ice, turn the function off to save on water and energy consumption (See Ice Off below).</p>
<p>(9) Ice Off</p> 	<p>If you don't want to make more ice, press the Ice Off button.</p> <p>The icon will light up and the Ice-Maker stops making ice.</p> <p>We recommend you stop ice making if the following occur:</p> <ul style="list-style-type: none"> - There is enough ice in the ice bucket. - You want to save water and energy. - Water is not being supplied to the refrigerator. <p> If the ice maker function is ON, and the water line is not connected, there will be a water valve noise from back of the unit.</p> <p>Press the Ice Off (6) button until the Ice Off indicator () illuminates.</p>
<p>(10) Filter</p>  <p>(Red) (Reset the indicator)</p>	<p>Water filter usage</p> <ol style="list-style-type: none"> 1. Normally the filter indicator is blue, yellow, or green when you purchase or install your refrigerator, depending on your model. 2. After you use about 1020 L of water, the filter indicator turns Light Pink. (about 5 months) 3. After you use about 1135 L of water, the filter indicator turns Red. (about 6 months) 4. Remove the old water filter and install a new one when the filter indicator is red. <p>Reset the filter indicator by pressing Alarm/Hold 3 sec for Filter Reset button for 3sec.</p> <p> • If water is not dispensing or dispensing slowly, you need to replace the water filter because the water filter is clogged.</p> <p>• Some areas have large amounts of lime in their water, which causes the water filter to clog more quickly.</p>

USING THE DIGITAL DISPLAY

Basic temperature of Freezer and Refrigerator Compartments

The basic temperature and/or recommended temperature of Freezer and Refrigerator Compartments are -19°C and 3°C respectively.

If the temperature of Freezer and Refrigerator Compartments are too high or low, adjust the temperature manually.

Controlling the Freezer temperature

The Freezer temperature can be set between -14°C and -22°C to suit your particular needs.

Press the Freezer button repeatedly until the desired temperature is shown in the temperature display.

The temperature will move 1°C degrees with each press (-19°C → -20°C → -21°C → -22°C → -14°C → -15°C → -16°C → -17°C → -18°C → -19°C).

Keep in mind that foods like ice cream may melt at 0°C.

The temperature display will move sequentially from -22°C to -14°C. Five seconds after the new temperature is set, the display will again show the actual current freezer temperature until the new temperature is reached.

Controlling the Refrigerator temperature

The Refrigerator temperature can be set between 7°C and 1°C to suit your particular needs.

Press the Fridge button repeatedly until the desired temperature is shown in the temperature display.


The temperature will move 1°C degrees with each press (3°C → 2°C → 1°C → 7°C → 6°C → 5°C → 4°C → 3°C).

The temperature control process for the Fridge works just like the Freezer process.

Press the Fridge button to set your desired temperature.

After a few seconds, the Fridge will begin adjusting towards the newly set temperature.

This will be reflected in the digital display.

-  - The temperature of the Freezer, fridge or Convertible Room may rise when you open the doors too frequently, or if a large amount of warm or hot food is placed inside.
- This may cause the digital display to blink.
 - Once the Freezer and fridge temperature return to their normal set temperatures, the blinking will stop.
- If the blinking continues, you may need to “reset” the Refrigerator.
 - Try unplugging the appliance, wait for around 10 minutes and then plug the power cord back in.
- If there is an communication error between the Display and Main Controller, the Convertible Display light may blink.
 - Once the normal set temperatures are reached, the blinking will stop.
 - If the blinking continues for a long period of time, please contact a Samsung Electronics Service Center.

Troubleshooting

PROBLEM	SOLUTION
The refrigerator does not work at all or it does not chill sufficiently.	<ul style="list-style-type: none">• Check that the power plug is properly connected.• Check if the set temperature on the digital display is warmer than the freezer or fridge inner temperature. If it is, set the refrigerator colder.• Is the refrigerator in direct sunlight or located near a heat source?• Is the back of the refrigerator too close to the wall, preventing proper ventilation?
The food in the fridge is frozen.	<ul style="list-style-type: none">• Check if the set temperature on the digital display is too low.• Try setting the refrigerator to a warmer temperature.• Is the temperature in the room too low? Set the refrigerator warmer.• Did you store the food which is juicy in the coldest part of the refrigerator? Try moving those items to the other shelves in fridge instead of keeping them in the colder areas or bins.
You hear unusual noise or sounds.	<ul style="list-style-type: none">• Check that the refrigerator is level and stable.• Is the back of the refrigerator too close to the wall, preventing proper ventilation? Try moving the back of the refrigerator at least 50 mm from the wall.• Was anything dropped behind or under the refrigerator?• A “ticking” sound is heard from inside the refrigerator. It is normal and occurs because various accessories are contracting or expanding according to the temperature of the refrigerator interior.• If it sounds as if something is hitting something else inside the refrigerator, this is normal. The sound is caused by the compressor operating at high capacity.
The cabinet-door sealing area of the appliance is hot and condensation is occurring.	<ul style="list-style-type: none">• Some heat is normal as anti-condensators are installed in the vertical hinged section of the refrigerator to prevent condensation.• Is the refrigerator door ajar? Condensation can occur when you leave the door open for a long time.• If it sounds as if something is hitting something else inside the refrigerator, this is normal. The sound is due to the compressor is operating highly.
Ice Maker is not producing ice.	<ul style="list-style-type: none">• Did you wait for 12 hours after installation of the water supply line before making ice?• Is the water line connected and the shut-off valve opened?• Did you manually stop the ice making function?• Is the freezer temperature too warm? Try setting the freezer temperature lower.
You can hear water bubbling in the refrigerator.	<ul style="list-style-type: none">• This is normal. The bubbling comes from refrigerant circulating through the refrigerator.
There is a bad smell in the refrigerator.	<ul style="list-style-type: none">• Check for spoiled food.• Foods with strong odors (for example, fish) should be tightly covered.• Clean out your freezer periodically and throw away any spoiled or suspicious food.
Frost forms on the walls of the freezer.	<ul style="list-style-type: none">• Is the air vent blocked? Remove any obstructions so air can circulate freely.• Allow sufficient space between the stored foods for efficient air circulation.• Is the freezer drawer closed properly?
Water dispenser is not functioning.	<ul style="list-style-type: none">• Is the water line connected and the shut-off valve opened?• Has the water supply line tubing been crushed or kinked?• Make sure the tubing is free and clear of any obstruction.• Is the water tank frozen because the fridge temperature is too low? Try selecting a warmer setting on the Digital display.
Auto close system does not work with the freezer door.	<ul style="list-style-type: none">• Is there an imbalance between the right and left parts of the door?• Open and close the door smoothly 1~2 times. After you do this, the auto close system usually works properly again.• Try opening the door smoothly to avoid unbalancing the right part and the left part of the door.