



# working table installation guide

SL-WKT101

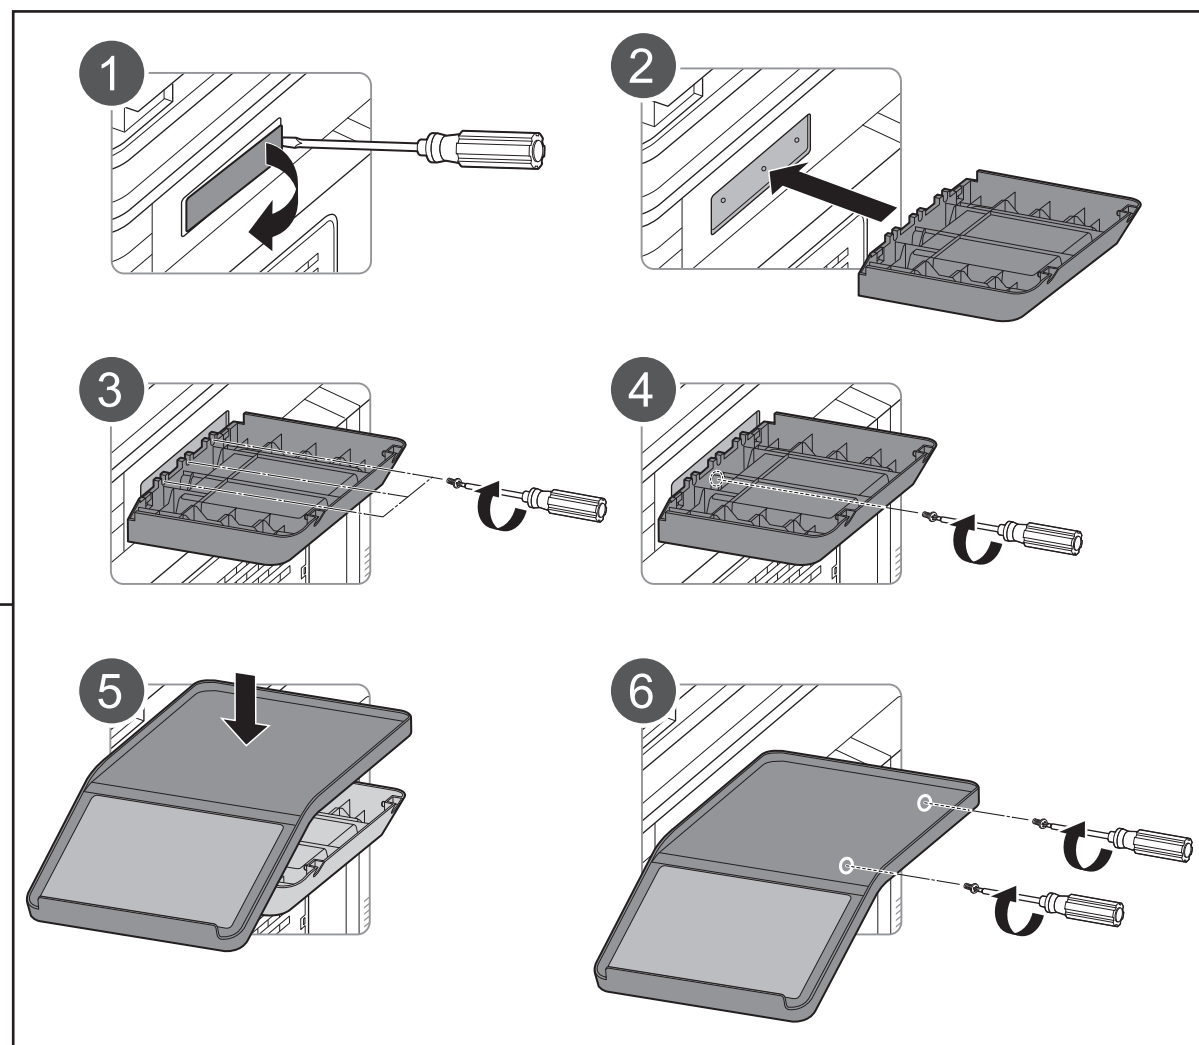

JC68-02448A04

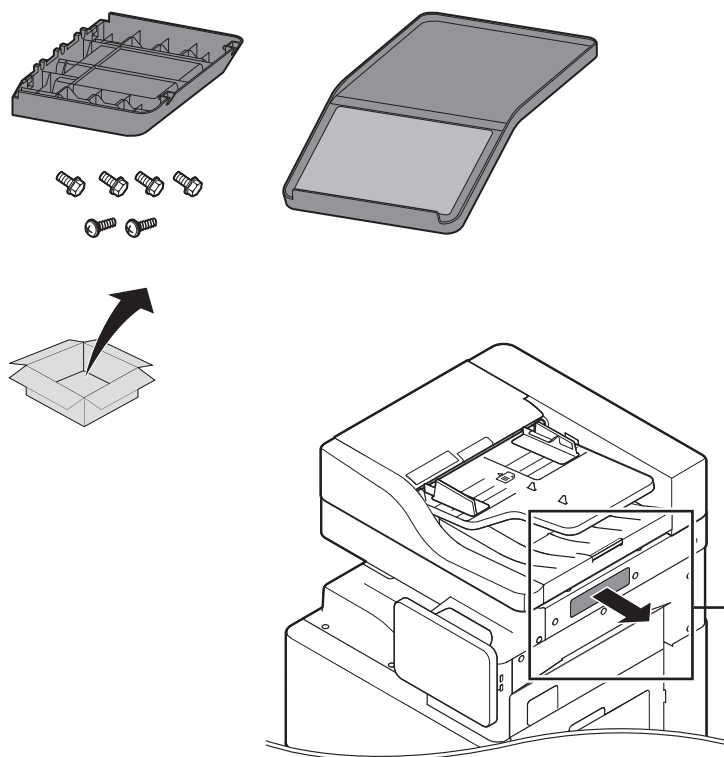

# working table installation guide

CLX-WKT000  
CLX-WKT001

