

UPGRADE using CD

Make sure that the upgrade file name is all in capital
(depend on what software in previous set)

NOTE: the BIN is the extension for the file type

 
if previous SW:

DVD-D530K -> D550K.BIN

DVD-D360K -> D370K.BIN


DVD-C360KS, DVD-C450KS -> C450.BIN

DVD-C550K -> C550K.BIN

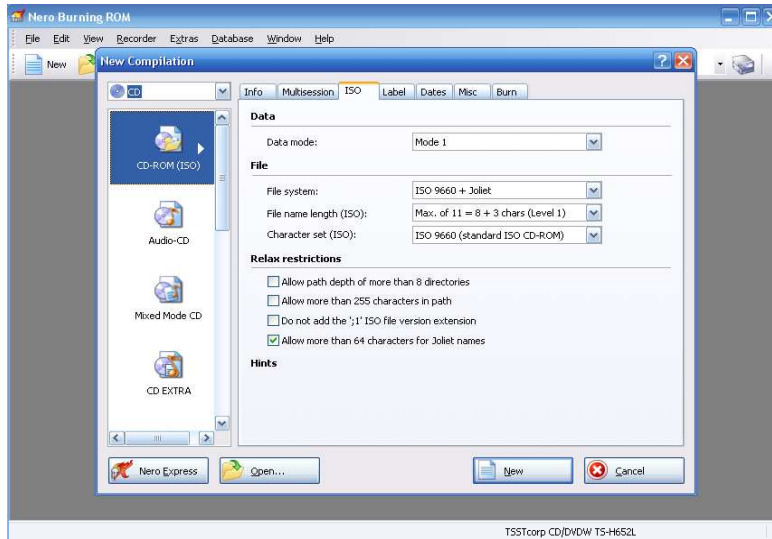

Use this ISO setting to make CD upgrade

NOTE: please use new blank CD for CD upgrade

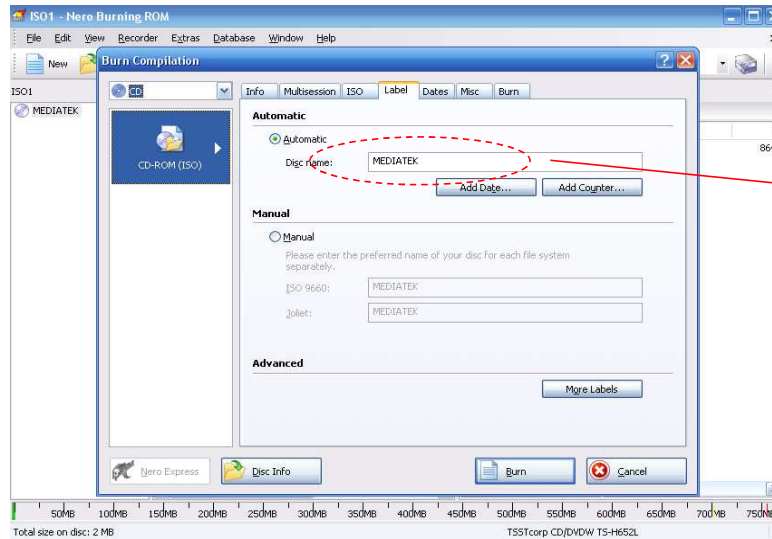

Use MEDIATEK (all in capital) as the CD upgrade name

Start burning then insert the CD to the DVD player and follow the instruction

Don't turn off the player while upgrading, until it turn off automatically

UPGRADE using USB

Make sure that the upgrade file name is all in capital
(depend on what software in previous set)

NOTE: the BIN is the extension for the file type

if previous SW:

DVD-D530K -> D550K.BIN

DVD-D360K -> D370K.BIN

DVD-C360KS, DVD-C450KS -> C450.BIN

DVD-C550K -> C550K.BIN

Place the file in the ROOT of USB (don't place it
inside folder)

Plug USB to the player and follow the instruction to
upgrade

Don't turn off the player while upgrading, until it turn
off automatically