


# How to upgrade RMD Firmware


## ● Main SW (Main-Micom) Upgrade

- Save SW program “T-NT14LLDEUC.zip” to PC from website.

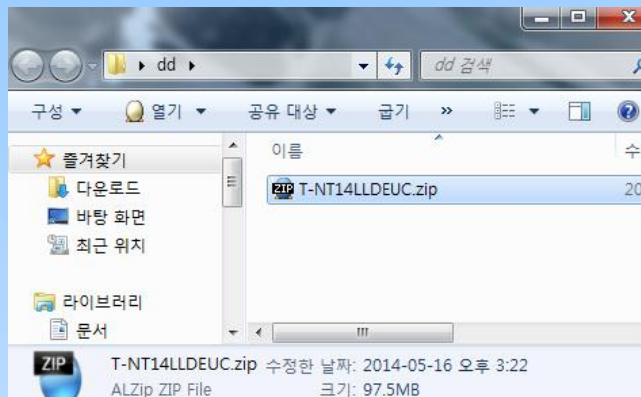

Country	SW Code
Korea / US / Canada / Mexico	T-NT14LLAKUC.zip
Latin America	T-NT14LLIBRC.zip
EU / CIS (Russia, Uzbekistan,...) / Turkey / Africa	T-NT14LLDEUC.zip
Asia	T-NT14LLDAAC.zip
China / Hong kong	T-NT14LLDCNC.zip

- Unzip the file and Copy a “T-NT14LLDEUC” **folder** to **Root folder of a USB Disk**


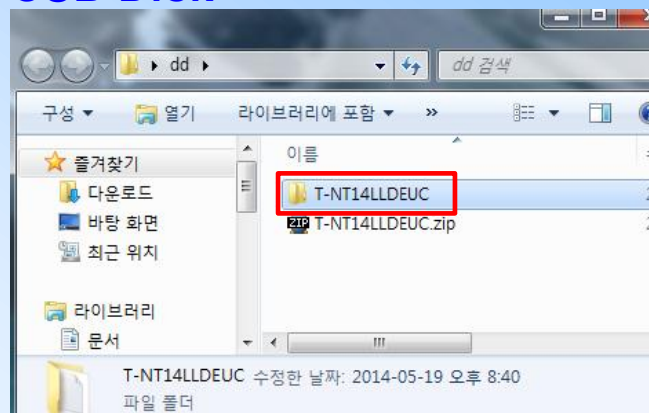


Country	Folder
Korea / US / Canada / Mexico	T-NT14LLAKUC
Latin America	T-NT14LLIBRC
EU / CIS (Russia, Uzbekistan,...) / Turkey / Africa	T-NT14LLDEUC
Asia	T-NT14LLDAAC
China / Hong kong	T-NT14LLDCNC

# How to upgrade RMD Firmware

## How to upgrade Software


1. Connect USB disk to a Set.
2. Click the “Menu” on remote controller.
3. Select “Support”
4. Select “Software Upgrade ”
5. Select “Update now ”

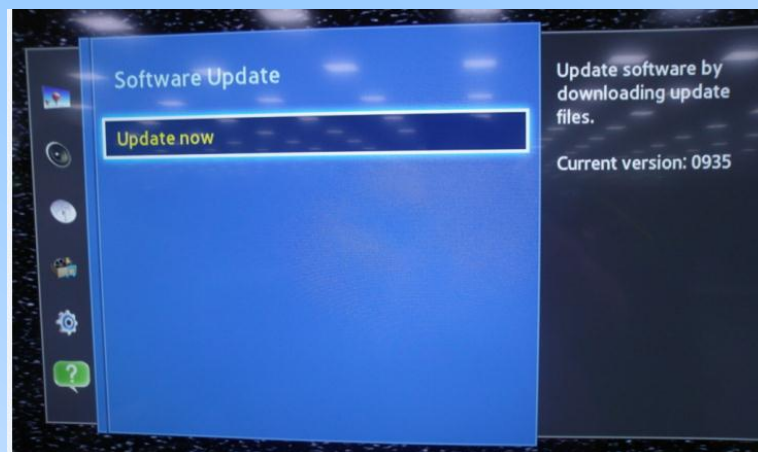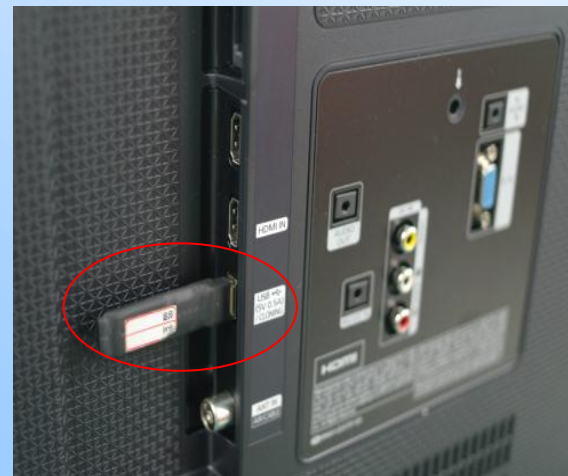



# How to upgrade RMD Firmware

## How to upgrade Software

● Click "Enter"

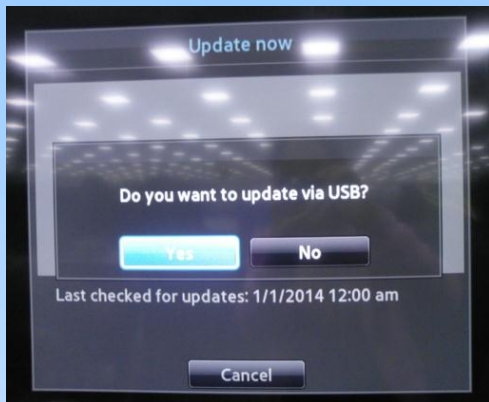

● Click "Enter"

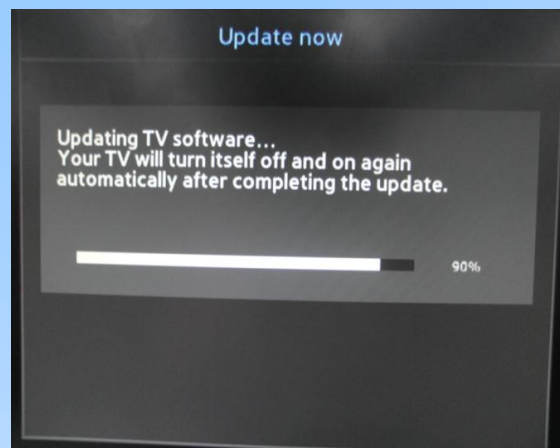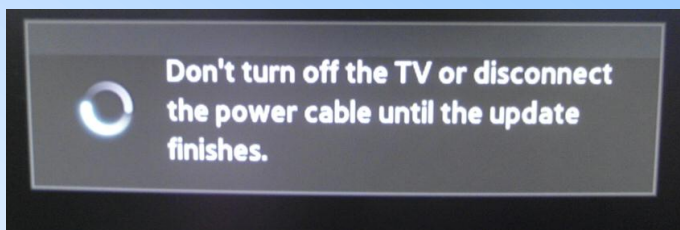

● Wait until the update is over.

● Check the SW version.



Thank you.