


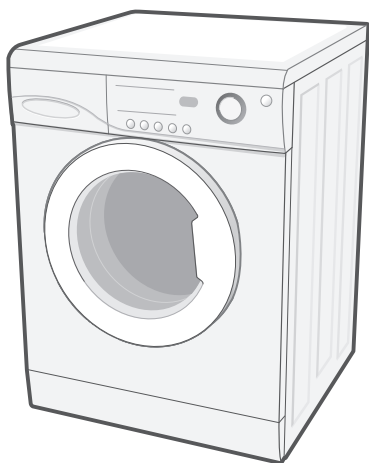

SAMSUNG

Washing Machine Owner's Instructions

**WF- J1461(V/S/C), J1261(V/S/C),
J1061(V/S/C), J861(V/S/C)
WF- B1461(V/S/C), B1261(V/S/C),
B1061(V/S/C), B861(V/S/C)
WF- R1261(V/S/C), R1061(V/S/C),
R861(V/S/C)
WF- F1261(V/S/C), F1061(V/S/C),
F861(V/S/C)
WF-S1061(V/S/C), S861(V/S/C)**



Safety Precautions	2
Before using the appliance	2
Safety instructions.	2
Installing the Washing Machine	3
Unpacking the Washing Machine	3
Overview of the washing machine	3
Selecting a location	3
Adjusting the leveling feet	3
Removing the shipping bolts	4
Connecting the water supply hose	4
Positioning the drain hose.	4
Plugging in the machine.	5
Washing a Load of Laundry.	6
Overview of the control panel	6
Washing for the first time	7
Putting detergent in the washing machine.	7
Washing clothes manually.	7
Selecting options	8
Washing tips and hints	8
Maintaining the Washing Machine	9
Repairing a frozen washing machine	9
Cleaning the exterior	9
Cleaning the debris filter.	9
Cleaning the water hose mesh filter.	9
Troubleshooting.	10
Problems and solutions	10
Understanding error messages.	10
Programme Chart	11
Appendix	12
Fabric care chart	12
Electrical warnings	12
Protecting the environment.	12
Declaration of conformity	12
Specification	13

Register your product at
www.samsung.com/global/register
CODE NO : DC68-02350E-01_EN