

Mobile Phone
user manual

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

www.samsungmobile.com

Printed in Korea
Code No.:GH68-24796A
English (CEN). 07/2009. Rev. 1.0

SAMSUNG



WARNING

Safety warnings

Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

Protect your hearing



Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phones in a fire. Follow all local regulations when disposing used batteries or phones.
- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

Turn off the phone in potentially explosive environments

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

Reduce the risk of repetitive motion injuries

While using your phone, hold the phone with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.

Do not use the phone if the screen is cracked or broken

Broken glass or acrylic could cause injury to your hand and face. Bring the phone to a Samsung service centre to replace the screen. Damage caused by careless handling will void your manufacturer's warranty.

CE0168



CAUTION

Safety precautions

Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury.

Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

Turn off the phone or disable the wireless functions when in an aircraft

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/ 113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and – terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Handle your phone carefully and sensibly

- Do not disassemble your phone due to a risk of electric shock.
- Do not allow your phone to get wet—liquids can cause serious damage and will change the colour of the label that indicates water damage inside the phone. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.
- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.
- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your phone, as paint can clog moving parts and prevent proper operation.
- If your phone has a camera flash or light, avoid using it close to the eyes of children or animals.
- Your phone may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with

magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

Avoid interference with other electronic devices


Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.



Important usage information

Use your phone in the normal position

Avoid contact with your phone's internal antenna.

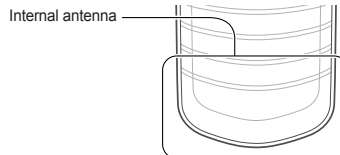

Allow only qualified personnel to service your phone

Correct disposal of this product

(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

Correct disposal of batteries in this product

(Applicable in the European Union and other European countries with separate battery return systems.)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

Specific Absorption Rate (SAR) certification information

Your phone conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile phones that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 watts per kilogram.

During testing, the maximum SAR recorded for this model was 0.620 watts per kilogram. In normal use, the actual SAR is likely to be much lower, as the phone has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your phone reduces your overall exposure to RF energy. The Declaration of Conformity of this manual demonstrates your phones compliance with the European Radio & Terminal Telecommunications Equipment (R&TTE) directive. For more information about the SAR and related EU standards, visit the Samsung mobile phone website.

This EEE is compliant with RoHS.

SAMSUNG
ELECTRONICS

SAMSUNG

Declaration of Conformity (R&TTE)

We, **Samsung Electronics**
declare under our sole responsibility that the product

GSM Mobile Phone : GT-E1080T

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN60950-1:2001+A11:2004
EMC	EN301489-01V1.6.1(09-2005) EN301489-07V1.3.1(11-2005)
SAR	EN50360:2001 EN62209-1:2006
RADIO	EN301511V9.0.2(03-2003)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Balfour House, Churchfield Road,
Walton-on-Thames, Surrey, KT12 2TD, UK*
Identification mark: 0168

The technical documentation kept at :

Samsung Electronics QA Lab.

which will be made available upon request.
(Representative in the EU)


Samsung Electronics Euro QA Lab.
Blackbushe Business Park, Saxony Way,
Yateley, Hampshire, GU46 6GG, UK*

2009.07.03
(place and date of issue)

Yong-Sang Park / S. Manager
(name and signature of authorised person)

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.

Phone layout

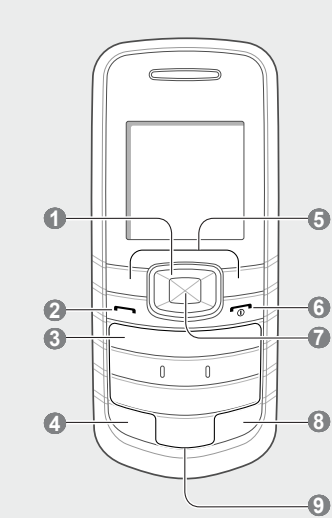

- 1**

4-way navigation key
In Idle mode, access user-defined menus (depending on your service provider, pre-defined menus may differ), activate the torch light (up), and make a fake call (down); In Menu mode, scroll through menu options
► *Activate the torch light*
► *Make fake calls*
- 2**

Dial key
Make or answer a call; In Idle mode, retrieve recently dialed, missed, or received numbers; Send an SOS message
► *Activate and send an SOS message*
- 3**

Voice mail service key
In Idle mode, access voice mails (press and hold)
- 4**

Lock key
In Idle mode, lock or unlock the keypad (press and hold)
- 5**

Softkeys
Perform actions indicated at the bottom of the display
- 6**

Power/Menu exit key
Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode
- 7**

Confirm key
In Idle mode, access Menu mode or launch the web browser; In Menu mode, select the highlighted menu option or confirm an input
- 8**

Silent profile key
In Idle mode, activate or deactivate the silent profile (press and hold)
- 9**

Alphanumeric keys

Your phone displays the following status indicators on the top of the screen:

Icon	Description
	Signal strength
	GSM network connected
	Call in progress
	Call diverting active
	SOS message feature activated
	Roaming (outside of normal service area)
	Alarm activated
	New text message
	New voice mail message
	Normal profile activated
	Silent profile activated
	Battery power level

Install the SIM card and battery

1. Remove the battery cover and insert the SIM card.
-
2. Insert the battery and replace the battery cover.
-

Charge the battery

1. Plug the supplied travel adapter.
2. When charging is finished, unplug the travel adapter.
-
- To AC power outlet
- Do not remove the battery from the phone before unplugging the travel adapter first. Otherwise, the phone may be damaged.

Instructional icons

	Note: notes, usage tips, or additional information
	Followed by: the order of options or menus you must select to perform a step; for example: In Menu mode, select Messages → Create new message (represents Messages , followed by Create new message)
	Square brackets: phone keys; for example: [Power/Menu exit key] (represents the Power/Menu exit key)
	Angled brackets: softkeys that control different functions at each screen; for example: <OK> (represents the OK softkey)

Turn your phone on or off

- To turn your phone on,
- Press and hold [**Power/Menu exit key**].
 - Enter your PIN and press **<OK>** (if necessary).
 - When the setup wizard opens, customise your phone as desired following the screen.
- To turn your phone off, repeat step 1 above.

Access menus

- To access your phone's menus,
- In Idle mode, press **<Menu>** to access Menu mode.
 You may need to press the Confirm key to access Menu mode depending on your region or service provider.
 - Use the Navigation key to scroll to a menu or option.
 - Press **<Select>**, **<OK>**, or the Confirm key to confirm the highlighted option.

Add a new contact

-
- Your phone is preset to save contact to the phone memory. To change the memory location, in Menu mode, select
- Settings**
-
- Application**
-
- Phonebook**
-
- Save new contact to**
- a memory location.

Send and view messages

- To send a text message**
- In Menu mode, select **Messages** → **Create new message**.
 - Enter a destination number and scroll down.
 - Enter the message text. ► *Enter text*
 - Press the Confirm key to send the message.
- To view text messages**
- In Menu mode, select **Messages** → **Inbox**.
 - Select a text message.

4. Press **<Back>** to move up one level; Press [**Power/Menu exit key**] to return to Idle mode.
-
- When you access a menu requiring the PIN2, you must enter the PIN2 supplied by the SIM card. For details, contact your service provider.
 - Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

Make a call

- In Idle mode, enter an area code and a phone number.
 - Press [**Navigation key**] to dial the number.
 - To end the call, press [**Power/Menu exit key**].
-
- The volume through mono earphones is very low or virtually inaudible. Use stereo earphones only.

Answer a call

- When a call comes in, press [**Navigation key**].
- To end the call, press [**Power/Menu exit key**].

Adjust the volume

- To adjust the volume of the ringtone**
- In Menu mode, select **Settings** → **Profiles**.
 - Scroll to the phone profile you are using.
 If you are using the silent profile, you are not allowed to adjust the volume of the ringtone.
 - Press **<Options>** → **Edit**.
 - Select **Volume** and scroll to **Call alert**.

Make fake calls

- You can simulate an incoming call when you want to get out of meetings or unwanted conversations.
- To make a fake call,
- Press and hold the Navigation key down in Idle mode.
 - Press the Navigation key down four times when the keys are locked.

Activate the mobile tracker

- This feature helps track your phone when it is stolen or when someone tries to use your phone using other SIM card, the phone will automatically send the preset tracking message to family or friends. This feature may be unavailable due to certain features supported by your service provider.
- In Menu mode, select **Settings** → **Security** → **Mobile tracker**.
 - Enter your password and press **<OK>**.
 The first time you access Mobile tracker, you will be prompted to create and confirm a password.
 - Scroll left or right to **On**.
 - Scroll down and press the Confirm key to open the recipient list.
 - Press the Confirm key to open your contact list.
 - Select a contact.
 - Select a number (if necessary).
 - Press **<Options>** → **Save** to save the recipients.
 - Scroll down and enter the sender's name.
 - Press the Confirm key → **<Accept>**.

5. Scroll left or right to adjust the volume level.
6. Press **<Save>** → **<Back>**.

To adjust the volume of voice during a call

- While a call is in progress, press the Navigation key up or down to adjust the volume.
-
- In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

Change your ringtone

- In Menu mode, select **Settings** → **Profiles**.
 - Scroll to the profile you are using.
 - Press **<Options>** → **Edit**.
 - Select **Call ringtone**.
 - Select a ringtone.
- To switch to another profile, select it from the list.

Call a recently dialled number

- In Idle mode, press [**Navigation key**].
- Scroll left or right to a call type.
- Scroll up or down to a number or name.
- Press the Confirm key to view details of the call or [**Navigation key**] to dial the number.

Enter text

- To change the text input mode**
- Press and hold [**#**] to switch between T9 and ABC modes. Depending on your country, you may be able to access an input mode for your specific language.

Activate and send an SOS message

- In an emergency, you can send SOS messages to your family or friends for help.
- To activate the SOS message**
- In Menu mode, select **Messages** → **Settings** → **SOS messages** → **Sending options**.
 - Scroll left or right to **On**.
 - Scroll down and press the Confirm key to open the recipient list.
 - Press the Confirm key to open your contact list.
 - Select a contact.
 - Select a number (if necessary).
 - When you are finished selecting contacts, press **<Options>** → **Save** to save the recipients.
 - Scroll down and set the number of times to repeat the SOS message.
 - Press **<Save>** → **<Yes>**.
- To send an SOS message**
- With the keys locked, press [**Navigation key**] four times to send an SOS message to preset numbers. The phone switches to SOS mode and sends the preset SOS message.
 - To exit SOS mode, press [**Power/Menu exit key**].

Set and use alarms

- To set a new alarm**
- In Menu mode, select **Alarms**.
 - Select an empty alarm location.
 - Set alarm details.
 - Press **<Save>**, or press **<Options>** → **Save**.
- To stop an alarm**
- When the alarm sounds,
- Press **<OK>** or the Confirm key to stop the alarm without snooze.
 - Press **<OK>** or the Confirm key to stop the alarm with snooze, or press **<Snooze>** to silence the alarm for the snooze period.
- To deactivate an alarm**
- In Menu mode, select **Alarms**.
 - Select the alarm you want to deactivate.
 - Scroll left or right to **Off**.
 - Press **<Save>**.
-
- If the battery has been removed, the scheduled alarm may not sound.

Activate the torch light

- The torch light feature helps you see in dark places by making the display and backlight as bright as possible.
- To activate the torch light, press and hold the Navigation key up in Idle mode.
- To deactivate the torch light, press and hold the Navigation key up in Idle mode.