

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

SAMSUNG ELECTRONICS



World Wide Web
<http://www.samsungmobile.com>

Printed in Korea
Code No.:GH68-26339A
English (SEA). 12/2009. Rev. 1.1

GT-B5722 user manual



using this manual

This user manual has been specially designed to guide you through the functions and features of your mobile phone. To get started quickly, refer to “introducing your mobile phone,” “assembling and preparing your mobile phone,” and “using basic functions.”

Instructional icons

Before you start, familiarise yourself with the icons you will see in this manual:



WARNING

Warning—situations that could cause injury to yourself or others



CAUTION

 
Caution—situations that could cause damage to your phone or other equipment



Note—notes, usage tips, or additional information



Refer to—pages with related information; for example: ► p. 12 (represents “see page 12”)

- **Followed by**—the order of options or menus you must select to perform a step; for example: In Menu mode, select **Messages** → **Create new message** (represents **Messages**, followed by **Create new message**)
- [] **Square brackets**—phone keys; for example: [] (represents the Power/Menu exit key)

Copyright information

Rights to all technologies and products that comprise this phone are the property of their respective owners:

- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide
Bluetooth QD ID: B015992
- Java™ is a trademark of Sun Microsystems, Inc.

CE0168

contents

safety and usage information	1
Safety warnings	1
Safety precautions	4
Important usage information	6
 introducing your mobile phone	 12
Unpack	12
Phone layout	13
Keypad	14
Icons	15
 assembling and preparing your mobile phone	 16
Install the SIM card and battery	16
Charge the battery	18
Insert a memory card (optional)	19
Attach a hand strap (optional)	20

using basic functions 21

Turn your phone on and off	21
Use the touch screen	22
Access menus	23
Use widgets	23
Customise your phone	24
Manage your SIM cards	26
Use basic call functions	27
Send and view messages	28
Add and find contacts	30
Use basic camera functions	31
Listen to music	33
Browse the web	34
Use the Google services	35

using advanced functions 36

Use advanced call functions	36
Use advanced phonebook functions	39

Use advanced messaging functions	40
Use advanced camera functions	42
Use advanced music functions	45

using tools and applications 48

Use the Bluetooth wireless feature	48
Activate and send an SOS message	49
Make fake calls	50
Record and play voice memos	51
Edit images	52
Print images	54
Use Java-powered games and applications	54
Synchronise data	55
Create and view world clocks	56
Set and use alarms	56
Use the calculator	57
Convert currencies or measurements	57

Set a countdown timer	57
Use the stopwatch	58
Create new tasks	58
Create new memos	58
Manage your calendar	59

troubleshooting	a
------------------------------	----------

safety and usage information

Comply with the following precautions to avoid dangerous or illegal situations and ensure peak performance of your mobile phone.



Safety warnings

Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

Protect your hearing



Excessive exposure to sound at high volumes can cause hearing damage. Always turn the volume down before plugging the earphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.

Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phones in a fire. Follow all local regulations when disposing of used batteries or phones.

- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

Turn off the phone in potentially explosive environments

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

Reduce the risk of repetitive motion injuries

While using your phone, hold the phone with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.

Do not use the phone if the screen is cracked or broken

Broken glass or acrylic could cause injury to your hand and face. Bring the phone to a Samsung service centre to replace the screen. Damage caused by careless handling will void your manufacturer's warranty.



CAUTION

Safety precautions

Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury.

Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

Turn off the phone or disable the wireless functions when in an aircraft

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and - terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Handle your phone carefully and sensibly

- Do not disassemble your phone due to a risk of electric shock.
- Do not allow your phone to get wet—liquids can cause serious damage and will change the colour of the label that indicates water damage inside the phone. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.
- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.
- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your phone, as paint can clog moving parts and prevent proper operation.

CAUTION

- If your phone has a camera flash or light, avoid using it to the eyes of children or animals.
- Your phone may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

Avoid interference with other electronic devices

Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.



Important usage information

Use your phone in the normal position

Avoid contact with your phone's internal antenna.

Allow only qualified personnel to service your phone

Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.

- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

Handle SIM cards and memory cards with care

- Do not remove a card while the phone is transferring or accessing information, as this could result in loss of data and/or damage to the card or phone.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

Ensure access to emergency services

Emergency calls from your phone may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

Specific Absorption Rate (SAR) certification information

Your phone conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile phones that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 W/kg.

During testing, the maximum SAR recorded for this model was 0.685 W/kg. In normal use, the actual SAR is likely to be much lower, as the phone has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your phone reduces your overall exposure to RF energy.

The Declaration of Conformity at the back of this manual demonstrates your phone's compliance with the European Radio & Terminal Telecommunications Equipment (R&TTE) directive. For more information about the SAR and related EU standards, visit the Samsung mobile phone website.

Correct disposal of this product

(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

Correct disposal of batteries in this product



(Applicable in the European Union and other European countries with separate battery return systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

Disclaimer

Some content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal noncommercial use. You may not use any content or services in a manner that has not been authorised by the content owner or service provider. Without limiting the foregoing, unless expressly authorised by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

"THIRD PARTY CONTENT AND SERVICES ARE PROVIDED "AS IS." SAMSUNG DOES NOT WARRANT CONTENT OR SERVICES SO PROVIDED, EITHER EXPRESSLY OR IMPLIEDLY,

FOR ANY PURPOSE. SAMSUNG EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SAMSUNG DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS DEVICE AND UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE, SHALL SAMSUNG BE LIABLE, WHETHER IN CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, ANY INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES."

Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and transmission facilities over which Samsung has no control. Without limiting the generality of this disclaimer, Samsung expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device.

Samsung is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

introducing your mobile phone

In this section, learn about your mobile phone's layout, keys, and icons.

Unpack

Check your product box for the following items:

 
- Mobile phone
- Battery
- Travel adapter (charger)
- User manual



 
- The items supplied with your phone may vary depending on the software and accessories available in your region or offered by your service provider. You can obtain additional accessories from your local Samsung dealer.
- The supplied accessories perform best for your phone.

Phone layout

The front of your phone includes the following keys and features:

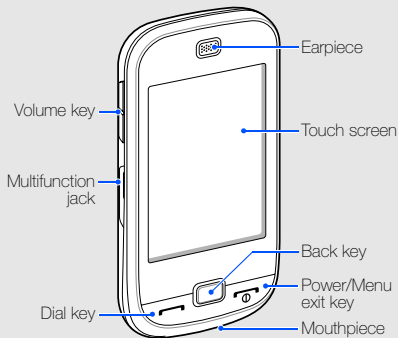



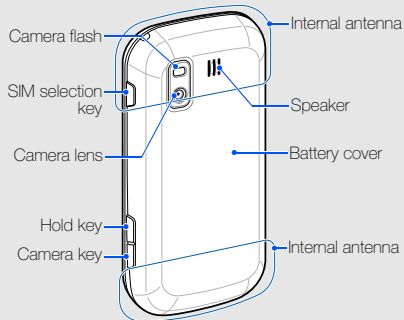




The rear of your phone includes the following keys and features:



You can lock the touch screen and keys to prevent any unwanted phone operations. To lock, press [🔒]. To unlock, press and hold [🔒].













Keypad












Key	Function
 Dial	Make or answer a call; In Idle mode, retrieve recently dialled, missed, or received numbers
 Back	Return to the previous level
 Power/ Menu exit	Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode
 Volume	Adjust the phone's volume

Key	Function
 SIM selection	Switch between SIM cards when you make calls or send messages; In Idle mode, access the SIM selection; Access the SIM card management (press and hold)
 Hold	Lock or unlock the touch screen and keys; Unlock the touch screen and keys (press and hold)
 Camera	In Idle mode, turn on the camera (press and hold); In Camera mode, take a photo or record a video

Icons

Learn about the icons that appear on your display.

Icon	Definition
	Signal strength
	GPRS network connected
	EDGE network connected
	Call in progress
	SOS message feature activated
	Connecting to secured web page
	Call diverting activated
	Synchronised with PC
	Roaming (outside of normal service area)
	Bluetooth activated
	Music playback in progress
	Music playback paused

 Icon	Definition
	FM radio on
	Memory card inserted
	New text message
	New multimedia message
	New email message
	New voice mail message
	Alarm activated
	Normal profile activated
	Silent profile activated
	Battery power level
	Current time

assembling and preparing your mobile phone

 
Get started by assembling and setting up your mobile phone for its first use.

Install the SIM card and battery

When you subscribe to a cellular service, you will receive a Subscriber Identity Module (SIM) card with subscription details, such as your personal identification number (PIN) and optional services.

To install the SIM card and battery,

1. Remove the battery cover.

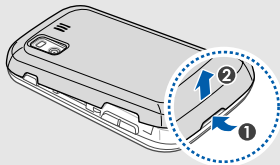


If the phone is on, press and hold [⏻] to turn it off.

2. Insert the SIM card.


Your phone has 2 SIM card slots to allow you to use 2 SIM cards and switch between them.

 ► p. 26

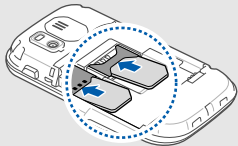


- Place the SIM cards in the phone with the gold-coloured contacts facing down.
- Once you insert 2 SIM cards, you will be prompted to select either of them when accessing network services.
- Without inserting SIM cards, you can use your phone's non-network services and some menus.

 3. Insert the battery.

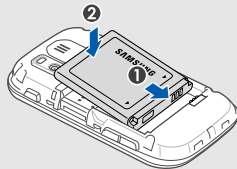

 
4. Replace the battery cover.

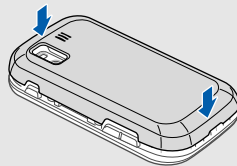


Charge the battery

Before using the phone for the first time, you must charge the battery.

 1. Open the cover to the multifunction jack on the side of the phone.
2. Plug the small end of the travel adapter into the multifunction jack.

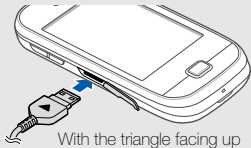

Improperly connecting the travel adapter can cause serious damage to the phone. Any damages by misuse are not covered by the warranty.

3. Plug the large end of the travel adapter into a power outlet.
4. When the battery is fully charged (the  icon is no longer moving), unplug the travel adapter from the power outlet.
5. Unplug the travel adapter from the phone.
6. Close the cover to the multifunction jack.



About the low battery indicator

When your battery is low, the phone will emit a warning tone and a low battery message. The battery icon will also be empty and blinking. If the battery level becomes too low, the phone will automatically power off. Recharge your battery to continue using your phone.

 
Insert a memory card (optional)

To store additional multimedia files, you must insert a memory card. Your phone accepts microSD™ or microSDHC™ memory cards up to 8 GB (depending on memory card manufacturer and type).



Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.

1. Remove the battery cover.
2. Insert a memory card with the label side facing down.

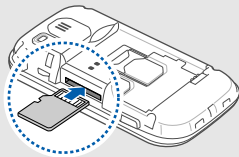


3. Push the memory card in the memory card slot until it locks in place.
4. Replace the battery cover.


To remove the memory card, push it gently until it disengages from the phone, and then pull the memory card out of the memory card slot.

Attach a hand strap (optional)

 1. Remove the battery cover.
2. Slide the small end of a handstrap through the slot and push the large end through the loop.

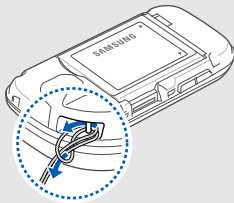

 3. Replace the battery cover.

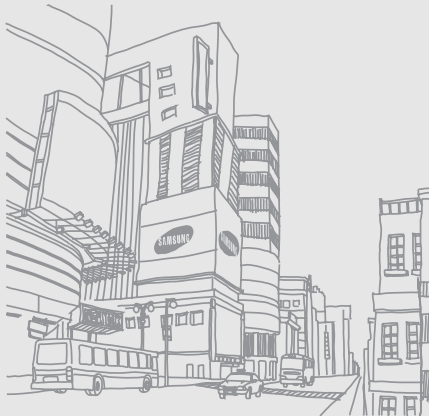


using basic functions

Learn how to perform basic operations and use the main features of your mobile phone.

Turn your phone on and off

 To turn your phone on,

1. Press and hold [.
2. Enter your PIN and press **Done** (if necessary).
3. Press **OK**.
4. Select a slot, and assign a name and signal icon to the SIM card.
Repeat this for the other SIM card.
5. Select **Next** → **OK**.

To turn your phone off, repeat step 1 above.



Once you insert 2 SIM cards, you will be prompted to select either of them when accessing network services, such as calling, messaging and web services.

Switch to the offline profile

By switching to the offline profile, you can use your phone's non-network services in areas where wireless devices are prohibited, such as aeroplanes and hospitals.

To switch to the offline profile, in Menu mode, select **Settings** → **Phone profiles** → **Offline** → **Save**.



Follow all posted warnings and directions from official personnel when in areas where wireless devices are prohibited.

 
Use the touch screen

Your phone's touch screen lets you easily select items or perform functions. Learn basic actions to use the touch screen.




For the optimal use of the touch screen, remove the screen protection film before using your phone.


- Touch an icon to open a menu or launch an application.

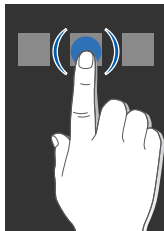

 - Drag your finger up or down to scroll through vertical lists.

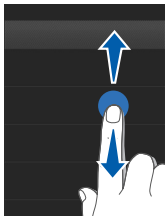

 - Drag your finger left or right to scroll through horizontal lists.

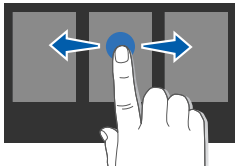

Access menus

To access your phone's menus,

1. In Idle mode, select **Menu** to access Menu mode.
2. Select a menu or option.
3. Press the Back key to move up one level; Press [⏮] to return to Idle mode.

Use widgets

Learn to use widgets on the widget toolbar.



- Some of your widgets connect to web services. Selecting a web-based widget may incur additional charges.
- Available widgets may vary depending on your region or service provider.

Open the widget toolbar

In Idle mode, select the arrow at the bottom left of the screen to open the widget toolbar. You can rearrange widgets on the widget toolbar or move them to the idle screen.

Move the widgets to the idle screen

1. Open the widget toolbar.
2. Drag a widget from the widget toolbar to the idle screen. You can position the widget anywhere on the screen.

Change the widgets

1. In Menu mode, select **Settings** → **Display and light** → **Widget**.
2. Select the widgets you want to include to the widget toolbar and select **Save**.

Customise your phone

Get more from your phone by customising it to match your preferences.

Adjust the volume of the key tones

In Idle mode, press the Volume key up or down and adjust the key tone volume.

Adjust the vibration intensity on the touch screen

You can adjust the intensity of the vibration when you touch the phone screen.

1. In Idle mode, press the Volume key.
2. Select **Vibration** and adjust the intensity of the vibration.

Switch to or from the silent profile

In Idle mode, select **Keypad**, and touch and hold **#** to silence or unsilence your phone.

Set a phone profile

To change the ringtone of the current profile,

1. In Menu mode, select **Settings** → **Phone profiles**.
2. Scroll to the profile you are using.



If you are using the silent or offline profile, you are not allowed to change the ringtone.

3. Select **Edit** → **Voice call ringtone**.
4. Select a ringtone category → a ringtone.
5. Select **Save** twice.

To switch to another profile, select it from the list.

To create a phone profile,

1. In Menu mode, select **Settings** → **Phone profiles**.
2. Select **Create**.
3. Enter a name for the profile and select **Done**.
4. Customise the sound settings as desired.
5. When you are finished, select **Save**.

Select a wallpaper (Idle mode)

1. In Menu mode, select **Settings** → **Display and light** → **Wallpaper**.
2. Scroll left or right to an image.
3. Select **Set**.

Select a skin colour (Menu mode)

1. In Menu mode, select **Settings** → **Display and light** → **My theme**.
2. Select a skin colour → **Save**.

Lock your phone

1. In Menu mode, select **Settings** → **Security** → **Phone** → **Phone lock**.
2. Select **On** → **Save**.
3. Enter a new 4- to 8-digit password and select **Done**.
4. Enter the new password again and select **Done**.



- The first time you access a menu that requires a password, you will be prompted to create and confirm a password.
- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

Manage your SIM cards

Your phone supports the Dual SIM mode, enabling you to use two SIM cards at the same time without changing them. Learn to select a default SIM card and network, and set the SIM cards settings.

Select a default SIM card and network


1. In Idle mode, press and hold [**⏻**].
2. Select **Network** → a SIM card you want.
3. Select **Activate** under the SIM card.
4. Select the default network field until a SIM card you want appears.
5. Select **Save** → **Yes**.
Your phone will automatically reboot.

Switch the SIM cards automatically

1. In Idle mode, press and hold [**⏻**].
2. Select **SIM auto switch** → **Change**.

3. Select a SIM card slot.
4. Specify the schedule that the SIM card will be active and select **Save**.

Change the names and icons of the SIM cards

 1. In Idle mode, press and hold [].
2. Select **Register card**.
3. Select a SIM card.
4. Select **Card name** and change the name for the SIM card and select **Done**.
5. Select **Icon** and change the icon for the SIM card and select **Save**.



Use basic call functions

Learn to make or answer calls and use basic call functions.

Make a call

1. In Idle mode, select **Keypad** and enter an area code and a phone number.
2. Press [] to dial the number
3. To end the call, press [].


Answer a call

1. When a call comes in, press [].
2. To end the call, press [].

Adjust the volume

To adjust the volume during a call, press the Volume key up or down.

Use the speakerphone feature

1. During a call, select  → **Yes** to activate the speaker.
2. To switch back to the earpiece, select  again.



In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better performance, use the normal phone mode.

Use the headset

By plugging the supplied headset into the phone, you can make and answer calls:

- To redial the last call, press and hold the headset button.
- To answer a call, press the headset button.
- To end a call, press the headset button.

Send and view messages

Learn to send or view text (SMS), multimedia (MMS), or email messages.

Send a text or multimedia message


1. In Menu mode, select **Messages** → **Create new message** → **Message**.
2. Select the recipient input field → **Enter manually**.
3. Enter a recipient number and select **Done**.
4. Select **Tap to add text**.
5. Enter your message text and select **Done**.
▶ p. 29
For sending as a text message, skip to step 7.
For attaching multimedia, continue with step 6.
6. Select **Add multimedia** and add an item.
7. Select **Send** to send the message.

Send an email

1. In Menu mode, select **Messages** → **Create new message** → **Email**.
2. Select the recipient input field → **Enter manually**.
3. Enter an email address and select **Done**.
4. Select **Tap to add subject**, enter a subject, and select **Done**.
5. Select **Tap to add text**, enter your email text, and select **Done**.
6. Select **Attach multimedia** and attach a file (if necessary).
7. Select **Send** to send the message.


Enter text

When entering text, you can change the text input mode:

- To change case or use numbers or symbols, select **Abc** at the bottom centre of the screen. Depending on your region, you may be able to access an input mode for your specific language.
- To enter text in T9 mode, select **T9** (**T9** turns blue).
- To switch to Symbol mode, select .

Enter text in one of the following modes:

Mode	Function
ABC	Select an appropriate virtual key until the character you want appears on the display.

Mode	Function
T9	<ol style="list-style-type: none"> 1. Select appropriate virtual keys to enter an entire word. 2. When the word displays correctly, select  to insert a space. If the correct word does not display, select 0 to select an alternate word from the list that appears.
Number	Select an appropriate virtual key to enter a number.
Symbol	Select an appropriate virtual key to enter a symbol.

View text or multimedia messages

1. In Menu mode, select **Messages** → **My messages** → **Inbox**.
2. Select a text or multimedia message.

View an email

1. In Menu mode, select **Messages** → **My messages** → **Email inbox**.
2. Select an account.
3. Select **Download**.
4. Select an email or a header.
5. If you selected a header, select **Retrieve** to view the body of the email.

Add and find contacts

Learn the basics of using the phonebook feature.



The memory location to save new contacts may be preset depending on your service provider. To change the memory location, in Menu mode, select **Phonebook** → **More** → **Settings** → **Save new contacts to** → a memory location → **Save**.

Add a new contact

1. In Idle mode, select **Keypad** and enter a phone number.
2. Select **More** → **Add to Phonebook** → a memory location (if necessary) → **New**.
3. Select a number type (if necessary).
4. Enter contact information.
5. Select **Save** to add the contact to memory.

Find a contact

1. In Menu mode, select **Phonebook**.
2. Select **Search**.
3. Enter the first few letters of the name you want to find and select **Done**.
4. Select the contact's name from the search list.



Once you have found a contact, you can:

- call the contact by pressing []
- edit the contact information by selecting **Edit**


Use basic camera functions

Learn the basics to capture and view photos and videos.

Capture photos

1. In Idle mode, press and hold the Camera key to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Aim the lens at the subject and make any adjustments.
 - To set the exposure value, select .
 - To zoom in or out, press the Volume key.



4. Press the Camera key to take a photo.
The photo is saved automatically.
5. Press the Back key or the Camera key to take another photo (step 3).



After capturing photos, select  to view photos.

View photos

In Menu mode, select **My files** → a memory location → **Images** → **My photos** → a photo file.

Capture videos

1. In Idle mode, press and hold the Camera key to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Select  →  to switch to Recording mode.

4. Aim the lens at the subject and make any adjustments.
 - To set the exposure value, select .
 - To zoom in or out, press the Volume key.
5. Press the Camera key to start recording.
6. Press the Camera key or select  to stop recording.
The video is saved automatically.
7. Press the Back key or the Camera key to record another video (step 4).

After capturing videos, select  to view videos.

View videos

In Menu mode, select **My files** → a memory location → **Videos** → **My video clips** → a video file.




Your phone can play 320 X 240 resolution video files at 12 frames per second.




Listen to music

Learn how to listen to music via the music player or FM radio.

Listen to the FM radio

1. Plug the supplied headset into the phone's multifunction jack.
2. In Menu mode, select **FM radio**.
3. Press  to turn on the FM radio.
4. Select **Yes** to start automatic tuning.
The radio scans and saves available stations automatically.
5. Control the FM radio using the following icons and keys:

Icon	Function
	Tune a radio station manually; Tune a radio station automatically (touch and hold) ► p. 47

Icon	Function
	Turn the FM radio on
	Turn the FM radio off
	Change the sound output

6. To turn off the FM radio, select .







Listen to music files

Start by transferring files to your phone or memory card:

- Download from the wireless web. ► p. 34
- Download from a PC with the optional Samsung Kies. ► p. 45
- Receive via Bluetooth. ► p. 49
- Copy to your memory card. ► p. 45

After transferring music files to your phone or memory card,

1. In Menu mode, select **Music**.
2. Select a music category → a music file.
3. Control playback using the following icons and keys:

Icon	Function
	Pause playback
	Resume playback
	Restart playback; Skip backward (touch within 3 seconds); Scan backward in a file (touch and hold)
	Skip forward; Scan forward in a file (touch and hold)
NORM	Change the sound effect
	Change the repeat mode
	Activate Shuffle mode

Browse the web



Learn to access and bookmark your favourite web pages.







- You may incur additional charges for accessing the web and downloading media.
- The browser menu may be labelled differently depending on your service provider.
- Available icons may vary depending on your region or service provider.

Browse web pages

1. In Menu mode, select **Internet** → **Home** to launch your service provider's homepage.
2. Navigate web pages using the following icons:

Icon	Function
	Move backward or forward on a web page
	Stop loading the web page

Icon	Function
	Refresh the current web page
	Zoom on a web page
	Change the view mode
	Access a list of browser options

Bookmark your favourite web pages

1. In Menu mode, select **Internet** → **Bookmarks** → a SIM card (if necessary).
2. Select **Create**.
3. Enter a page title and a web address (URL).
4. Select **Save**.

Use the Google services

Learn how to use various Google services.



- This feature may not be available depending on your region or service provider.
- The steps you must select to use this feature may differ depending on your region or service provider.

Connect to Google Search

1. In Menu mode, select **Google** → **Search**.
2. Enter a keyword in the search field.

Connect to Google Mail

1. In Menu mode, select **Google** → **Mail**.
2. Set up your Google account and sign in.
3. Send or receive emails.

using advanced functions

Learn how to perform advanced operations and use additional features of your mobile phone.

Use advanced call functions

Learn about your phone's additional calling capabilities.



View and dial missed calls

Your phone will display calls you have missed on the display.



When you have one missed call, select the call from the event alert widget and select **Voice call** to dial.

When you have two missed calls or more, select the call from the event alert widget and select **Logs** → a missed call.

Call a recently dialled number




 
1. In Idle mode, press [>] to display a list of recent numbers.
2. Select the number you want and press [>] to dial.

Hold a call or retrieve a held call

Select  to place a call on hold or select  to retrieve a held call.



Dial a second call

If your network supports this function, you can dial another number during a call:

 
1. Select  to place the first call on hold.
2. Enter the second number to dial and select **New call** or press [].
3. Select  to switch between the two calls.
4. To end the call on hold, select **More** → **End** → **Held call**.
5. To end the current call, press [].

Answer a second call

If your network supports this function, you can answer a second incoming call:

1. Press [] to answer the second call.
The first call is automatically placed on hold.
2. Select  to switch between the calls.

Make a multiparty call (conference call)


1. Call the first party you want to add to the multiparty call.
2. While connected to the first party, call the second party.
The first party is automatically placed on hold.
3. When connected to the second party, select **Conference call**.
4. Repeat steps 2 and 3 to add more parties (if necessary).
5. To end the multiparty call, press [].

Call an international number

 
1. In Idle mode, select **Keypad** and touch and hold **0** to insert the **+** character.
2. Enter the complete number you want to dial (country code, area code, and phone number), and then select press [] to dial.

Call a contact from the phonebook

You can call numbers directly from the phonebook using stored contacts. ► p. 31

1. In Menu mode, select **Phonebook**.
2. Select the number you want to dial and press [] to dial.

Reject a call

To reject an incoming call, press []. The caller will hear a busy tone.

To reject calls from certain numbers automatically, use the auto rejection. To activate the auto rejection and set up the reject list,

1. In Menu mode, select **Settings** → **Application settings** → **Call** → **All calls** → **Auto reject**.
2. Select **On** under **Activation**.
3. Select **Reject list**.
4. Select **Create**.
5. Select the number input field.
6. Enter a number to reject and select **Done**.
7. Select **Match criteria** → an option → **Select**.
8. Select **Save**.
9. Repeat steps 4-8 to add more numbers.
10. Select **Save** twice.

Use advanced phonebook functions

Learn to create your namecard, set speed dial numbers, and create groups of contacts.

Create your namecard

1. In Menu mode, select **Phonebook**.
2. Select **More** → **My namecard**.
3. Enter your personal details.
4. Select **Save**.



You can send your namecard by attaching it to a message or email or transferring it via the Bluetooth wireless feature.

Set speed dial numbers

1. In Menu mode, select **Phonebook**.
2. Select **More** → **Settings** → **Speed dial**.

3. Select a speed number you want to set.
4. Select a contact → a number (if necessary) to assign to the number.
The contact is saved to the speed dial number.



- You can call this contact by touching and holding the assigned speed dial number in the dialling screen.
- The first 3 favourite numbers will be assigned to the favourite contacts (👤) on the widget toolbar.

Create a group of contacts

By creating groups of contacts, you can assign group names ringtones, caller ID photos to each group or send messages to an entire group. Start by creating a group:

1. In Menu mode, select **Phonebook**.
2. Scroll left or right to **Groups**.

3. Select **Create**.
4. Enter a group name and select **Done**.
5. To set the caller ID image, select the new group → **Group settings** → the image field.
6. Select a memory location (if necessary).
7. Select an image category → an image.
8. To set a group ringtone, select the ringtone field → a ringtone category → a ringtone → **Select** (if necessary).
9. Select **Save**.

Use advanced messaging functions

Learn to create templates and use templates to create new messages, and use the messenger.

Create a text template

1. In Menu mode, select **Messages** → **Templates** → **Text templates**.
2. Select **Create** to open a new template window.
3. Enter your text and select **Done** to save the template.

Create a multimedia template

1. In Menu mode, select **Messages** → **Templates** → **Multimedia message templates**.
2. Select **Create**.
3. Create a multimedia message, with a subject and desired attachments, to use as your template. ► p. 28
4. Select **More** → **Save to** → **Templates** to save the template.

Insert text templates in new messages

1. In Menu mode, select **Messages** → **Create new message** → a message type.
2. In the text field, select **More** → **Insert** → **Template** → a template.

Create a message from a multimedia template

1. In Menu mode, select **Messages** → **Templates** → **Multimedia message templates**.
2. Select the template you want.
3. Select **More** → **Edit**.
Your template opens as a new multimedia message.

Use the Bluetooth messenger

Learn to chat with your family or friends instantly via the Bluetooth wireless feature.

1. In Menu mode, select **Messages** → **Bluetooth messenger**.
2. Select **Yes** to turn on the Bluetooth wireless feature (if necessary).
3. Select **Search**.
4. Select a device.
5. Select the message input field.
6. Enter your message and select **Done** → **Send**.
7. Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, if it has one, and select **OK**.

When the owner of the other device enters the same PIN or accepts the connection, pairing is complete.




You may not need to enter a PIN depending on the device.


Use advanced camera functions

Learn how to capture photos in various modes and customise camera settings.


Capture photos by using options preset for various scenes

1. In Idle mode, press and hold the Camera key to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Select  → **SCN** → a scene → **OK**.
4. Make any necessary adjustments.
5. Press the Camera key to take a photo.

Capture a series of photos


1. In Idle mode, press and hold the Camera key to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Select  → **Shooting mode** → **Multi-shot**.
4. Make any necessary adjustments.
5. Press and hold the Camera key to take a series of photos.

Capture divided photos

1. In Idle mode, press and hold the Camera key to turn on the camera.
2. Select  → **Shooting mode** → **Mosaic shot**.
3. Select an image layout.

4. Make any necessary adjustments.
5. Press the Camera key to take photos for each segment.


Capture photos with decorative frames

1. In Idle mode, press and hold the Camera key to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Select  → **Shooting mode** → **Frame shot**.
4. Select a frame.
5. Make any necessary adjustments.
6. Press the Camera key to take a photo with the frame.

Use camera options

Before capturing a photo, select  to access the following options:

Option	Function
Shooting mode	Change the shooting mode
Resolution	Change the resolution option
Flash	Turn the flash on or off
Timer	Select the time delay
White balance	Adjust the colour balance
Effects	Apply a special effect
Viewfinder mode	Change the preview screen
More settings	Change the camera settings

Before capturing a video, select  to access the following options:

Option	Function
Recording mode	Change the recording mode
Resolution	Change the resolution option
Flash	Turn the flash on or off
Timer	Select the time delay
White balance	Adjust the colour balance
Effects	Apply a special effect
Audio recording	Turn the audio on or off
Viewfinder mode	Change the preview screen
Quality	Set the quality of your video clips
Default storage	Select a memory location to store new video clips
Default name	Edit a default name for new video clips

Customise camera settings

Before capturing a photo, select  → **More settings** to access the following settings:

Setting	Function
Quality	Adjust the quality of your photos
Exposure metering	Select a type of exposure metre
Single shot mode	Adjust how the camera saves captured photos
Shutter sound	Select a sound to accompany the shutter action
Default storage	Select a memory location to store new photos
Default name	Edit a default name for new photos

Use advanced music functions

Learn to prepare music files, create playlists, and store radio stations.

Copy music files via Samsung Kies

1. In Menu mode, select **Settings** → **PC connections** → **Samsung Kies** or **Mass storage** → **Save**.
2. Using an optional PC data cable, connect the multifunction jack on your phone to a PC.
3. Run Samsung Kies and copy files from the PC to the phone.
Refer to the Samsung Kies help for more information.

Copy music files to a memory card

1. Insert a memory card.
2. In Menu mode, select **Settings** → **PC connections** → **Mass storage** → **Save**.

3. Using an optional PC data cable, connect the multifunction jack on your phone to a PC.
When connected, a pop-up window will appear on the PC.
4. Open a folder to view files.
5. Copy files from the PC to the memory card.

Create a playlist

1. In Menu mode, select **Music** → **Playlists**.
2. Select **Create**.
3. Enter a title for your new playlist and select **Done**.
4. Select the new playlist.
5. Select **Add** → **Tracks**.
6. Select the files you want to include and select **Add**.

Customise your music player settings

Learn to adjust the playback and sound settings for your music player.

1. In Menu mode, select **Music** → **Settings**.
2. Adjust the settings to customise your music player:

Option	Function
Background playing	Set whether to play music in the background when you end the music player
Music auto off	Set the timer when the music player automatically turns off

3. Select **Save**.


Record songs from the FM radio

1. Plug the supplied headset into the phone's multifunction jack.
2. In Menu mode, select **FM radio**.
3. Select **More** → **Record** to start recording.
4. When you are finished recording, select **Stop**.
The music file will be saved in **FM radio clips** (in Menu mode, select **My files** → **Music**).




The recording feature is developed for voice recording only. The quality of the recording will be much lower than digital media.

 
Store radio stations automatically

1. Plug the supplied headset into the phone's multifunction jack.
2. In Menu mode, select **FM radio**.
3. Select  to start the FM radio.

4. Select **More** → **Self-tuning**.
5. Select **Yes** to confirm (if necessary).
The radio scans and saves available stations automatically.

Set up your favourite radio station list

1. Plug the supplied headset into the phone's multifunction jack.
2. In Menu mode, select **FM radio**.
3. Select  to start the FM radio.
4. Select a radio station to add to the favourite list.
5. Select **Add to Favourites**.

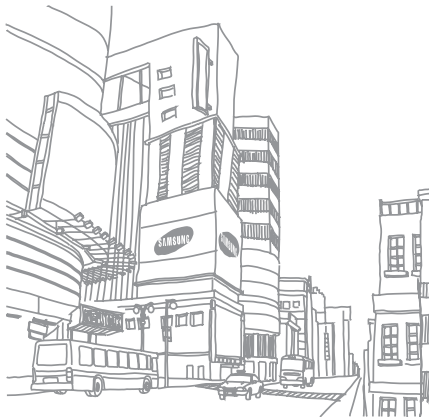

using tools and applications

Learn how to work with your mobile phone's tools and additional applications.

Use the Bluetooth wireless feature

Learn about your phone's ability to connect to other wireless devices for exchanging data and using hands-free features.

Turn on the Bluetooth wireless feature

1. In Menu mode, select **Bluetooth**.
2. Select **Activation** → **On** → **Save**.
3. To allow other devices to locate your phone, select **My phone's visibility** → **On** → **Save**.

Find and pair with other Bluetooth-enabled devices

1. In Menu mode, select **Bluetooth** → **My devices** → **Search new device**.
2. Select a device.

3. Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, if it has one, and select **Done**.

When the owner of the other device enters the same PIN or accepts the connection, pairing is complete.



You may not need to enter a PIN depending on the device.

Send data using the Bluetooth wireless feature

1. Select the file or item from one of your phone's applications that you want to send.
2. Select **Send via** → **Bluetooth** or select **More** → **Send namecard via** → **Bluetooth** (when sending contact data, specify which data to send).

Receive data using the Bluetooth wireless feature

1. Enter the PIN for the Bluetooth wireless feature and select **Done** (if necessary).
2. Select **Yes** to confirm that you are willing to receive data from the device (if necessary).

Activate and send an SOS message

When you have an emergency, you can send an SOS message asking for help.



This feature may not be available depending on your region or service provider.

1. In Menu mode, select **Messages** → **SOS messages** → **Sending options**.
2. Select **On** under **Sending SOS**.

3. Select **Empty** under **Recipients** to open the recipient list.
4. Select **Add recipients** → **Phonebook** to open your contact list.
5. Select the contacts you want.
6. Select a number (if necessary).
7. When you are finished selecting contacts, select **Add** to return to the recipient list.
8. Select **Save** to save the recipients.
9. Select **Once** under **Repeats** and set the number of times to repeat the SOS message and select **Save**.
10. Select **Save** → **Yes**.

To send an SOS message, the touch screen and the keys must be locked. Press the Volume key four times.



Once you send an SOS message, all phone functions will be suspended until you press and hold [🔒] or press [📞].

Make fake calls

You can simulate an incoming call when you want to get out of meetings or unwanted conversations. You can also make it appear as if you are talking on the phone by playing back a recorded voice.



Activate the fake call feature

1. In Menu mode, select **Settings** → **Application settings** → **Call** → **Fake call**.
2. Select **Activation** → **On**.

Make a fake call

In Idle mode, press and hold the Volume key down.

Record a voice

1. In Menu mode, select **Settings** → **Application settings** → **Call** → **Fake call** → **Fake call voice**.
2. Select **On** under **Fake call voice**.
3. Select **Voice recording**.
4. Select  to start recording.
5. Speak into the microphone.
6. When you are finished speaking, select .
7. Select **Back** → **Save** to set the recording as a response for fake calls.



Change the time delay before fake calls

1. In Menu mode, select **Settings** → **Application settings** → **Call** → **Fake call** → **Fake call timer**.
2. Select an option → **Save**.

Record and play voice memos

Learn to operate your phone's voice recorder.

Record a voice memo

1. In Idle mode, select **Voice recorder** to open the voice recorder.
2. Select  to start recording.
3. Speak your memo into the microphone.
4. When you are finished speaking, select .

Play a voice memo

1. From the voice recorder screen, press the Back key.
2. Select **My voice clips** → a file.




Press the Volume key up or down to adjust the volume during playback.

Edit images


Learn to edit images and apply fun effects.

Apply effects to images


1. In Menu mode, select **Image editor**.
2. Select **Files** → **Open** or **Take photo**.
3. Select an image or take a photo (→ **Load**).
4. Press  → an effect option (filter, style, warp, or partial blur).
5. Select a variation of the effect to apply and select **Done**. For some effects, adjust the level.
To apply a blur effect to a specific area of an image, move or resize the rectangle and select **Done**.

6. When you are finished, select **Files** → **Save as**.
7. Enter a new file name for the image and select **Save**.


Transform an image

1. Open an image to be edited. Refer to steps 1-3 in "Apply effects to images."
2. Select  → **Resize**, **Rotate**, or **Flip**.
3. Rotate or flip the image as desired and select **Done**.
To resize, select a size and select **Select**.
4. Save the edited image with a new file name.
Refer to steps 6-7 in "Apply effects to images."

Crop an image

1. Open an image to be edited. Refer to steps 1-3 in "Apply effects to images."
2. Select .
3. Move or resize the rectangle over the area you want to crop and select **Done**.
To reshape the rectangle, select **Shape**.
4. Save the edited image with a new file name.
Refer to steps 6-7 in "Apply effects to images."

Adjust an image

1. Open an image to be edited, Refer to steps 1-3 in "Apply effects to images."
2. Select  → an adjustment option (brightness, contrast, or color).
To adjust the image automatically, select **Auto level**.

3. Adjust the image as desired and select **Done**.
4. Save the edited image with a new file name.
Refer to steps 6-7 in "Apply effects to images."

Insert a visual feature

1. Open an image to be edited. Refer to steps 1-3 in "Apply effects to images."
2. Select **More** → **Insert** → a visual feature (frame, image, clip art, emoticon, or text).
3. Select a visual feature, or enter text and select **Save**.
4. Move, resize, or rotate the visual feature or text and select **Done**.
5. Save the edited image with a new file name.
Refer to steps 6-7 in "Apply effects to images."

Print images

Learn to print your images with a USB connection or the Bluetooth wireless feature.

To print an image using a USB connection,

1. In Menu mode, select **Settings** → **PC connections** → **Printer** → **Save**.
2. Connect the multifunction jack on your phone to a compatible printer.
3. Open an image. ► p. 32
4. Select **More** → **Print via** → **USB**.
5. Set print options and print the image.

To print an image using the Bluetooth wireless feature,

1. Open an image. ► p. 32
2. Select **More** → **Print via** → **Bluetooth**.
3. Select images to print and select **Print**.
4. Select a Bluetooth-enabled printer and pair with the printer. ► p. 48
5. Set print options and print the image.

Use Java-powered games and applications

Learn to use games and applications powered by award-winning Java technology.

Play games

1. In Menu mode, select **Games and more**.
2. Select a game from the list and follow the on-screen instructions.



Available games may vary, depending on your region or service provider. Game controls and options may vary.

Launch applications

1. In Menu mode, select **Games and more** → an application.
2. Select **More** to access a list of various options and settings for your application.

Synchronise data

Learn to synchronise contacts, calendar events, tasks, and memos with the web server you have specified.

Create a synchronisation profile

1. In Menu mode, select **Synchronize**.
2. Select **Add** and specify profile parameters.
3. When you are finished, select **Save**.


Start synchronisation

1. In Menu mode, select **Synchronize**.
2. Select a synchronisation profile.
3. Select **OK** to start synchronisation with the web server you have specified.

Create and view world clocks

Learn to view the time in another region and set world clocks to appear on your display.

Create a world clock

1. In Menu mode, select **World clock**.
2. Select **Add**.
3. Scroll left or right to a time zone.
4. To set daylight saving time, select .
5. Select **Add** to create your world clock.
6. To add more world clocks, repeat steps 2-5 above.

Add a world clock to your display

With the dual clock widget, you can view clocks with two different time zones on your display.

After you have created world clocks,

1. In Menu mode, select **World clock**.
2. Select the world clock you want to add and select **More** → **Set as 2nd clock**.

Set and use alarms

Learn to set and control alarms for important events.

Set a new alarm

1. In Menu mode, select **Alarms**.
2. Select an empty alarm or **Create**.

3. Set alarm details.
4. Select **Save**.



The auto power-up feature sets the phone to automatically turn on and sound the alarm at the designated time if the phone is turned off.

Stop an alarm

When the alarm sounds,

- Select **OK** to stop the alarm without snooze.
- Select **OK** to stop the alarm with snooze, or select **Snooze** to silence the alarm for the snooze period.

Deactivate an alarm

1. In Menu mode, select **Alarms**.
2. Select the alarm you want to deactivate and select **Off** under **Alarm**.
3. Select **Save**.

Use the calculator

1. In Menu mode, select **Calculator**.
2. Use the keys that correspond to the calculator display to perform basic mathematical operations.

Convert currencies or measurements

1. In Menu mode, select **Converter** → a conversion type.
2. Enter the currencies or measurements and units in the appropriate fields.

Set a countdown timer

1. In Menu mode, select **Timer**.
2. Select **Set**.

3. Enter the length of time to count down and select **Done**.
4. Select **Play** to begin the countdown.
5. When the timer expires, select **OK** to stop the alert.

Use the stopwatch

1. In Menu mode, select **Stopwatch**.
2. Select **Start** to begin and record lap times.
3. Select **Lap** to record lap times.
4. When you are finished, select **Stop**.
5. Select **Reset** to clear recorded times.

Create new tasks

1. In Menu mode, select **Task**.
2. Select **Create**.
3. Enter the details of the task and select **Save**.

Create new memos

1. In Menu mode, select **Memo**.
2. Select **Create**.
3. Enter your memo text and select **Done**.

Manage your calendar

Learn to change the calendar view and create events.

Change the calendar view

1. In Menu mode, select **Calendar**.
2. Select **View by** → **Day** or **Week**.

Create an event

1. In Menu mode, select **Calendar**.
2. Select **Create** → an event type.
3. Enter the details of the event as required and select **Save**.

View events

To view events of a specific date,

1. In Menu mode, select **Calendar**.
2. Select a date on the calendar.
3. Select an event to view its details.

To view events by event types,

1. In Menu mode, select **Calendar**.
2. Select **More** → **Event list** → an event type.
3. Select an event to view its details.

troubleshooting

If you are having trouble with your mobile phone, try these troubleshooting procedures before contacting a service professional.

When you turn on your phone or while you are using the phone, it prompts you to enter one of the following codes:

Code	Try this to solve the problem:
Password	When the phone lock feature is enabled, you must enter the password you set for the phone.
PIN	When using the phone for the first time or when the PIN requirement is enabled, you must enter the PIN supplied with the SIM cards. You can disable this feature by using the PIN lock menu.

Code	Try this to solve the problem:
PUK	Your SIM cards are blocked, usually as a result of entering your PIN incorrectly several times. You must enter the PUK supplied by your service provider.
PIN2	When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM cards. For details, contact your service provider.

The phone prompts you to insert the SIM card.

Ensure that the SIM card is installed correctly.

Your phone displays “No networks found” or “Network error.”

- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.
- You cannot access some options without a subscription. Contact your service provider for more details.

You enter a number, but the call is not dialed.

- Ensure that you have pressed the Dial key: [📞].
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number.

Another caller cannot reach you.

- Ensure that your phone is turned on.
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number.

Another caller cannot hear you speaking.

- Ensure that you are not covering the built-in microphone.
- Ensure that the microphone is close to your mouth.
- If using a headset, ensure that it is properly connected.

The phone beeps and the battery icon flashes.

Your battery is low. Recharge or replace the battery to continue using the phone.

The audio quality of the call is poor.

- Ensure that you are not blocking the phone's internal antenna.
- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.

You select a contact to call, but the call is not dialed.

- Ensure that the correct number is stored in the contact list.
- Re-enter and save the number, if necessary.

The battery does not charge properly or sometimes the phone turns itself off.

- The battery terminals may be dirty. Wipe both gold-coloured contacts with a clean, soft cloth and try charging the battery again.
- If the battery will no longer charge completely, dispose of the old battery properly and replace it with a new battery.

Your phone is hot to the touch.

When you use applications that require more power, your phone may heat up.

This is normal and should not affect your phone's lifespan or performance.