

Mobile Phone
user manual

Some contents in this manual may differ from your phone depending on the software of the phone or your service provider.

www.samsungmobile.com

Printed in Korea
Code No.:GH68-25190A
English (VNZ), 11/2010. Rev. 1.1



Turn off the phone or disable the wireless functions when in an aircraft

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/ 113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and – terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Handle your phone carefully and sensibly

- Do not disassemble your phone due to a risk of electric shock.
- Do not allow your phone to get wet—liquids can cause serious damage and will change the colour of the label that indicates water damage inside the phone. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.

Correct disposal of this product

(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.



Safety warnings

Keep your phone away from small children and pets

Keep your phone and all accessories out of reach from small children and pets. Small parts may cause choking or serious injury if swallowed.

Protect your hearing



Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phones in a fire. Follow all local regulations when disposing of used batteries or phones.
- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Avoid interference with pacemakers

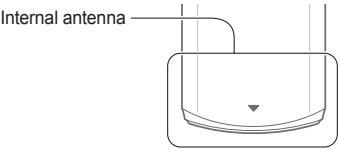 
Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.



Important usage information

Use your phone in the normal position

Avoid contact with your phone's internal antenna.



Allow only qualified personnel to service your phone

Allowing non-qualified personnel to service your phone may result in damage to your phone and will void your warranty.

Turn off the phone in potentially explosive environments

Do not use your phone at refueling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage, transfer areas and blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

Reduce the risk of repetitive motion injuries

While using your phone, hold the phone with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.

Do not use the phone if the screen is cracked or broken

Broken glass or acrylic could cause injury to your hands and face. Bring the phone to a Samsung service centre to replace the screen. Damage caused by careless handling will void your manufacturer's warranty.

CE 0168

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

Handle SIM cards and memory cards with care

- Do not remove a card while the phone is transferring or accessing information, as this could result in loss of data and/or damage to the card or phone.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

Ensure access to emergency services

Emergency calls from your phone may not be possible in some areas or circumstances. Before traveling in remote or areas without signal coverage, plan an alternate method of contacting emergency services personnel.



Safety precautions

Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury.

Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

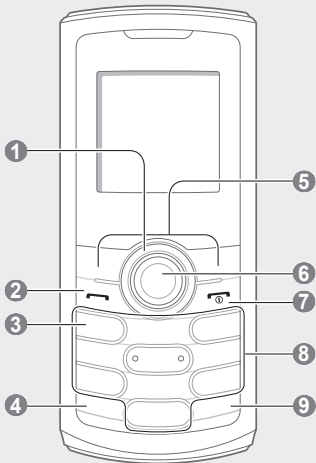 
Specific Absorption Rate (SAR) certification information

Your phone conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile phones that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 watts per kilogram.

During testing, the maximum SAR recorded for this model was 0.761 watts per kilogram. In normal use, the actual SAR is likely to be much lower, as the phone has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your phone reduces your overall exposure to RF energy.

The Declaration of Conformity of this manual demonstrates your phones compliance with the European Radio & Terminal Telecommunications Equipment (R&TTE) directive. For more information about the SAR and related EU standards, visit the Samsung mobile phone website.

Phone layout



1

4-way navigation key

In Idle mode, access user-defined menus (depending on your service provider, pre-defined menus may differ), activate the torch light (up), and make a fake call (down); In Menu mode, scroll through menu options
▶ Activate the torch light
▶ Make fake calls

2

Dial key

Make or answer a call; In Idle mode, retrieve recently dialed, missed, or received numbers; Send an SOS message
▶ Activate and send an SOS message

3

Voice mail service key

In Idle mode, access voice mails (press and hold)

4

Lock key

In Idle mode, lock or unlock the keypad (press and hold)

5

Softkeys

Perform actions indicated at the bottom of the display

6

Confirm key

In Idle mode, access **Music player**; Launch the web browser (press and hold); In Menu mode, select the highlighted menu option or confirm an input

7

Power/Menu exit key

Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode

8

Alphanumeric keys

9

Silent profile key

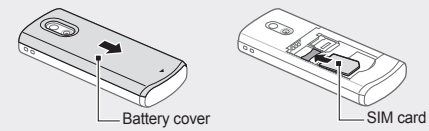 
In Idle mode, activate or deactivate the silent profile (press and hold)

Your phone displays the following status indicators on the top of the screen:

Icon	Description	Icon	Description
	Signal strength		Memory card inserted
	GPRS network connected		New text message (SMS)
	Call in progress		New multimedia message (MMS)
	Call diverting active		New email message
	SOS message feature activated		New voice mail message
	Roaming (outside of normal service area)		Normal profile activated
	Connecting to secured web page		Silent profile activated
	FM radio on		Battery power level
	Alarm activated		

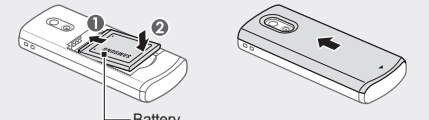 
Install the SIM card and battery

1. Remove the battery and cover then insert the SIM card.



Battery cover


SIM card
2. Insert the battery and cover.



 

Battery

Charge the battery

1. Plug the supplied travel adapter.

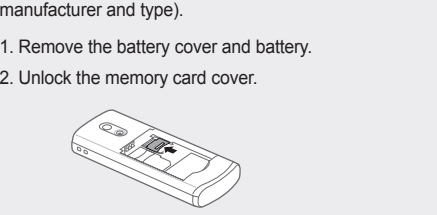 


 
To AC power outlet
2. When charging is finished, unplug the travel adapter.

 

-  Do not remove the battery while the phone is connected to the travel charger. Otherwise, the phone may be damaged.

Insert a memory card (optional)

- Your phone accepts microSD™ or microSDHC™ memory cards up to 2 GB (depending on memory card manufacturer and type).
1. Remove the battery cover and battery.

 

2. Unlock the memory card cover.

 

3. Lift the memory card cover and insert a memory card with the label side facing up.






 
 
 
Memory card

Memory card cover
4. Close and lock the memory card cover.

 

5. Replace the battery and battery cover.




Instructional icons

	Note: notes, usage tips, or additional information
	Followed by: the order of options or menus you must select to perform a step; for example: In Menu mode, select Messages → Create new message (represents Messages , followed by Create new message)
	Square brackets: phone keys; for example: [] (represents the Power/Menu exit key)
	Angled brackets: softkeys that control different functions at each screen; for example: <  /> (represents the OK softkey)


Turn your phone on or off

- To turn your phone on,
1. Press and hold [].

 

2. Enter your PIN and press <**OK**> (if necessary).
- To turn your phone off, repeat step 1 above.
-  To transfer data from a PC to your phone, you need Windows XP Service Pack 2.

 
Access menus

- To access your phone's menus,
1. In Idle mode, press <**Menu**> to access Menu mode.

 You may need to press the Confirm key to access Menu mode depending on your region or service provider.
2. Use the Navigation key to scroll to a menu or option.

 
3. Press <**Select**>, <**OK**>, or the Confirm key to confirm the highlighted option.

 
4. Press <**Back**> to move up one level; Press [] to return to Idle mode.
-  When you access a menu requiring the PIN2, you must enter the PIN2 supplied by the SIM card. For details, contact your service provider.

 Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

 
Make a call

 
1. In Idle mode, enter an area code and a phone number.

2. Press [] to dial the number.

3. To end the call, press [].

Answer a call

1. When a call comes in, press [].


2. To end the call, press [].

Adjust the volume

- To adjust the volume of the ringtone**

1. In Menu mode, select **Settings** → **Profiles**.

2. Scroll to the phone profile you are using.

 
 If you are using the silent profile, you are not allowed to adjust the volume of the ringtone.

3. Press <**Options**> → **Edit** → **Volume** → **Call alert**.

4. Scroll left or right to adjust the volume level.

5. Press <**Save**>.
- To adjust the volume of voice during a call**


While a call is in progress, press the Navigation key up or down to adjust the volume.

 In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

Change your ringtone

1. In Menu mode, select **Settings** → **Profiles**.

2. Scroll to the profile you are using.

 
 If you are using the silent or offline profile, you are not allowed to change the ringtone.

3. Press <**Options**> → **Edit** → **Call ringtone**.

4. Select a ringtone category → a ringtone.

 
To switch to another profile, select it from the list.

Call a recently dialled number

1. In Idle mode, press [].

2. Scroll left or right to a call type.

3. Scroll up or down to select a number or name.

4. Press the Confirm key to view details of the call or [] to dial the number.

Enter text

- To change the text input mode**

• Press and hold [**#**] to switch between T9 and ABC modes.

• Press [**#**] to change case or switch to Number mode.

- Press [*****] to switch to Symbol mode.

• Press and hold [*****] to select an input mode or change the input language.

T9 mode

1. Press the appropriate alphanumeric keys to enter an entire word.

2. When the word displays correctly, press [**0**] to insert a space. If the correct word does not display, press the Navigation key up or down to select an alternate word.


ABC mode


Press the appropriate alphanumeric key until the character you want appears on the display.


Number mode


Press the appropriate alphanumeric key to enter a number.

Symbol mode


-  To move the cursor, press the Navigation key.

 To delete characters one by one, press <**Clear**>. To delete the characters on the left side of the cursor, press and hold <**Clear**>.

 To insert a space between characters, press [**0**].

 To enter punctuation marks, press [**1**].

Add a new contact

-  Your phone is preset to save contact to the phone memory. To change the memory location, in Menu mode, select **Settings** → **Application** → **Phonebook** → **Save new contact to** → a memory location.

1. In Idle mode, enter a phone number and press <**Options**>.

2. Select **Create contact** → a number type (if necessary).

3. Enter contact information.

4. Press the Confirm key to add the contact to memory.

Send and view messages

To send a text or multimedia message

1. In Menu mode, select **Messages** → **Create new message** → **Message**.

2. Enter a destination number and scroll down.

3. Enter your message text. ► *Enter text*
For sending as a text message, skip to step 5. For attaching multimedia, continue with step 4.

4. Press <**Options**> → **Add multimedia** and add an item.

5. Press the Confirm key to send the message.

To view text or multimedia messages

1. In Menu mode, select **Messages** → **Inbox**.

2. Select a text or multimedia message.

Make fake calls

- You can simulate an incoming call when you want to get out of meetings or unwanted conversations.
- Press and hold the Navigation key down in Idle mode.

• Press the Navigation key down four times when the keys are locked.

Activate the mobile tracker

- When someone inserts a new SIM or USIM card in your phone, the mobile tracker feature will automatically send the contact number to two recipients to help you locate and recover your phone. To activate the mobile tracker,
1. In Menu mode, select **Settings** → **Security** → **Mobile Tracker 2.0**.

2. Press <**OK**> to set a phone lock password.

3. Enter a new 4-to 8-digit password and press <**OK**>.

4. Enter the new password again and press <**OK**>.

5. Select **Settings**.

6. Enter a new 8-digit password for the mobile tracker and press <**OK**>.

7. Enter the new password againg and press <**OK**>.

5. Select a contact.

 
6. Select a number (if necessary).

 
7. Press <**Options**> → **Save** to save the recipients.

8. Scroll down and set the number of times to repeat the SOS message.

9. Press <**Save**> → <**Yes**>.

To send an SOS message

1. With the keys locked, press [] four times to send an SOS message to preset numbers. The phone switches to SOS mode and sends the preset SOS message.

2. To exit SOS mode, press [].

Use the camera

To capture photos

1. In Menu mode, select **Camera** to turn on the camera.

2. Aim the lens at the subject and make any adjustments.

3. Press the Confirm key to take a photo. The photo is saved automatically.

4. Press <**Back**> to take another photo (step 2).

After capturing photos, select <**Album**> to view photos.

To view photos

In Menu mode, select **My files** → **Images** → a photo file.

To capture videos

1. In Menu mode, select **Camera** to turn on the camera.

2. Press <**Options**> → **Camcorder** to switch to Recording mode.

3. Aim the lens at the subject and make any adjustments.

4. Press the Confirm key to start recording.

5. Press the Confirm key or <**Stop**> to stop recording. The video is saved automatically.

After capturing videos, select <**Album**> to view videos.

To view videos

In Menu mode, select **My files** → **Videos** → a video file.

Listen to music

1. In Menu mode, select **Music**.

2. Press <**Options**> → **Create playlist**.

3. Enter a title for your new playlist and press the Confirm key.

4. Select the new playlist.

5. Press <**Options**> → **Add** → a memory location → a music category (if necessary).

6. Select the files you want to include and press <**Add**>.


7. Press the Confirm key to begin playback.	
8. Control playback using the following keys:	
Key	Function
Confirm	Pause or resume playback
Navigation	<ul style="list-style-type: none">Left: Skip backward; Scan backward in a file (press and hold)Right: Skip forward; Scan forward in a file (press and hold)Up/Down: Adjust the volume

Listen to the FM radio

1. In Menu mode, select **Applications** → **FM radio**.


2. Press the Confirm key to start the FM radio.

 
3. Press <**Yes**> to start automatic tuning. The radio scans and saves available stations automatically.

 
 The first time you turn on the FM radio, you will be prompted to start automatic tuning.

 
4. Press and hold the Navigation key left or right to a saved radio station. Press the Navigation key left or right to tune a radio staion.

5. To turn off the FM radio, press the Confirm key.

 
-  The volume through mono headsets is very low or virtually inaudible. Use stereo headsets only.

 Listen to the FM radio without the headset when the radio signal is strong and when the current radio signal is weak, use the supplied headset.


 Listening to the FM radio without the headset may reduce battery charge more quickly.

 The battery cover serves as the antenna for the FM radio. Handle the battery cover with care and keep the contact points clean.

Activate the torch light

The torch light feature helps you see in dark places by making the display and backlight as bright as possible. To activate the torch light, press and hold the Navigation key up in Idle mode or with the keypad locked. To deactivate the torch light, press <**Back**> or [].

SAMSUNG ELECTRONICS



Declaration of Conformity (R&TTE)

We, **Samsung Electronics**

declare under our sole responsibility that the product

GSM Mobile Phone : GT-E2120


to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950- 1 : 2001 +A11:2004
EMC	EN 301 489- 01 V1.6.1 (09-2005) EN 301 489- 07 V1.3.1 (11-2005)
SAR	EN 50360 : 2001 EN 62209-1 : 2006
RADIO	EN 301 511 V9.0.2 (03-2003)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex[V] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):


BABT, Balfour House, Churchfield Road,
Walton-on-Thames, Surrey, KT12 2TD, UK*
Identification mark: 0168



The technical documentation kept at :
Samsung Electronics QA Lab.

which will be made available upon request.
(Representative in the EU)

Samsung Electronics Euro QA Lab.
Blackbushe Business Park, Saxony Way,
Yateley, Hampshire, GU46 6GG, UK*



2009.06.24
(place and date of issue)

Yong-Sang Park / S. Manager
(name and signature of authorised person)

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.