

SAMSUNG

GT-P7300 user manual



Using this manual

Thank you for choosing this Samsung mobile device. This device will provide you with high-quality mobile communication and entertainment based on Samsung's exceptional technology and high standards.

This manual has been specially designed to guide you through the functions and features of your device.

Read me first

- Before using your device, read the entire manual and all safety instructions to ensure safe and proper use.
- The descriptions in this manual are based on the default settings of your device.
- The images and screenshots used in this manual may differ from the actual product.
- The contents of this manual may differ from the product, or from software provided by service providers or carriers, and are subject to change without prior notice. Access the Samsung website (www.samsung.com) for the latest version of the manual.
- Available features and additional services may vary by device, software, or service provider.
- Formatting and delivery of this manual is based on Android operating systems and may vary depending on the user's operating system.
- Applications on this device may perform differently from comparable computer applications and may not include all functions available in the computer version.

- Applications and their functions may vary by region or hardware specifications. Samsung is not liable for performance issues caused by third-party applications.
- Samsung is not liable for performance issues or incompatibilities caused by edited registry settings or modified operating system software. Attempting to customise the operating system may cause your device or applications to work improperly.
- You can upgrade your device's software by accessing the Samsung website (www.samsung.com).
- Software, audio, wallpapers, and images provided in this device are licensed for limited use between Samsung and their respective owners. Extracting and using these materials for commercial or other purposes is an infringement of copyright laws. Samsung is not liable for such copyright infringement by users.
- You may incur additional charges for data services, such as messaging, uploading and downloading, auto-syncing, or using location services. To avoid additional charges, select an appropriate data tariff plan. For details, contact your service provider.
- Please keep this manual for future reference.

Instructional icons

Before you start, familiarise yourself with the icons used in this manual:



Warning—situations that could cause injury to yourself or others



Caution—situations that could cause damage to your device or other equipment



Note—notes, usage tips, or additional information



Refer to—pages with related information; for example: ► p. 12 (represents “refer to page 12”)



Followed by—the order of options or menus you must select to perform a step; for example: In the application list, select **Settings** → **About device** (represents **Settings**, followed by **About device**)

Copyright

Copyright © 2012 Samsung Electronics

This manual is protected under international copyright laws.

No part of this manual may be reproduced, distributed, translated, or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of Samsung Electronics.

Trademarks

- SAMSUNG and the SAMSUNG logo are registered trademarks of Samsung Electronics.
- The Android logo, Google™, Google Maps™, Google Mail™, YouTube™, Google Play™ Store, and Google Talk™ are trademarks of Google, Inc.
- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide.
- Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.
- Windows Media Player® is a registered trademark of Microsoft Corporation.
-  is a trademark of SRS Labs, Inc. WOW HD technology is incorporated under licence from SRS Labs, Inc.
- Wi-Fi®, Wi-Fi Protected Setup™, Wi-Fi Direct™, Wi-Fi CERTIFIED™, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.
- DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under licence. 
- All other trademarks and copyrights are the property of their respective owners.



CE 0168 !

ABOUT DIVX VIDEO

DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit *www.divx.com* for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND

This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to *vod.divx.com* for more information on how to complete your registration.

DivX Certified® to play DivX® video up to HD 720p, including premium content.

May play DivX® video up to HD 1080p.

Contents

Assembling	11
Unpack	11
Device layout	12
Keys	14
Insert the SIM or USIM card	14
Charge the battery	15
Getting started	18
Turn on or off your device	18
Use the touch screen	19
Use motions	22
Lock or unlock the touch screen and the keys	23
Get to know the Home screen	24
Access applications	30
Launch multiple applications	32
Customise your device	32
Enter text	38
Communication	42
Messages	42
Google Mail	43
Email	45
Talk	47
Messenger	48
Google+	49
Social Hub	49

Entertainment.....	50
Camera	50
Video player	57
Gallery	60
Photo editor	62
Music Player	63
Music Hub	66
Personal information	67
Contacts	67
S Planner	70
Memo	71
Pen memo	72
Web and GPS-based services.....	73
Internet	73
Latitude	77
Maps	77
Navigation	79
Local	79
Play Store	80
Samsung Apps	81
YouTube	81
Readers Hub	83
Pulse	84
Connectivity.....	85
USB connections	85
Wi-Fi	86
Wi-Fi Direct	89

AllShare	90
Mobile network sharing	92
Bluetooth	94
GPS	96
VPN connections	97
Tools.....	99
Calculator	99
Alarm	99
World clock	100
Downloads	101
My Files	101
Search	102
SIM Toolkit	103
Task manager	103
Polaris Office	103
Settings	105
Access the setting options	105
Wi-Fi	105
Bluetooth	105
Data usage	105
More...	106
Sound	107
Display	108
Power saving	109
Storage	109
Battery	110
Applications	110

Accounts and sync	110
Location services	110
Security	110
Language and input	112
Back up and reset	115
Dock	115
Date and time	115
Accessibility	116
Motion	116
Developer options	117
About device	118
Troubleshooting	119
Index	123

Assembling

Unpack

Check your product box for the following items:

- Mobile device
- Quick start guide




Use only Samsung-approved software. Pirated or illegal software may cause damage or malfunctions that are not covered by your manufacturer's warranty.



- The items supplied with your device and available accessories may vary depending on your region or service provider.
- You can buy additional accessories from your local Samsung retailer.
- The supplied items are designed only for your device and may not be compatible with other devices.
- Other accessories may not be compatible with your device.
- Use only Samsung-approved accessories. Unapproved accessories may cause your device to malfunction.


Device layout

> Front view

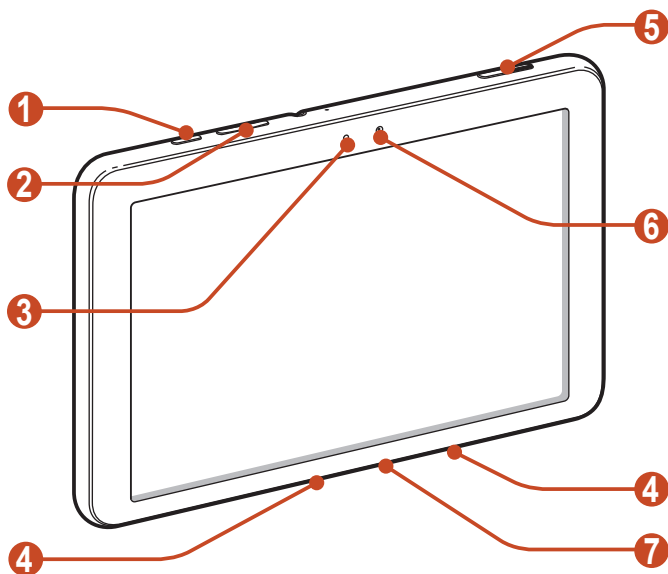

Number	Function
1	Power/Reset/Lock key
2	Volume key
3	Light sensor
4	Speaker
5	SIM card slot
6	Front camera lens
7	Multifunction jack

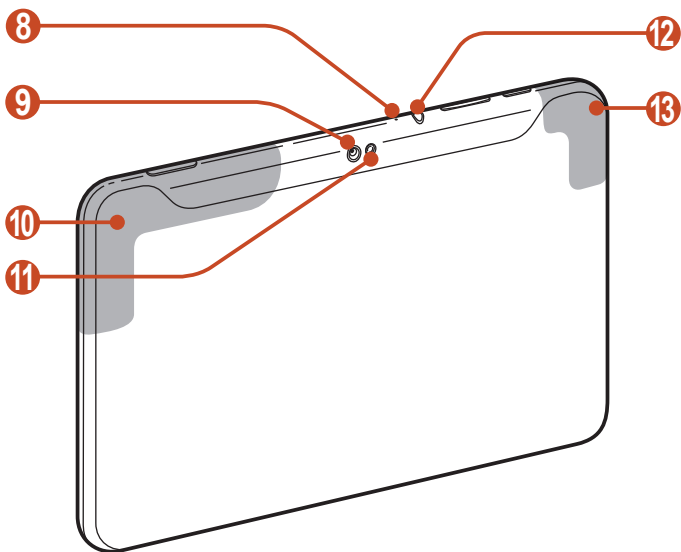

➤ **Rear view**



Number	Function
8	Microphone
9	Rear camera lens
10	Main antenna
11	Flash
12	Headset jack ¹
13	Wi-Fi/Bluetooth/GPS internal antenna ²

- 1. Connecting a headset to your device improperly can damage the headset jack or the headset.
- 2. Do not touch or cover the area around the antenna with your hands or other objects while using the GPS functions.


Keys

Key		Function
	Power/ Reset ¹ / Lock	Turn on the device (press and hold); Access the device options (press and hold); Reset the device (press and hold for 10-15 seconds); Turn off and lock the touch screen or turn it on.
	Volume	Adjust the device's volume.

Insert the SIM or USIM card

When you subscribe to a cellular service, you will receive a Subscriber Identity Module (SIM) card, with subscription details, such as your personal identification number (PIN) and optional services. To use UMTS or HSDPA services, you can purchase a Universal Subscriber Identity Module (USIM) card.

- 1 Open the cover of the SIM card slot.
- 2 Insert the SIM or USIM card with the gold-coloured contacts facing downwards.

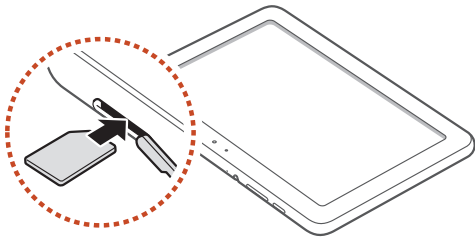

- 3 Close the cover of the SIM card slot.

1. If your device experiences fatal errors, hanging, or freezing, you may need to reset the device to regain functionality.

Charge the battery

Before using the device for the first time or when the battery has been unused for an extended period, you must charge the battery.

You cannot replace the battery in the device. If you have problems with the battery or need it replaced, take the device to a Samsung Service Centre.



Use only Samsung-approved chargers and cables. Unapproved chargers or cables may cause batteries to explode or damage your device.




- Charge the battery only with a charger. You cannot charge the battery with a USB cable.
- When your battery is low, the device will emit a warning tone and show a low battery message. Recharge your battery to continue using your device.
- If the battery is completely discharged, you cannot turn on the device, even with the device charging. Allow a depleted battery to charge for a few minutes before you try to turn on the device.
- If you use multiple applications at once, network applications, or applications that need a connection to another device, the battery will drain quickly. To avoid disconnecting from the network or losing power during a data transfer, always use these applications after fully charging the battery.

1 Connect the USB cable to the USB power adapter and then plug the end of the USB cable into the multifunction jack.



The shape of the USB power adapter may differ depending on your region.

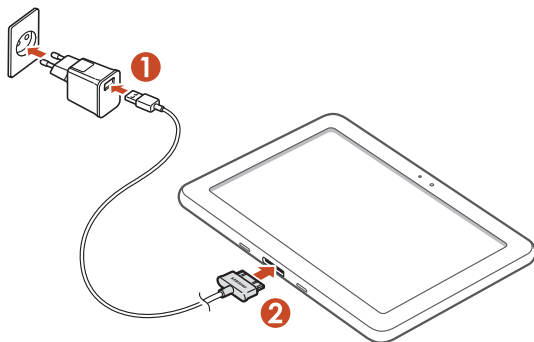

Connecting the USB cable improperly may cause serious damage to the device or USB power adapter. Any damage caused by misuse is not covered by the warranty.

2 Plug the USB power adapter into a power outlet.



- If the device receives an unstable power supply while charging, the touch screen may not function. If this happens, unplug the USB cable from the device.
- The device may heat up while charging. This is normal and should not affect your device's lifespan or performance.
- If your device is not charging properly, take your device and the charger to a Samsung Service Centre.

- 3 When the battery is fully charged, first unplug the USB cable from the device, and then unplug the USB power adapter from the electrical socket.



To save energy, unplug the USB power adapter when not in use. The USB power adapter does not have a power switch, so you must unplug the USB power adapter from the electrical socket when not in use to avoid wasting power. The device should remain close to the electrical socket while charging.


➤ Reduce the battery consumption

Your device provides options that help you save battery power. By customising these options and deactivating features in the background, you can use the device longer between charges:


- Activate Power saving mode.
- When you are not using your device, switch to Sleep mode by pressing the Power key.
- Close unnecessary applications with the task manager.
- Deactivate the Bluetooth feature.
- Deactivate the Wi-Fi feature.
- Deactivate auto-syncing of applications.
- Decrease the backlight time.
- Decrease the brightness of the display.

Getting started

Turn on or off your device

- 1 Press and hold the Power key.
 - 2 Enter the PIN supplied with your SIM or USIM card and select **OK** (if necessary).
-  If you are turning on your device for the first time, follow the on-screen instructions to set up your device. You must sign in to Google or create a Google account to use applications that interact with the Google server.

To turn off your device, press and hold the Power key, and then select **Power off** → **OK**.

-  • Follow all posted warnings and directions from approved personnel in areas where the use of wireless devices is restricted, such as aeroplanes and hospitals.
- To use only your device's non-network features, switch to Flight mode. ► p. 106

Use the touch screen

Your device's touch screen lets you easily select items or perform functions. Learn basic actions for using the touch screen.



- Do not press the touch screen with your fingertips, or use sharp tools on the touch screen. Doing so may damage the touch screen or cause it to malfunction.
- Do not allow the touch screen to come into contact with other electrical devices. Electrostatic discharges can cause the touch screen to malfunction.
- Do not allow the touch screen to come into contact with liquids. The touch screen may malfunction in humid conditions or when exposed to liquids.
- Leaving the touch screen idle for extended periods may result in afterimages (screen burn-in) or ghosting. Turn off the touch screen when you do not use the device.




- For optimal use of the touch screen, remove the screen protection film before using your device.
- Your touch screen has a layer that detects small electrical charges emitted by the human body. For best performance, tap the touch screen with your fingertip. The touch screen will not react to touches from sharp objects, such as a stylus or pen.

Control your touch screen with the following actions:


Tap

Touch once to select or launch a menu, option, or application.

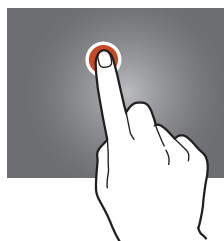


Tap and hold

Tap an item and hold it for more than 2 seconds.

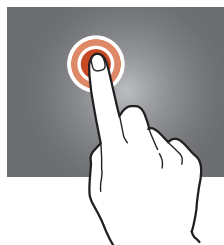

Drag

Tap an item and move it to a new location.

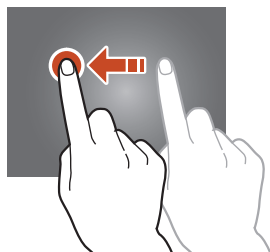


Double-tap

Tap an item twice quickly.



Flick

Briskly scroll up, down, left, or right to move through lists or screens.

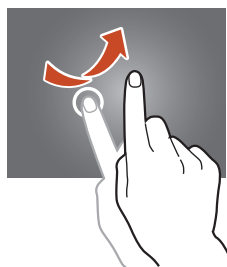

Pinch

Place two of your fingers far apart, and then pinch them together.



- Your device turns off the touch screen when you do not use it for a specified period. To turn on the screen, press the Power key.
- You can set the length of time that the device waits before turning off the screen. In the application list, select **Settings** → **Display** → **Screen timeout**.


Use motions

Built-in motion recognition allows you to perform actions by moving your device or making gestures with your hands.

To use these functions, you must first activate the motion recognition feature. In the application list, select **Settings** → **Motion**.


Tilt

While holding the device with two hands, tap and hold two points on the screen, and then tilt the device back and forth to zoom in or out when viewing images or browsing webpages.

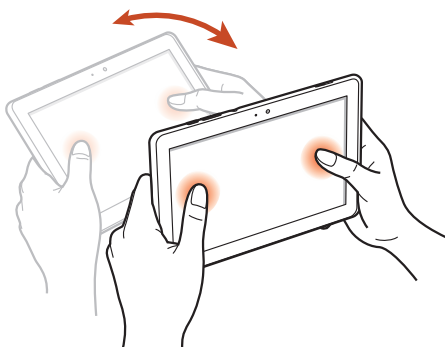

Pan to move

While holding an item, slide the device to the left or right to move the item to another page on the Home screen or the application list.

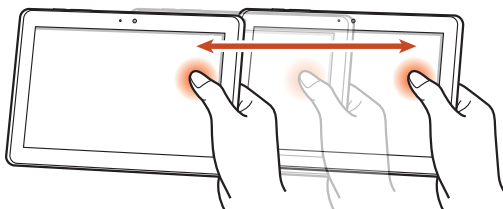

Lock or unlock the touch screen and the keys

When you do not use the device for a specified period, your device turns off the touch screen and locks the touch screen automatically to prevent unintended operations. To lock the touch screen manually, press the Power key.

To unlock them, turn on the screen by pressing the Power key, and then flick your finger in any direction.



You can activate the screen lock feature to prevent others from using or accessing your personal data and information saved in your device. ► p. 35

Get to know the Home screen

From the Home screen, you can view your device’s status and access applications.

The Home screen has multiple panels. Scroll left or right to view the panels on the Home screen. You can also select one of the dots at the top of the screen to move directly to the corresponding panel.




The above screen may differ depending on your region or service provider.

Number	Function
1	Select a dot at the top of the screen to move directly to the corresponding screen.
2	Search for applications and files in your device and specific data on the web with the Google Search widget.
3	Access the application list.
4	System bar (See the following section).

› System bar

From the system bar at the bottom of the screen, you can quickly navigate screen, view system information, and more.

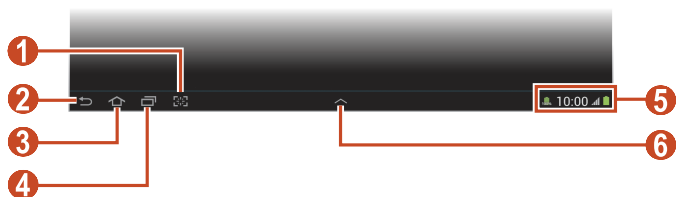

The above screen may differ depending on your region or service provider.






Number	Function
1	Capture an image of the current screen and edit the image; Capture and add an image of the current screen to the clipboard (tap and hold).
2	Return to the previous screen.
3	Return to the Home screen; Access the task manager (tap and hold).
4	Open the list of recent applications; Access the application list (tap and hold).
5	View the current time and your device's status; Open the notifications panel.
6	Open the mini apps panel.

➤ Indicator icons




Icons shown on the display may vary depending on your region or service provider.

Icon	Definition
	No signal
	Signal strength
	Connected to GPRS network
	Connected to EDGE network
	Connected to HSDPA network
	Wi-Fi AP connected
	Bluetooth feature activated
	GPS-based services in use
	Power saving mode activated
	Connected to computer
	Uploading data
	Downloading data
	No SIM or USIM card
	New Google Mail
	New email message
	Alarm activated

Icon	Definition
	Roaming (outside of service area)
	Flight mode activated
	Music playback in progress
	Error occurred or caution required
	Battery power level

► Use the notifications panel

To open the notifications panel, tap the right bottom of the screen. To hide the panel, select .

From the notifications panel, you can view your device's current status and use the following options:


- **Wi-Fi:** Activate or deactivate the Wi-Fi feature. ► p. 105
- **GPS:** Activate or deactivate the GPS feature. ► p. 110
- **Sound:** Activate or deactivate Silent mode. You can mute your device or set it to vibrate in Silent mode.
- **Screen rotation:** Allow or prevent the interface from rotating when you rotate the device.
- **Power saving:** Activate or deactivate Power saving mode.
- **Notification:** Hide or show notification icons.
- **Mobile data:** Activate or deactivate the data connection.
- **Bluetooth:** Activate or deactivate the Bluetooth feature.
► p. 105
- **Driving mode:** Activate or deactivate Driving mode.
- **Sync:** Activate or deactivate auto-syncing of applications.



The options available may vary depending on your region or service provider.


› Move an item on the Home screen

Tap and hold an item, and then drag it to a new location. You can add an item to a new folder or move it to a new panel. Tap and hold the item, and then drag it to **Create folder** or **Create page**.

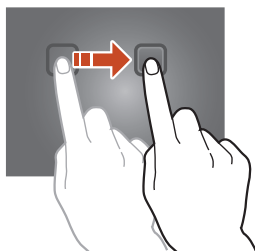


› Remove an item from the Home screen


Tap and hold an item, and then drag it to the rubbish bin.

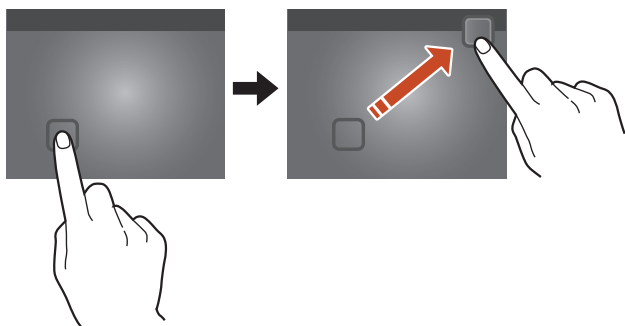


› Add or remove a panel from the Home screen

You can add or remove Home screen panels to organise widgets.

- 1 On the Home screen, place two fingers on the screen and pinch them together to switch to Edit mode.
- 2 Add, remove, or reorganise panels:
 - To remove a panel, tap and hold the panel's thumbnail image, and then drag it to the rubbish bin.
 - To add a new panel, select .

- To set the main panel of the Home screen, select .
- To change the order of panels, tap and hold the panel's thumbnail image, and then drag it to a new location.

3 Select  to return to the previous screen.

► Use widgets

Widgets are small applications that provide convenient functions and information on your Home screen.



- Some widgets connect to web services. Using a web-based widget may result in additional charges.
- The widgets available may vary depending on your region or service provider.

Add a widget to the Home screen

- 1 In the application list, select **Widgets** to open the widget panel.
- 2 Scroll left or right on the widget panel to find a widget.
- 3 Tap and hold a widget to add it to the Home screen.

Add a Settings shortcut to the Home screen

You can create shortcuts to frequently-used setting options on the Home screen.

- 1 In the application list, select **Widgets** to open the widget panel.
- 2 Tap and hold **Settings shortcut**, and release it on the Home screen.
- 3 Select a setting option.

Access applications



Launch applications and take full advantage of features on your device. You can reorganise the application list to match your preferences, or download applications from the Internet to enhance your device's functionality.

1 On the Home screen, select  to access the application list.

2 Scroll left or right to another screen.

You can also select one of the dots at the bottom of the screen to move directly to the corresponding screen.

3 Select an application.

4 Select  to return to the previous screen. Select  to return to the Home screen.



- You can add an application shortcut to the Home screen by tapping and holding an icon in the application list.
- If you rotate the device while using some features, the interface will rotate as well. To prevent the interface from rotating, select **Settings** → **Display** → **Auto-rotate screen**.

› Organise applications

You can change the order of applications in the application list or group them into categories.


1 In the application list, select  → **Edit**.

2 Tap and hold an application icon.



- 3 Organise applications:
 - To move the application, drag it to a new location.
 - To add the application to a new folder, drag it to **Create folder**.
 - To move the application to a new panel, drag it to **Create page**.
 - To uninstall the application, drag it to **Uninstall**.
- 4 Select **Save**.


› Download an application

- 1 In the application list, select **Play Store** or **Samsung Apps**.
- 2 Search for an application and download it to the device.


 To install applications that you downloaded from other sources, you must select **Settings** → **Security** → **Unknown sources**.

› Uninstall an application


- 1 In the application list, select  → **Uninstall**.
- 2 Select  on an application icon and then select **OK**.

 You can uninstall only the applications that you have downloaded.

› Access recently-used applications


- 1 Select  to view the applications you have accessed recently.
- 2 Select an application.

Launch multiple applications

Your device allows you to multitask by running multiple applications at the same time. To launch multiple applications, select  while using an application. Then select another application to launch from the Home screen.

› Manage applications

You can manage multiple applications with the task manager.

- 1 Select  → **Task manager** → **Active applications**.
The task manager launches and shows active applications.
- 2 Control active applications:
 - To switch applications, select one from the list.
 - To close an application, select **End**.
 - To close all active applications, select **End all**.

Customise your device

Get more from your device by changing settings to match your preferences.


› Change the display language

- 1 In the application list, select **Settings** → **Language and input** → **Language**.
- 2 Select a language.

› Turn on or off the touch tones

In the application list, select **Settings** → **Sound** → **Touch sounds**.

› Adjust the device's volume



- 1 Press the Volume key up or down.
- 2 Select  and drag the sliders to adjust the volume level for each sound.

› Adjust the touch screen's vibration intensity

- 1 You can adjust the intensity of the vibration feedback that occurs when you tap the screen.
- 2 In the application list, select **Settings** → **Sound** → **Vibration intensity**.
- 3 Drag the slider under **Vibrate on screen tap**.
- 4 Select **OK**.

› Switch to Silent mode

To mute or unmute your device, do one of the following:

- Tap the right bottom of the screen to open the notifications panel, and then select **Sound**.
- Press and hold the Power key, and then select  or .

› Select a wallpaper for the Home screen

- 1 In the application list, select **Settings** → **Display** → **Home screen wallpaper** → an option.
- 2 Select an image folder → an image.

› Change the display font

- 1 In the application list, select **Settings** → **Display** → **Font style**.
- 2 Select a font → **Yes**.

› Adjust the brightness of the display

Your device includes a light sensor, which can detect the level of ambient light and adjust the brightness of the display automatically. You can also manually set the brightness of the display.



The brightness of the display will affect how quickly the device consumes battery power.

Set your device to adjust the brightness automatically

- 1 In the application list, select **Settings** → **Display** → **Brightness**.
- 2 Select the tick box next to **Automatic brightness**.
- 3 Select **OK**.

The device will increase the brightness in bright surroundings and decrease the brightness in dim surroundings automatically.

Adjust the brightness manually

- 1 In the application list, select **Settings** → **Display** → **Brightness**.
- 2 Clear the tick box next to **Automatic brightness**.
- 3 Drag the slider to the left or right.
- 4 Select **OK**.

› Lock your device

You can lock your device by activating the screen lock feature.




- If you forget your password, take your device to a Samsung Service Centre to reset it.
- Samsung is not responsible for the loss of passwords or private information, or other damages caused by illegal software.

Set a face detection unlock

- 1 In the application list, select **Settings** → **Security** → **Screen lock** → **Face unlock**.
- 2 Select **Set it up** → **Continue**.
- 3 Adjust the device to fit your face inside the figure.
- 4 When your face is captured correctly, select **Continue**.
- 5 Complete the setup of the secondary unlock PIN or pattern.

Set an unlock pattern

- 1 In the application list, select **Settings** → **Security** → **Screen lock** → **Pattern**.
 - 2 View the on-screen instructions and the example pattern, and then select **Next**.
 - 3 Draw a pattern to connect at least 4 dots and select **Continue**.
 - 4 Draw the pattern again to confirm and select **Confirm**.
 - 5 Complete the setup of the backup PIN.
-  If you forget your unlock pattern, you can deactivate the screen lock feature with a backup PIN.

Set an unlock PIN

- 1 In the application list, select **Settings** → **Security** → **Screen lock** → **PIN**.
- 2 Enter a new PIN and select **Continue**.
- 3 Enter the PIN again and select **OK**.

Set an unlock password

- 1 In the application list, select **Settings** → **Security** → **Screen lock** → **Password**.
- 2 Enter a new password (alphanumeric) and select **Continue**.
- 3 Enter the password again and select **OK**.

▶ Lock your SIM or USIM card

You can lock your device with the PIN that is supplied with your SIM or USIM card. Once the SIM or USIM lock is enabled, you must enter the PIN each time you turn on the device or access applications that require the PIN.


- 1 In the application list, select **Settings** → **Security** → **Set up SIM card lock** → **Lock SIM card**.
- 2 Enter your PIN and select **OK**.



- If you enter an incorrect PIN too many times, your SIM or USIM card will be blocked. You must enter a PIN unlock key (PUK) to unblock the SIM or USIM card.
- If you block your SIM or USIM card by entering an incorrect PUK, take the SIM or USIM card to your service provider to unblock it.

➤ Activate the Find my mobile feature

When someone inserts a new SIM or USIM card into your lost or stolen device, the Find my mobile feature will send the contact number to your specified recipients automatically, so that you can locate and recover your device. To use this feature, you must create a Samsung account for controlling the device remotely via the Internet.

- 1 In the application list, select **Settings** → **Security** → **SIM Change Alert**.
- 2 Select **Sign in**.
To create a Samsung account, select **Create new account**.
- 3 Enter the email address and password for your Samsung account, and then select **Sign in**.
- 4 Select **Alert message recipients**.
- 5 Enter the password for your Samsung account again and select **Done**.
- 6 Select the recipient field and add recipients:
 - Enter phone numbers manually, including the country code and the + symbol.
 - Select phone numbers from your contact list by selecting  under the recipient field.
- 7 Enter the text message that will be sent to the recipients.
- 8 Select **Done**.

Enter text

You can enter text by speaking words into the microphone, by selecting characters on the virtual keypad, or by writing on the screen.



Text entry is not supported in some languages. To enter text, you must change the input language to one of the supported languages.

› Change the text input method

Select  on the system bar and select a text input method.

› Enter text with the Google voice input feature

1 Speak your text into the microphone.

2 When you are finished, select **Done**.






To add input languages for voice recognition, select the language → **Add more languages**.

› Enter text with the Swype keypad


1 Tap the first character of a word, and then drag your finger to the second character without lifting your finger from the screen.

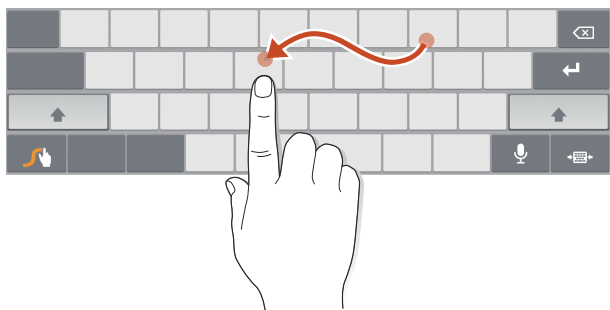2 Continue until you have finished spelling the word.




- 3 Lift your finger.
 - 4 When the device recognises the correct word, select  to insert a space. If the device does not recognise the correct word, select an alternative word from the list that appears.
 - 5 Repeat steps 1-4 to complete your text.
-  • You can also tap the keys to enter text.
- You can tap and hold a key to enter characters that appear above the key. When you tap and hold a key until the character list appears, you can enter special characters, symbols, and numbers.


You can also use the following keys:

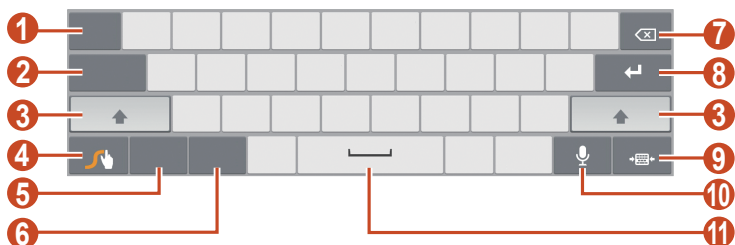


Number	Function
1	Change the input language (tap and hold).
2	Move the cursor to the next text field.
3	Change the case.
4	Access the Swype tip screen; Open the Swype help (tap and hold).
5	Switch text input modes.
6	Switch between Number/Edit mode.
7	Clear your input.
8	Start a new line.


Number	Function
9	Minimise the virtual keypad.
10	Enter text by voice.  This feature may be unavailable depending on the selected input language.
11	Insert a space.

► Enter text with the Samsung keypad

1 From a text field, select  on the system bar and select **Samsung keyboard**.

2 Enter text by selecting alphanumeric keys.


 When entering text, rotate the device to view the QWERTY keypad in widescreen. Select the virtual keys as necessary to enter your text.

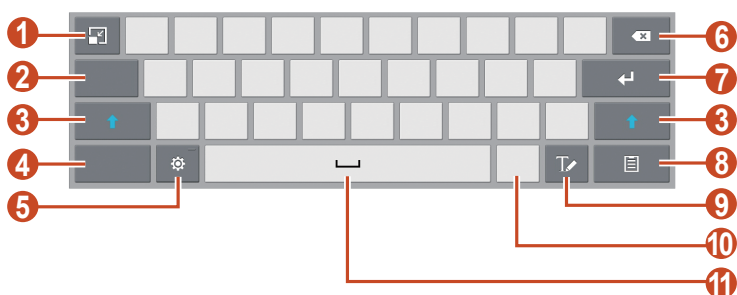

You can also use the following keys:



Number	Function
1	Minimise the virtual keypad.
2	Move the cursor to the next text field.
3	Change the case.

Number	Function
4	Switch text input modes.
5	Access the keypad settings; Change the text input method (tap and hold).
6	Clear your input.
7	Start a new line.
8	Attach an item.
9	Switch to Handwriting mode.
10	Insert a frequently-used emoticon; Open the emoticon panel (tap and hold).
11	Insert a space.

You can activate XT9 predictive text mode by selecting  → **XT9**. When you enter the first three letters of a word, the alternate word list appears.

› Copy and paste text

From a text field, you can copy and paste text to another application.

- 1 Tap and hold a passage of text.
- 2 Drag  or  to select the text to be copied.
- 3 Select **Cut** or **Copy** to add the text to the clipboard.
- 4 In another application, tap and hold the point where the text will be inserted.
- 5 Select **Paste** to insert the text from the clipboard into the text field.

Communication





Messages

Learn to create and send text (SMS) or multimedia (MMS) messages, and view or manage messages that you have sent or received.










You may incur additional charges for sending or receiving messages while you are outside your home service area. For details, contact your service provider.

► Send a text message

- 1 In the application list, select **Messaging** → .
- 2 Add recipients:
 - Enter phone numbers manually and separate them with a semicolon or a comma.
 - Select phone numbers from your contact list by selecting .
- 3 Select the text field and enter your message text.
To insert emoticons, select  → **Insert smiley**.
- 4 To send the message, select .

► Send a multimedia message

- 1 In the application list, select **Messaging** → .
 - 2 Add recipients:
 - Enter phone numbers or email addresses manually and separate them with a semicolon or a comma.
 - Select phone numbers or email addresses from your contact list by selecting .
-  When you enter an email address, the device will convert the message to a multimedia message.

- 3 Select the text field and enter your message text.
To insert emoticons, select  → **Insert smiley**.
- 4 Select  and attach a file.
- 5 Select  → **Add subject** and enter a subject.
- 6 To send the message, select .

► View a text or multimedia message

- 1 In the application list, select **Messaging**.
Your messages are grouped by contact as a message thread.
- 2 Select a contact.
- 3 Select a multimedia message to view more details.



Google Mail

Learn to send or view email messages via the Google Mail™ webmail service.



- This feature may be unavailable depending on your region or service provider.
- This feature may be labelled differently depending on your region or service provider.

► Send an email message

- 1 In the application list, select **Google Mail** → .
- 2 Select the recipient field and enter an email address.
- 3 Select the subject field and enter a subject.
- 4 Select the text field and enter your email text.
- 5 Select  and attach a file.

6 To send the message, select **SEND**.



If you are offline or outside your service area, the message will be held in the message thread until you are online and inside your service area.















► View an email message



1 In the application list, select **Google Mail**.

2 Select  to update the message list.

3 Select an email message.

From the message view, use the following options:

- To move to the next or previous message, scroll right or left.
- To reply to the message, select .
- To reply to the message and include all recipients, select .
- To forward the message to others, select .
- To add the message to the favourites list, select .
- To view an attachment, select **VIEW**. To save it to your device, select **SAVE**.
- To create a new message, select .
- To search for an email message, select .
- To archive the message, select .
- To delete the message, select .
- To add a label to the message, select  → **Change labels**.
- To mark the message as unread, select  → **Mark unread**.
- To mark the message as important, select  → **Mark as important**.
- To hide the message, select  → **Mute**. To view hidden messages, select **All mail** from the label list.
- To add the message to the spam list, select  → **Report spam**.
- To update the message list, select  → **Refresh**.

- To customise the settings for each label, select  → **Manage labels**.
- To change the email settings, select  → **Settings**.

Email



Learn to send or view email messages via your personal or company email account.

› Set up an email account

- 1 In the application list, select **Email**.
- 2 Enter your email address and password.
- 3 Select **Next**. To enter account details manually, select **Manual setup**.
- 4 Follow the on-screen instructions.

When you are finished setting up the email account, email messages will be downloaded to your device. If you have created two or more accounts, you can switch between them. Select an account name at the top of the screen, and then select the account from which you want to retrieve messages.


› Send an email message

- 1 In the application list, select **Email** → .
- 2 Add recipients:
 - Enter email addresses manually and separate them with a semicolon or a comma.
 - Select email addresses from your contact list by selecting .
- 3 Select the subject field and enter a subject.

4 Select the text field and enter your email text.

5 Select  and attach a file.

6 To send the message, select .

 If you are offline or outside your service area, the message will be held in the message thread until you are online and inside your service area.

► View an email message


1 In the application list, select **Email**.

2 Select  to update the message list.







 
3 Select an email message.

From the message view, use the following options:

- To move to the next or previous message, select  or .

 In landscape view, these icons only appear when the email view screen is maximised. Tap and hold the screen partition and move it to make the email view screen larger or smaller.

- To search for an email message, select .
- To reload the messages, select .
- To reply to the message, select .
- To forward the message to others, select .
- To delete the message, select .
- To mark the message as unread, select  → **Mark as unread**.
- To move the message to another folder, select  → **Move**.
- To save the message to your device, select  → **Save email**. The message will be saved in **My Files** → **Root** → **Saved Email**.
- To sort messages, select  → **Sort by**.

- To change the view mode of the message list, select  → **View mode**.
- To change the font colour of messages, select  → **Font colour**.
- To change the background colour of messages, select  → **Background colour**.
- To print the message via Wi-Fi or USB, select  → **Print**. Your device is compatible only with some Samsung printers.
- To delete all messages, select  → **Delete all**.
- To change the email settings, select  → **Settings**.
- To mark the message as important, select ★.
- To save an attachment to your device, select the attachment tab → .



The options available may vary depending on the email account or device's orientation.

Talk

Learn to send and receive instant messages to friends and family with the Google Talk™ instant messaging service.




This feature may be unavailable depending on your region or service provider.





› Set your status

- 1 In the application list, select **Talk**.
- 2 Select a Google account.
- 3 Select your name at the top of your friend list.
- 4 Customise your status, image, and message.

› Add a contact to your friend list


- 1 In the application list, select **Talk** → .
- 2 Enter a friend's email address, and then select **DONE**.
When your friend accepts the invitation, he or she is added to your friend list.


› Start a conversation

- 1 In the application list, select **Talk**.
- 2 Select a contact from the friend list.
The conversation screen opens.
- 3 Enter and send your message.
 - To add more contacts to the conversation, select  → **Add to chat**.
 - To switch between active conversations, scroll left or right.
 - To use video chat, select .
 - To use voice chat, select .
- 4 Select  → **End chat** to end the conversation.

Messenger

Learn to send and receive instant messages from friends and family with the Google+ messenger instant messaging service.

 This feature may be unavailable depending on your region or service provider.

- 1 In the application list, select **Messenger**.
-  If you are launching this application for the first time, follow the on-screen instructions to complete the account setup.
- 2 Enter and send your message.

Google+

Learn to access Google's social network service. You can create groups to send and receive instant messages and upload your photos.



This feature may be unavailable depending on your region or service provider.

1 In the application list, select **Google+**.



If you are launching this application for the first time, follow the on-screen instructions to complete the account setup.

2 Select a social network feature.

Social Hub

Social Hub allows you to access all types of messages from one location. You can view and respond to messages without opening other applications and switch social accounts easily. Visit socialhub.samsungapps.com for more details.



This feature may be unavailable depending on your region or service provider.

1 In the application list, select **Social Hub**.

2 Select a message type.

3 View or respond to messages directly in Social Hub.

Entertainment

Camera


Learn how to take and view photos and videos.



- The camera turns off automatically when you do not use it for a specified period.
- The memory capacity may differ depending on the scene or shooting conditions.

› Take a photo

- 1 In the application list, select **Camera**.
- 2 Aim the camera lens at the subject and make any necessary adjustments.

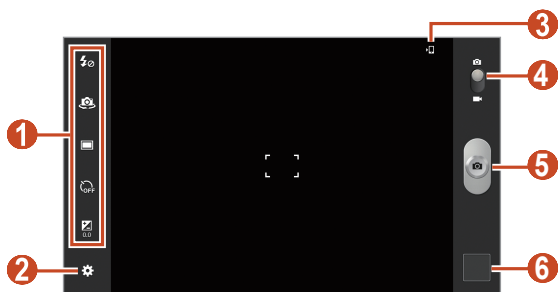

Number	Function
1	<p>Use camera shortcuts.</p> <ul style="list-style-type: none"> ⚡: Change the flash setting; You can turn on or off the flash manually, or set the camera to use the flash when needed. 📷: Switch to the front camera to take a photo of yourself. 📺: Change the shooting mode. ► p. 52 ⏸: Select the length of the delay before the camera takes a photo. ☑ 0.0: Adjust the exposure value to change the brightness. <p>You can add or remove shortcuts to frequently-used options. ► p. 57</p>
2	Change the camera settings.
3	View the storage location.
4	Switch to the camcorder.
5	Take a photo.
6	View photos you have taken.















3 Tap where you want to focus on the preview screen. The focus frame moves to the place you tapped and changes to green when the subject is in focus.

4 Select 📷 to take a photo.


The photo is saved automatically.

After taking a photo, select the image viewer to view it.

- To view more photos, scroll left or right.
- To zoom in or out, place two fingers on the screen and slowly spread them apart or pinch them together. To return to the original size, double-tap the screen.

- To view the photo on a DLNA certified device, select .
- To send the photo to others or share it, select .
- To delete the photo, select .
- To start a slide show, select . Tap the screen to stop the slide show.
- To add the photo to the clipboard, select  → **Copy to clipboard.**
- To crop a section from the photo, select  → **Crop.**
- To rotate the photo anti-clockwise, select  → **Rotate left.**
- To rotate the photo clockwise, select  → **Rotate right.**
- To set the photo as your wallpaper or a contact image, select  → **Set picture as.**
- To print the photo via Wi-Fi or USB, select  → **Print.** Your device is compatible only with some Samsung printers.
- To edit the photo with the image editor, select  → **Edit.**
- To change the motion activation settings, select  → **Motion.**
- To change the name of a file, select  → **Rename.**
- To view photo details, select  → **Details.**

➤ Change the shooting mode


You can take photos with various shooting modes. To change the shooting mode, select  → an option.

Option	Function
Single shot	Take a single photo.
Smile shot	Set the device to recognise people's faces and help you take photos of them when they smile.
Panorama	Take panoramic photos.
Action shot	Take shots of a moving subject and then combine them into a single photo that shows the action.

► Customise camera settings


Before taking a photo, select  to access the following options:






Option	Function
Edit shortcuts	Edit shortcuts to frequently-used options.
Self portrait	Switch to the front camera to take a photo of yourself.
Flash	Change the flash setting: You can turn on or off the flash manually, or set the camera to use the flash when needed.
Shooting mode	Change the shooting mode. ► p. 52
Scene mode	Change the scene mode.
Exposure value	Adjust the exposure value to change the brightness.
Focus mode	Select a focus mode. You can take close-up photos, or set the camera to focus on the subject or human faces automatically.
Timer	Select the length of the delay before the camera takes a photo.
Effects	Apply a special effect.
Resolution	Select a resolution option.
White balance	Adjust the colour balance according to the lighting conditions.
Metering	Select a type of exposure metering.
Outdoor visibility	Set to improve the contrast of the display in bright sunlight.
Guidelines	Set to view the grid lines on the preview screen.

Option	Function
GPS tag	<p>Set the camera to include location information for your photos.</p> <p> • To improve GPS reception, avoid shooting in locations where the signal may be obstructed, such as between buildings or in low-lying areas, or in poor weather conditions.</p> <p>• Your location may appear on your photos when you upload them to the Internet. To avoid this, deactivate the GPS tag setting.</p>
Reset	Reset camera settings.

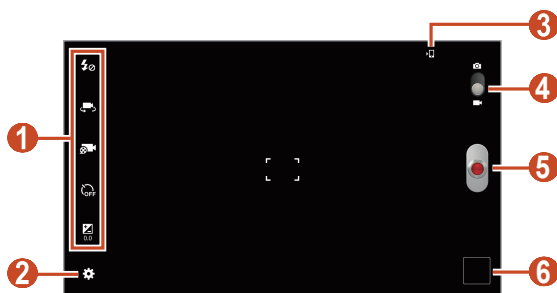► Record a video

- 1 In the application list, select **Camera**.
- 2 Drag the slider to switch to the camcorder.
- 3 Aim the camera lens at the subject and make any necessary adjustments.



Number	Function
1	<p>Use camcorder shortcuts.</p> <ul style="list-style-type: none"> • : Change the flash setting. • : Switch to the front camera to record a video of yourself. • : Change the recording mode (for attaching to a multimedia message or for saving normally). • : Select the length of the delay before the camcorder records a video. • : Adjust the exposure value to change the brightness. <p>You can add or remove shortcuts to frequently-used options. ► p. 57</p>
2	Change the camcorder settings.
3	View the storage location.
4	Switch to the camera.
5	Record a video.
6	View videos you have recorded.


4 Tap where you want to focus on the preview screen. The focus frame moves to the place you tapped and changes to green when the subject is in focus.







5 Select  to start recording.

6 Select  to stop recording.


The video is saved automatically.

After recording a video, select the image viewer to view it.

- To view more videos, scroll left or right.
- To play the video, select .

- To play the video on a DLNA certified device, select .
- To send the video to others or share it, select .
- To delete the video, select .
- To start a slide show, select . Tap the screen to stop the slide show.
- To change the name of a file, select  → **Rename**.
- To view video details, select  → **Details**.

► Customise camcorder settings


Before recording a video, select  to access the following options:

Option	Function
Edit shortcuts	Edit shortcuts to frequently-used options.
Self recording	Switch to the front camera to record a video of yourself.
Flash	Change the flash setting.
Recording mode	Change the recording mode (for attaching to a multimedia message or for saving normally).
Exposure value	Adjust the exposure value to change the brightness.
Timer	Select the length of the delay before the camcorder starts recording a video.
Effects	Apply a special effect.
Resolution	Select a resolution option.
White balance	Adjust the colour balance according to the lighting conditions.
Outdoor visibility	Set to improve the contrast of the display in bright sunlight.

Option	Function
Guidelines	Set to view the grid lines on the preview screen.
Reset	Reset camcorder settings.

› Edit the shortcut icons

You can add or remove shortcuts to frequently-used options.

- 1 From the preview screen, tap and hold the shortcut area, or select  → **Edit shortcuts**.
- 2 Tap and hold an icon from the option list, and then drag it to the shortcut area.
To remove shortcuts, tap and hold an icon, and then drag it to the option list.
- 3 Tap the screen to return to the preview screen.

Video player

Learn to use the video player.





- Some file formats are not supported depending on the device's software.
- If a file size exceeds the memory available, an error may occur when you try to open the file.
- Playback quality may vary by content type.
- Some files may not play properly depending on how they are encoded.

› Play a video

- 1 In the application list, select **Video player**.
- 2 Select a video.

3 Control playback with the following keys:

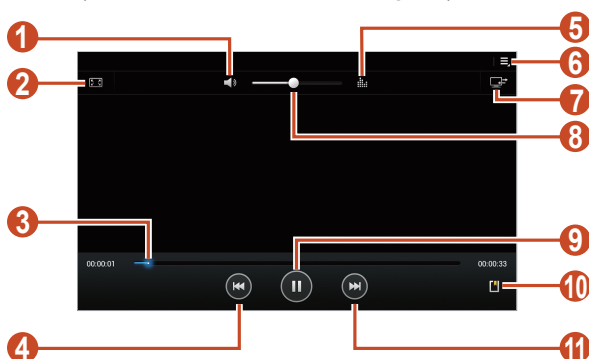

Number	Function
1	Mute the video.
2	Change the ratio of the video screen.
3	Scan forwards or backwards in the file by dragging or tapping the bar.
4	Skip to the previous file; Scan backwards in the file (tap and hold).
5	Select a sound effect.
6	Access video player options.
7	Play the video on a DLNA certified device.
8	Adjust the volume.
9	Pause playback; Select  to resume playback.
10	Insert a bookmark.
11	Skip to the next file; Scan forwards in the file (tap and hold).

During playback, select  to access the following options:

- To send the video to others or share it, select **Share via**.
- To trim a segment of the video, select **Trim**.
- To listen to audio via a Bluetooth headset, select **Via Bluetooth**. You cannot use this option if you connect a headset to your device's headset jack.
- To view your bookmarks, select **Bookmarks**. This option appears if you have inserted a bookmark during playback.
- To change the video player settings, select **Settings**.
- To view video details, select **Details**.

► Customise video player settings

1 During playback, select  → **Settings**.

2 Change the following options:

Option	Function
Play speed	Change the playback speed.
Subtitles	Customise the settings for a subtitle file.
Auto play next	Set the video player to play the next file automatically.
Colour tone	Select a colour tone.
Outdoor visibility	Set to improve the contrast of the display in bright sunlight.

Gallery

Learn to view images and play videos saved in your device.



- Some file formats are not supported depending on the device's software.
- If a file size exceeds the memory available, an error may occur when you try to open the file.
- Playback quality may vary by content type.
- Some files may not play properly depending on how they are encoded.







› View an image

1 In the application list, select **Gallery**.

2 Select a folder → an image.

While viewing an image, use the following options:



- To view more images, scroll left or right.
- To zoom in or out, place two fingers on the screen and slowly spread them apart or pinch them together. To return to the original size, double-tap the screen.
- To view the image on a DLNA certified device, select
- To send the image to others or share it, select
- To delete the image, select
- To start a slide show, select
- To add the image to the clipboard, select → **Copy to clipboard**.
- To crop a section from the image, select → **Crop**.
- To rotate the image anti-clockwise, select → **Rotate left**.
- To rotate the image clockwise, select → **Rotate right**.

- To set the image as your wallpaper or a contact image, select  → **Set picture as**.
- To print the image via Wi-Fi or USB, select  → **Print**. Your device is compatible only with some Samsung printers.
- To edit the image with the image editor, select  → **Edit**.
- To change the motion activation settings, select  → **Motion**.
- To change the name of a file, select  → **Rename**.
- To view image details, select  → **Details**.



The options available may vary depending on the selected folder.

Play a video







- 1 In the application list, select **Gallery**.
- 2 Select a folder → a video (indicated by the  icon).
- 3 Select  to begin playback.
- 4 Control playback with the keys. ► p. 57

During playback, select  to access the following options:

- To send the video to others or share it, select **Share via**.
- To trim a segment of the video, select **Trim**.
- To listen to audio via a Bluetooth headset, select **Via Bluetooth**. You cannot use this option if you connect a headset to your device's headset jack.
- To view your bookmarks, select **Bookmarks**. This option appears if you have inserted a bookmark during playback.
- To change the video player settings, select **Settings**.
- To view video details, select **Details**.

Photo editor

You can edit images and apply various effects.

- 1 In the application list, select **Photo editor**.
- 2 Select **Select picture** → an image.
To take a new photo, select **Take picture**.
- 3 Select **Selection** → **OK**.
- 4 Draw a border around the area you want to select, and then select **Done**.
 - To change the type of selection tool, select **Selection**.
 - To edit the selection border, select ,  or . If you select **Magnetic** or **Brush**, you can adjust the border size by selecting **Selection size**.
 - To reverse the selection, select **Inverse**.
- 5 Edit the image with the following tools, and then select **Done**.
 - **Rotate**: Rotate or flip the image.
 - **Resize**: Resize the image by dragging the rectangle or selecting **100%** → an option.
 - **Crop**: Crop the image by moving or dragging the rectangle.
 - **Colour**: Apply a colour effect.
 - **Effect**: Apply a filter effect.
 - **Tools**: Use additional tools.
 - : Undo your last action.
 - : Redo your last action.
- 6 When you are finished, select .
- 7 Enter a name for the image and select **OK**.

Music Player

Learn to listen to your favourite music while on the go.



- Some file formats are not supported depending on the device's software.
- If a file size exceeds the memory available, an error may occur when you try to open the file.
- Playback quality may vary by content type.
- Some files may not play properly depending on how they are encoded.

› Add music files to your device

Start by transferring files to your device:

- Download from the Internet. ► p. 73
- Download from a computer with Samsung Kies. ► p. 85
- Download from a computer with Windows Media Player. ► p. 85
- Receive via Bluetooth. ► p. 95
- Receive via Wi-Fi. ► p. 90

› Play music


- 1 In the application list, select **Music Player**.
- 2 Select a music category → a music file.
- 3 Select the album image to open the music player screen.

4 Control playback with the following keys:





Number	Function
1	Adjust the volume.
2	Set the file as your favourite track.
3	Scan forwards or backwards in the file by dragging or tapping the bar.
4	Activate Shuffle mode.
5	Restart playback; Skip to the previous file (tap within 2 seconds); Scan backwards in the file (tap and hold).
6	View music details.
7	Open the playlist.
8	Access music options.
9	Play the music file on a DLNA certified device.
10	Select a sound effect.
11	Pause playback; Select ► to resume playback.

Number	Function
12	Change the repeat mode.
13	Skip to the next file; Scan forwards in the file (tap and hold).


During playback, select  to access the following options:

- To add the music file to a playlist, select **Add to playlist**.
- To listen to music via a Bluetooth headset, select **Via Bluetooth**. You cannot use this option if you connect a headset to your device's headset jack.
- To send the music file to others or share it, select **Share via**.
- To set the music file as your alarm tone, select **Set as alarm tone**.
- To change the music player settings, select **Settings**.

➤ Create a playlist

- 1 In the application list, select **Music Player** → **Playlists**.
- 2 Select  → **New playlist**.
- 3 Enter a title for your new playlist and select **OK**.
- 4 Select a music category and select  next to the files to include.
- 5 Select **Done**.

➤ Customise music player settings

- 1 In the application list, select **Music Player**.
- 2 Select  → **Settings**.

3 Change the following options:

Option	Function
Advanced → SoundAlive	Select a sound effect.
Advanced → Play speed	Change the playback speed.
Advanced → Lyrics	Set to show song lyrics during playback.
Advanced → Music auto off	Set the music player to turn off automatically after a specific period of time.
Music menu	Select music categories to show on the music library screen.

Music Hub

You can access the online music store to search for and buy your favourite songs. You can also add music files to your wish list and play them.



- This feature may be unavailable depending on your region or service provider.
- To use this feature, you may need to download the application from the Internet.


- 1 In the application list, select **Music Hub**.
- 2 Search for, preview, or buy your favourite songs.

Personal information

Contacts

Learn to create and manage a list of your personal or business contacts. You can save names, phone numbers, email addresses, and more for your contacts.





› Create a contact

- 1 In the application list, select **Contacts** → **Contacts** → .
- 2 Select a memory location.
- 3 Enter contact information.
- 4 Select **Save** to add the contact to memory.

› Find a contact

- 1 In the application list, select **Contacts** → **Contacts**.
- 2 Scroll up or down the contact list.
- 3 Select a contact's name.

From the contact view, use the following options:

- To send a text or multimedia message, select .
- To send an email message, select .
- To set a favourite number, select .
- To edit the contact information, select .

› Create your namecard

1 In the application list, select **Contacts** → **Contacts**.

2 Select your name at the top of the contact list.

3 Select .

4 Enter your personal details and select **Save**.

 You can send your namecard to others or share it by selecting  → **Import/Export** → **Share namecard via**.

› Create a group of contacts

By creating groups of contacts, you can manage multiple contacts and send a message to an entire group.

1 In the application list, select **Contacts** → **Groups**.

2 Select .

3 Enter a name for the group.

4 Add members to the group.

5 Select **Save**.

› Copy a contact

Copy contacts from the SIM or USIM card to your device


1 In the application list, select **Contacts** → **Contacts**.

2 Select  → **Import/Export** → **Import from SIM card**.

3 Select a memory location.

4 Select contacts to copy, and then select **Done**.


Copy contacts from your device to the SIM or USIM card

- 1 In the application list, select **Contacts** → **Contacts**.
- 2 Select  → **Import/Export** → **Export to SIM card**.
- 3 Select contacts to copy, and then select **Done** → **OK**.


▶ Import or export a contact

You can import or export files (in vcf format) to or from your device's USB storage.

Import contact files

- 1 In the application list, select **Contacts** → **Contacts**.
- 2 Select  → **Import/Export** → **Import from USB storage**.
- 3 Select a memory location.
- 4 Select an option for importing a single contact file, multiple contact files, or all contact files, and then select **OK**.
- 5 Select contact files to import, and then select **OK**.


Export contacts

- 1 In the application list, select **Contacts** → **Contacts**.
- 2 Select  → **Import/Export** → **Export to USB storage**.
- 3 Select **OK** to confirm.

S Planner

Your device includes a powerful planner to help you organise your schedules more conveniently and effectively. Learn to create and manage events and tasks, and set alarms to remind yourself of important events and tasks.

› Create an event or task

- 1 In the application list, select **S Planner**.
- 2 Select .
- 3 Select an event type at the top of the screen.
- 4 Enter the details of the event and select **Save**.


› Change the view mode

- 1 In the application list, select **S Planner**.
- 2 Select a view mode at the top left of the screen.
 - **Year:** All months in the year
 - **Month:** A full month in one view
 - **Week:** Hourly blocks for the days in one full week
 - **Day:** Hourly blocks for one full day
 - **List:** A list of scheduled events
 - **Task:** A list of tasks



You can also change the view mode by placing two fingers on the screen and spreading them apart or pinching them together.

› View an event or task

- 1 In the application list, select **S Planner**.
- 2 Select a date on the calendar.
 - To move to a specific day, select  → **Go to**, and then enter the date.
 - To move to today's date, select **Today**.

› Stop an event or task alarm


If you set a reminder for a calendar event or task, an alarm will sound at the specified time.

- 1 Tap the right bottom of the screen to open the notifications panel.
- 2 Select the event notification.
- 3 Select an event to view more details.
To snooze the event alarm, select **Snooze** or **Dismiss**.

Memo

Learn to record important information for viewing at a later date.

› Create a memo













- 1 In the application list, select **Memo**.
- 2 Select .
- 3 Enter your memo text and select **Done**.

› View a memo

1 In the application list, select **Memo**.

2 Select a memo to view its details.

While viewing the memo, use the following options:

- To delete the memo, select  → .
- To change the background colour, select  → .
- To protect the memo from accidental deletion, select  → .
- To print the memo via Wi-Fi or USB, select  → . Your device is compatible only with some Samsung printers.
- To upload the memo to a social network site, select  → .
- To send the memo to others, select  → .





 

Pen memo

Learn to create freehand memos.

1 In the application list, select **Pen memo**.

2 Select .

3 Create a freehand memo with the following tools:

Tool	Function
	Enter text.
	Write or draw on the screen.
	Erase pen marks.
	Change the tool settings.
	Undo your last action.
	Redo your last action.

4 When you are finished, select **Done**.

Web and GPS-based services



You may incur additional charges for accessing the Internet and downloading media files. For details, contact your service provider.

Internet

Learn to access and bookmark your favourite webpages.




- This feature may be labelled differently depending on your region or service provider.
- Available icons may vary depending on your region or service provider.

► Browse a webpage








- 1 In the application list, select **Internet**.
- 2 To access a specific webpage, select the URL field, enter the web address.
- 3 Navigate webpages with the following keys:






Number	Function
1	Close the current tab.
2	Move backward or forward to webpages in history.

Number	Function
3	Reload the current webpage. While the device is loading webpages, this icon changes to  .
4	Open a new window.
5	Access web browser options.
6	View your bookmarks, saved pages, and recent Internet history.
7	Activate the URL field.
8	Bookmark the current webpage.

While browsing a webpage, access the following options:


- To zoom in or out, place two fingers on the screen and slowly spread them apart or pinch them together. To return to the original size, double-tap the screen. This feature may be unavailable on some webpages.
- To open a new window, select  → **New tab**.
- To open a new tab without saving cookies, select  → **New incognito tab**.
- To add a shortcut for the current webpage to the Home screen, select  → **Add shortcut to home**.
- To send a web address to others or share it, select  → **Share page**.
- To search for text on a webpage, select  → **Find on page**.
- To switch to the desktop view, select  → **Desktop view**.
- To save the current webpage for reading offline, select  → **Save for offline reading**. You can view the saved pages by selecting  → **Saved pages**.

- To view your download history, select  → **Downloads**.
- To print the webpage via Wi-Fi or USB, select  → **Print**.
Your device is compatible only with some Samsung printers.
- To change the browser settings, select  → **Settings**.


➤ Search for information by voice




This feature may be unavailable depending on your region or service provider.

- 1 In the application list, select **Internet**.
- 2 Select the URL field.
- 3 Select  and say a keyword into your device's microphone.
The device searches for webpages related to the keyword.
- 4 Select a search result.

➤ Bookmark your favourite webpage

- 1 In the application list, select **Internet**.
- 2 Enter a web address or navigate to a webpage.
- 3 Select .
- 4 Enter a name for the bookmark and select **OK**.


To view your bookmarks, select  → **Bookmarks**. From the bookmark list, tap and hold a bookmark to access the following options:


- To open the webpage in the current window, select **Open**.
- To open a new window, select **Open in new tab**.

- To edit bookmark details, select **Edit bookmark**.
- To add the bookmark shortcut to the Home screen, select **Add shortcut to home**.
- To send the address of the current webpage to others, select **Share link**.
- To copy the address of the current webpage, select **Copy link URL**.
- To delete the bookmark, select **Delete bookmark**.
- To set the webpage as your browser's homepage, select **Set as homepage**.

► Download a file from the Internet


When you download files or applications from the Internet, your device saves them to the internal memory.

 Files you download from the Internet can include viruses that will damage your device. To reduce this risk, only download files from sources you trust.

 Some media files include Digital Rights Management to protect copyrights. This protection may prevent you from downloading, copying, modifying, or transferring some files.

- 1 In the application list, select **Internet**.
- 2 Search for a file or application and download it to the device.

► View your recent history

- 1 In the application list, select **Internet** →  → **History**.
- 2 Select a webpage to access.

Latitude

Learn to share your location with your friends and view their locations with the Google Latitude™ location service.



This feature may be unavailable depending on your region or service provider.

- 1 In the application list, select **Latitude**.
The device joins Latitude automatically.
- 2 Select **■** → **Add friends** → an option.
- 3 Select a friend, or enter an email address and select **Add friends**.
- 4 Select **Yes**.
When your friend accepts your invitation, you can share locations.

Maps



Learn to use the Google Maps™ mapping service to find your location, search for places, and get directions.








- This feature may be unavailable depending on your region or service provider.
- You must activate location services to find your location and search the map. ► p. 96

› Search for a location




- 1 In the application list, select **Maps**.
The map will show your current location.

- 2 Select .
- 3 Enter a keyword for the location.
To search for a location by voice, select .
- 4 Select the location to view its details.

While viewing the map, use the following options:

- To zoom in or out, place two fingers on the screen and slowly spread them apart or pinch them together.
- To view all of the search results, select **Search Results**.
- To view your current location, select .
- To search for a place nearby, select .
- To get directions to a specific destination, select .
- To add layers to the map, select .
- To add a star to the location, select  → **Add star**.

► Get directions to a specific destination

- 1 In the application list, select **Maps**.
- 2 Select .
- 3 Enter the addresses of the starting location and the destination.
To enter an address from your contact list or starred places, or select a point on the map, select  → an option.
- 4 Select a travel method and select **Go**.
The route is indicated on the map. Depending on the selected travel method, you may see multiple routes.
- 5 When you are finished, select  → **Clear Map**.

Navigation

Learn to get spoken directions to your destination.



- Navigation maps, your current location, and other navigational data may differ from actual location information. You should always pay attention to road conditions, traffic, and any other factors that may affect your driving and follow all safety warnings and regulations while driving.
- This feature may be unavailable depending on your region or service provider.

- 1 In the application list, select **Navigation**.
- 2 Enter your destination with the following methods:
 - Enter your destination by voice.
 - Enter your destination with the virtual keypad.
 - Select your destination from contacts' addresses.
 - Select your destination from your starred places.
- 3 Install the required software, and then use the navigation features.

Local

Learn to search for business and attractions.



- This feature may be unavailable depending on your region or service provider.

- 1 In the application list, select **Local**.
- 2 Select a category.

The device searches for places nearby that are related to the category.

3 Select a place name to view its details.



You can add more categories by selecting  → **Add a search.**

Play Store

Your device's functionality can be extended by installing additional applications. Play Store provides a quick and easy way to shop for mobile applications.




- This feature may be unavailable depending on your region or service provider.
- Your device will save user files from downloaded applications to the internal memory.

› Download an application

- 1 In the application list, select **Play Store**.
- 2 Search for an application and download it to the device. When the download is complete, the device will install the application automatically.

› Uninstall an application

- 1 In the application list, select **Play Store**.
- 2 Select  → an item.
- 3 Select **Uninstall** → **OK**.

Samsung Apps

Samsung Apps allows you to easily download a wide range of applications and updates for your device. With fully optimised applications from Samsung Apps, your device becomes even smarter. Explore the useful applications on offer and enhance your mobile life.

- 1 In the application list, select **Samsung Apps**.
- 2 Search for and download applications to the device.



- This feature may be unavailable depending on your region or service provider.
- For details, please visit www.samsungapps.com or refer to the Samsung Apps leaflet.


YouTube

Learn to view and upload videos via the YouTube™ video sharing service.



- This feature may be unavailable depending on your region or service provider.

▶ Play a video

- 1 In the application list, select **YouTube**.
- 2 Select a video.
- 3 Rotate the device anti-clockwise to the landscape view.
- 4 Tap a video screen and select  to view a full screen.



5 Control playback with the following keys:



Number	Function
1	Pause or resume playback.
2	Scan forwards or backwards in the file by dragging the bar.
3	View the video quality. This feature may not be available for some videos.
4	Add the video to your playlist.
5	Send the URL to others.
6	Access YouTube options.
7	Change the ratio of the video screen.

> Upload a video

- 1 In the application list, select **YouTube**.
- 2 Select **ACCOUNT**.

- 3 Select your Google account if it is linked to YouTube. Alternatively, you can select **Add account** and set up an account to sign in to YouTube.
- 4 Select  → a video.
 If you are uploading a video for the first time, select a network type to upload a video.
- 5 Enter the details of the upload and select **Upload**.

Readers Hub



Learn to access various reading materials.

- 1 In the application list, select **Readers Hub**.
- 2 If you are launching this application for the first time, select the tick box next to **Do not show for 90 days** and select **Confirm**.
- 3 Select a thumbnail image of some reading material.
- 4 Search for and download reading material from the online store.






Pulse

Learn to read news articles on your device and add feeds for your favourite news topics.




› Read feeds

- 1 In the application list, select **Pulse**.
- 2 If you are launching this application for the first time, select **Okay** and tap the screen to clear the hint.
- 3 Select  to update feeds.
To read the feeds you added to your favourite list, select .
- 4 Scroll up or down to select a feed source.
- 5 Scroll left or right, and then select a feed.

While reading the feed, use the following options:

- To add the feed to your favourite list, select .
- To upload the feed to social network sites, select  or .
- To send the feed to others, select .
- To return to the feed list, select .

› Manage feed sources

- 1 In the application list, select **Pulse**.
- 2 Select  to view the feed source list.
- 3 Select  or  to add or delete a feed.

Connectivity

USB connections

Learn to connect your device to a computer with a USB cable.



Do not disconnect the USB cable from a computer while the device is transferring or accessing data. Doing so may result in data loss or damage to the device.



For best results, connect the USB cable directly to a USB port on a computer. Data transfers may fail when using a USB hub.

➤ Connect with Samsung Kies

Ensure that Samsung Kies is installed on your computer. You can download the program from the Samsung website.



Samsung Kies will work on both Windows and Macintosh computers.

- 1 Connect your device to a computer with a USB cable. Samsung Kies launches on the computer automatically. If Samsung Kies does not launch, double-click the Samsung Kies icon on the computer.
- 2 Transfer files between your device and the computer. Refer to the Samsung Kies help for more information.

➤ Connect with Windows Media Player

Ensure that Windows Media Player is installed on your computer.

- 1 Connect your device to a computer with a USB cable.
- 2 Open Windows Media Player and synchronise music files.

➤ Connect as a media device

You can connect your device to a computer and access media files stored on your device.

- 1 Connect your device to a computer with a USB cable.
- 2 Tap the right bottom of the screen to open the notifications panel.
- 3 Select **Connected as a media device** → **Media device (MTP)**.
- 4 Transfer files between your device and the computer.

➤ Connect as a camera device

You can connect your device to a computer as a camera and access files in your device.



Use this USB connection mode when your computer does not support the media transfer protocol (MTP) or does not have the USB driver for your device installed.

- 1 Connect your device to a computer with a USB cable.
- 2 Tap the right bottom of the screen to open the notifications panel.
- 3 Select **Connected as a media device** → **Camera (PTP)**.
- 4 Transfer files between your device and the computer.

Wi-Fi

Learn to use your device's wireless networking capabilities to activate and connect to any wireless local area network (WLAN) compatible with the IEEE 802.11 a/b/g/n standards.

You can connect to the Internet or other network devices anywhere an access point or wireless hotspot is available.



Your device uses a non-harmonised frequency and is intended for use in all European countries. The WLAN can be operated in the EU without restriction indoors, but cannot be operated outdoors.

▶ Activate the Wi-Fi feature

In the application list, select **Settings** and then drag the **Wi-Fi** switch to the right.



The Wi-Fi feature running in the background will consume battery power. To preserve battery power, activate the feature only when needed.

▶ Find and connect to a Wi-Fi AP

- 1 In the application list, select **Settings** → **Wi-Fi**.
Your device searches for available Wi-Fi APs automatically.
- 2 Select an AP.
- 3 Enter the password for the AP (if necessary).
- 4 Select **Connect**.

▶ Add a Wi-Fi AP manually

- 1 In the application list, select **Settings** → **Wi-Fi** → **Add network**.
- 2 Enter an SSID for the AP and select a security type.
- 3 Set the security settings according to the security type you selected, and then select **Save**.

► Connect to a Wi-Fi AP with a protected setup

You can connect to a secured AP with a WPS button or WPS PIN. To use this method, your wireless access point must have a WPS button.

Connect with a WPS button

- 1 In the application list, select **Settings** → **Wi-Fi**.
- 2 Select an AP that has WPS available, and then select **Show advanced options**.
- 3 Select the **WPS** drop-down menu.
- 4 Select **Push button** → **Connect**.
- 5 Press the WPS button on the AP within 2 minutes.


Connect with a WPS PIN

- 1 In the application list, select **Settings** → **Wi-Fi**.
- 2 Select an AP that has WPS available, and then select **Show advanced options**.
- 3 Select the **WPS** drop-down menu.
- 4 Select **PIN from this device** → **Connect**.
- 5 On the AP, enter the PIN, and then press the WPS button.

► Set the static IP settings

- 1 In the application list, select **Settings** → **Wi-Fi**.
- 2 Select an AP → **Show advanced options**.
- 3 Select the **IP settings** drop-down menu.
- 4 Select **Static**.
- 5 Change the IP settings.
- 6 Select **Connect**.

› Customise Wi-Fi settings

- 1 In the application list, select **Settings** → **Wi-Fi** →  → **Advanced**.
- 2 Change the following options:

Option	Function
Network notification	Set the device to notify you when an open Wi-Fi AP is available.
Keep Wi-Fi on during sleep	Set whether or not to keep the Wi-Fi feature active in Sleep mode.
MAC address	View the MAC address.
IP address	View the IP address.

Wi-Fi Direct

Learn to use the Wi-Fi Direct feature to connect two devices via Wi-Fi without requiring an AP.

› Connect your device to another device

- 1 In the application list, select **Settings** → **More...** → **Wi-Fi Direct**.
- 2 Drag the **Wi-Fi Direct** switch to the right and then select **OK**.
- 3 Select **Scan** → a device.
When the owner of the other device accepts the connection, the devices are connected.

› Send data via Wi-Fi

- 1 Select a file or item from an appropriate application.

2 Select an option for sending data via Wi-Fi.



The method for selecting an option may vary by data type.

3 Search for and select another device.

› Receive data via Wi-Fi

When you receive data, it is saved to your device automatically. Received data is saved to the ShareViaWiFi folder.

AllShare

Learn to use the Digital Living Network Alliance (DLNA) service that enables you to share media files between DLNA certified devices in your home via Wi-Fi.



- Some files may not play on some DLNA certified devices.
- Sharing media files may be buffered depending on the network connection.

› Play your files on another device

1 In the application list, select **AllShare**.

2 Select **My device**.

3 Select a media category → a file.

4 Select a player.

Playback begins on the selected player.

5 Control playback with the keys on your device.

 


Playback may be buffered, depending on the network connection and the connected server.

➤ Play a file from another device on your device


- 1 In the application list, select **AllShare**.
Your device searches for DLNA certified devices automatically.
- 2 Select a device that contains media files.
- 3 Select a media category → a file.
- 4 Control playback with the keys on your device.

➤ Play a file from one device on another device

- 1 In the application list, select **AllShare**.
Your device searches for DLNA certified devices automatically.
- 2 Select a device that contains media files.
- 3 Select a media category → a file.
- 4 Select .
- 5 Select a player.
Playback begins on the selected player.
- 6 Control playback with the keys on your device.

➤ Customise settings for sharing media files

To allow other DLNA certified devices to access media files on your device, you must activate media sharing.

- 1 In the application list, select **AllShare** → .
- 2 Change the following options:

Option	Function
Media server name	Enter a media server name for your device.
Share media	Set to share your videos, images, or music with other devices.

Option	Function
Access point network	Select a connection profile to use for DLNA connections.
Upload from other devices	Set to accept uploads from other devices.

Mobile network sharing

Learn to share your device's mobile network connection with other devices.

› Share your device's mobile network via Wi-Fi

Learn to use your device as a wireless access point for other devices.



This feature may be unavailable depending on your region or service provider.

- 1 In the application list, select **Settings** → **More...** → **Tethering and portable hotspot**.
- 2 Select **Portable Wi-Fi hotspot** to activate mobile network sharing via Wi-Fi.
- 3 Select **Configure portable Wi-Fi HotSpot** to configure network settings to use your device as an AP.

Option	Function
Network SSID	Edit the device name that will be shown to other devices.
Security	Select a security type.
Password	Enter a password to prevent unapproved access to your mobile network. This option is available only when you set the security option.

Option	Function
Show password	Set to show your password as you enter them.

- 4 Select **Save**.
- 5 On another device, locate your device's name and connect to your mobile network.

➤ Share your device's mobile network via USB

- 1 Connect your device to a computer with a USB cable.
- 2 In the application list, select **Settings** → **More...** → **Tethering and portable hotspot**.
- 3 Select **USB tethering** to activate mobile network sharing via USB.
To stop sharing the network connection, clear the tick box next to **USB tethering**.



The sharing method may differ depending on the computer's operating system.

➤ Share your device's mobile network via Bluetooth

- 1 In the application list, select **Settings** → **More...** → **Tethering and portable hotspot**.
- 2 Select **Bluetooth tethering** to activate the mobile network sharing via Bluetooth.
- 3 On another device, find and pair with your device.
Ensure that you have activated the Bluetooth feature and the visibility setting.

Bluetooth

Learn to exchange data or media files with other devices via Bluetooth.




- Samsung is not responsible for the loss, interception, or misuse of data sent or received via the Bluetooth feature.
- Always ensure that you share and receive data with devices that are trusted and properly secured. If there are obstacles between the devices, the operating distance may be reduced.
- Some devices, especially those that are not tested or approved by the Bluetooth SIG, may be incompatible with your device.
- Do not use the Bluetooth feature for illegal purposes (for example, pirating copies of files or illegally tapping communications for commercial purposes). Samsung is not responsible for the repercussions of illegal use of the Bluetooth feature.

› Activate the Bluetooth feature


In the application list, select **Settings** and then drag the **Bluetooth** switch to the right.

› Find and pair with another device



- 1 In the application list, select **Settings** → **Bluetooth** → **Scan for devices**.
- 2 Select a device.

- 3 Select **OK** to match the Bluetooth PIN between two devices. Alternately, enter a Bluetooth PIN and select **OK**. When the owner of the other device accepts the connection or enters the same PIN, pairing is complete. If the pairing is successful, the device will search for available services automatically.
-  Some devices, especially headsets or hands-free car kits, may have a fixed Bluetooth PIN, such as 0000. If the other device has a PIN, you must enter it.

► Send data via Bluetooth

- 1 Select a file or item from an appropriate application.
 - 2 Select an option for sending data via the Bluetooth feature.
-  The method for selecting an option may vary by data type.
- 3 Search for and pair with a Bluetooth device.

► Receive data via Bluetooth

- 1 In the application list, select **Settings** → **Bluetooth** and then select the tick box next to your device.
-  To select the length of time that your device will be visible, select  → **Visible time-out**.
- 2 When prompted, select **OK** to match the Bluetooth PIN or enter the Bluetooth PIN and select **OK** (if necessary).
 - 3 Select **Accept** to confirm the connection between two devices.


Received data is saved to the Bluetooth folder. If you receive a contact, it is saved to the phonebook automatically.


GPS

Your device is equipped with a global positioning system (GPS) receiver. Learn to activate location services and use additional GPS functions.

For better reception of GPS signals, avoid using your device in the following conditions:

- Between buildings, in tunnels or underground passages, or inside buildings
- In poor weather
- Around high voltage or electromagnetic fields
- In a vehicle with sun protection film


 Do not touch or cover the area around the antenna with your hands or other objects while using the GPS functions.

 This feature may be unavailable depending on your region or service provider.

> Activate location services

You must activate location services to receive location information or search the map.

- 1 In the application list, select **Settings** → **Location services**.
- 2 Change the following options:

Option	Function
Use wireless networks	Set to use Wi-Fi and/or mobile networks to find your location.  You may incur additional charges for using mobile networks.
Use GPS satellites	Set to use GPS satellites to find your location.

Option	Function
Location and Google search	Set the device to use your current location for Google search and other Google services.

VPN connections

Learn to create virtual private networks (VPNs) and connect to them securely over the Internet.



- Your device should already be configured with Internet access. If you have trouble accessing the Internet, you must edit the connections. If you are not sure what information to enter, ask your VPN administrator.
- To use this feature, you must activate the screen lock feature.

› Set up a VPN profile

- 1 In the application list, select **Settings** → **More...** → **VPN** → **Add VPN network**.
- 2 Change the following options:

Option	Function
Name	Enter a name for the VPN server.
Type	Select a VPN type.
Server address	Enter the IP address of the VPN server.
L2TP secret	Enter an L2TP secret password.
IPSec identifier	Enter a user name.
IPSec pre-shared key	Enter a pre-shared security key.

Option	Function
IPSec user certificate	Select a user certificate that the VPN server will use to identify you. You can import certificates from the VPN server or download them from the Internet.
IPSec CA certificate	Select a certificate authority (CA) certificate that the VPN server will use to identify you. You can import certificates from the VPN server or download them from the Internet.
IPSec server certificate	Select a server certificate that the VPN server will use to identify you. You can import certificates from the VPN server or download them from the Internet.
PPP encryption (MPPE)	Set to encrypt data before sending it to the VPN server.
Show advanced options	Set to change the advanced network settings.



The options available may vary depending on the VPN type.

3 When you are finished, select **Save**.

➤ Connect to a private network

1 In the application list, select **Settings** → **More...** → **VPN**.

2 Select a private network.

3 Enter the user name and password, and then select **Connect**.

Tools

Calculator

Learn to perform calculations with your device.


› Perform a calculation

- 1 In the application list, select **Calculator**.
- 2 Use the keys on the screen to perform basic or scientific calculations.



Rotate the device to the landscape view to use the scientific calculator.


› View the calculation history


- 1 In the application list, select **Calculator**.
- 2 Perform a calculation.
- 3 Select  to hide the calculator keypad.
The calculation history appears.

Alarm

Learn to set and control alarms for important events.



› Set an alarm

- 1 In the application list, select **Alarm**.
- 2 Select .

- 3 Set the details of the alarm.
 - 4 When you are finished, select **Done**.
-  To deactivate an alarm, select the clock icon next to the alarm. To delete an alarm, tap and hold the alarm, and then select **Delete alarm**.

› Stop an alarm

When the alarm sounds,

- To stop the alarm, select  and then drag your finger outside of the large circle.
- To silence the alarm for the snooze period, select  and then drag your finger outside of the large circle.



World clock

Learn to view the time in another region and set world clocks to appear on your display.

› View a world clock

- 1 In the application list, select **World clock**.
- 2 Scroll through the world map and select a time zone.


› Create a world clock

- 1 In the application list, select **World clock**.
- 2 Select .
- 3 Enter a city name or select one from the city list.
- 4 Select .

 To apply summer time to the clock, tap and hold the clock, and then select **DST settings**.

Downloads

Learn to manage logs of files you have downloaded from the web or email.

- 1 In the application list, select **Downloads**.
- 2 Select a download category.
- 3 To open a downloaded file, select the log.
To delete a log, select the tick box and select .

My Files

Learn to access various types of files saved in your device.

› Supported file formats



Your device supports the following file formats:

Type	Format
Image	bmp, gif, jpg, png
Video	mp4, 3gp, avi, wmv, asf, mkv, flv, webm
Music	mp3, aac, ogg, oga, wma/asf, m4a, mp4, 3gp, 3ga, flac
Sound	wav, amr, awb, mid, mxmf, xmf, rtttl, rtx, ota, imy
Others	doc, docx, pdf, ppt, pptx, txt, xls, xlsx, htm, html, vcf, vcs, vnt












- Some file formats are not supported depending on the device's software.
- If a file size exceeds the memory available, an error may occur when you try to open the file.

› View a file



- 1 In the application list, select **My Files**.
- 2 Select a folder.
 - To move up one level in the file directory, select .
 - To return to the Home directory, select .
- 3 Select a file.

From the folder list, access the following options:

- To search for files saved in your device, select .
- To view the files in the thumbnail view, select .
- To create folders for managing files, select .
- To sort files or folders, select the **Name** drop-down menu and select an option.
- To send a file to others, select the tick box and select .
- To copy or move the files to another file folder, select the tick boxes and select  or .
- To delete files or folders, select the tick boxes and select .
- To change the name of a file, select the tick box and select  → **Rename**.
- To view file or folder details, select the tick box and select  → **Details**.

Search

Learn to search for data in your device or information on the Internet.

- 1 In the application list, select **Search**.
- 2 Enter a keyword and select 
 - To search for data by voice, select  and say a keyword into your device's microphone.
- 3 Select a search result.

SIM Toolkit

Use a variety of additional services offered by your service provider. Depending on your SIM or USIM card, this application may be labelled differently. In the application list, select **SIM Toolkit**.

Task manager

With the task manager, you can view open applications and memory information.

- 1 In the application list, select **Task manager**.
- 2 Use the following options:
 - **Active applications:** View open applications.
 - **Downloaded:** View the total amount of memory used by all applications installed on your device.
 - **RAM manager:** View and clear the RAM for your device.
 - **Storage:** View the used and available memory in your device.
 - **Help:** View information about using the task manager.

Polaris Office

Learn to create or view documents with your device.




This feature may be unavailable depending on your region or service provider.

› Create a document

- 1 In the application list, select **Polaris Office**.











If you are launching this application for the first time, register as an online user or skip the registration.

- 2 Select **New file** → a document type.
- 3 Create the document.
- 4 When you are finished, select .
- 5 Enter a name for the document and select a memory location for saving the document, and then select **Save**.

► Open a document

- 1 In the application list, select **Polaris Office**.
- 2 Select **Local storage** or **Web storage** → a document file.
To open a recently-used file, select a file under **Recent files**.
- 3 View the document.

From the document view, access the following options:

- To open the editing toolbar, select .
- To zoom in or out, place two fingers on the screen and slowly spread them apart or pinch them together. To return to the original size, double-tap the screen. You can also select  → an option.
- To search for text, select .
- To bookmark the current page, select  → **Bookclip**.
- To adjust the document to fit the screen, select  → **Reflow text**.
- To send the document to others, select  → **Send**.
- To read the document via the text-to-speech (TTS) feature, select  → **Text to speech**.
- To print the document via Wi-Fi or USB, select  → **Print**.
Your device is compatible only with some Samsung printers.



The options available may vary depending on the document type.

Settings

Access the setting options

- 1 In the application list, select **Settings**.
- 2 Select a setting category, and then select an option.

Wi-Fi

Activate the Wi-Fi feature to connect to a Wi-Fi AP and access the Internet or other network devices.

Bluetooth

Activate the Bluetooth feature to exchange information over short distances.

Data usage

Keep track of your data usage amount, and customise the settings for the limitation.

- **Mobile data:** Set to use data connections on any mobile network.
- **Set mobile data limit:** Set a limit for the mobile data usage.
- **Data usage cycle:** Change the settings for the limit cycle.

To use more options, select .

- **Data roaming:** Set to use data connections when you are roaming.
- **Restrict background data:** Set to disable synchronisation in the background while using a mobile network.
- **Show Wi-Fi usage:** Set to show your data usage via Wi-Fi.

More...

Change the settings to control connections with other devices or networks.

› Flight mode

Activate Flight mode to disable all wireless functions on your device. You can use only non-network features.

› Kies via Wi-Fi

Connect your device to Samsung Kies via Wi-Fi.

› VPN

Set up and manage virtual private networks (VPNs).


› Tethering and portable hotspot

- **USB tethering:** Set to use your device as a wireless modem by making a USB connection with a computer.
- **Portable Wi-Fi hotspot:** Set to use your device as a wireless access point for other devices.
- **Configure portable Wi-Fi HotSpot:** Configure network settings to use your device as an access point.
- **Bluetooth tethering:** Activate the Bluetooth tethering feature to share your mobile network with computers via Bluetooth.
- **Help:** View information about using the tethering features.

› Wi-Fi Direct

Activate the Wi-Fi Direct feature to connect two devices via Wi-Fi without requiring an AP.

› Mobile networks

- **Use packet data:** Set to use data connections on any mobile network.
- **Data roaming:** Set to use data connections when you are roaming.
- **Access Point Names:** Select an access point name (APN) for mobile networks. You can add or edit APNs. To reset your APN settings to the factory defaults, select  → **Reset to default**.
- **Network mode:** Select a network type.
- **Network operators:**
 - **Search networks:** Search for and select a network.
 - **Select automatically:** Set the device to select the first available network.

Sound

Change the settings for various sounds on your device.

- **Volume:** Adjust the volume for various sounds on your device.
- **Vibration intensity:** Adjust the vibration intensity.
- **Default notifications:** Select a ringtone to alert you to events.
- **Sound and vibration:** Set the device to vibrate and play a ringtone for various events.
- **Touch sounds:** Set the device to sound when you select an application or option.
- **Screen lock sound:** Set the device to sound when you lock or unlock the touch screen.
- **Vibrate on screen tap:** Set the device to vibrate when you select the touch keys or when the device reacts to certain situations.

Display

Change the settings to control the display and backlight on your device.

- **Home screen wallpaper:** Select a background image for the Home screen.
- **Lock screen wallpaper:** Select a background image for the locked screen.
- **Help text:** Set to show the help text on the locked screen.
- **Brightness:** Adjust the brightness of the display.
- **Screen mode:** Select a display mode.
- **Auto-rotate screen:** Set the interface to rotate automatically when you rotate the device.
- **Quick launch:** Change the quick launch application on the system bar. The shortcut icon changes to indicate the selected application.
- **Screen timeout:** Select the length of time that the device waits before turning off the display backlight.
- **Font style:** Change the font type for the display text.
- **Font size:** Change the font size for creating or showing items in applications.
- **Auto adjust screen power:** Set to save power by adjusting the brightness of the display.

Power saving

Activate Power saving mode and change the settings for Power saving mode.

- **Custom power saving mode:** Set to activate Power saving mode according to your custom settings.
- **Custom power saving mode settings:**
 - **Power saving starts at:** Select a power level at which the device will automatically switch to Power saving mode.
 - **Turn off Wi-Fi:** Deactivate the Wi-Fi feature when the device is not connected with a Wi-Fi AP.
 - **Turn off Bluetooth:** Deactivate the Bluetooth feature when not in use.
 - **Turn off GPS:** Deactivate the GPS feature when not in use.
 - **Turn off Sync:** Turn off the sync feature when the device is not synchronising with a web server.
 - **Brightness:** Activate the brightness setting for Power saving mode.
 - **Brightness:** Set the brightness level for Power saving mode.
 - **Screen timeout:** Set the length of time the device waits before turning off the display's backlight.
- **Learn about power saving:** View information for saving battery power.

Storage

View memory information for your device.



The actual available capacity of the internal memory is less than the specified capacity because the operating system and default applications occupy part of the memory.

Battery

View the amount of battery power consumed by your device.

Applications

View and manage the applications on your device.

Accounts and sync

Change the settings for the auto sync feature or manage accounts for synchronisation.

Location services

Change the settings for location services.

- **Use wireless networks:** Set to use Wi-Fi and/or mobile networks for finding your location.
- **Use GPS satellites:** Set to use GPS satellites for finding your location.
- **Location and Google search:** Set the device to use your current location for Google search and other Google services.

Security

Change the settings for securing your device and the SIM or USIM card.

- **Screen lock:** Activate the screen lock feature.
- **Owner information:** Enter your information that is shown on the locked screen.

- **Encrypt device:** Set a password to encrypt data saved on the device. You must enter the password each time you turn on the device.



Charge the battery before enabling this setting because it may take more than an hour to encrypt your data.

- **SIM Change Alert:** Activate the Find my mobile feature.
- **Alert message recipients:** Add recipients who will receive a tracking message from your lost or stolen device.
- **Remote controls:** Set to allow control of your lost or stolen device remotely via the Internet. To use this feature, you must sign in to your Samsung and Google accounts.
- **SamsungDive web page:** Access the SamsungDive website (www.samsungdive.com). You can track and control your lost or stolen device on the SamsungDive website.
- **Set up SIM card lock:**
 - **Lock SIM card:** Set to lock the SIM or USIM card. To use your device with the SIM or USIM card, you must enter the PIN.
 - **Change SIM PIN:** Change the PIN supplied with the SIM or USIM card.
- **Make passwords visible:** Set to show your passwords as you enter them.
- **Device administrators:** View the administrators you have approved for your device. You can allow device administrators to apply new policies to your device.
- **Unknown sources:** Set the device to install applications downloaded from any source. If you do not select this option, you can install only applications downloaded from Play Store.

- **Trusted credentials:** Set to use certificates and credentials to ensure the secure use of applications.
- **Install from device storage:** Install encrypted certificates that are saved in the device's USB storage.
- **Clear credentials:** Delete credentials from the device and reset the password.

Language and input

Change the settings for languages and text input.

› Language

Select a display language.

› Default

Select a text input method.

› Google voice typing

Activate the Google voice input feature to enter text by voice. To change the voice input settings, select .

- **Select input languages:** Select input languages for Google voice recognition.
- **Block offensive words:** Set to prevent the device from recognising offensive words in voice inputs.

› Samsung keyboard

To change the Samsung keypad settings, select .

- **Input language:** Select input languages to use with the keypad.
- **XT9:** Activate XT9 mode to predict words based on your input and show word suggestions.

- **XT9 advanced settings:** Change the advanced settings for XT9 mode and set up your own dictionary.
- **Automatic full stop:** Set the device to insert a full stop when you double-tap the space bar.
- **Sound on keypress:** Set the device to emit a sound when you tap a key.
- **Auto-capitalization:** Set to capitalise the first letter of a sentence automatically.
- **Voice input:** Activate the voice input feature to enter text by voice.
- **Handwriting settings:** Change the settings for Handwriting mode, such as recognition time, pen thickness, or pen colour.
- **Tutorial:** View the tutorial for using the Samsung keypad.

› Swype

To change the Swype keypad settings, select .

- **Select Input Method:** Select a keypad type.
- **How to Swype:** View information about using the Swype keypad.
- **Personal dictionary:** Set up your own dictionary. The words in your dictionary will appear as suggestions for your text inputs.
- **Preferences:**
 - **Audio feedback:** Set an audible alert to sound if you double-tap a word that has no alternative suggestions.
 - **Vibrate on keypress:** Set the device to vibrate when you tap a key.
 - **Show tips:** Set the device to show tips for your actions automatically when available.
 - **Auto-spacing:** Set to insert a space between words automatically.


- **Auto-capitalization:** Set to capitalise the first letter of a sentence automatically.
- **Show complete trace:** Adjust how long the traces of your finger will appear on the keypad.
- **Word suggestion:** Set the device to predict words based on your input and show word suggestions.
- **Speed vs. accuracy:** Set the ratio between the speed and accuracy of Swype suggestions.
- **Reset Swype's dictionary:** Delete the words you have added to the dictionary.
- **Version:** View version information.
- **Language Options:** Select input languages to use with the keypad.

› Voice search

The following options are available for Google voice recognition:

- **Language:** Select a language for Google voice recognition.
- **SafeSearch:** Select a level for filtering out explicit text and images from voice search results.
- **Block offensive words:** Set to hide offensive words from voice search results.

› Text-to-speech output

- **Preferred engine:** Select a speech synthesis engine. To change the settings for speech synthesis engines, select .
- **Speech rate:** Select a speed for the TTS feature.
- **Listen to an example:** Listen to the spoken text for an example.
- **Driving mode:** Activate Driving mode to provide audible notifications for event details.
- **Driving mode settings:** Specify applications to use in Driving mode.

› Pointer speed

Adjust the pointer speed for the mouse or trackpad connected to your device.

Back up and reset

Change the settings for managing settings and data.

- **Back up my data:** Set to back up your settings and application data to the Google server.
- **Backup account:** Set up or edit your Google backup account.
- **Automatic restore:** Set to restore your settings and application data when you must reinstall an application.
- **Factory data reset:** Reset your settings to the factory defaults and delete all your data.

Dock

Dock sound: Set the device to play a sound when your device is connected to or removed from a desktop dock.

Date and time

Change the settings to control how time and date appears on your device.



If the battery remains fully discharged or removed from the device, the time and date will be reset.

- **Automatic date and time:** Set to receive time information from the network and update the time and date automatically.

- **Automatic time zone:** Set to receive time zone information from the network when you move across time zones.
- **Set date:** Set the current date manually.
- **Set time:** Set the current time manually.
- **Select time zone:** Select a time zone.
- **Use 24-hour format:** Set to show the time in 24-hour format or 12-hour format.
- **Select date format:** Select a date format.

Accessibility

Accessibility services are special features for those with physical challenges. Change the settings to improve accessibility to the device's interface and features.

- **TalkBack:** Activate TalkBack, which provides voice feedback.
- **Font size:** Change the font size for creating or showing items in applications.
- **Auto-rotate screen:** Set the interface to rotate automatically when you rotate the device.
- **Speak passwords:** Set the device to read aloud passwords you enter with TalkBack.
- **Tap and hold delay:** Set the recognition time for tapping and holding the screen.
- **Install web scripts:** Set applications to install web scripts to make their web content more accessible.

Motion

Change the settings that control the motion recognition feature on your device.

- **Motion activation:** Set to use the motion recognition feature.

- **Tilt to zoom:** Set to use a tilting motion to zoom in or out when viewing images or browsing webpages.
- **Pan to edit:** Set to move an item to another page when you tap and hold the item, and then slide the device to the left or right.

Developer options

Change the settings for application development.

- **USB debugging:** Activate USB debugging mode to connect your device to a computer with a USB cable.
- **Development device ID:** View your device's development ID.
- **Allow mock locations:** Allow mock locations and service information to be sent to a Location Manager service for testing.
- **Desktop backup password:** Set a password to secure your backup data.
- **Strict mode:** Set the device to flash the screen when applications perform long operations.
- **Show pointer location:** Set to show the coordinates and traces of the pointer when you touch the screen.
- **Show touches:** Set to show the pointer when you touch the screen.
- **Show screen updates:** Set to flash areas of the screen when they are updated.
- **Show CPU usage:** Set to list all active processes.
- **Force GPU rendering:** Set to use 2D hardware acceleration to improve graphic performance.
- **Window animation scale:** Select a speed for opening and closing pop-up windows.
- **Transition animation scale:** Select a speed for switching between screens.

- **Do not keep activities:** Set to end a running application when you launch a new application.
- **Limit background processes:** Set to limit the number of processes that can run in the background.
- **Show all ANRs:** Set the device to alert you to unresponsive applications that are running in the background.

About device

View information about your device, such as model number and version.



You can download and install firmware update with the firmware over-the-air (FOTA) service. To check for firmware updates, select **Software update** → **Update**.

Troubleshooting

When you turn on your device or while you are using the device, it prompts you to enter one of the following codes:

Code	Try this to solve the problem:
Password	When the device lock feature is enabled, you must enter the password you set for the device.
PIN	When using the device for the first time or when the PIN requirement is enabled, you must enter the PIN supplied with the SIM or USIM card. You can disable this feature by using Lock SIM card .
PUK	Your SIM or USIM card is blocked, usually as a result of entering your PIN incorrectly several times. You must enter the PUK supplied by your service provider.
PIN2	When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM or USIM card. For details, contact your service provider.

Your device displays network or service error messages

- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.
- You cannot access some options without a subscription. Contact your service provider for more details.

The touch screen responds slowly or improperly

If your device has a touch screen and the touch screen is not responding properly, try the following:

- Remove any protective covers from the touch screen. Protective covers may prevent the device from recognising your inputs and are not recommended for touch screen devices.
- Ensure that your hands are clean and dry when tapping the touch screen.
- Restart your device to clear any temporary software bugs.
- Ensure that your device's software is upgraded to the latest version.
- If the touch screen is scratched or damaged, take your device to a Samsung Service Centre.

Your device freezes or has fatal errors

If your device freezes or hangs, you may need to close applications or reset the device to regain functionality. If your device is still responsive and an application is frozen, close the application with the task manager. If your device is frozen and unresponsive, press and hold the Power key for 10-15 seconds.

If this problem persists, perform a factory data reset. In the application list, select **Settings** → **Back up and reset** → **Factory data reset** → **Reset device** → **Erase everything**.

Audio quality is poor

- Ensure that you are not blocking the device's internal antenna.
- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.

The device beeps and the battery icon is empty

Your battery is low. Recharge the battery to continue using the device.

The battery does not charge properly or the device turns off

If the battery will no longer charge completely, you need to replace it with a new battery. Take your device to your local Samsung Service Centre.

Your device is hot if touched

When you use applications that require more power or use applications on your device for an extended period of time, your device may feel hot. This is normal and should not affect your device's lifespan or performance.

Error messages appear when launching the camera

Your device must have sufficient memory and battery power available to operate the camera application. If you receive error messages when launching the camera, try the following:

- Charge the battery.
- Free some memory by transferring files to a computer or deleting files from your device.
- Restart the device. If you are still having trouble with the camera application after trying these tips, contact a Samsung Service Centre.

Error messages appear when opening music files

Some music files may not play on your device for a number of reasons. If you receive error messages when opening music files on your device, try the following:

- Free some memory by transferring files to a computer or deleting files from your device.
- Ensure that the music file is not Digital Rights Management (DRM)-protected. If the file is DRM-protected, ensure that you have the appropriate licence or key to play the file.
- Ensure that your device supports the file type.

Another Bluetooth device is not located

- Ensure that the Bluetooth feature is activated on your device.
- Ensure that the Bluetooth feature is activated on the device you wish to connect to, if necessary.
- Ensure that your device and the other Bluetooth device are within the maximum Bluetooth range (10 m).

If the tips above do not solve the problem, contact a Samsung Service Centre.

A connection is not established when you connect the device to a computer

- Ensure that the USB cable you are using is compatible with your device.
- Ensure that you have the proper drivers installed and updated on your computer.
- If you are a Windows XP user, ensure that you have Windows XP Service Pack 3 or higher installed on your computer.
- Ensure that you have Samsung Kies 2.0 or Windows Media Player 10 or higher installed on your computer.

Index

- alarms 99
- AllShare 90
- applications
 - closing 32
 - downloading 31
 - launching 30
 - multitasking 32
 - organising 30
 - uninstalling 31
- battery
 - charging 15
- Bluetooth 94
- calculator 99
- camera
 - changing camcorder settings 56
 - changing camera settings 53
 - recording videos 54
 - taking photos 50
- connectivity
 - Bluetooth 94
 - GPS connections 96
 - mobile network sharing 92
 - USB connections 85
 - VPN connections 97
 - Wi-Fi 86
- contacts
 - copying/moving 68
 - creating 67
 - creating groups 68
 - finding 67
 - importing/exporting 69
- device lock 35
- display
 - brightness 34
 - font style 33
 - language 32
 - settings 108
 - wallpaper 33
- file manager 101
- find my mobile 37
- flight mode 18
- gallery 60
- Google Latitude 77
- Google Mail 43
- Google Maps 77
- Google Talk 47
- home screen
 - adding panels 28
 - moving items 28
 - removing items 28
 - removing panels 28
 - using the notifications panel 27
 - using widgets 29
- indicator icons 26
- Internet 73

key functions 14

maps

- getting directions 78
- searching for locations 77
- searching for places nearby 79
- sharing locations 77
- using the navigation 79

memos

- creating 71, 72
- viewing 72

messages

- sending email 45
- sending Google Mail 43
- sending multimedia 42
- sending text 42
- viewing email 46
- viewing Google Mail 44
- viewing multimedia 43
- viewing text 43

music hub 66

music player 63

photo editor 62

photos

- taking 50
- viewing 60

Play Store 80

Polaris Office 103

power saving 17, 109

Pulse 84

readers hub 83

Samsung Apps 81

settings 105

silent mode 33

SIM/USIM card

- inserting 14
- locking 36

Social Hub 49

sound

- device volume 33
- settings 107
- touch tone 32

task manager 103

tethering

- via Bluetooth 93
- via USB 93
- via Wi-Fi 92

text input

- copy and paste 41
- with Google voice input 38
- with Samsung keypad 40
- with Swype keypad 38

touch screen

- locking/unlocking 23
- using 19

touch tone 32

unpack 11

USB connections

- as camera device 86
- as media device 86
- as wireless modem 93
- with Samsung Kies 85
- with Windows Media Player 85

video player 57

videos

playing 57,61

recording 54

uploading to YouTube 82

VPN connections 97

web browser 73

Wi-Fi 86

world clock 100

YouTube 81

Some contents in this manual may differ from your device depending on the software of the device or your service provider.

To install Samsung Kies (PC Sync) Kies

1. Download the latest version of Samsung Kies from the Samsung website (www.samsung.com/kies) and install it on your computer.
2. Connect your device to a computer with a USB cable. Refer to the Samsung Kies help for more information.