

Your phone displays the following status indicators on the top of the screen:

 
Icon	Description	Icon	Description
	No signal		FM radio suspended
	Signal strength		Music playback in progress
	Network searching		Music playback paused
	GPRS network connected		New text message (SMS)
	EDGE network connected		New multimedia message (MMS)
	Call in progress		New email message
	Browsing the web		New configuration message
	Connecting to secured web page		New push message
	Roaming (outside of normal service area)		New voice mail message
	Call diverting activated		Normal profile activated
	No SIM card		Silent profile activated
	Bluetooth activated		Battery power level
	Alarm activated		Current time
	Memory card inserted		
	FM radio on		

Install the SIM card and battery

- Remove the back cover and insert the SIM card.




- Insert the battery and replace the back cover.

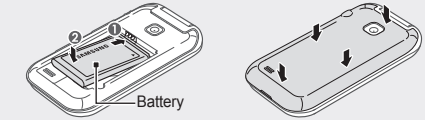

Charge the battery

 - Plug a travel adapter into the multifunction jack.
- When charging is finished, unplug the travel adapter.

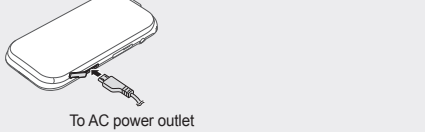


- Do not remove the battery from the phone before unplugging the travel adapter first. Otherwise, the phone may be damaged.
- To save energy, unplug the travel adapter when not in use. The travel adapter does not have a power switch, so you must unplug the travel adapter from the outlet to interrupt the power supply. The travel adapter should remain close to the socket when in use.

Insert a memory card (optional)

Your phone accepts microSD™ or microSDHC™ memory cards up to 16 GB (depending on memory card manufacturer and type).

- Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.
- Frequent writing and erasing of data will shorten the life span of memory cards.

 - Remove the back cover.
- Insert a memory card with the gold-coloured contacts facing up.

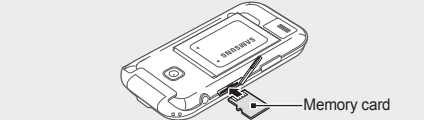

- Push the memory card in the memory card slot until it locks in place.
- Replace the back cover.

Instructional icons

	Note: notes, usage tips, or additional information
	Followed by: the order of options or menus you must select to perform a step; for example: In Menu mode, select Messages → Create message (represents Messages , followed by Create message)
	Square brackets: phone keys; for example: [⏻] (represents the Power/End key)
	Angled brackets: softkeys that control different functions at each screen; for example: <OK> (represents the OK softkey)

Turn your phone on or off

To turn your phone on,

- Press and hold [**⏻**].
- Enter your PIN and press **<Confirm>** (if necessary).

- If the battery remains fully discharged or removed from the device, the time and date will be reset.

To turn your phone off, repeat step 1 above.

Call a recently dialled number

- In Idle mode, press [**↶**] to display a list of recent numbers.
- Scroll left or right to select a call type.
- Scroll up or down to select a number or name.
- Press the Confirm key to view details of the call or [**↶**] to dial the number.

Adjust the volume

To adjust the volume of the ringtone

- In Menu mode, select **Settings** → **Sound profiles**.
- Scroll to the profile you are using.

- If you are using the silent profile, you are not allowed to adjust the volume of the ringtone.

- Press **<Edit>** → **Volume**.
- Scroll to **Call alert**.
- Scroll left or right to adjust the volume level and press **<Save>**.

To adjust the volume of voice during a call

While a call is in progress, press the Navigation key up or down to adjust the volume.

- In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

Change your ringtone

- In Menu mode, select **Settings** → **Sound profiles**.
- Scroll to the profile you are using.

- If you are using the silent profile, you are not allowed to change the ringtone.

- Press **<Edit>** → **Voice call ringtone**.
- Select a memory location (if necessary).
- Select a ringtone.

To switch to another profile, select it from the list.

Use the smart home screen

The smart home screen allows you to access your favourite applications and contacts and view upcoming events or tasks. You can customise the smart home screen to fit your preferences and needs.

- When you are using the smart home screen, the Navigation key does not work as shortcuts.

To add items to the smart home screen

- In Menu mode, select **Settings** → **Display** → **Smart home** and scroll left or right to a smart home screen.
- Press **<Edit>**.
- Select the items to display on the smart home screen.
For the shortcuts toolbar, you can add or delete the shortcuts as desired. Press **<Options>** → **Edit shortcuts**.
- Press **<Options>** → **Save**.
- Press the Confirm key.

- You can change the idle screen to another style. In Menu mode, select **Settings** → **Display** → **Smart home** and scroll left or right to a style you want.

To access the smart home items

Press the Navigation key to scroll through the items on the smart home screen and press the Confirm key to select an item.

Enter text

To change the text input mode

- Press and hold [**#**] to switch between T9 and ABC modes. Depending on your country, you may be able to access an input mode for your specific language.
- Press [**#**] to change case or switch to Number mode.
- Press [**x**] to switch to Symbol mode.
- Press and hold [**x**] to select an input mode or change the input language.

T9 mode

- Press the appropriate alphanumeric keys to enter an entire word.
- When the word displays correctly, press [**0**] to insert a space. If the correct word does not display, press the Navigation key up or down to select an alternate word.

ABC mode

Press an appropriate alphanumeric key until the character you want appears on the display.

Number mode

Press an appropriate alphanumeric key to enter a number.

Symbol mode

Press an appropriate alphanumeric key to enter a symbol.

- To move the cursor, press the Navigation key.
- To delete characters one by one, press **<Clear>**. To delete all of the characters, press and hold **<Clear>**.
- To insert a space between characters, press [**0**].
- To change the line, press [**0**] three times.
- To enter punctuation marks, press [**1**].

Add a new contact

- The memory location to save new contacts may be preset depending on your service provider. To change the memory location, in Menu mode, select **Contacts** → **<Options>** → **Settings** → **Save new contacts to** → a memory location.

- In Idle mode, enter a phone number and press **<Options>**.
- Select **Add to Contacts** → **Create contact** → a memory location (if necessary).
- Select a number type (if necessary).
- Enter contact information.
- Press the Confirm key or press **<Options>** → **Save** to add the contact to memory.

Access menus

To access your phone's menus,

- In Idle mode, press **<Menu>** to access Menu mode.

- You may need to press the Confirm key to access Menu mode depending on your region or service provider.

- Use the Navigation key to scroll to a menu or option.
- Press **<Select>** or the Confirm key to confirm the highlighted option.
- Press **<Back>** to move up one level; Press [**⏻**] to return to Idle mode.

- When you access a menu requiring the PIN2, you must enter the PIN2 supplied by the SIM card. For details, contact your service provider.
- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

Make a call

- In Idle mode, enter an area code and a phone number.
- Press [**↵**] to dial the number.
- To end the call, press [**⏻**].

Answer a call

- When a call comes in, press [**↵**].
- To end the call, press [**⏻**].

Send and view messages

To send a text message or multimedia message

- In Menu mode, select **Messages** → **Create message**.
- Enter a recipient number and scroll down.
- Enter the message text. *See "Enter text."* For sending as a text message, skip to step 5. For attaching multimedia, continue with step 4.
- Press **<Options>** → **Add multimedia** and add an item.
- Press the Confirm key to send the message.

To view a text or multimedia messages

- In Menu mode, select **Messages** → **Inbox**.
- Select a text or multimedia message.

Make fake calls

You can simulate an incoming call when you want to get out of meetings or unwanted conversations.

To activate the fake call feature

In Menu mode, select **Settings** → **Call** → **Fake call** → **Fake call hot key** → **On**.

To make a fake call

In Idle mode, press and hold the Navigation key down.

Activate the mobile tracker

When someone inserts a new SIM card in your phone, the mobile tracker feature will automatically send the contact number to two recipients to help you locate and recover your phone. To activate the mobile tracker,

- In Menu mode, select **Settings** → **Security** → **Mobile tracker**.
- Enter your password and press **<OK>**.

- The first time you access Mobile tracker, you will be prompted to create and confirm a password.

- Press the Confirm key to turn on the mobile tracker feature.
- Scroll down and press the Confirm key to open the recipient list.
- Press **<Search>** → **<Add>** to select a recipient in your contact list.
You can also enter phone numbers including a country code (with +) in the recipient list. Skip to step 7.
- When you are finished selecting contacts, press **<Save>**.
- Scroll down and enter the sender's name.
- Press the Confirm key → **<Accept>**.

Use the camera

To capture photos

- In Menu mode, select **Camera** to turn on the camera.
- Rotate the phone anti-clockwise to landscape view.
- Aim the lens at the subject and make any adjustments.
- Press the Confirm key to take a photo. The photo is saved automatically.

To view photos

In Menu mode, select **My files** → **Images** → a photo file.

To capture videos

- In Menu mode, select **Camera** to turn on the camera.
- Rotate the phone anti-clockwise to landscape view.
- Press [**1**] to switch to the camcorder. Aim the lens at the subject and make any adjustments.
- Press the Confirm key to start recording.
- Press the Confirm key or **<Stop>** to stop recording. The video is saved automatically.

To view videos

In Menu mode, select **My files** → **Videos** → a video file.

Listen to music

- In Menu mode, select **Music**.
- Select a music category → a music file.
- Control playback using the following keys:

Key	Function
Confirm	Pause or resume playback
Navigation	• Left: Skip backward; Scan backward in a file (press and hold) • Right: Skip forward; Scan forward in a file (press and hold) • Up/Down: Adjust the volume
1	Activate the 5.1 channel surround sound system when a headset is plugged.
2	Select a sound effect
3	Activate or deactivate Shuffle mode
4	Change the repeat mode

Listen to the FM radio

- Plug a headset into the phone.
- In Menu mode, select **Apps** → **FM radio**.
- Press the Confirm key to start the FM radio.
- Press **<Yes>** to start automatic tuning.
The radio scans and saves available stations automatically.
- The first time you turn on the FM radio, you will be prompted to start automatic tuning.
- Control the FM radio using the following keys:

Key	Function
Confirm	Turn the FM radio on or off
Navigation	• Left/Right: Fine-tune the frequency; Search for an available radio station (press and hold) • Up/Down: Adjust the volume

Declaration of Conformity Samsung Electronics declares that this device complies with the essential requirements and relevant provisions of Directive 1999/5/EC. Go to www.samsung.com/mobile_doc to view the Declaration of Conformity.

CE 0168