



MS23H3115**

Microwave Oven

Owner's Instructions & Cooking Guide

imagine the possibilities

Thank you for purchasing this Samsung product.

Please be advised that the Samsung warranty does NOT cover service calls to explain product operation, correct improper installation, or perform normal cleaning or maintenance.



This manual is made with 100 % recycled paper.



contents

Safety information	2
Quick look up guide	12
Oven features.....	12
Oven.....	12
Control panel	13
Accessories	13
Oven use.....	14
How a microwave oven works	14
Checking that your oven is operating correctly	14
Setting the time	15
Cooking/Reheating	15
Power levels	16
Adjusting the cooking time.....	16
Stopping the cooking.....	16
Setting the energy save mode.....	16
Using the deodorisation features.....	17
Using the kitchen timer features.....	17
Using the russia cuisine features	17
Using the healthy cooking features	21
Using the auto power defrost features	23
Using the my plate features.....	24
Using the soften/melt features	25
Power steam cooking guide (Only MS23H3115F* models).....	26
Switching the beeper off	28
Safety-locking your microwave oven	28
Cookware guide	28
Cooking guide.....	29
Troubleshooting and error code	30
Troubleshooting	30
Error code	31
Technical specifications	31

safety information

USING THIS INSTRUCTION BOOKLET

You have just purchased a SAMSUNG microwave oven. Your Owner's Instructions contain valuable information on cooking with your microwave oven:

- Safety precautions
- Suitable accessories and cookware
- Useful cooking tips
- Cooking tips

LEGEND FOR SYMBOLS AND ICONS



WARNING

Hazards or unsafe practices that may result in **severe personal injury or death**.



CAUTION

Hazards or unsafe practices that may result in **minor personal injury or property damage**.



Warning; Fire hazard



Warning; Hot surface



Warning; Electricity



Warning; Explosive material



Do NOT attempt.



Do NOT touch.



Do NOT disassemble.



Follow directions explicitly.



Unplug the power plug from the wall socket.



Make sure the machine is grounded to prevent electric shock.



Call the service center for help.



Note



Important




IMPORTANT SAFETY INSTRUCTIONS





READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Make sure that these safety precautions are obeyed at all times.

Before using the oven, confirm that the following instructions are followed.

WARNING (Microwave function only)

-  **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
-  **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
-  This appliance is intended to be used in household only.

-  **WARNING:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
-  **WARNING:** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
-  Only use utensils that are suitable for use in microwave ovens.
-  When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignitions.

★	The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
☞	If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
★	WARNING: Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
★	WARNING: The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
☐	Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
★	The oven should be cleaned regularly and any food deposits removed.

☞	Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
☐	The appliance is not intended for installing in road vehicles, caravans and similar vehicles etc.
★	This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
★	Children should be supervised to ensure that they do not play with the appliance.
☞	If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
☐	WARNING: Liquids or other foods must not be heated in sealed containers since they are liable to explode;

<input type="checkbox"/>	The appliance should not be cleaned with a water jet.
<input checked="" type="checkbox"/>	This oven should be positioned proper direction and height permitting easy access to cavity and control area.
<input checked="" type="checkbox"/>	Before using the your oven first time, oven should be operated with the water during 10 minute and then used.
<input checked="" type="checkbox"/>	If the oven generates a strange noise, a burning smell, or smoke is emitted, unplug the power plug immediately and contact your nearest service center.
<input checked="" type="checkbox"/>	The microwave oven has to be positioned so that plug is accessible.
<input type="checkbox"/>	The microwave oven is intended to be used on the counter or counter top use only, the microwave oven shall not be placed in a cabinet.

⚠ WARNING (Oven function only) - Optional

- ☒ **WARNING:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

<input checked="" type="checkbox"/>	During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
<input type="checkbox"/>	WARNING: Accessible parts may become hot during use. Young children should be kept away.
<input type="checkbox"/>	A steam cleaner is not to be used.
<input type="checkbox"/>	WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
<input checked="" type="checkbox"/>	WARNING: The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.

★	This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
☐	Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
☐	The temperature of accessible surfaces may be high when the appliance is operating.
☐	The door or the outer surface may get hot when the appliance is operating.
☐	Keep the appliance and its cord out of reach of children less than 8 years.
☐	Appliances are not intended to be operated by means of an external timer or separate remote-control system.

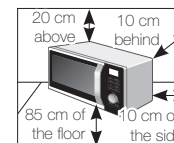
This product is a Group 2 Class B ISM equipment. The definition of group 2 which contains all ISM equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and EDM and arc welding equipment.

For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.

INSTALLING YOUR MICROWAVE OVEN

Place the oven on a flat level surface 85 cm above the floor. The surface should be strong enough to safely bear the weight of the oven.

1. When you install your oven, make sure there is adequate ventilation for your oven by leaving at least 10 cm (4 inches) of space behind and, on the sides of the oven and 20 cm (8 inches) of space above.



2. Remove all packing materials inside the oven.
 3. Install the roller ring and turntable. Check that the turntable rotates freely.
(Turntable type model only)
 4. This microwave oven has to be positioned so that plug is accessible.
- ☞ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
For your personal safety, plug the cable into a proper AC earthed socket.
- ☞ Do not install the microwave oven in hot or damp surroundings like next to a traditional oven or radiator. The power supply specifications of the oven must be respected and any extension cable used must be of the same standard as the power cable supplied with the oven. Wipe the interior and the door seal with a damp cloth before using your microwave oven for the first time.

CLEANING YOUR MICROWAVE OVEN

The following parts of your microwave oven should be cleaned regularly to prevent grease and food particles from building up:

- Inside and outside surfaces
 - Door and door seals
 - Turntable and Roller rings
(Turntable type model only)
- ☞ **ALWAYS** ensure that the door seals are clean and the door closes properly.
- ☞ Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
1. Clean the outside surfaces with a soft cloth and warm, soapy water. Rinse and dry.
 2. Remove any splashes or stains on the inside surfaces of oven with a soapy cloth. Rinse and dry.
 3. To loosen hardened food particles and remove smells, place a cup of diluted lemon juice in the oven and heat for ten minutes at maximum power.

 
4. Wash the dishwasher-safe plate whenever necessary.

☑ **DO NOT** spill water in the vents. **NEVER** use any abrasive products or chemical solvents. Take particular care when cleaning the door seals to ensure that no particles:

- Accumulate
- Prevent the door from closing correctly

☑ **Clean** the microwave oven cavity right after each use with a mild detergent solution, but let the microwave oven cool down before cleaning in order to avoid injury.

When cleaning the upper part inside the cavity, it will be convenient to turn heater downward by 45 ° and clean it. (Swing heater model only)



STORING AND REPAIRING YOUR MICROWAVE OVEN

A few simple precautions should be taken when storing or having your microwave oven serviced.

The oven must not be used if the door or door seals are damaged:

- Broken hinge
- Deteriorated seals
- Distorted or bent oven casing

Only a qualified microwave service technician should perform repair



☑ **NEVER** remove the outer casing from the oven. If the oven is faulty and needs servicing or you are in doubt about its condition:












- Unplug it from the wall socket
- Contact the nearest after-sales service centre

☑ If you wish to store your oven away temporarily, choose a dry, dustfree place. **Reason :** Dust and damp may adversely affect the working parts in the oven.

☑ This microwave oven is not intended for commercial use.

☑ The Light bulb should not be replaced in person for safety reasons. Please contact nearest authorised Samsung customer care, to arrange for a qualified engineer to replace the bulb.

⚠ WARNING					
	Only qualified staff should be allowed to modify or repair the appliance.	✓	✓	✓	✓
	Do not heat liquids and other food in sealed containers for microwave function.	✓	✓	✓	✓
	For your safety, do not use high-pressure water cleaners or steam jet cleaners.	✓	✓	✓	✓
	Do not install this appliance; near heater, inflammable material; in a humid, oily or dusty location, in a location exposed to direct sunlight and water or where gas may leak; on unlevel ground.	✓	✓	✓	✓
	This appliance must be properly grounded in accordance with local and national codes.	✓	✓	✓	✓
	Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.	✓	✓	✓	✓
	Do not pull or excessively bend or place heavy objection the power cord.	✓	✓	✓	✓
	In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug.	✓	✓	✓	✓
	Do not touch the power plug with wet hands.	✓	✓	✓	✓
	Do not turn the appliance off by unplugging the power plug while an operation is in progress.	✓	✓	✓	✓
	Do not insert fingers or foreign substances, If any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service centre.	✓	✓	✓	✓
	Do not apply excessive pressure or impact to the appliance.	✓	✓	✓	✓

	Do not place the oven over a fragile object such as a sink or glass object.	✓	✓		
	Do not use benzene, thinner, alcohol, steam cleaner or high pressure cleaner to clean the appliance.	✓	✓	✓	✓
	Ensure that the power voltage, frequency and current are the same as those of the product specifications.	✓	✓		✓
	Plug the power plug into the wall socket firmly. Do not use a multiple plug adapter, an extension cord or an electric transformer.	✓	✓	✓	
	Do not hook the power cord on a metal object, insert the power cord between the objects or behind the oven.	✓	✓	✓	
	Do not use a damaged power plug, damaged power cord or loose wall socket. When the power plug or power cord is damaged, contact your nearest service centre.	✓	✓	✓	✓
	Do not pour or directly spray water onto the oven.	✓	✓		
	Do not place objects on the oven, inside or on the door of the oven.	✓	✓	✓	
	Do not spray volatile material such as insecticide onto the surface of the oven.	✓	✓		
	Do not store flammable materials in the oven. Take special care when heating dishes or drinks that contain alcohol as alcohol vapours may contact a hot part of the oven.	✓		✓	✓
	Keep children away from the door when opening or closing it as they may bump themselves on the door or catch their fingers in the door.	✓	✓	✓	✓

	WARNING: Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container; To prevent this situation ALWAYS allow a standing time of at least 20 seconds after the oven has been switched off so that the temperature can equalize. Stir during heating, if necessary, and ALWAYS stir after heating. In the event of scalding, follow these FIRST AID instructions: <ul style="list-style-type: none"> Immerse the scalded area in cold water for at least 10 minutes. Cover with a clean, dry dressing. Do not apply any creams, oils or lotions. 	✓	✓	✓	✓
	Do not put the tray or rack in water shortly after cooking because it may cause breakage or damage of the tray or rack.				✓
	Do not operate the microwave oven for deep fat frying because the oil temperature cannot be controlled. This could result in a sudden boil over of the hot liquid.	✓			✓

CAUTION					
	Only use utensils that are suitable for use in microwave ovens; DO NOT use any metallic containers, Dinnerware with gold or silver trimmings, Skewers, forks, etc. Remove wire twist ties from paper or plastic bags. Reason: Electric arcing or sparking may occur and may damage the oven.	✓		✓	✓
	Do not use your microwave oven to dry papers or clothes.	✓		✓	✓
	Use shorter times for smaller amounts of food to prevent overheating and burning food.	✓		✓	✓
	Do not immerse the power cable or power plug in water and keep the power cable away from heat.	✓	✓		
	Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended; Also do not heat airtight or vacuum-sealed bottles, jars, containers, nuts in shells, tomatoes etc.			✓	✓
	Do not cover the ventilation slots with cloth or paper. They may catch fire as hot air escapes from the oven. The oven may also overheat and switch itself off automatically, and will remain off until it cools sufficiently.	✓		✓	
	Always use oven mitts when removing a dish from the oven to avoid unintentional burns.			✓	
	Stir liquids halfway during heating or after heating ends and allow the liquid stand at least 20 seconds after heating to prevent eruptive boiling.			✓	
	Stand at arms length from the oven when opening the door to avoid getting scalded by escaping hot air or steam.			✓	

	Do not operate the microwave oven when it is empty. The microwave oven will automatically shut down for 30 minutes for safety purposes. We recommend placing a glass of water inside the oven at all times to absorb microwave energy in case the microwave oven is started accidentally.	✓			✓
	Install the oven in compliance with the clearances stated in this manual. (See installing your microwave oven.)	✓		✓	
	Take care when connecting other electrical appliances to sockets near the oven.	✓	✓	✓	

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY. (MICROWAVE FUNCTION ONLY)

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

- Under no circumstances should any attempt be made to operate the oven with the door open or to tamper with the safety interlocks (door latches) or to insert anything into the safety interlock holes.
- Do NOT place any object between the oven door and front face or allow food or cleaner residues to accumulate on sealing surfaces. Ensure that the door and door sealing surfaces are kept clean by wiping after use first with a damp cloth and then with a soft dry cloth.
- Do NOT operate the oven if it is damaged until it has been repaired by a qualified microwave service technician trained by the manufacturer. It is particularly important that the oven door closes properly and that there is no damage to the:
 - door (bent)
 - door hinges (broken or loose)
 - door seals and sealing surfaces
- The oven should not be adjusted or repaired by anyone other than a properly qualified microwave service technician trained by the manufacturer.

Samsung will charge a repair fee for replacing an accessory or repairing a cosmetic defect if the damage to the unit and/or damage to or loss of the accessory was caused by the customer. Items this stipulation covers include:

- A dented, scratched, or broken door, handle, out-panel, or control panel.
 - A broken or missing tray, guide roller, coupler, or wire rack.
- Use this appliance only for its intended purpose as described in this instruction manual. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your appliance.
 - Because these following operating instructions cover various models, the characteristics of your microwave oven may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at www.samsung.com.
 - This microwave oven is supposed for heating food. It is intended for domestic home-use only. Do not heat any type of textiles or cushions filled with grains, which could cause burns and fire. The manufacturer cannot be held liable for damage caused by improper or incorrect use of the appliance.
 - Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possible result in a hazardous situation.



CORRECT DISPOSAL OF THIS PRODUCT (WASTE ELECTRICAL & ELECTRONIC EQUIPMENT)

(Applicable in countries with separate collection systems)


 
 
 
This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.


 
 
 
Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

quick look up guide

 
If you want to cook some food.

 CB4	1. Place the food in the oven. Press Microwave button to start cooking.
	2. Turn the Dial Knob to desired until the appropriate power level is displayed. At that time, press the Dial Knob to set the power level.
	3. Set the cooking time by turning the Dial Knob .
 START/+30cek	4. Press the START/+30s button. Result: Cooking starts. The oven beeps 4 times when cooking is over.

If you want to auto Power defrost some food.

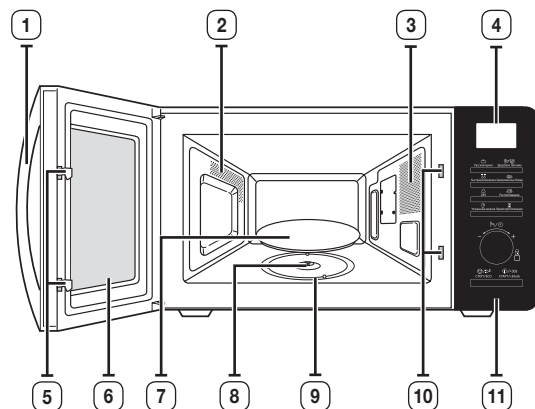
 Быстрая разморозка	1. Place the frozen food in the oven. Press the Power Defrost button.
	2. Set the cooking category by turning the Dial Knob . Press the Dial Knob to set desired.
	3. Select the weight by turning the Dial Knob as required.
 START/+30cek	4. Press the START/+30s button.

If you want to add extra 30 seconds.

 START/+30cek	Leave the food in the oven. Press START/+30s one or more times for each extra 30 seconds that you wish to add.
---	--

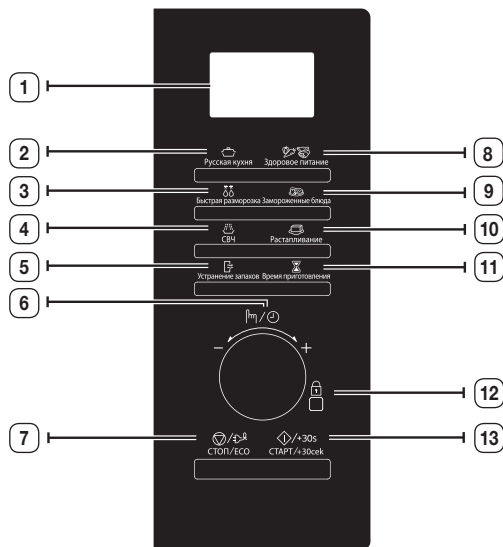
oven features

OVEN



- | | |
|----------------------|----------------------------|
| 1. DOOR HANDLE | 7. TURNTABLE |
| 2. VENTILATION HOLES | 8. COUPLER |
| 3. LIGHT | 9. ROLLER RING |
| 4. DISPLAY | 10. SAFETY INTERLOCK HOLES |
| 5. DOOR LATCHES | 11. CONTROL PANEL |
| 6. DOOR | |

CONTROL PANEL



- | | |
|--|---------------------------|
| 1. DISPLAY | 7. STOP/ECO BUTTON |
| 2. RUSSIAN CUISINE BUTTON | 8. HEALTHY COOKING BUTTON |
| 3. POWER DEFROST BUTTON | 9. MY PLATE BUTTON |
| 4. MICROWAVE BUTTON | 10. SOFTEN/MELT BUTTON |
| 5. DEODORISATION BUTTON | 11. KITCHEN TIMER BUTTON |
| 6. DIAL KNOB
(WEIGHT/SERVING/TIME/SELECT) | 12. CHILD LOCK BUTTON |
| | 13. START/+30s BUTTON |

ACCESSORIES

Depending on the model that you have purchased, you are supplied with several accessories that can be used in a variety of ways.

	1. Roller ring , to be placed in the centre of the oven. Purpose: The roller ring supports the turntable.
	2. Turntable , to be placed on the roller ring with the centre fitting to the coupler. Purpose: The turntable serves as the main cooking surface; it can be easily removed for cleaning.
	3. Steam cooker , see page 26 to 27. (Only MS23H3115F* models) Purpose: The plastic steam cooker when using power steam function.

DO NOT operate the microwave oven without the roller ring and turntable.

Емкость для приготовления на пару (пароварка) является неотъемлемой частью комплекта поставки микроволновой печи:

***BW, ***/BWT, ***X/BWT, ***P**/BWT

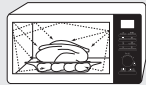
HOW A MICROWAVE OVEN WORKS


Microwaves are high-frequency electromagnetic waves; the energy released enables food to be cooked or reheated without the foods form or colour changing.

You can use your microwave oven to:

- Defrost (manual & auto)
- Cook
- Reheat

Cooking Principle.

	<p>1. The microwaves generated by the magnetron are distributed uniformly as the food rotates on the turntable. The food is thus cooked evenly.</p>
	<p>2. The microwaves are absorbed by the food up to a depth of about 1 inch (2.5 cm). Cooking then continues as the heat is dissipated within the food.</p>
	<p>3. Cooking times vary according to the recipient used and the properties of the food:</p> <ul style="list-style-type: none"> • Quantity and density • Water content • Initial temperature (refrigerated or not)


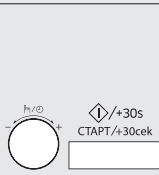
 As the centre of the food is cooked by heat dissipation, cooking continues even when you have taken the food out of the oven. Standing times specified in recipes and in this booklet must therefore be respected to ensure:


- Even cooking of the food right to the centre.
- The same temperature throughout the food.

CHECKING THAT YOUR OVEN IS OPERATING CORRECTLY

The following simple procedure enables you to check that your oven is working correctly at all times.

Open the oven door by pulling the handle on the right side of the door. Place a glass of water on the turntable. Then, close the door.


	<p>1. Press the Microwave button.</p> <p>Result: The 800 W (maximum cooking power) indications are displayed.</p>
	<p>2. After press the Dial Knob (800 W), set the time 4 to 5 minutes by turning the Dial Knob and press the START/+30s button.</p> <p>Result: The oven light comes on and the turntable starts rotating.</p> <ol style="list-style-type: none"> 1) Cooking starts and when it has finished the oven beeps 4 times. 2) The end reminder signal will beep 3 times (once every minute). 3) The current time is displayed again.

 
 The oven must be plugged into an appropriate wall socket. The turntable must be in position in the oven. If a power level other than the maximum is used, the water takes longer to boil.

SETTING THE TIME

Your microwave oven has an inbuilt clock. When power is supplied, “:0”, “88:88” or “12:00” is automatically displayed on the display. Please set the current time. The time can be displayed in either the 24-hour or 12-hour notation. You must set the clock:


 
 

- When you first install your microwave oven
- After a power failure

 Do not forget to reset the clock when you switch to and from summer and winter time.


	1. Press the Dial Knob. To display the time in the... 24-hour notation. 12-hour notation.
	2. Turn the Dial Knob to set time display type. (24H or 12H). At that time, press the Dial Knob to select the type of time.
	3. Turn the Dial Knob to set the hour. At that time, press the Dial Knob to set the hour.
	4. Turn the Dial Knob to set the minute.
	5. Press the Dial Knob to complete the setup.

COOKING/REHEATING

The following procedure explains how to cook or reheat food. ALWAYS check your cooking settings before leaving the oven unattended. First, place the food in the centre of the turntable. Then, close the door.

 CB4	1. Press the Microwave button. Result: The 800 W (maximum cooking power) indications are displayed:
	2. Turn the Dial Knob to desired until the appropriate power level is displayed. At that time, press the Dial Knob to set the power level.
	3. Set the cooking time by turning the Dial Knob. Result: The cooking time is displayed.
 CTAPT/+30cek	4. Press the START/+30s button. Result: The oven light comes on and the turntable starts rotating. <ol style="list-style-type: none"> 1) Cooking starts and when it has finished the oven beeps 4 times. 2) The end reminder signal will beep 3 times. (once every minute) 3) The current time is displayed again.

 **Never** switch the microwave oven on when it is empty.

 If you wish to heat a dish for a short period of time at maximum power (800 W), simply press the **START/+30s** button once for each 30 seconds of cooking time. The oven starts immediately.

POWER LEVELS


 
You can choose among the power levels below.

Power level	Output
HIGH	800 W
MEDIUM HIGH	600 W
MEDIUM	450 W
MEDIUM LOW	300 W
DEFROST	180 W
LOW/KEEP WARM	100 W

☑ If you select higher power level, the cooking time must be decreased.

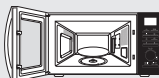

☑ If you select lower power level, the cooking time must be increased.

ADJUSTING THE COOKING TIME

	You can increase the cooking time by pressing the START/+30s button once for each 30 seconds to be added.
	You can also increase the cooking time by turning Dial Knob once for each 10 sec to be added.

STOPPING THE COOKING


You can stop cooking at any time to check the food.

	1. To stop temporarily; 1) Open the door. Result: Cooking stops. To resume cooking, close the door and press START/+30s button again. 2) Press the STOP/ECO button. Result: Cooking stops. To resume cooking, press START/+30s button again.
	2. To stop completely; Press the STOP/ECO button. Result: The cooking stops. If you wish to cancel the cooking settings, press the STOP/ECO button again.

☑ You can also cancel any setting before starting by simply pressing **STOP/ECO** button.

SETTING THE ENERGY SAVE MODE

The oven has an energy save mode. This facility saves electricity when the oven is not in use. Normal condition is standby mode and show clock when not using.

	<ul style="list-style-type: none">Press the STOP/ECO button. Result: Display off.To remove energy save mode, open the door and then display shows current time. The oven is ready for use.
--	---

☑ Auto energy saving function

If you do not select any function when appliance is in the middle of setting or operating with temporary stop condition, function is canceled and clock will be displayed after 25 minutes.

Oven Lamp will be turned off after 5 minutes with door open condition.

USING THE DEODORISATION FEATURES



Use this features after cooking odorous food or when there is a lot of smoke in the oven interior. First clean the oven interior.

 Устранение запахов <input type="text"/>	Press the Deodorisation button after you have finished cleaning. you will hear four beeps when it has finished.
---	--

- ✓ The deodorisation time has been specified as 5 minutes. It increases by 30 seconds whenever the **START/+30s** button is pressed.
- ✓ The maximum deodorisation time is 15 minutes.

USING THE KITCHEN TIMER FEATURES

You can use timer function with Kitchen Timer button.



 
 Время приготовления <input type="text"/>	1. Press the Kitchen Timer button.
	2. Set the kitchen time by turning the Dial Knob .
 СТАРТ/+30сек <input type="text"/>	3. Press the START/+30s button to begin Kitchen Timer Function. Result: The display counts down and beeps when the time has elapsed.

- ✓ The Microwave does not turn on when the kitchen timer is used.

USING THE RUSSIA CUISINE FEATURES

The Auto Russian Cuisine features has 30 pre-programmed cooking times. You do not need to set either the cooking times or the power level.

First, place the food in the centre of the turntable and close the door.

 Русская кухня <input type="text"/>	1. Press the Russian Cuisine button.
	2. Select the category that you are cooking by turning the Dial Knob , then press the Dial Knob to set. And then, select the food that you are cooking by turning the Dial Knob . Refer to the table on the following page for a description of the various pre-programmed settings.
 СТАРТ/+30сек <input type="text"/>	3. Press the START/+30s button. Result: Cooking starts. When it has finished. 1) The oven beeps 4 times. 2) The end reminder signal will beep 3 times (once every minute). 3) The current time is displayed again.

- ✓ Use only recipients that are microwave-safe.

1. Breakfast

Code/Food	Ingredients / Instructions
1-1 Porridge	Dry Russian porridge (Hercules)-50 g, Sugar-5 g, Salt-0.5 g, Boiling water-200 ml, Cold Milk-100 ml Put into a bowl shaped plate dry porridge, sugar, salt. Add boiling water, milk, mix well. Start cooking.
1-2 Buckwheat	Buckwheat-100 g, Salt-2 g, Boiling water-300 ml Put into a bowl shaped plate buckwheat, salt. Add boiling water, mix well. Start cooking.
1-3 Poached Egg	Egg-1 pc, Water-150 ml Russian vinegar 9 %-10-15 ml Put in bowl with water & vinegar into microwave oven. Bring water to a boil. As soon as oven beeps, put out the bowl with boiling water & vinegar. To make a funnel by a fork into the bowl, drop inside egg without shell. Continue cooking process.
1-4 Sausages with Canned Pea	Sausages-2 pc per 50 g, Butter-5 g, Canned pea-135 g (dry weight) Put into a plate pricked sausages without plastic cover, add butter a side. Put on the top of butter canned pea. Start cooking.
1-5 Omelette	Egg-3 pc, Milk-30 ml, Salt-2 g Whisk the egg with milk and salt, pour out egg to a plate. Start cooking.
1-6 Keks	Sugar-45 g, Vanilla infused sugar-5 g, Butter-40 g, Egg-½ pc, Milk-30 ml, Baking powder-3 g, Wheat-100 g Mix well sugar, infused sugar and butter. Add beaten egg. Add all next ingredients. Put it into a buttered bowl. Start cooking. Give it cold before removing out the bowl.
1-7 Lemon Shortbread Bolls	Wheat-100 g, Butter-50 g, Sugar-40 g, Egg yolk-½ pc, Warm water-1 tbsp, Lemon zests, For topping: Egg yolk-1 pc, Ice sugar-3-5 g Mix well all ingredients. Make five balls. Put it on wax paper. Put it on turntable. Start cooking. As soon as oven beeps, grease egg yolk on the balls top, sprinkle with ice sugar and continue cooking process. Leave it to cold.

2. Lunch

Code/Food	Ingredients / Instructions
2-1 Borch	(1) Beetroot graded-50 g, Cabbage julienned-20 g, Carrot graded-15 g, Onion c julienned-10 g, Tomato paste-15 g, Sugar-5 g (2) Beef stock or water with dry concentrate-650 ml, Bay leaf-1 pc, Russian vinegar 9 %-5 ml if you like Put all ingredients into a big bowl (1), add hot stock (Beef stock or water with dry concentrate-650 ml) and bay leaf. Start cooking.
2-2 Meat Solyanka	(1) Onion julienned-45 g, Beef stock or water with dry concentrate-350 ml (2) Capers-7 g, Salted cucumber graded-50 g, Tomato paste-10 g, Black Olives-16 g, Liquid of Black Olives-20 ml, Bay leaf-1 pc, Meat assorted-30 g, Beef stock or water with dry concentrate-300 ml Put onion into a big bowl, add boiling stock (1).Start cooking. As soon as oven beeps, add all next ingredients (2). Mix well, add stock, bay leaf and continue cooking process.
2-3 Chicken Noodle Soup	Vermicelli-10 g, Chicken filet-50 g, Carrot graded-15 g, Onion julienned-10 g, Chicken stock or water with dry concentrate-440 ml Put vermicelli into a big bowl, add boiling stock. Add all next ingredients. Mix well and start cooking.
2-4 Pork Neck with Mustard Sauce	(1) Pork neck-150 g, Carrot graded-20 g, Onion julienned-20 g, Chicken stock or water with dry concentrate-100 ml (2) Mix for sauce: Wheat-5 g, Dijon mustard-20 g, Sour Cream-30 g, Water-50 ml Cut meat into batons, prepare vegetables.add chicken stock (1). Put it into a bowl shaped plate. Mix well and start cooking. Prepare all ingredients for the mix for sauce (2). As soon as oven beeps, pour the mix into stock with meat, mix it and continue cooking process.

Code/Food	Ingredients / Instructions
2-5 Yozhiki	<p>(1) Minced meat (beef & pork)-120 g (divide to three part), Cooked regular rice-40 g, Salt-1 g, Black pepper powder-½ g, Onion julienned-20 g, Garlic chopped-3 g, Chicken stock or water with dry concentrate-100 ml</p> <p>(2) Mix for sauce: Wheat-5 g, Tomato paste-10 g Water-40 ml</p> <p>Add rice inside minced meat. Season it and mix hard by hand. Form it in three balls. Put onion and garlic into a bowl shaped plate. Put meat balls on it, add the stock. Put the plate in the oven.</p> <p>(1) Start cooking.</p> <p>Prepare all ingredients for the Mix for sauce. (2) As soon as oven beeps, pour the mix into stock with meat balls. Upside down it and continue cooking process.</p>
2-6 Dry Fruit Compote	<p>Dry apricot-25 g, Prune-20 g, Dry apple-15 g, Sugar-10 g, Lemon acid-2 dash, Boiling water-450 ml</p> <p>Put all ingredients into a big bowl, add boiling water. Start cooking.</p>
2-7 Vegetable Soup	<p>Frozen vegetables-150 g, Vegetable stock or water with dry concentrate-300 ml</p> <p>Put all ingredients into a big bowl, add boiling stock. Start cooking.</p>
2-8 Pelmeni	<p>Frozen Pelmeni- 15 pc (10-12 g one piece), Chicken stock or water with dry concentrate-600 ml, Whole black pepper-3-5 pc. Bay leaf-1 pc.</p> <p>Put all ingredients into a big bowl, add boiling stock. Mix upside down. Start cooking. As soon as oven beeps, turn it upside down and continue cooking process.</p>

3. Dinner

Code/Food	Ingredients / Instructions
3-1 Chicken Legs with Prunes	<p>Onion julienned-15 g, Carrot julienned-20 g, Chicken legs-2 pc. (160-180 g), Prunes-5-7 pc. (50 g), Chicken stock or water with dry concentrate-200 ml</p> <p>Put onion and carrot into a bowl shaped plate. Put chicken legs on it, add prunes and the stock. Put the bowl in microwave oven. Start cooking. As soon as oven beeps, turn it upside down and continue cooking process.</p>
3-2 Turkey Steamed with Vegetables	<p>Turkey filet batons-150 g, Zucchini julienned-50 g, Onion julienned-15 g, Carrot julienned-20 g, Chicken stock or water with dry concentrate-150 ml</p> <p>Put all ingredients into a bowl, add boiling stock. Start cooking. As soon as oven beeps, upside down it, mix veg and continue cooking process.</p>
3-3 Baked Potatoes	<p>Big size potato-160-200 g, 1-2 pc</p> <p>Wash potatoes and prick the skin with fork. Put in microwave. Start cooking. Cut for serving. And put butter or sour cream or cheese or something else before serving.</p>
3-4 Ratatouille	<p>Zucchini diced-100 g, Carrot diced-60 g, Bell pepper diced-75 g, Onion diced-45 g, Garlic chopped-6 g, Tomato paste-10 g (Oregano and Basil to taste), Vegetables stock or water with dry concentrate-130 ml</p> <p>Put all ingredients into a bowl shaped plate. (Add oregano & basil). Mix well. Start cooking.</p>
3-5 Russian Old Style Fish	<p>(1) Beetroot julienned-30 g, Carrot julienned-30 g, Onion julienned-15 g, Fish/Chicken stock or water with dry concentrate-200 ml</p> <p>(2) Mix for sauce: Wheat-10 g, Tomato paste-10 g, Sour cream-30 g, Water-50 ml</p> <p>(3) Carp or pike perch filet-150 g, Bay leaf-1 pc</p> <p>Put all ingredients into a bowl shaped plate add boiling stock.(1) Start cooking. As soon as oven beep, stir in "mix for sauce" with veg and stock (2). Add fish and bay leaf (3). Continue cooking process.</p>

(continued)

Code/Food	Ingredients / Instructions
3-6 Poached Salmon Steak Butterfly	Salmon steak butterfly-150-170 g, Salt-1 g, Water-20 g, (Lemon/ Orange-10 g squeeze juice for your choice)
	Season salmon steak. Put it on a plate and add water. (Use juice if your want). Put it into microwave and start cooking.
3-7 Poached Cod with Butter and Egg Sauce	Cod filet-140-150 g (or Pike-perch filet), Lemon-10 g (squeeze juice), Salt-1 g, Water-30 g, Bay leaf-1 pc, Sauce: Hardboiled egg-20 g (½ egg), Chopped parsley-3-5 g, Butter-30 g (Microwave 800 W-1 min.)
	Season fish filet. Put it on a plate and add water. Put it into microwave and start cooking. Separately prepare sauce. Cook egg and cut it in small dices. Chop parsley and heat butter. Mix all ingredients and put on top of fish.

4. Special Occasions


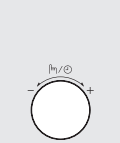
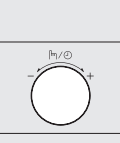

Code/Food	Ingredients / Instructions
4-1 Moscow Style Fish	(1) Champignons-30 g, Pike perch filet-150 g, Oil-5 g (2) Sour cream-30 g (2 x 15 g) (3) Baked potato round cut-2 pc per 60-70 g, Salt-5 g, White pepper powder-½ g, Grated cheese-25 g
	Put mushrooms on a plate fish aside. Drop oil on it (1). Start cooking. As soon as oven beeps, put a half of sour cream on a ceramic plate (in the center) (2). Put cooked mushrooms on it. Put Fish on it. Season it. Put around fish cut potato. Put on potato cheese (3). Continue cooking process.
4-2 Bell Pepper Stuffed with Meat	(1) Bell pepper-2 pc. per 80 g, Minced meat (beef & pork).-150-190 g (divide to two part), Cooked regular rice-10-20 g, Salt-5 g, Black pepper powder-½ g, Beef stock or water with dry concentrate-200 ml (2) Mix for sauce: Wheat-5 g, Tomato paste-10 g, Water-50 ml
	Add rice inside minced meat. Season it and mix hard by hand. Remove the center and seeds from the pepper. Stuff pepper by meat. Put it into a bowl shaped plate add stock (1). Start cooking. Prepare all ingredients for the Mix for sauce (2). As soon as oven beeps, pour the mix into stock with stuffed pepper. Upside down it and continue cooking process.
4-3 Trout Baked with Vegetables	Butter-10 g (2 x 5 g), Carrot julienned-35 g, Onion julienned-25 g, Garlic chopped-3 g, Celery leaves chopped-5 g, Trout-1 pc-220-250 g, Salt-1 g, White pepper powder-½ g, Butter-5 g
	Grease butter in the centre of wax paper. Put carrot, onion, garlic and celery on it. Put seasoned trout on vegetables. Grease butter on top of the fish. Cover it. Put it into microwave oven and start cooking.
4-4 Salmon Steak Steamed	Salmon steak with bone and skin-200-250 g, Salt-1 g, Lemon-15 g (squeeze juice), Water-20 g
	Salmon steak season. Put it on a plate and add water. Put it into microwave and start cooking.


Code/Food	Ingredients / Instructions
4-5 Azu	(1) Pork neck cut in batton-170 g, Onion julienned-20 g, Chicken stock or water with dry concentrate-100 ml (2) Mix for sauce: Wheat-5 g, Tomato paste-15 g, Water-50 ml, Salted cucumbers grated-30 g Put meat and onion into a bowl shaped plate add stock. (1) Start cooking. As soon as oven beeps, upside down it, stir in "mix with the sauce" (2) into veg, stock & meat. Mix and continue cooking process.
4-6 Pike-Perch with Tomato and Cheese	Pike-perch filet-80-100 g (or Carp), Mayonaise-10 g, Salt-1 g, Tomato cut in rounds-50 g, Cheese grated-20 g Grease mayonaise on fish filet, season it with salt. Put on the top tomato use toothpick. Put cheese on the top. Put it on a plate and start cooking. Put out toothpick.
4-7 Cranberry Fruit Drink	Frozen cranberry-40 g, Sugar-30 g, Water-200 ml Frozen cranberry cut by mincer. Put all ingredients into a bowl. Start cooking. Cool and strain.
4-8 Cookies	Wheat-85 g, Ice sugar-25 g, Butter-50 g, Egg-½ ps, Salt-1 g Mix well wheat, ice sugar and butter. Add salt and egg. Mix well. Form it in two tablet forms. Put it with wax paper on the turntable. Start cooking.

USING THE HEALTHY COOKING FEATURES

The Healthy Cooking features has sixteen pre-programmed cooking times. You do not need to set either the cooking times or the power level. You can adjust the serving size of the item by turning the dial knob.

First, place the food in the centre of the turntable and close the door.

	1. Press the Healthy Cooking button.
	2. Select the category that you are cooking by turning the Dial Knob. At that time, press the Dial Knob . And then, select the food that you are cooking by turning the Dial Knob . At that time, press the Dial Knob . Refer to the table on the following page for a description of the various pre-programmed settings.
	3. Set the weight of food by turning the Dial Knob. (Broccoli, Peeled Potatoes only)
	4. Press the START/+30s button. Result: Cooking starts. When it has finished. 1) The oven beeps 4 times. 2) The end reminder signal will beep 3 times (once every minute). 3) The current time is displayed again.

 Use only recipients that are microwave-safe.

1. Vegetables & Grain

Code/Food	Serving Size	Instructions
1-1 Broccoli	250 g 500 g	Rinse and clean fresh broccoli and prepare florets. Put them evenly into a glass bowl with lid. Add 30 ml (2 tbsp) water when cooking for 250 g, and add 60-75 ml (4-5 tbsp) for 500 g. Put bowl in the centre of turntable. Cook covered. Stir after cooking. Stand for 1-2 minutes.
1-2 Carrots	250 g	Rinse and clean carrots and prepare even slices. Put them evenly into a glass bowl with lid. Add 30 ml (2 tbsp) water when cooking for 250 g. Put bowl in the centre of turntable. Cook covered. Stir after cooking. Stand for 1-2 minutes.
1-3 Green Beans	250 g	Rinse and clean green beans. Put them evenly into a glass bowl with lid. Add 30 ml (2 tbsp) water when cooking 250 g. Put bowl in the centre of turntable. Cook covered. Stir after cooking. Stand for 1-2 minutes.
1-4 Spinach	150 g	Rinse and clean spinach. Put into a glass bowl with lid. Do not add water. Put bowl in the centre of turntable. Cook covered. Stir after cooking. Stand for 1-2 minutes.
1-5 Corn on the Cob	250 g (1 pcs)	Rinse and clean corn on the cob and put into an oval glass dish. Cover with microwave cling film and pierce film. Stand for 1-2 minutes.
1-6 Peeled Potatoes	250 g 500 g	Wash and peel the potatoes and cut into a similar size. Put them into a glass bowl with lid. Add 45-60 ml (3-4 tbsp) water. Put bowl in the centre of turntable. Cook covered. Stand for 2-3 minutes.

Code/Food	Serving Size	Instructions
1-7 Brown Rice (Parboiled)	125 g	Use a large glass ovenware dish with lid. Add double quantity of cold water (250 ml). Cook covered. Stir before standing time and add salt and herbs. Stand for 5-10 minutes.
1-8 Wholemeal Macaroni	125 g	Use a large glass ovenware dish with lid. Add 500 ml hot boiling water, a pinch of salt and stir well. Cook uncovered. Stir before standing time and drain thoroughly afterwards. Stand for 1 minutes.
1-9 Quinoa	125 g	Use a large glass ovenware dish with lid. Add double quantity of cold water (250 ml). Cook covered. Stir before standing time and add salt and herbs. Stand for 1-3 minutes.
1-10 Bulgur	125 g	Use a large glass ovenware dish with lid. Add double quantity of cold water (250 ml). Cook covered. Stir before standing time and add salt and herbs. Stand for 2-5 minutes.

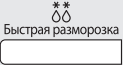
 
 
 
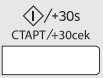
2. Poultry & Fish


Code/Food	Serving Size	Instructions
2-1 Chicken Breasts	300 g (2 pcs)	Rinse pieces and put on a ceramic plate. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 2 minutes.
2-2 Turkey Breasts	300 g (2 pcs)	Rinse pieces and put on a ceramic plate. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 2 minutes.
2-3 Fresh Fish Fillets	300 g (2 pcs)	Rinse fish and put on a ceramic plate, add 1 tbsp lemon juice. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 1-2 minutes.
2-4 Fresh Salmon Fillets	300 g (2 pcs)	Rinse fish and put on a ceramic plate, add 1 tbsp lemon juice. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 1-2 minutes.
2-5 Fresh Prawns	250 g	Rinse prawns on a ceramic plate, add 1 tbsp lemon juice. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 1-2 minutes.
2-6 Fresh Trout	200 g (1 fish)	Put 2 fresh whole fish into an ovenproof dish. Add a pinch salt, 1 tbsp lemon juice and herbs. Cover with microwave cling film. Pierce film. Put dish on turntable. Stand for 2 minutes.

USING THE AUTO POWER DEFROST FEATURES

The Auto Power Defrost features enables you to defrost meat, poultry, fish, fruit/berry. The defrost time and power level are set automatically. You simply select the programme and the weight.

First, place the frozen food in the centre of the turntable and close the door.

	1. Press the Power Defrost button.
	2. Select the type of food that you are cooking by turning the Dial Knob . (Refer to the table on the side).
	3. Press the Dial Knob to select the type of food.
	4. Set the weight of food by turning the Dial Knob .
	5. Press the START/+30s button. Result: <ul style="list-style-type: none"> Defrosting begins. The oven beeps half way through defrosting to remind you to turn the food over. Press START/+30s button again to finish defrosting.

 Use only dishes that are microwave-safe.








The following table presents the various Auto Power Defrost programmes, quantities and appropriate Instructions. Remove all kinds of package material before defrosting. Place meat, poultry, fish, fruit/berry on a ceramic plate.


Code/Food	Serving Size	Instructions
1 Meat	200-1500 g	Shield the edges with aluminium foil. Turn the meat over when the oven beeps. This programme is suitable for beef, lamb, pork, steaks, chops and minced meat. Stand for 20-60 minutes.
2 Poultry	200-1500 g	Shield the leg and wing tips with aluminium foil. Turn the poultry over when the oven beeps. This programme is suitable for whole chicken and chicken portions. Stand for 20-60 minutes.
3 Fish	200-1500 g	Shield the tail of the whole fish with aluminium foil. Turn the fish over when the oven beeps. This programme is suitable for whole fishes and fish fillets. Stand for 20-50 minutes.
4 Fruit/Berry	100-600 g	Spread fruits evenly into a flat glass dish. This programme is suitable for all kind of fruits.

USING THE MY PLATE FEATURES

The My Plate features has two pre-programmed cooking times. You do not need to set either the cooking times or the power level. You can adjust the number of servings by turning the dial knob.

First, place the food in the centre of the turntable and close the door.

 Замороженные блюда 	1. Press the My Plate button.
	2. Select the type of food that you are cooking by turning the Dial Knob .
	3. Press the Dial Knob to select the type of food.
	4. Select the size of the serving by turning the Dial Knob . (Refer to the table on the side.)
 СТАРТ/+30сек 	5. Press the START/+30s button. Result: Cooking starts. When it has finished. 1) The oven beeps 4 times. 2) The end reminder signal will beep 3 times (once every minute). 3) The current time is displayed again.

 Use only recipients that are microwave-safe.



 
 
 
 

The following table presents the My Plate auto reheat programmes, quantities and appropriate Instructions. Those programmes are running with microwave energy only.


Code/Food	Serving Size	Instructions
1 Chilled Ready Meal	300-350 g 400-450 g	Put on a ceramic plate and cover with microwave cling film. This programme is suitable for meals consisting of 3 components (e.g. meat with sauce, vegetables and a side dishes like potatoes, rice or pasta). Stand for 2-3 minutes.
2 Chilled Vegetarian Meal	300-350 g 400-450 g	Put meal on a ceramic plate and cover with microwave cling film. This programme is suitable for meals consisting of 2 components (e.g. spaghetti with sauce or rice with vegetables). Stand for 2-3 minutes.

USING THE SOFTEN/MELT FEATURES

The Soften/Melt features has four pre-programmed cooking times. You do not need to set either the cooking times or the power level. You can adjust the number of servings by turning the dial knob.

First, place the food in the centre of the turntable and close the door.

 Растапливание 	1. Press the Soften/Melt button.
	2. Select the type of food that you are cooking by turning the Dial Knob .
	3. Press the Dial Knob to select the type of food.
	4. Select the size of the serving by turning the Dial knob . (Refer to the table on the side.)
 СТАРТ/+30сек 	5. Press the START/+30s button. Result: Cooking starts. When it has finished. 1) The oven beeps 4 times. 2) The end reminder signal will beep 3 times (once every minute). 3) The current time is displayed again.

 Use only recipients that are microwave-safe.

The following table presents the Soften/Melt programmes, quantities and appropriate Instructions. Those programmes are running with microwave energy only.

Code/Food	Serving Size	Instructions
1 Melting Butter	50 g 100 g	Cut butter into 3 or 4 pieces and Put them on small glass bowl. Melt uncovered. Stir after cooking. Stand for 1-2 minutes.
2 Melting Dark Chocolate	50 g 100 g	Grate dark chocolate and put in small glass bowl. Melt uncovered. Stir after melting. Stand for 1-2 minutes.
3 Melting Sugar	25 g 50 g	Put sugar on small glass bowl. Add 10 ml water for 25 g and add 20 ml water for 50 g. Melt uncovered. Take out carefully, use oven gloves! Use spoon or fork and pour caramel decorations on baking paper. Let stand for 10 minutes until dry and remove from paper.
4 Soften Butter	50 g 100 g	Cut butter into 3 or 4 pieces and Put them in small glass bowl. Soften uncovered. Stir after cooking. Stand for 1-2 minutes.

POWER STEAM COOKING GUIDE (ONLY MS23H3115F* MODELS)

The Power Steamer is based on the principle of steam cooking, and is designed for fast, healthy cooking in your Samsung Microwave oven.

This accessory is ideal for cooking rice, pasta, vegetables, etc. in record time, while preserving their nutritional values.

 
The Microwave Power steamer set is made up of 3 items:



Bowl



Insert tray




Lid

All parts withstand temperatures from -20 °C to 140 °C.

Suitable for freezer storage. Can also be used separately or together.

CONDITIONS of USE:

 Do not use:

- to cook foods with a high sugar or fat content,
- with the grill or rotating heat function or on a hob.



Wash all parts well in soapy water before first use.



To find out cooking times, please refer to the instructions in the table on next page.

MAINTENANCE:



Your steamer can be washed in a dishwasher.



When washing by hand, use hot water and washing-up liquid. Do not use abrasive pads.



Some foods (such as tomato) may discolour the plastic. This is normal and not a manufacturing fault.

DEFROSTING:

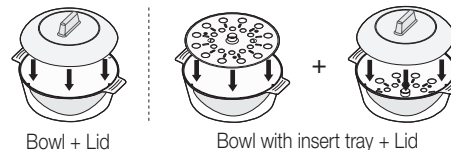
Place the frozen food in the steam bowl without the lid. The liquid will remain in the bottom of the pot and will not harm the food.

COOKING:

Food	Serving Size	Power levels	Cooking time (min.)	Handling
Artichokes	300 g (1-2 pcs)	800 W	5-6	Bowl with insert tray + Lid
	Instructions Rinse and clean artichokes. Put insert tray into bowl. Set artichokes on tray. Add 1 tbsp lemon juice. Cover with lid. Stand for 1-2 minutes.			
Fresh Vegetables	300 g	800 W	4-5	Bowl with insert tray + Lid
	Instructions Weigh the vegetables (e.g. broccoli, cauliflower, carrots, pepper) after washing, cleaning and cutting into similar size. Put tray into bowl. Distribute vegetables on insert tray. Add 2 tbsp water. Cover with lid. Stand for 1-2 minutes.			
Frozen Vegetables	300 g	600 W	7-8	Bowl with insert tray + Lid
	Instructions Put the frozen vegetables into the steam bowl. Put insert tray into bowl. Add 1 tbsp water. Cover with lid. Stir well after cooking and standing. Stand for 2-3 minutes.			
Rice	250 g	800 W	15-18	Bowl + Lid
	Instructions Put rice into the steam bowl. Add 500 ml cold water. Cover with lid. After cooking let stand white rice 5 minutes, brown rice 10 minutes.			
Jacket Potatoes	500 g	800 W	7-8	Bowl + Lid
	Instructions Weigh and rinse the potatoes and put them into steam bowl. Add 3 tbsp water. Cover with lid. Stand for 2-3 minutes.			
Stew (Chilled)	400 g	600 W	5-6	Bowl + Lid
	Instructions Put stew into the steam bowl. Cover with lid. Stir well before standing. Stand for 1-2 minutes.			

Food	Serving Size	Power levels	Cooking time (min.)	Handling
Soup (Chilled)	400 g	800 W	3-4	Bowl + Lid
	Instructions Pour into steam bowl. Cover with lid. Stir well before standing. Stand for 1-2 minutes.			
Frozen Soup	400 g	800 W	8-10	Bowl + Lid
	Instructions Put frozen soup into steam bowl. Cover with lid. Stir well before standing. Stand for 2-3 minutes.			
Frozen Yeast Dumpling with Jam Filling	150 g	600 W	1-2	Bowl + Lid
	Instructions Moist the top of filled dumplings with cold water. Put 1-2 frozen dumplings side by side into the steam bowl. Cover with lid. Stand for 2-3 minutes.			
Fruit Compote	250 g	800 W	3-4	Bowl + Lid
	Instructions Weigh the fresh fruits (e.g. apples, pears, plums, apricots, mangoes or pineapple) after peeling, washing and cutting into similar sizes or cubes. Put into steam bowl. Add 1-2 tbsp water and 1-2 tbsp sugar. Cover with lid. Stand for 2-3 minutes.			

Handling of power steam cooker


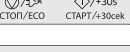


PRECAUTIONS:

- Take special care when opening the lid of your steamer, because the steam escaping may be very hot.
- Use oven gloves when handling after cooking.

SWITCHING THE BEEPER OFF



You can switch the beeper off whenever you want.

	<p>1. Press the STOP/ECO and START/+30s buttons at the same time.</p> <p>Result:</p> <ul style="list-style-type: none"> The following indication is displayed. <div data-bbox="504 319 601 361" style="background-color: black; color: white; text-align: center; padding: 5px;">OFF</div> <ul style="list-style-type: none"> The oven does not beep each time you press a button.
	<p>2. To switch the beeper back on, press the STOP/ECO and START/+30s buttons again at the same time.</p> <p>Result:</p> <ul style="list-style-type: none"> The following indication is displayed. <div data-bbox="504 538 601 580" style="background-color: black; color: white; text-align: center; padding: 5px;">ON</div> <ul style="list-style-type: none"> The oven operates with the beeper on again.

SAFETY-LOCKING YOUR MICROWAVE OVEN

Your microwave oven is fitted with a special Child Safety programme, which enables the oven to be "locked" so that children or anyone unfamiliar with it cannot operate it accidentally.

The oven can be locked at any time.

	<p>1. Press the Child Lock button for three seconds.</p> <p>Result:</p> <ul style="list-style-type: none"> The oven is locked (no functions can be selected). The display shows "L". <div data-bbox="504 950 601 993" style="background-color: black; color: white; text-align: center; padding: 5px;">L</div>
	<p>2. To unlock the oven, press the Child Lock button for three seconds.</p> <p>Result: The oven can be used normally.</p>

cookware guide

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used.

Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry.

The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-safe	Comments
Aluminum foil	✓ ✗	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
Crust plate	✓	Do not preheat for more than 8 minutes.
China and earthenware	✓	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
Disposable polyester cardboard dishes	✓	Some frozen foods are packaged in these dishes.
Fast-food packaging		
<ul style="list-style-type: none"> Polystyrene cups containers 	✓	Can be used to warm food. Overheating may cause the polystyrene to melt.
<ul style="list-style-type: none"> Paper bags or newspaper 	✗	May catch fire.
<ul style="list-style-type: none"> Recycled paper or metal trims 	✗	May cause arcing.

Cookware	Microwave-safe	Comments
Glassware		
• Oven-to-tableware	✓	Can be used, unless decorated with a metal trim.
• Fine glassware	✓	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.
• Glass jars	✓	Must remove the lid. Suitable for warming only.
Metal		
• Dishes	✗	May cause arcing or fire.
• Freezer bag twist ties	✗	
Paper		
• Plates, cups, napkins and kitchen paper	✓	For short cooking times and warming. Also to absorb excess moisture.
• Recycled paper	✗	May cause arcing.
Plastic		
• Containers	✓	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic.
• Cling film	✓	Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
• Freezer bags	✓ ✗	Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
Wax or grease-proof paper	✓	Can be used to retain moisture and prevent spattering.

✓ : Recommended

✓ ✗ : Use Caution

✗ : Unsafe

cooking guide

MICROWAVES

Microwave energy actually penetrates food, attracted and absorbed by its water, fat and sugar content.

The microwaves cause the molecules in the food to move rapidly. The rapid movement of these molecules creates friction and the resulting heat cooks the food.

COOKING

Cookware for microwave cooking:

Cookware must allow microwave energy to pass through it for maximum efficiency. Microwaves are reflected by metal, such as stainless steel, aluminium and copper, but they can penetrate through ceramic, glass, porcelain and plastic as well as paper and wood. So food must never be cooked in metal containers.

Food suitable for microwave cooking:

Many kinds of food are suitable for microwave cooking, including fresh or frozen vegetables, fruit, pasta, rice, grains, beans, fish, and meat. Sauces, custard, soups, steamed puddings, preserves, and chutneys can also be cooked in a microwave oven. Generally speaking, microwave cooking is ideal for any food that would normally be prepared on a hob. Melting butter or chocolate, for example (see the chapter with tips, techniques and hints).

Covering during cooking

To cover the food during cooking is very important, as the evaporated water rises as steam and contributes to cooking process. Food can be covered in different ways: e.g. with a ceramic plate, plastic cover or microwave suitable cling film.

Standing times

After cooking is over food the standing time is important to allow the temperature to even out within the food.

Reheating Liquids and Food

Use the power levels and times in this table as a guide lines for reheating.

Food	Serving Size	Power	Time (min.)
Drinks (Coffee, Tea and Water)	150 ml (1 cup)	800 W	1-1½
	250 ml (1 mug)		1½-2
Instructions Pour into cup and reheat uncovered. Put cup/ mug in the centre of turntable. Keep in microwave oven during standing time and stir well. Stand for 1-2 minutes.			
Soup (Chilled)	250 g	800 W	3-3½
	Instructions Pour into a deep ceramic plate. Cover with plastic lid. Stir well after reheating. Stir again before serving. Stand for 2-3 minutes.		
Stew (Chilled)	350 g	600 W	5½-6½
	Instructions Put stew in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving. Stand for 2-3 minutes.		
Pasta with Sauce (Chilled)	350 g	600 W	4½-5½
	Instructions Put pasta (e.g. spaghetti or egg noodles) on a flat ceramic plate. Cover with microwave cling film. Stir before serving. Stand for 3 minutes.		
Filled Pasta with Sauce (Chilled)	350 g	600 W	5-6
	Instructions Put filled pasta (e.g. ravioli, tortellini) in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving. Stand for 3 minutes.		
Plated Meal (Chilled)	350 g	600 W	5½-6½
	Instructions Plate a meal of 2-3 chilled components on a ceramic dish. Cover with microwave cling-film. Stand for 3 minutes.		
Pasta (Frozen) (Cannelloni, Macaroni, Lasagne)	400 g	450 W	16-16½
	Instructions Put frozen pasta into a small flat rectangular glass pyrex dish. Put the dish directly on the turntable. Stand for 2-3 minutes.		

troubleshooting and error code

TROUBLESHOOTING

Becoming familiar with a new appliance always takes a little time. If you have any of the problems listed below, try the solutions given. They may save you the time and inconvenience of an unnecessary service call.

The following are normal occurrences.

- Condensation inside the oven
- Air flow around the door and outer casing
- Light reflection around the door and outer casing
- Steam escaping from around the door or vents

The food is not cooked at all.

- Have you set the timer correctly and pressed the **START/+30s** button?
- Is the door closed?
- Have you overloaded the electric circuit and caused a fuse to blow or a breaker to be triggered.

The food is either overcooked or undercooked.

- Was the appropriate cooking length set for the type of food?
- Was an appropriate power level chosen?

The oven causes interference with radios or televisions.

- Slight interference may be observed on televisions or radios when the oven is operating. This is normal.
 - Solution: install the oven away from televisions, radios and aerials.
- If interference is detected by the oven's microprocessor, the display may be reset.
 - Solution: Disconnect the power plug and reconnect it. Reset the time.

The light bulb is not working.

- The Light bulb should not be replaced in person for safety reasons. Please contact nearest authorised Samsung customer care, to arrange for a qualified engineer to replace the bulb.

Sparking and cracking occur inside the oven (arcing).

- Have you used a dish with metal trimmings?
- Have you left a fork or other metal utensil inside the oven?
- Is aluminum foil too close to the inside walls?

Smoke and bad smell when initial operating.

- It's a temporary condition by new component heating. Smoke and smell will disappear completely after 10 minutes operation.
To remove smell more quickly, please operate microwave oven with putting lemon formation or lemon juice in the cabinet.

☑ If the above guidelines do not enable you to solve the problem, then contact your local SAMSUNG customer service centre.
Please have the following information read;

- The model and serial numbers, normally printed on the rear of the oven
- Your warranty details
- A clear description of the problem

Then contact your local dealer or SAMSUNG aftersales service.

ERROR CODE

“SE” message indicates.

- Clean the keys and check if there is water on the surface around key. Turn off the microwave oven and try setting again. If it occurs again, call your local SAMSUNG Customer Care Centre.
- ☑ For any codes not listed above, or if the suggested solution does not solve the problem, contact your local SAMSUNG Customer Care Centre.

Подлежит использованию по назначению
в нормальных условиях
Срок службы: 7 лет



Символ «не для пищевой продукции» применяется в соответствии с техническим регламентом Таможенного союза «О безопасности упаковки» 005/2011 и указывает на то, что упаковка данного продукта не предназначена для повторного использования и подлежит утилизации. Упаковку данного продукта запрещается использовать для хранения пищевой продукции.



Символ «петля Мебиуса» указывает на возможность утилизации упаковки. Символ может быть дополнен обозначением материала упаковки в виде цифрового и/или буквенного обозначения.

technical specifications

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

Model	MS23H3115**
Power source	230 V ~ 50 Hz
Power consumption Microwave	1150 W
Output power	100 W / 800 W (IEC-705)
Operating frequency	2450 MHz
Magnetron	OM75S (31)
Cooling method	Cooling fan motor
Dimensions (W x H x D) Outside Oven cavity	489 x 275 x 374 mm 330 x 211 x 324 mm
Volume	23 liter
Weight Net	12 kg approx

※ оборудование класса I



Производитель : Samsung Electronics Co., Ltd /
Самсунг Электроникс Ко., Лтд

Адрес производителя :
(Мэтан-донг) 129, Самсунг-ро, Йонгтонг-гу, Сувон-си,
Гйонгги-до, Корея, 443-742

Адрес мощностей производства :
ЛОТ 2, ЛЕБУХ 2, НОРС КЛАНГ СТРЕЙТС, ЭРИА 21,
ИНДАСТРИАЛ ПАРК, 42000
ПОРТ КЛАНГ, СЕЛАНГОР ДАРУЛ ЭСАН, МАЛАЙЗИЯ

Страна производства : Малайзия

Импортер в России :
ООО «Самсунг Электроникс Рус Компани»
Адрес: 125009, г. Москва, Россия, ул. Воздвиженка 10, 4 этаж

В СЛУЧАЕ ВОЗНИКНОВЕНИЯ ВОПРОСОВ ИЛИ КОММЕНТАРИЕВ

СТРАНА	ТЕЛЕФОН	ВЕБ-УЗЕЛ
RUSSIA	8-800-555-55-55	www.samsung.com/ru/support
GEORGIA	0-800-555-555	www.samsung.com/support
ARMENIA	0-800-05-555	
AZERBAIJAN	0-88-555-55-55	
KAZAKHSTAN	8-10-800-500-55-500(GSM: 7799, VIP care 7700)	
UZBEKISTAN	8-10-800-500-55-500	
KYRGYZSTAN	8-10-800-500-55-500	www.samsung.com/kz_ru/support
TADJIKISTAN	8-10-800-500-55-500	www.samsung.com/support
MONGOLIA	7-495-363-17-00	
BELARUS	810-800-500-55-500	
MOLDOVA	0-800-614-40	
UKRAINE	0-800-502-000	www.samsung.com/ua/support (Ukrainian) www.samsung.com/ua_ru/support (Russian)

DE68-04240B-01