


## Samsung DVD Zoran Upgrade Manual

### Making an upgrade disc :


1. Open Nero burning tools and prepare a blank (new) CD-R.
2. Create New Compilation (multisession) in Nero burning tools.
3. You have to rename the firmware's filename into BUILD.IMG  
Example : BUILD\_080522.04.C.V6800XEG.IMG must be renamed to BUILD.IMG
4. Add BUILD.IMG, and UPDATE.VER into the compilation.
5. Burn the compilation using 16x (or less) speed max.

### Burning process


1. Run Nero Burning
2. Start Multisession Disc Burning

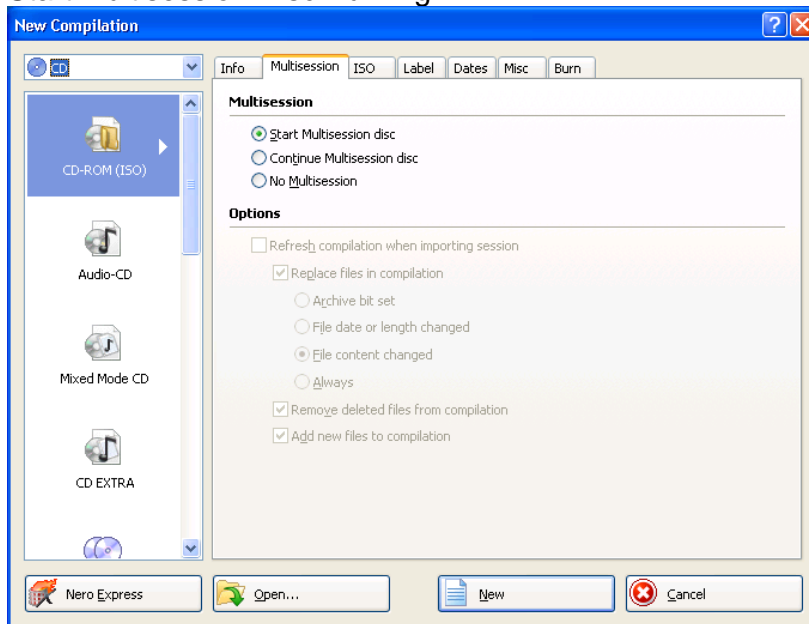


3. Set The ISO setting as bellow

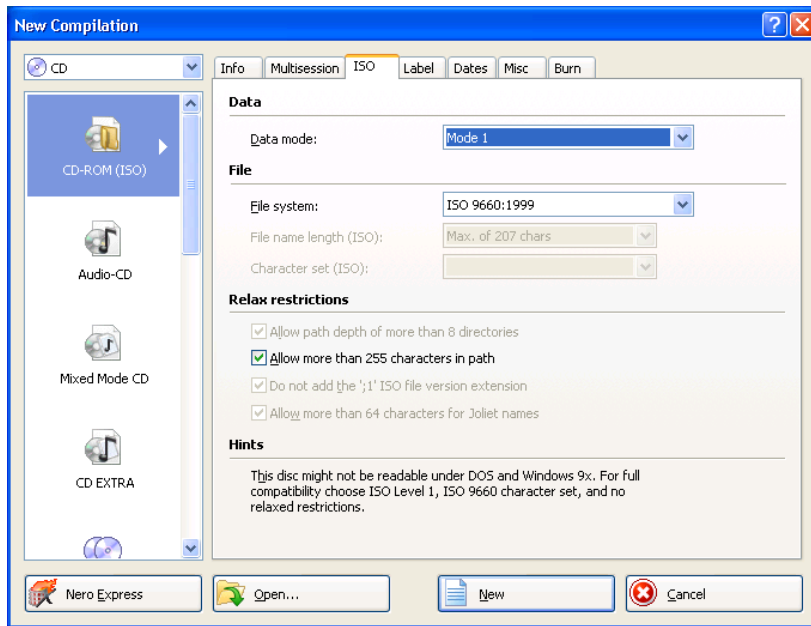

#### 4. Burn 3 Files bellow

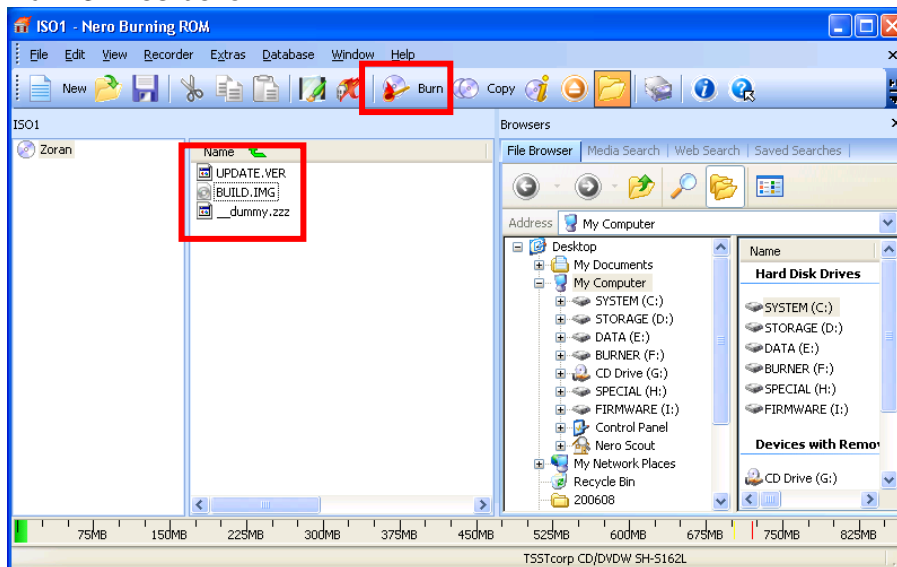

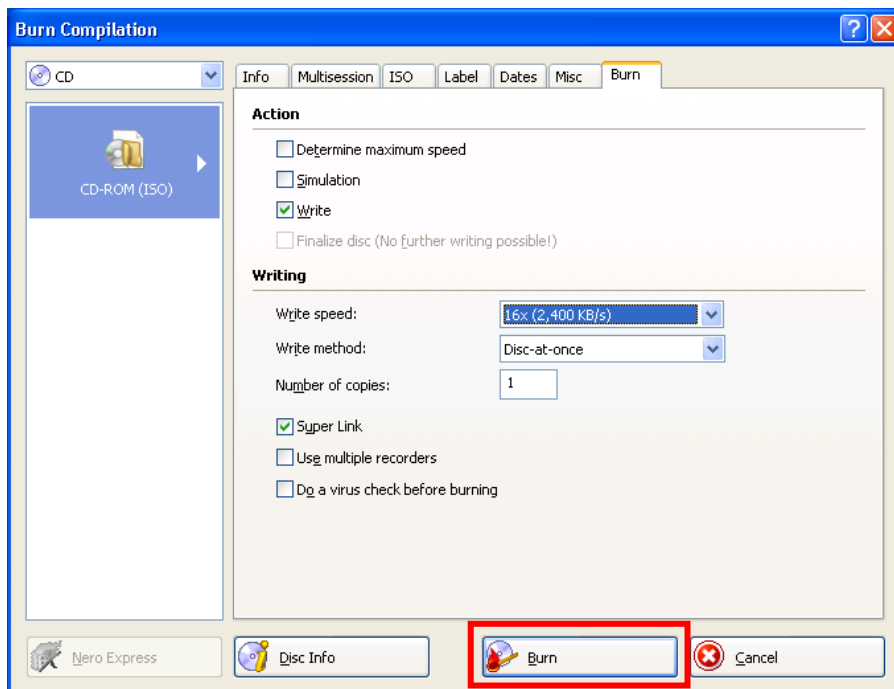


5. After The burning Process complete, Disc is ready for upgrade process

## Upgrading

1. Insert the upgrade disc.
2. When Firmware upgrade menu is appear, there is information about:  
Old firmware version and new firmware version.



3. Select Total to start the upgrade process.

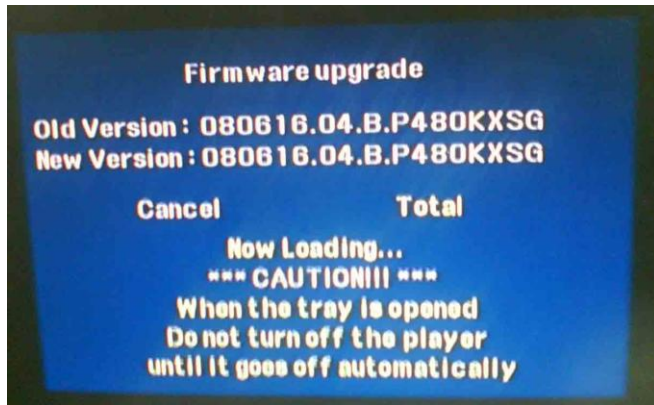

4. When tray is opened, take out the disc.
5. Please wait until the player is automatically power off.

**Important Notice:** During upgrade don't ever turn off the player otherwise the player will be broken and need to change Flash memory.