


SW7500 SERIES

Vacuum Cleaner

user manual



This manual is made with 100% recycled paper.

- * Before operating this unit, please read the instructions carefully.
- * For indoor use only.

ENGLISH

imagine the possibilities

Thank you for purchasing a Samsung product.
To receive a more complete service,
please register your product at
www.samsung.com/register



Code No. DJ68-00605A REV(0.2)

safety information

SAFETY INFORMATION





- Before operating the appliance, please read this manual thoroughly and retain it for your reference.






- Because these following operating instructions cover various models, the characteristics of your vacuum cleaner may differ slightly from those described in this manual.

CAUTION/WARNING SYMBOLS USED

| | |
|---|---|
|  | Indicates that a danger of death or serious injury exists. |
|  | Indicates that a risk of personal injury or material damage exists. |

OTHER SYMBOLS USED

| | |
|---|--|
|  | Represents something you must NOT do. |
|  | Represents something you must follow. |
|  | Indicates that you must disconnect the power plug from the socket. |

safety information

IMPORTANT SAFEGUARDS

1. Read all instructions carefully.
Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate on the side of the cleaner.
2. **WARNING :** Do not use the vacuum cleaner when rug or floor is wet.
Do not use to suck up water.
3. Close supervision is necessary when any appliance is used by or near children.
Do not allow the vacuum cleaner to be used as a toy.
Do not allow the vacuum cleaner to run unattended at any time.
Use the vacuum cleaner only for its intended use as described in these instructions.
4. Do not use the vacuum cleaner without a dust bin.
Empty the dust bin before it is full in order to maintain the best efficiency.
5. Do not use the vacuum cleaner to pick up matches, live ashes or cigarette butts.
Keep the vacuum cleaner away from stoves and other heat sources. Heat can deform and discolour the plastic parts of the unit. Also do not use your vacuum cleaner to pick up sugar, salt, dust of building materials (e.g. cement, metal shavings and so on).
6. Avoid picking up hard, sharp objects with the vacuum cleaner as they may damage the cleaner parts. Do not stand on the hose assembly.
Do not put weight on the hose. Do not block the suction or the exhaust port.
7. Switch the vacuum cleaner off on the body of the machine before unplugging from the electrical outlet. Disconnect the plug from the electrical outlet before emptying the dust bin. To avoid damage, please remove the plug by grasping the plug itself, not by pulling on the cord.
8. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
9. Children should be supervised to ensure that they do not play with the appliance.
10. The plug must be removed from the socket outlet before cleaning or maintaining the appliance.
11. The use of an extension cord is not recommended.
12. If your vacuum cleaner is not operating correctly, switch off the power supply and consult an authorized service agent.
13. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
14. Don't carry the vacuum cleaner by holding the hose. Use the handle on the vacuum cleaner set.
15. Unplug the cleaner when not in use. Turn off the power switch before unplugging.



This vacuum cleaner is designed for domestic household use only.

Do not use this vacuum cleaner to clean building waste or debris.

Do Not use this vacuum cleaner with any of the filters removed as this could cause damage to the internal components and void your warranty.

contents

ASSEMBLING THE CLEANER

05 Assembling the cleaner

05

OPERATING THE CLEANER

06 Power control
07 Using accessory
08 Emptying the dust bin
08 Check filter indicator
09 Cleaning the dust pack
10 Maintain tools
10 Power cord


06

TROUBLESHOOTING


11

assembling the cleaner


ASSEMBLING THE CLEANER

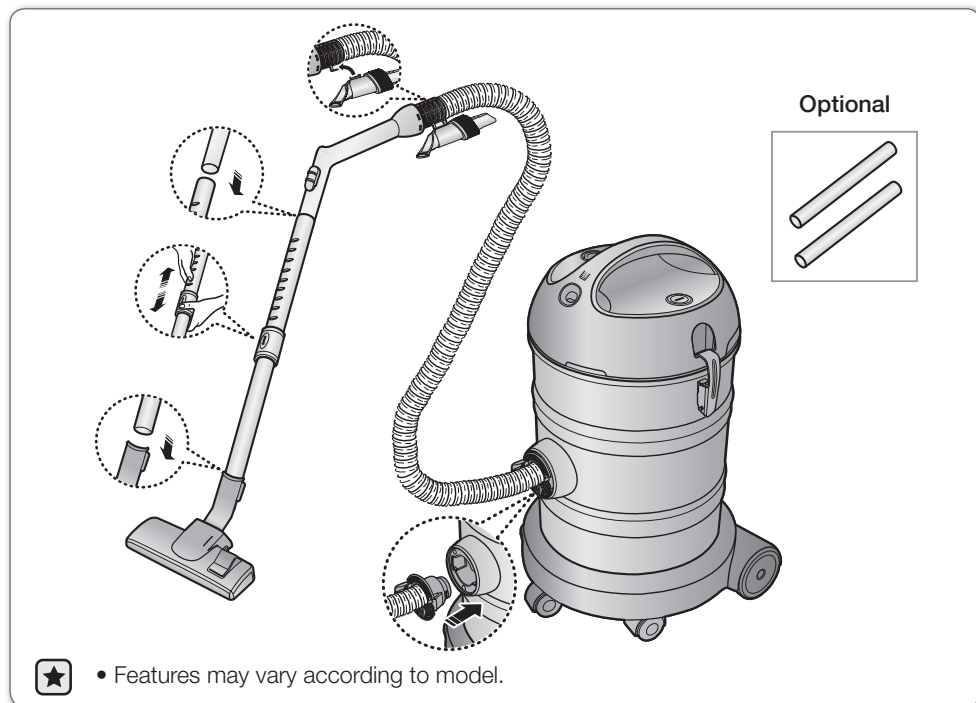

- Before using the vacuum cleaner put the brush and cleaner, accessory out of the dust bin.

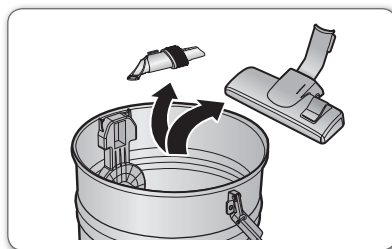

- ★ • For storage, park the floor nozzle.

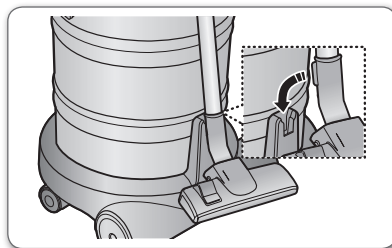


operating the cleaner

POWER CONTROL

- BODY

Press the power control button repeatedly to select the correct mode.


(ON ↔ OFF)

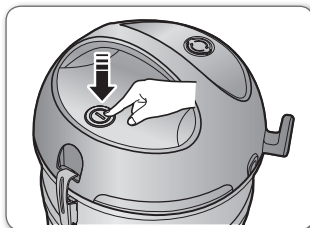

The Power control button operates the vacuum cleaner or stops it.


- HOSE

To reduce suction for cleaning draperies, small rugs and other light fabrics, pull the tap air until the hole is open.

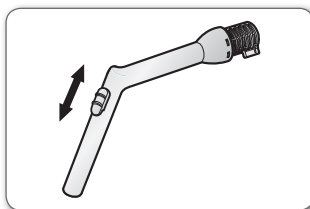


- BRUSH

FLOOR NOZZLE

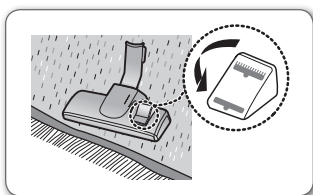

Using on carpet

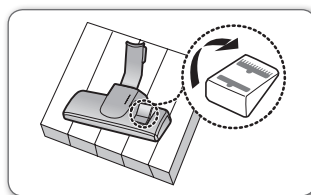


Using on tile or floor


USING ACCESSORY

Accessory


- Push the accessory on to the end of the hose handle.

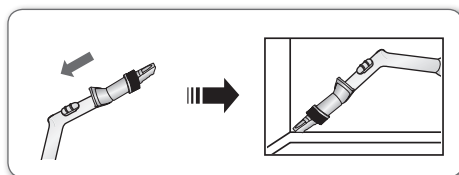

- To use the dusting tool, push the accessory on to the end of the hose handle.

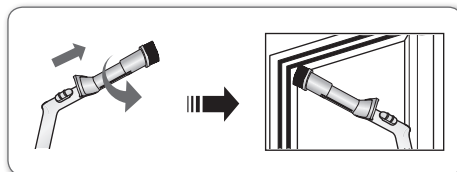


- To use the upholstery tool, push the accessory on to the end of the hose handle.

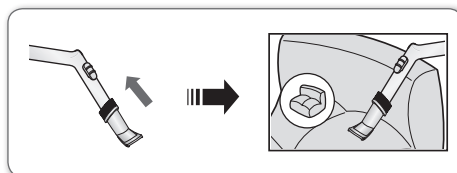


Pipe (Optional)

- Adjust the length of the telescopic pipe by sliding the length control button located in the center of the telescopic pipe back and forth.

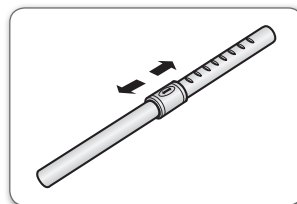


Using the blower

1. Disconnect the hose from the body of the cleaner.
2. Connect the hose clamber to the blow hole.
3. Turn the hose clamber to the clockwise and lock the clamber properly.

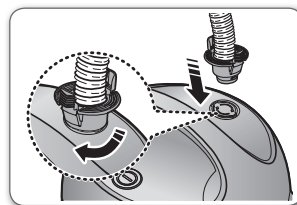


- To use the blower, disassemble the pipe and the brush.

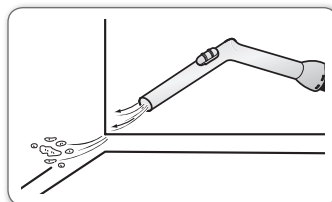


maintain tools and filter


EMPTYING THE DUST BIN

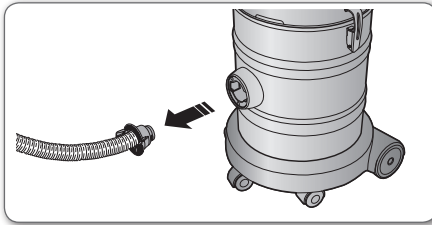


1. Disassemble the suction hose clamber.

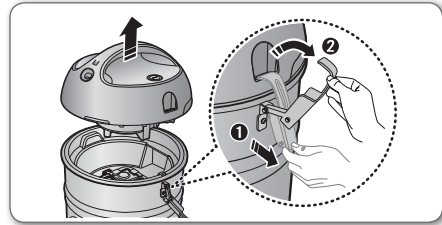


2. Unlock the body clamber at both side and lift the upper body to disassemble it from the dust tank.

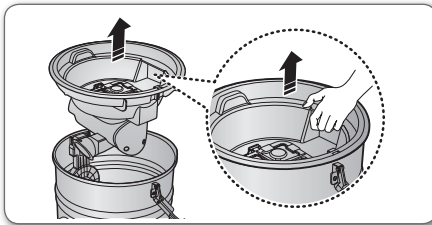


3. Lift the dust cover to open and put it down carefully. Please beware of dust falling off from the dust cover.

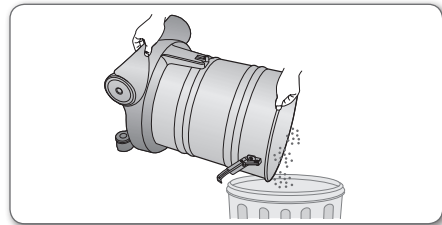

4. Dispose dust materials.

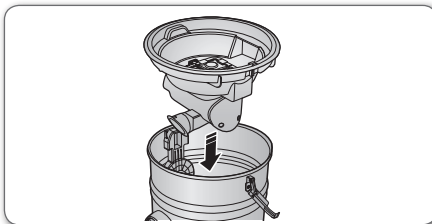

5. Assemble the dust cover properly.

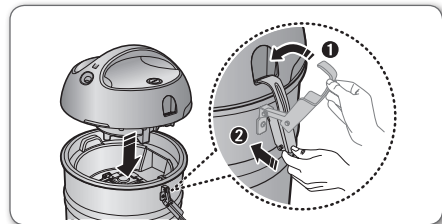


6. Assemble the upper body and lock the body clamber at both side.

CHECK FILTER INDICATOR

If the indicator turns to yellow color while you are cleaning, the dust pack is required to be cleaned.



If the indicator continues to display yellow color even after cleaning the dust pack, turn the vacuum cleaner off and check if there is any clogging in the hose, tube, floor nozzle or inlet of the dust cover.

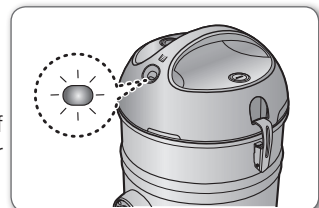


CLEANING THE DUST PACK




When to clean the dust pack


- When suction is noticeably reduced continuously.
- When the sponge is heavily polluted.

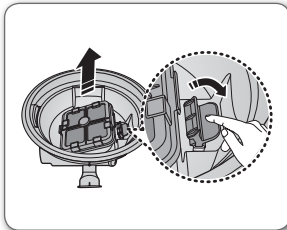


1. Pull the lever and disassemble the dust pack.

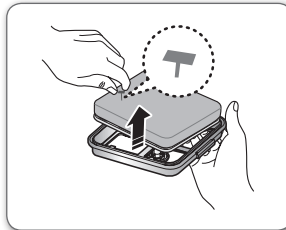


2. Pull the lever and disassemble the dust pack.

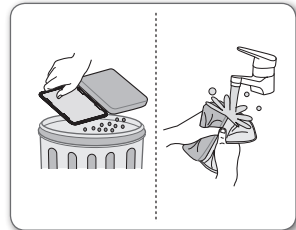


3. Wash the sponge and the filter with water.

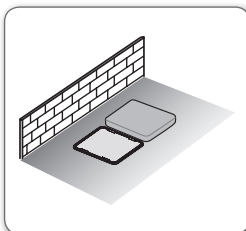

4. Let the sponge and filter dry in the shade for more than 12 hours.

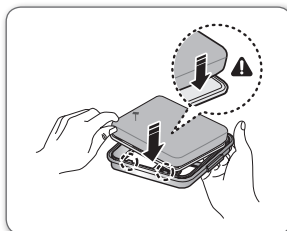

5. Put the filter and sponge into the filter cover carefully

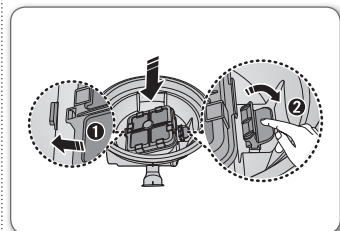

6. Assemble the dust pack after pulling the lever and insert the dust pack properly.



Make sure that the dust pack filter is changed once a year. If you use a vacuum cleaner very often, resource filter can be reduced. In this case it is recommended to change the filter with greater frequency.




Try to keep the dust pack clean constantly. Regularly check its condition. Ignoring this requirement can lead to motor and body overheating, failure and reduce the service life of the appliance.

maintain tools and filter

MAINTAIN TOOLS


2-step brush

- Remove waste matter completely if the inlet is blocked.

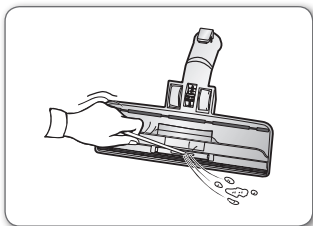


Pipe (Optional)

- To check for blockages, separate the telescopic pipe and adjust to shorten. This allows for easier removal of waste clogging the tube.

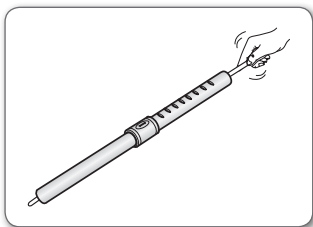

POWER CORD

After cleaning, wind the power cord and hang it on the hanger.

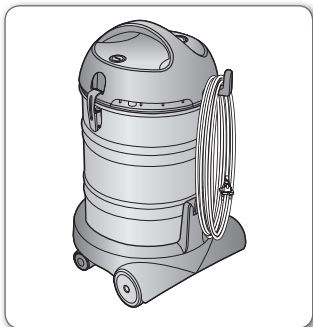


DUST BIN



WARNING

Do not give any impact to the dust bin.
The dust bin can be dented by external impact.

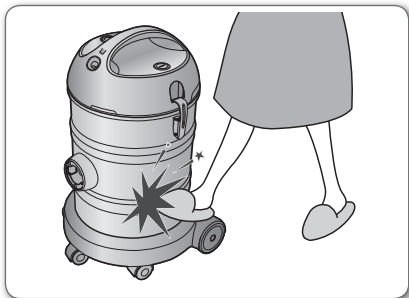

troubleshooting

| PROBLEM | SOLUTION |
|---|---|
| Motor downs and does not start. | <ul style="list-style-type: none">• Check cable, plug and socket.• Leave to cool. |
| Suction force is gradually decreasing. | <ul style="list-style-type: none">• Check for blockage and remove. |
| Vacuum cleaner downs, does not pick up dirt | <ul style="list-style-type: none">• Check hose and replace if required. |
| Low or decreasing suction. | <ul style="list-style-type: none">• Please check filters. If required clean it as illustrated in the instruction. If filters are out of conditions, change them to new one. |
| Body overheating | <ul style="list-style-type: none">• Please check filters. If required clean it as illustrated in the instruction. |
| Unpleasant smell during vacuuming | <ul style="list-style-type: none">• Please note that there may be a slight smell during vacuuming when the cleaner is new (4-5 days). |





لأي أسئلة لها علاقة بمنتجات سَامْسُونج يُرجى الإتصال بمركز خدمة عملاء شركة سَامْسُونج

| Web Site | Customer Care Center ☎ | Country |
|--|------------------------|---------|
| www.samsung.com | 800-SAMSUNG(726-7864) | U.A.E |
| www.samsung.com | 8000-4726 | BAHRAIN |

استكشاف الأخطاء وإصلاحها


| المشكلة | الحل |
|---|---|
| تعطل الموتور وعدم إمكانية بدء العمل. | <ul style="list-style-type: none"> افحص الكبل والقابس والمقبس. اتركه حتى يبرد. |
| تناقص قوة الشفط تدريجياً. | <ul style="list-style-type: none"> افحص ما إذا كان يوجد انسداد وقم بإزالته. |
| تعطل المكنسة الكهربائية وعدم التقاطها للأوساخ | <ul style="list-style-type: none"> افحص الخرطوم واستبدله إذا لزم الأمر. |
| تناقص الشفط أو ضعفه. | <ul style="list-style-type: none"> الرجاء فحص المرشحات. إذا لزم الأمر. قم بتنظيفها كما هو موضح في الإرشادات. إذا كانت المرشحات ليست بحالة جيدة استبدلها بمرشحات جديدة. |
| حدوث سخونة زائدة في جسم المكنسة | <ul style="list-style-type: none"> الرجاء فحص المرشحات. إذا لزم الأمر. قم بتنظيفها كما هو موضح في الإرشادات. |
| حدوث رائحة كريهة أثناء استخدام المكنسة الكهربائية | <ul style="list-style-type: none"> الرجاء الانتباه إلى احتمالية وجود رائحة بسيطة عند استخدام مكنسة كهربائية جديدة تم شراؤها منذ (5-4 أيام). |

صيانة الأدوات والمرشح

صيانة الأدوات


الفرشاة المزودة

- قم بإزالة أية مواد متبقية تماما إذا كان المنفذ مسدودًا.

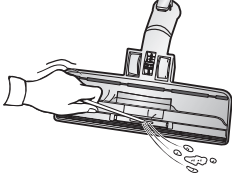


الأنبوب (اختياري)

- لفحص الانسدادات، افصل الأنبوب المتداخل و قم بضغطه على طول قصير. ذلك يتيح تسهيل إزالة الأشياء العالقة المتبقية في الأنبوب.

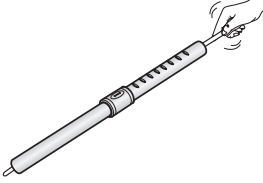


سلك الطاقة

بعد التنظيف، قم بلف سلك الطاقة وتعليقه في الحماله.

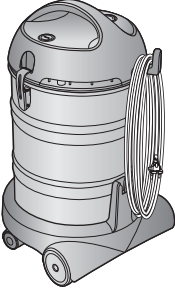

حاوية الأتربة

لا تُعرض حاوية الأتربة لأية صدمة. قد تتعرض حاوية الأتربة إلى الانبعاج بسبب أية صدمة خارجية.

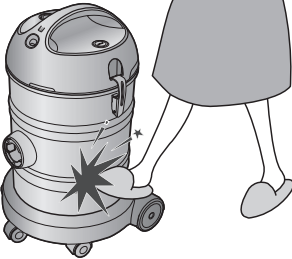





تنظيف كيس الأتربة

متى ينبغي تنظيف كيس الأتربة


- في حالة استمرار تناقص قوة الشفط بشكل ملحوظ.
- في حالة تلوث الإسفنجة بشكل كبير.

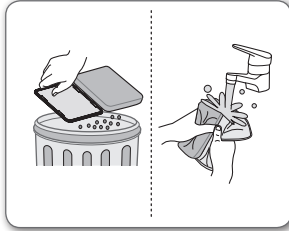


٣. قم بغسل الإسفنجة والمرشح بالمياه.

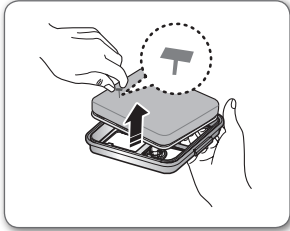


٢. اجذب الذراع ثم قم بفك كيس الأتربة.

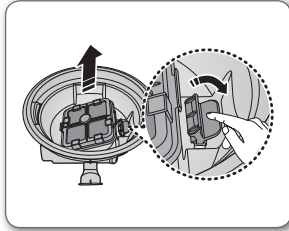


١. اجذب الذراع ثم قم بفك كيس الأتربة.

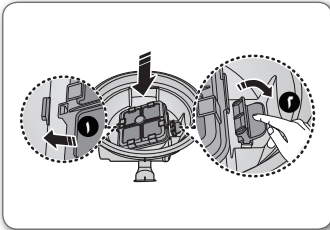

١. قم بتركيب كيس الأتربة بعد جذب الذراع وأدخل كيس الأتربة بشكل سليم.

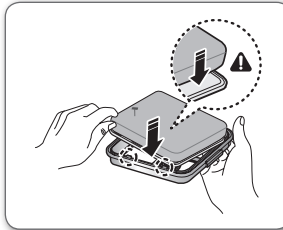

٥. ضع المرشح والإسفنجة في غطاء المرشح بعناية

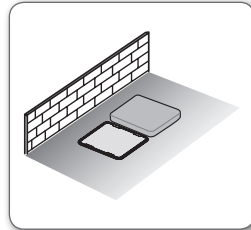

٤. اترك الإسفنجة والمرشح في الظل لأكثر من ١٢ ساعة حتى جف.

تأكد من تغيير مرشح كيس الأتربة مرة واحدة كل عام. إذا كنت تستخدم المكينة الكهربائية باستمرار، قد يتضاءل المرشح المصدر. في هذه الحالة من المستحسن تغييره بمرشح بتردد أعلى.




حاول إبقاء كيس الأتربة نظيف بشكل مستمر. وافحص حالته بانتظام. قد يؤدي إهمال هذا المتطلب إلى حدوث سخونة زائدة في الموتور وجسم المكينة وفشل وقصر في مدة خدمة الجهاز.




صيانة الأدوات والمرشح


تفريغ حاوية الأتربة

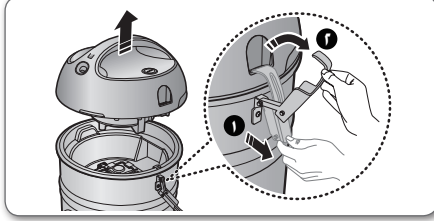


٢. قم بإقفال مشبك جسم المكينة بكلتا الجانبين ثم ارفع الجزء العلوي من الجسم لفكه من خزان الأتربة.

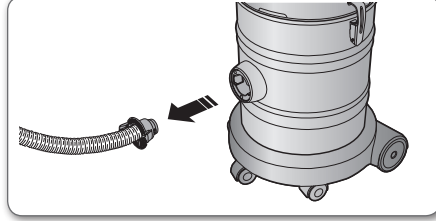


١. قم بفك مشبك خرطوم الشفط.

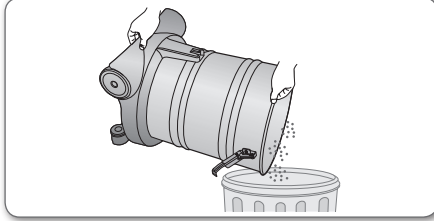


٤. تخلص من المواد الترابية.

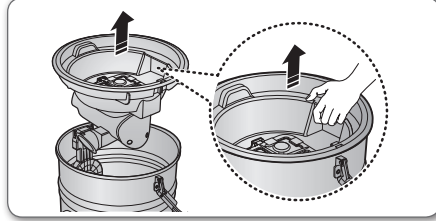

٣. ارفع غطاء الأتربة لفتحه ثم ضعه بعناية. الرجاء الانتباه لسقوط الأتربة من غطاء الأتربة.

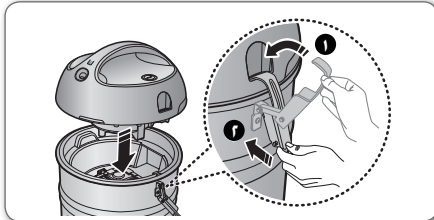


٦. قم بتركيب الجزء العلوي من جسم المكينة ثم قم بإقفال مشبك الجسم بكلتا الجانبين.

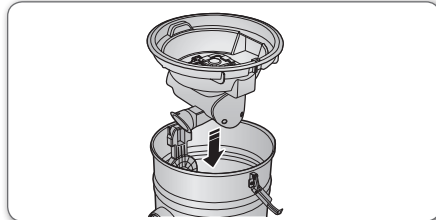

٥. قم بتركيب غطاء الأتربة بشكل سليم.

افحص مؤشر المرشح

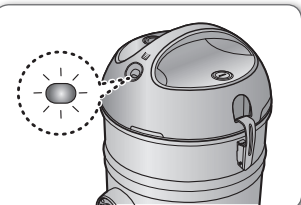


في حالة خول المؤشر إلى اللون الأصفر أثناء التنظيف. فهذا يعني أن كيس الأتربة بحاجة إلى التنظيف.


في حالة استمرار عرض المؤشر للون الأصفر حتى بعد تنظيف كيس الأتربة. قم بإيقاف تشغيل المكينة الكهربائية وافحص ما إذا كانت هناك أي أشياء عالقة في الخرطوم أو الأنبوب أو خرطوم الأرضية أو منفذ غطاء الأتربة.



- لاستخدام أداة تنظيف الأتربة، ادفع الملحق إلى نهاية مقبض الخرطوم.

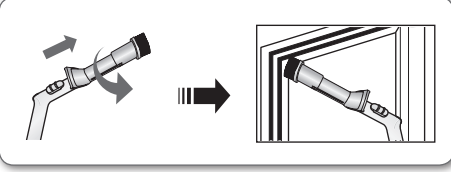


- لاستخدام أداة تنظيف المفروشات المنجدة، ادفع الملحق إلى نهاية مقبض الخرطوم.

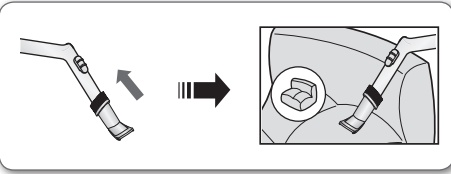


الأنبوب (اختياري)

- قم بضبط طول الأنبوب المتداخل عن طريق خريك زر التحكم في الطول الموجود بوسط الأنبوب المتداخل للخلف وللأمام.

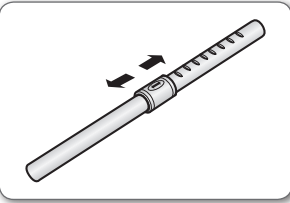


استخدام دافع الهواء

١. انزع الخرطوم من جسم الكنسة.
٢. قم بتوصيل مشبك الخرطوم بفتحة الهواء.
٣. أدر مشبك الخرطوم في اتجاه عقارب الساعة وقم بإقفال المشبك بشكل سليم.

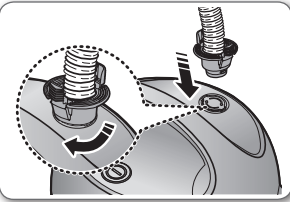


- لاستخدام دافع الهواء، قم بفك الأنبوب والفرشاة.

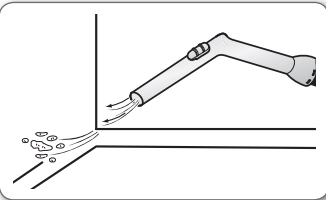

تشغيل الكنسة

التحكم في الطاقة

- الجسم

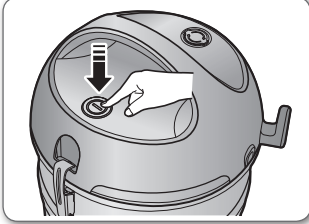


اضغط على زر التحكم في الطاقة بشكل متكرر لتحديد الوضع الصحيح.
(تشغيل ↔ إيقاف تشغيل)

يقوم زر التحكم في الطاقة بتشغيل الكنسة الكهربائية أو إيقافها.




- الخرطوم

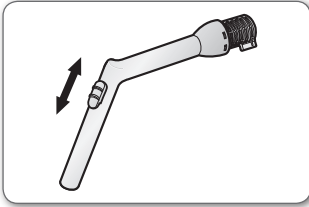

لتقليل قوة الشفط لتنظيف الستائر والسجاد الصغير والأقمشة الخفيفة
الأخرى. اسحب هواء الصنبور حتى يتم فتح الفتحة.

- الفرشاة

خرطوم الأرضية

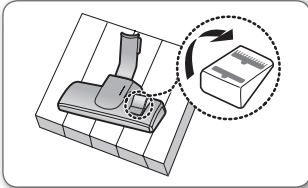

الاستخدام على السيراميك أو الأرضية




الاستخدام على السجاد

استخدام الملحق

الملحق


• ادفع الملحق إلى نهاية مقبض الخرطوم.

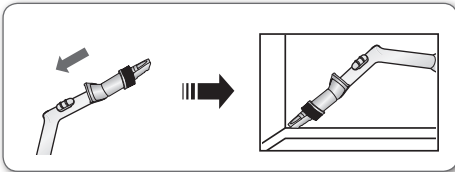


جميع الكنسة

جميع الكنسة


١. جميع الكنسة

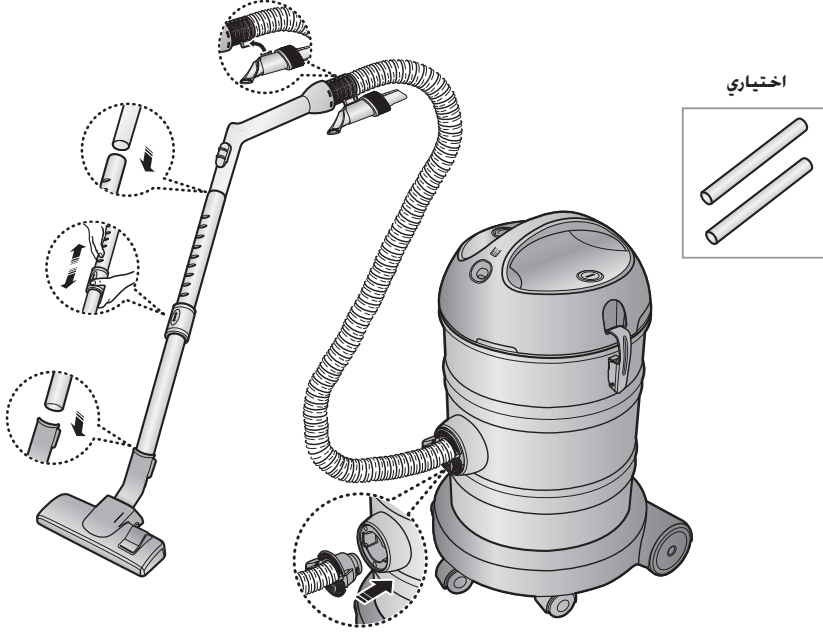

• قد تختلف الميزات حسب الطراز.

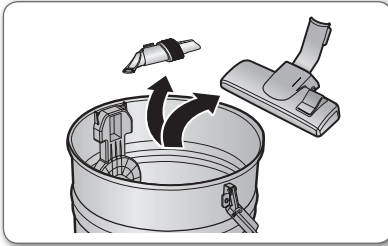

• قبل الشروع في استخدام الكنسة الكهربائية، أخرج الفرشاة والمنظف والمخلق من حاوية الأتربة.

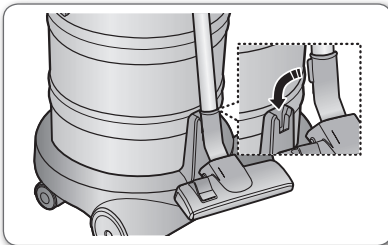

• بالنسبة للتخزين، قم بتثبيت خرطوم الأرضية.



| | |
|--------------|----|
| جميع المكنسة | ٠٥ |
|--------------|----|

٠٥

| | |
|---------------------|----|
| تشغيل المكنسة | ٠٦ |
| التحكم في الطاقة | ٠٦ |
| استخدام الملحق | ٠٦ |
| تفريغ حاوية الأتربة | ٠٨ |
| افحص مؤشر المرشح | ٠٨ |
| تنظيف كيس الأتربة | ٠٩ |
| صيانة الأدوات | ١٠ |
| سلك الطاقة | ١٠ |
| حاوية الأتربة | ١٠ |

٠٦

| | |
|--------------------------|----|
| استكشاف الأخطاء وإصلاحها | ١١ |
|--------------------------|----|

١١

معلومات السلامة

احتياطات سلامة هامة

١. اقرأ كافة الإرشادات بعناية.
قبل الشروع في التشغيل، تأكد أن الجهد الكهربائي لمصدر الكهرباء هو نفسه الموضح على لوحة التقدير الموجودة بالجزء الجانبي من المكنسة الكهربائية.
٢. تحذير: لا تستخدم المكنسة الكهربائية عندما تكون السجادة أو الأرضية مبتلة.
جنب استخدامها لشطف المياه.
٣. يُعد الاهتمام الوثيق أمرًا ضروريًا عندما تكون المكنسة الكهربائية قيد الاستخدام من قبل الأطفال أو بالقرب منهم.
لا تسمح باستخدام المكنسة الكهربائية كلعبة.
لا تسمح للمكنسة الكهربائية بالعمل دون مراقبة في أي وقت.
استخدم المكنسة الكهربائية للغرض المخصص لها فقط كما هو موضح في هذه الإرشادات.
٤. لا تستخدم المكنسة الكهربائية بدون حاوية الأتربة.
افرج حاوية الأتربة قبل امتلائها للحفاظ على كفاءتها.
٥. لا تستخدم المكنسة الكهربائية لالتقاط أعواد الثقاب أو الرماد الساخن أو أعقاب السجائر.
احفظ المكنسة الكهربائية بعيدًا عن المواقد ومصادر الحرارة الأخرى. قد تتسبب الحرارة في تلف الأجزاء البلاستيكية للوحدة وتغيير ألوانها. وكذلك تجنب استخدام المكنسة الكهربائية في التقاط السكر والملح والأتربة الناتجة عن مواد البناء (على سبيل الأسمنت ورقاقات المعدن وما إلى ذلك).
٦. تجنب التقاط الأشياء الصلبة والحادة بالمكنسة الكهربائية حيث أنها قد تتسبب في تلف أجزاء المكنسة. لا تقف على أجزاء الخرطوم.
لا تضع أي شيء على الخرطوم. لا تقم بسد منفذ الشفط أو الطرد.
٧. قم بإيقاف تشغيل المكنسة الكهربائية من المفتاح الموجود بالجهاز قبل نزع القابض من مأخذ التيار الكهربائي. انزع القابض من مأخذ التيار الكهربائي قبل تفريغ حاوية الأتربة. لتجنب حدوث تلف. الرجاء نزع القابض عن طريق الإمساك بالقابض نفسه وليس بسحب السلك.
٨. لم يتم تصميم هذا الجهاز للاستخدام من قبل أشخاص (بما في ذلك الأطفال) من ذوي القدرات البدنية أو الحسية أو العقلية المحدودة أو غير الملمين بالخبرة والمعرفة المطلوبة إلا إذا تم ذلك تحت إشراف أو توجيه شخص مسؤول عن الحفاظ على سلامتهم.
٩. ينبغي مراقبة الأطفال للتأكد من عدم عبثهم بالجهاز.
١٠. يجب إزالة القابض من مأخذ التيار الكهربائي قبل تنظيف الجهاز أو صيانته.
١١. من المستحسن استخدام وصلة سلكية.
١٢. في حالة عدم عمل المكنسة الكهربائية بشكل سليم، قم بإيقاف تشغيل مصدر الطاقة واتصل بأحد وكلاء الخدمة المعتمدين.
١٣. في حالة تلف سلك مصدر التيار، يجب استبداله من الجهة المُصنّعة أو وكيل الخدمة التابع لها أو أي شخص مؤهل على نحو مماثل لتجنب حدوث أخطار.
١٤. لا تقم بحمل المكنسة الكهربائية من خلال الإمساك بالخرطوم. استخدم المقبض الموجود بمجموعة أجزاء المكنسة الكهربائية.
١٥. انزع قابض المكنسة الكهربائية عندما تكون غير مستخدمة. قم بإيقاف تشغيل مفتاح الطاقة قبل نزع القابض.





تحذير



هذه المكنسة الكهربائية مصممة للاستخدام المنزلي المحلي فقط.
لا تستخدم هذه المكنسة الكهربائية في تنظيف مخلفات أو حطام البناء.
لا تستخدم هذه المكنسة الكهربائية في حالة إزالة أي من المرشحات حيث أن ذلك قد يتسبب في حدوث تلف للمكونات الداخلية وإلغاء الضمان الخاص بك.

معلومات السلامة




معلومات السلامة

- قبل تشغيل الجهاز، الرجاء قراءة هذا الدليل بعناية والاحتفاظ به للرجوع إليه فيما بعد. 
- نظراً لأن إرشادات التشغيل التالية تقوم بتغطية مختلف الطرازات، قد تختلف خصائص المكنسة الكهربائية لديك اختلافاً طفيفاً عن تلك الأنواع الموصوفة في هذا الدليل. 

الرموز المستخدمة في التنبيه/التحذير

| | |
|--|--|
| يشير إلى وجود خطر قد يؤدي إلى حدوث حالة وفاة أو إصابة خطيرة. |  تحذير |
| يشير إلى وجود خطر حدوث إصابة شخصية أو تلف لمادة ما. |  التنبيه |

الرموز الأخرى المستخدمة

| | |
|--|---|
| يقدم ما لا يجب عليك فعله. |  |
| يقدم ما يجب عليك اتباعه. |  |
| يشير إلى أنه يجب عليك نزع قابس التيار الكهربائي من المقبس. |  |

المكنسة الكهربائيه دليل المستخدم

Planet First 100%
Recycled Paper

تم إنتاج هذا الدليل باستخدام ورق مُعاد تدويره بنسبة 100%.

اللغة العربية

* قبل الشروع في تشغيل هذه الوحدة، الرجاء قراءة الإرشادات بعناية.
* للاستخدام الداخلي فقط.

إمكانات هائلة

شكرًا لشراكتك أحد منتجات Samsung.
للحصول على مستوى كامل من الخدمة،
الرجاء تسجيل المنتج لديك على الموقع
www.samsung.com/register

SAMSUNG