


WA90F4



Washing Machine user manual

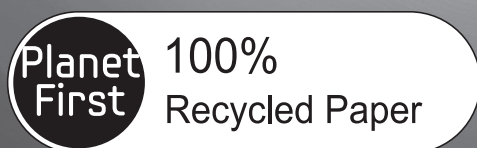

This manual is made with 100% recycled paper.

imagine the possibilities

Thank you for purchasing a Samsung product.

To receive a more complete service,
please register your product at
www.samsung.com/register

Code No. DC68-02723G-02_EN



features

- **Rust-Proof Fiber Body**

Made of durable material with rust-proof fiber body, it can endure humidity for an extended time.

- **Diamond Drum**

The diamond shaped drum creates a high water pressure, removing dirt from the laundry effectively. The diamond drum minimizes fabric damage extending the lifetime of the fabric. The glittering inner tube is both beautiful and powerful in the wash effect it creates.

- **Air Turbo Drying System**

- Air Turbo technology spins hard and fast so you can spend less time drying.
- Time Saving AIR TURBO saves your time, ensuring your clothes are dried 30%-40% faster than line drying alone. Especially during the rainy season and in high-humid weather, laundry that once took days to drip-dry, such as heavy jeans, bulky sweaters, and thick blankets are dried more rapidly.
- Easy-to-iron AIR TURBO is perfect for delicates and clothes made of synthetic fabrics. No more hanging and waiting. Simply iron straight-out-of-the washer, since AIR TURBO eliminates just enough moisture to keep clothes adequately damp for ironing.

- **Fuzzy Control**

Fuzzy control operates with best washing program by sensing the washload like artificial intelligence.

- **Double Storm Pulsator- Less Tangle, Better Washing Performance**

- Tangle Free - Multi-dimensional water currents help clothes stay tangle free.
- Water current technology designed specifically to enhance washing performance. The power of tornado-like multi-dimensional water currents guarantee excellent washing performance.

- **Magic Filter**

This unique magic Filter ensures that all the lint inside the tub is captured for top quality filtering results to deliver consistently effective cleaning results.

- **CHILD-LOCK Function**

This is a device to protect children from being accidentally hurt while playing with the washer.(For more information, see page 10)

safety instructions

Please note that the following precautions for safety intend to prevent unpredictable danger and damage by helping the proper use in safety.

When using hot water in washing, please make sure that the water should not exceed 50°C.

- Plastic parts may be deformed or damaged, and an electric shock or a fire may take place.

WARNING



There might be serious injury or fatal accident when you violate this instruction.

- If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not pull the cord off or touch it with moist hands.
 - An electric shock or a fire may take place.
- Do not bend the power supply cord by force or press it with heavy things.
 - An electric shock or a fire may take place.
- Do not install the washer nearby electric implement or don't put a candle light or cigarette light on the washer.
 - A fire may take place.
- During operation, do not put your hands or metal materials under the washer.
 - You may be hurt by spinning board beneath the washer.
- Stay away from the washer when the bottom of the washer sinks into the water.
 - There might be an electric shock. Please wait until the water drains out completely.
- Do not put laundry stained with gasoline, benzene, or alcohol in the washer, and keep the materials away from the washer.
 - An explosion or a fire may take place.
- During spinning, don't put your hand in the spinning tub.
 - It may hurt your hands. If it does not stop within 15 seconds after you open the lid, call service agent immediately.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.

Young children should be supervised to ensure that they do not play with the appliance.
- This appliance has to be connected to the plug endurable to proper power consumption.
- This appliance has to be positioned so that the plug is accessible after installation.
- No user-serviceable parts inside. Refer any servicing to qualified service personnel.
 - Otherwise this may cause a mechanical error, electric shock, fire or physical damage.
 - The product warranty does not cover problems resulting from disassembling the product.
- Do not use this product for business purposes.
- For washing machines with ventilation openings in the base, that a carpet must not obstruct the openings.

safety instructions

CAUTIONS



There might be a slight injury or damage when you violate this instruction.

- Don't install it in the area with moisture or outdoor where it has rain or snow.
 - An electric shock or a fire may take place.
- Please unplug the power supply cord when you do not use it.
 - An electric shock or a fire may take place.
- If there is dust or water on the power supply plug and its connected part, please remove it completely.
 - An electric shock or a fire may take place.
- Do not make your kids look into the inside of the washer.
 - If your kid falls into the washer, his life could be in danger.
- Ventilate immediately without touching the power plug if gas is leaking.
 - An electric shock or a fire may take place if it catches flame.
- If the washer makes strange noise, smell or smoke, unplug it promptly and call service agent.
 - An electric shock or a fire may take place.
- When cleaning, don't spray water to the parts of the washer directly.
 - It may make its life span shorten.
Also an electric shock or fire may take place.
- Don't use several appliances together with an outlet.
 - A fire may take place due to unusual heat.
- Don't press the button with an awl or pin.
 - An electric shock or a fire may take place.
- Use the new hose-sets and old hose-sets should not be reused.
- If the damage is found on the current cord in use, it should be replaced by manufacturer, service center or authorized person in order to avoid the risk.
- Connect the grounding wire to the shell plate, and bury it under at least 25cm of earth: alternatively, connect the ground wire to the appropriate pin on a properly grounded power receptacle. Never connect the wire to a telephone line, lightning rod, or gas pipe.

contents

SETTING UP YOUR WASHER	6	Description of part
	9	How to wash automatically depends on the laundry
	10	Control Panel

MANUAL FUNCTIONS	13	Manual functions
-------------------------	-----------	------------------

INSTALLATION & MAINTENANCE	14	Environment
	14	Levelling
	15	Connecting the water supply hose
	16	Assembling the rat protection panel
	16	How to connect the drain hose
	18	How to put the detergent in
	18	How to add the fabric softener
	18	Water supply connector filter
	19	Cleaning the filter
	19	Cleaning the pump filter

TROUBLESHOOTING	20	Troubleshooting
------------------------	-----------	-----------------

WASHING MACHINE WON'T WORK?	21	Washing machine won't work?
------------------------------------	-----------	-----------------------------


SPECIFICATION	23	Specification
----------------------	-----------	---------------

setting up your washer

DESCRIPTION OF PART

The User's Manual is for common use.

Make use of the User's Manual depending upon your washing machine model.

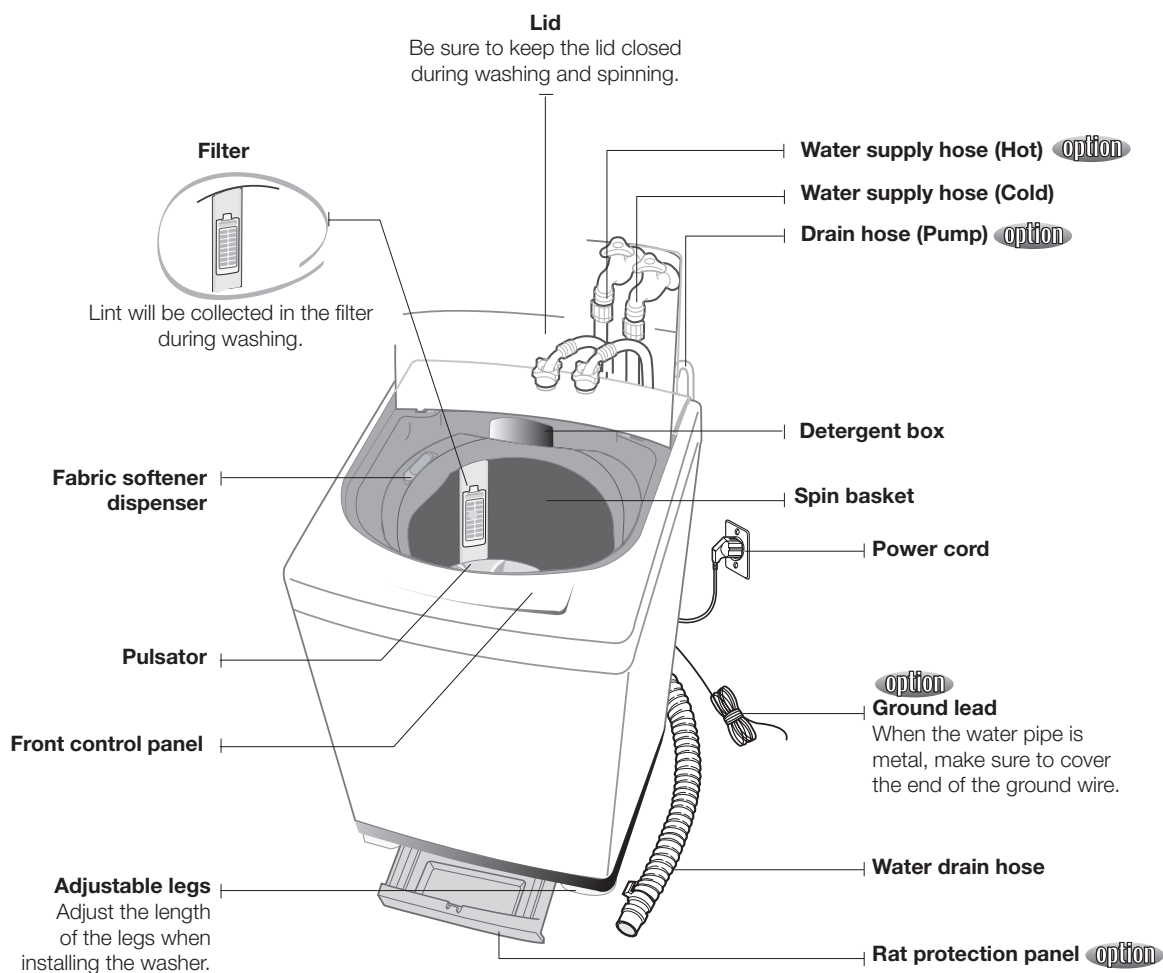

CHECKING BEFORE WASHING AND CARING FOR GARMENTS

Must follow the checkpoints in order to avoid machine problems or damages on garments.

- If the below problems are caused by customer's faults, separate service fee will be charged.

Checkpoints Before Starting Washing

Check if the clothes are bleaching or not.

- Add liquid detergent to a white towel and the garment where you can't notice well. Then, rub together strongly. Check if the color transferred to the towel.
- Be careful for scarves and imported clothes since they are easily discoloring.
- Check for stains or partial dirt.
- If stains are found, use the towel wet with detergents to rub on in a single direction.
- Before washing, the sleeves, collar, dress hem and pockets are pre-treated by brushing with detergents.

The wrinkle-processed clothes made of wool are specially treated by fixing them with threads before washing. The threads shall be removed after the clothes are dried.

Not washable laundry

Clothes those are easily transformable even by soaking in water.

- Even by soaking in water, neckties, brassieres, jackets, suits and coats can be easily transformed like shrinking and discoloring on the garment surfaces because they are mostly made of rayon, polynosic, cuff and their blend fabrics.
- The wrinkle-processed, embossed, or resin processed products are easy to transform even by soaking in water.
- Easily discoloring products made of cotton and wool, wrinkled silk, leather products, leather accessory, leather ornamented clothes and its accessory.
- Don't wash those clothes without handling guideline or material indication tag.

About Detergent

- When detergents are not dissolving well, use warm water (about 40°C) to dissolve the detergent.



CAUTION


- Use an appropriate amount.
- Even if excess amount of detergent is used, there is not much difference in washing result. It may cause damages to the garments because rinsing is not enough.
- The bleaching agent may cause damages to garments since it is strong alkali.
- Do sufficient rinsing because the powder detergent is easily remained on the garments causing bad odors.
- If too much detergent is used or cold water is used, it doesn't dissolve completely and remain on the garments, hose or spin basket, causing contamination on clothes.
- In case of reserved washing, detergents must be put in the detergent box. If the powder detergents are spread on laundry directly, it may cause discoloration.

setting up your washer

CARING FOR CLOTHES BEFORE WASHING

Take out personal belongings from pockets.

- Caution, Check the pockets! Hairpins and coins cause damages to clothes and washing machine. They make noise and problems to the machine. Must check the pocket.



If pants zippers are open while washing, the spin basket may be damaged. The zipper should be closed and fixed with a string before washing.

- Metal on the clothing may cause damage to the clothes and the tub.
- Turn clothing with buttons and embroidered clothes inside out the before washing them.
- Clothing with long strings may become entangled with other clothes, and may cause damage to the clothing. Be sure to fix the strings before washing.



Waterproof clothes (Ski Wear, Diaper Covers, Footboards) are not allowed for washing.

- This may cause the laundry to be ejected or cause the washing machine to vibrate abnormally, which may result in personal injury or damage the washing machine, the floor or the clothing. (Diapers, waterproof clothing, raincoats, umbrella covers, skiwear, car cover sheets, and sleeping bags, etc.).
- When the tub rotates, water may become trapped in the waterproof clothing or fabric and can collect in a corner, causing abnormal vibrations. In addition, the laundry rises and may be ejected and cause personal injury.

Shake the dirt or soils from clothes.


- Soil and sands may rub delicate garments to cause damages and the washing result may be unsatisfactory.

Do pre-washing for white socks, sleeves, and collars before the main washing.

- For stains and dirt on collars, sleeves, hems, and pockets, apply some detergent to them and apply it lightly with a brush before washing.
- Use powdered or liquid detergent. Do not use soap as the tub may become dirty from the dirt on it.


Turn inside out for those nappy clothes before washing.

- If clothes have too much foreign matter, separate them for washing. Other clothes may pick up those dirty matters (dirt, thread).
- Wash black colored clothes and cotton towels separately. If they are washed together, towels may pick up dirty matters. Check before washing.

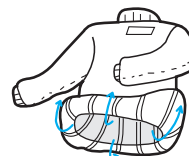

Cashmilon and those garments having big volume and lightweight (eg. Lasedecorated clothes, lingerie, nylon stocking, synthetic fabrics etc.) may rise and cause damages to the clothes and problems to the machine. Use the laundry net or wash them separately.

- Must put those long stringed clothes, lase-worked clothes, bed cover sheet, wool clothes into a laundry net before washing.
- Put delicate clothes in the laundry net.
- Use only those commercial laundry net for washing.

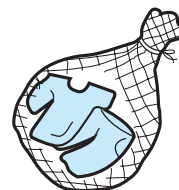

Curtains, floating garments or blue jeans shall be pressed not to float on the water.

- If they are floated on the water, press Start/Pause button to stop and press them to sock in the water. If the washing goes on with clothes floating on the water, it may cause damages to the clothes and the washing machine as well as unsatisfactory washing result.

HOW TO WASH AUTOMATICALLY DEPENDS ON THE LAUNDRY

Before starting washing, check the following;

- Connect the water supply hose to the water tap. Leave a tap open. Plug the power cord in. Make sure to lay down the drain hose.

Washing for the first time

Before washing clothes for the first time, you must run a complete cycle without clothes.

To do this:

1. Press the **Power** button.
2. Open the detergent drawer and insert a little detergent.
3. Turn on the water supply to the washing machine.
4. Press the **Start/Pause** button.
This will remove any water from the manufacturer's test run remaining in the machine.

Special notes!


Automatic Sensing Function

- At every program (except Clean tub, wool program) the amount of laundry is automatically sensed and then appropriate water level, washing time, rinsing cycle, and spinning time are automatically selected for automatic washing.
- After the power is on, a program is selected and **Start/Pause** button is pressed. Then, the washing board starts spinning without water. This action senses how much laundry is in the washing basket, not a machine problem. After this sensing process, water supplies automatically.

Adding Detergent and Softener

- It senses the amount of laundry and indicates the water level and amount of detergent. Then, it starts water supply right away.
- During the water supply, it is possible to open the detergent box and add detergent. However, it is better to press **Start/Pause** button to stop water supply and add detergent. Close the lid and press **Start/Pause** button again. This way is much more convenient.
- If the softener is inserted in the softener dispenser, it automatically adds in at the last rinsing cycle.


Put the laundry into the washer and add detergent, too.

- Be careful not to overload. Use right detergent for the fabrics you are washing.
- 
 - If the lid is open while running, the washing machine is stopped automatically for safety. (Except, water supply continues while the lid is open.)
 - When hot water is selected, both cold and hot water are supplied for the first 20 seconds in order to protect the clothes.
 - Possible to control the washing time, rinsing cycle, and spinning time at every program during the washing.

setting up your washer

CONTROL PANEL

For more details, see control panel of your washing machine.

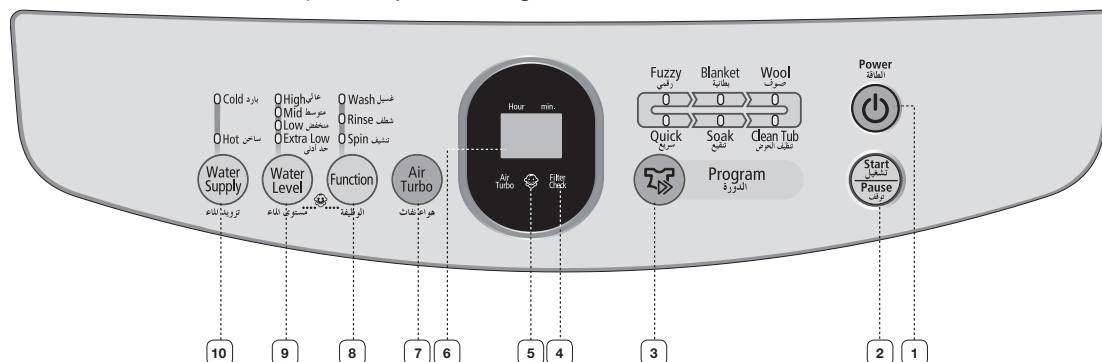

1	POWER BUTTON	Press this button once to operate. Press it again to turn the power off.
2	START/PAUSE BUTTON	Use to pause and restart the operation. To change the washing procedure during an operation, press this button to stop, and again to restart after changing the procedure.
3	PROGRAM SELECT BUTTON	Each time the button is pressed, the washing program changes; Fuzzy → blanket → wool → quick → soak → clean tub
4	FILTER CHECK	When the wash is finished, the warning lamp lights up on the filter check. When the door is opened, it turns off. (This is not a fault.) When the Magic filter is clogged, foreign materials may start sticking to the laundry. To ensure a clean wash, please remove foreign materials from the filter after every wash.
5	CHILD-LOCK FUNCTION	This is a device to protect children from being accidentally hurt while playing with the washer. <ul style="list-style-type: none"> How to start the Child-Lock function: <ul style="list-style-type: none"> Press the "Power" button to go to an initial washing mode. By pressing "Start/Pause" button, you start washing and in case Child Lock function is needed during the laundry Press both the "Water Level" and "Function" buttons at the same times.(for 3 seconds) (Note: You cannot perform the function without the "Power" button on.) To release the function of Child-Lock: In case the "Child-Lock" is programmed, press both the "Water Level" and "Function" buttons at the same time.
6	REMAINING TIME, DELAY START TIME, ERROR DISPLAY	Displays the remaining wash time. Displays the reserved delay start time. Displays the error state if a problem occurs in the washing machine so that you can take action.
7	AIR TURBO BUTTON	Press this button to speed dry your laundry. This function can only be selected if a spin cycle is set. You can add this function to all program except for the Wool program.
8	FUNCTION BUTTON	With every press of this button, the function changes; Wash,Rinse,Spin → Wash → Rinse → Spin → Wash&Rinse → Rinse&Spin → Wash,Rinse,Spin
9	WATER LEVEL BUTTON	The water level is automatically adjusted. However, you can select the water level manually by pressing this button. Mid → High → Mid → Low → Extra low → Low → Mid
10	WATER SUPPLY BUTTON <small>option</small>	Each time this button is pressed, the type of water is selected as follows, Cold → Cold + Hot → Hot → Cold

10_setting up your washer

FUZZY PROGRAM

Selects the best washing program automatically.


1. Press the **Power** Button to “On”.
2. Press the **Start/Pause** button.
Water level is selected automatically. Washing rinsing, and spinning follow. If you want to pause, press the Start/Pause button again. You can change the program when paused.
3. Close the lid.



BLANKET PROGRAM

(Big volume laundry like blanket and bed cover sheets)

1. Press the **Power** button to “On”.
2. Press the **Program** select button once.
3. Press the **Start/Pause** button.
Water level is selected automatically. Washing, rinsing, and spinning follow. If you want to pause, press the Start/Pause button again. You can change the program when paused.
4. Close the lid.
 - Fold those big volume laundry (blanket and bed cover sheets) in the following way before adding into the spin basket.
 - Do not wash the electric blanket and carpets.
 - Get a laundry net for those light and big volume laundry (eg. Cashmeres) because they might rise in the water and get damaged.

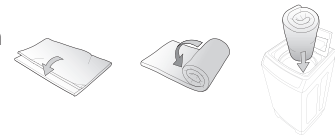

WOOL PROGRAM

Washable sweater, cardigan, delicate clothes etc.

1. Press the **Power** button to “On”.
2. Press the **Program** select button two times
3. Press the **Start/Pause** button.
Washing, rinsing, and spinning follow. If you want to pause, press the Start/Pause button again. You can change the program when paused.
4. Close the lid.
 - You can only select cold water.
 - The last spin operates lightly to prevent wrinkles.
 - Use the detergent indicated in the laundry.
 - Air turbo cannot be selected in the Wool program.



CAUTION



QUICK PROGRAM

If you want to wash those frequently used towels or less dirty laundry time.

Because washing is speedy, it is good for light or less stained laundry.

1. Press the **Power** button to “On”.
2. Press the **Program** select button three times.
3. Press the **Start/Pause** button.
Water level is selected automatically. Washing, rinsing, and spinning follow. If you want to pause, press the Start/Pause button again. You can change the program when paused.
4. Close the lid.



setting up your washer

SOAK PROGRAM

Select this function when you wish to wash your laundry by soaking it.

1. Press the **Power** button to “On”.
2. Press the **Program** select button four times
3. Press the **START/PAUSE** button and put the proper amount of detergent into tub.
4. Close the lid.



KEEPING THE TUB CLEAN

When using the machine under humid conditions for an extended time, various bacteria from the air may stick to the tub and form black dirt (fungi), causing damage to the human body. To keep the tub clean and hygienic at all times, it is recommended reading “CLEAN TUB PROGRAM” above and using only dedicated or recommended detergents to clean the tub regularly at least once every one to three months.

CLEAN TUB PROGRAM

Use this program to clean the tub. It will keep the tub clean and sanitary.

1. Press the **Power** button to “On”.
2. Press the **Program** select button five times.
3. Press the **Start/Pause** button.
4. Add a dedicated detergent and close the lid








- Never place laundry in the tub when cleaning inside the tub, as this can cause discoloration or damage to the laundry.
- When doing the laundry after cleaning the tub, you may find some impurities. These are just detergent residues and impurities after the tub cleaning. Perform the rinse cycle two to three times.
- The Soak function (20 minutes) is set automatically.
- The water level is set to Mid early on and then changed to High during the rinse.

manual functions

Possible to select the function for each program.

Ex) If you want to wash in the quick program :

Power → Select quick program → press function button once → Start/Pause button

<p>WASH ONLY</p>  <p>once</p>	<p>Press the Power button.</p> <p>Press the Function Select button once.</p> <p>Press the Start/Pause button once.</p> <p>Washing goes on for 15 minutes.</p> <p>When the Function button is pressed during washing, the wash time can be changed to between 4 and 30 minutes in duration.</p>
<p>RINSE ONLY</p>  <p>twice</p>	<p>Press the Function button twice.</p> <p>Press the Start/Pause button once.</p> <p>Rinsing goes on for 2 times.</p> <p>When the Function button is pressed during rinsing, the rinse times can be changed to between 2 to 5 times in duration.</p>
<p>SPIN ONLY</p>  <p>three times</p>	<p>Press the Function button three times.</p> <p>Press the Start/Pause button once.</p> <p>Spin drying goes on for 5 minutes.</p> <p>When the Function button is pressed during spinning, the spin time can be changed to from 1 to 9 minutes.</p>
<p>WASH AND RINSE</p>  <p>four times</p>	<p>Press the Function button four times.</p> <p>Press the Start/Pause button once.</p> <p>Detects the amount of laundry, and determines wash and rinse time period automatically.</p> <p>When the Function button is pressed during working, the rinse times can be changed to between 2 to 5 times in duration.</p>
<p>RINSE AND SPIN</p>  <p>five times</p>	<p>Press the Function button five times.</p> <p>Press the Start/Pause button once.</p> <p>Rinsing and spin drying follow.</p> <p>When the Function button is pressed during working, the rinse times can be changed to between 2 and 5 times in duration.</p>

installation & maintenance

The User's Manual is for common use.

Make use of the User's Manual depending upon your washing machine model.

ENVIRONMENT

Leave some space

Maintain at least 10cm between the washer and the wall.

Place the washer on a sturdy flat surface.

If the washer is placed on an uneven or weak surface, noise or vibration occurs. (Allowable is 1°)

Adjust the legs for even placement.

Never install the washer near water.

Do not place the washer in steamy rooms or where the washer is directly exposed to rain. Moisture may destroy the electrical insulation causing an electrical shock hazard.

Avoid direct sunlight or heaters.


As plastic and electrical components are affected by direct heat, never place the washer near furnaces, boilers, etc. Do not place under direct sunlight.

LEVELLING

- If the washer is not leveled with the ground, it makes the machine tremble more or be out of order. So, make sure that the washer is leveled properly.

SEE IF THE MACHINE IS PLACED LEVEL BY CHECKING THE POSITION OF THE WASHING TUB.

- Open the lid of the machine, pour water into the tub up to the level just below the pulsator, and adjust the legs so that the pulsator is positioned at the center of the water as shown in the figure.
- Place the machine more than 10cm away from the wall.
- Adjust the legs on feet for levelling.

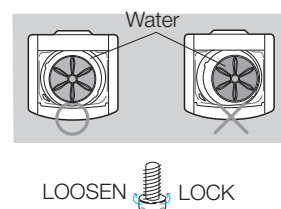


CONNECTING THE WATER SUPPLY HOSE


1. Remove the adaptor from the water supply hose.




2. First, using a "+" type screw driver, loosen the four screws on the adaptor. Next, take the adaptor and turn part(b) following the arrow for gap about 5 mm between them.

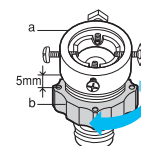

3. Connect adaptor to the water tap by tightening the screws firmly. Then, turn part(b) following the arrow and put (a) and (b) together.

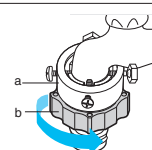


4. Connect the water supply hose to the adaptor. Pull down the part (c) of the water supply hose. When the part (c) is released, the hose is automatically connected to the adaptor making a 'click' sound.



5. Connect the other end of the water supply hose to the inlet water valve at the back of the washer. Screw the hose clockwise all the way in.

option

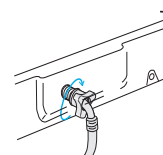


- 5-1. Connect the other end of the water supply hose to the inlet water valve at the top of the washer. Screw the hose clockwise all the way in.

option



- If the water tap is a screw type, assemble a water supply hose that fits to the tap as shown. After completing connection, if water leaks from the hose, then repeat the same steps.

option



After completing connection, if water leaks from the hose, then repeat the same steps.



Use the most conventional type of faucet for water supply.

In case the faucet is square or too big, remove the spacing ring before inserting the faucet into the adaptor.


installation & maintenance

ASSEMBLING THE RAT PROTECTION PANEL option

Tilt the washer a little and lift up the panel until it clicks, finally fix the panel with screw to the base as shown in the figure.

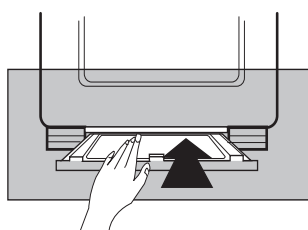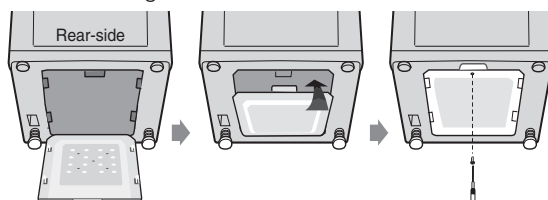


1. Insert the rat protection panel to the assembling hole on back side to the end.

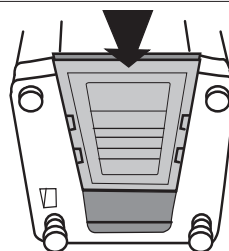


2. If you have difficulty inserting the panel lift up the washer a little and insert it.

HOW TO CONNECT THE DRAIN HOSE


IN CASE OF PUMP-DRAINED WASHER option

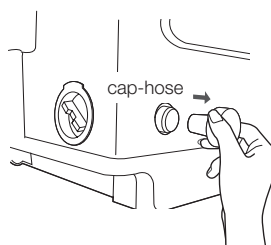


Take out the cap-hose and connect the outlet-hose.

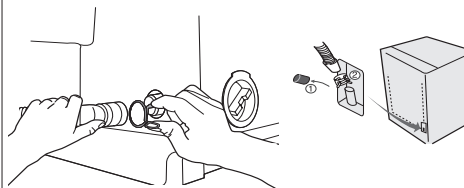

Be sure to join tightly the drain hose into the drainoutlet on the back of the machine.

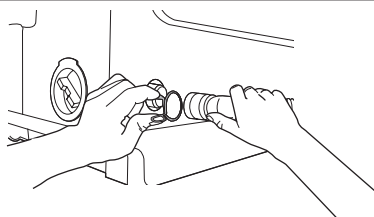

Be sure to join tightly the drain hose into the drain-outlet on the side of the machine.

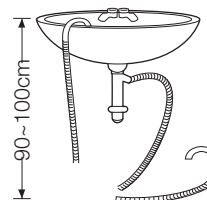


Install the drain hose in the position of about 90~100cm above the ground.

IN CASE OF GENERAL WASHER


1. After pressing the joint ring, insert to the drain hose.



2. After directing the drain hose to a drain, join to the drainoutlet of the washing machine.

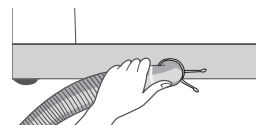


3. Be sure to join them tightly by pressing the joint ring and pushing it into the drain-outlet.
- The length of drain hose is adjustable so that you can extend the length appropriately.




HOW TO CHANGE THE DRAIN HOSE DIRECTION


- The handle of joint ring is pressed to pull out the drain hose. Change the direction of the drain hose and follow the above guideline again.

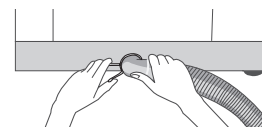


CAUTIONS WHEN INSERTING THE DRAIN HOSE

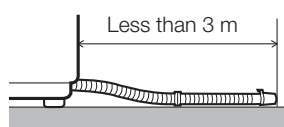


1. Don't exceed more than 3m when the drain hose is used by connecting with other hoses.

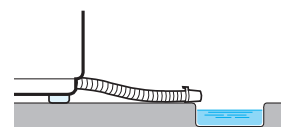

2. Be careful to drain water out at the end of the drain hose.

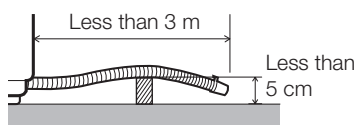

3. The doorsill shouldn't be more than 5cm.

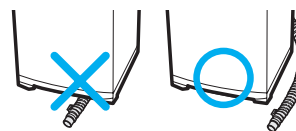


4. Don't install the drain hose underneath the wash machine.

installation & maintenance

HOW TO PUT THE DETERGENT IN


1. Open the detergent box by pulling in the direction of the arrow as shown in the figure and then put the powder detergent in the detergent box.
2. Put in one-time amount of detergent evenly so the detergent may not brim over the box.

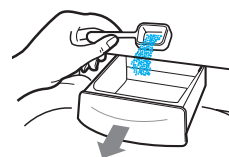

HOW TO ADD THE FABRIC SOFTENER


Slide and open the cover in the direction of the arrow, insert the rinse detergent, and slide and close it in the reverse direction.

- When a proper amount (one time does) of fabric softener is stored in the softener inlet, it is automatically put in at the last rinsing cycle.
- Do not use detergent, bleach or starch into the Softener Inlet.
- Using too much softener may produce unsatisfactory results.
- Do not open the lid during the Spin Dry cycle. If added too early, its effectiveness will decrease.
- Do not leave the softener into the Softener Dispenser for a long time. Because softener became stiff.

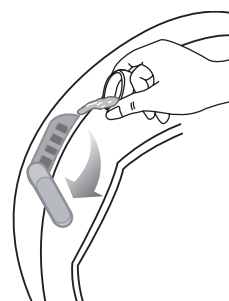

WATER SUPPLY CONNECTOR FILTER

1. Pull out the filter and wash well.

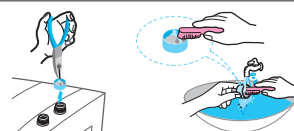

2. Pull in the filter and connect the hose to the inlet water valve tightly.




3. Check if there is a leakage.
Note to tighten up the connector.




CLEANING THE FILTER

Clean the filter net often to keep the washer clean.

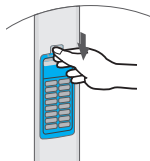

1. Push the upper part of the Magic filter and pull in.

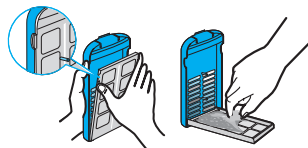

2. Open the cover as shown in the figure.






3. Clean the Magic filter.




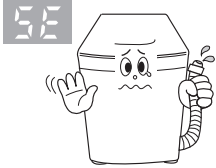
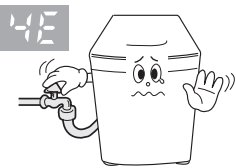
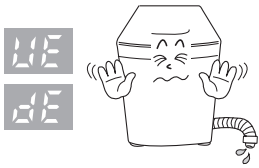

4. Close the cover and insert the lower part of the filter in the basket first and then push the filter with "click" sound.

CLEANING THE PUMP FILTER

1. Place a rag or towel under the wash filter to avoid wetting the floor, and rotate the filter counterclockwise and pull it out.
2. Remove any dirt from the filter.
3. Return the filter to its place by rotating the filter clockwise until it locks into position.

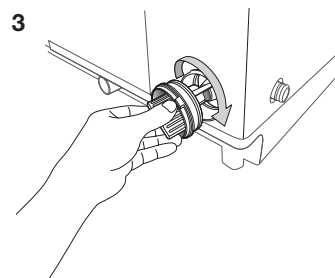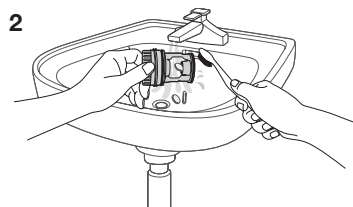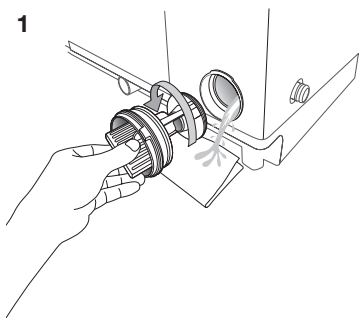

troubleshooting

PROBLEM	CHECK
Washing machine won't work	<ul style="list-style-type: none"> Is the water tap opened? Is the washer plugged in? Is the power cut off? Is there enough water? 
Water dose not drain	<ul style="list-style-type: none"> Is the drain hose down?(No pump) Is the drain hose frozen? Is the drain hose clogged? If the water dose not drain, a buzzer will sound, and the remaining time indicator will show "5E". 
Water is not supplied	<ul style="list-style-type: none"> Is the water tap opened? Is the water cut off? Is the water supply hose or hose connection clogged? Is the water tap frozen? If water supply is not finished within 1 hour or water level is not changed within 4 minutes, a buzzer will sound, and the remaining time indicator will show "4E". 
Spinning does not work	<ul style="list-style-type: none"> Is the laundry spread out evenly in the washer? In the washer set on a sturdy flat surface? 
Water is overflowed	<ul style="list-style-type: none"> Restart after spinning. If the error sign still indicates, call agency. 

washing machine won't work?

PROBLEM	CHECK
The power is cut off.	Is the electric voltage normal?
	Is the washer plugged in? Plug in the electric cord. ☞ Water does not drain.
	Is the drain hose down? Put the drain hose down.
	Is the drain hose folded? Unfold the drain hose.
	Is the drain hose outlet clogged? Remove the waste cleanly.
Washing machine won't work.	Is the washer lid open? ☞ Close the lid.
	Is the Pause button on? ☞ Press the Start/Pause button one more time and check if the washer starts.
	Is enough water filled to the water level? ☞ If the water pressure is low, it takes a long time to start washing.
	Is the faucet closed? ☞ Open the faucet to supply water.
If the drain hose and spin basket are frozen, do as follows.	<ul style="list-style-type: none"> • Add hot water to the frozen water tap and remove the drain hose. Soak into hot water. • Pour hot water into the spin basket for about 10 minutes. • Put a hot water towel on the drain hose connector. • If the drain hose defrosts, connect again and check for proper water draining.
The water drains out immediately.	<ul style="list-style-type: none"> • The drain is clogged with coins or pins. The drain hose is hung over the drain hose hook. Half fill the spin basket with water and try for spinning again.
The water leaks at the water supply hose connector.	If the faucet connecting part is loose, water may leak. ☞ Repeat the assembling steps again. (Refer to "Connecting the water supply hose")
	Check if the rubber packing of water supply hose is in the right position. ☞ Screw tightly again.
	Is the water supply hose folded? ☞ Unfold the hose.
	If the water supply is too strong, water may leak. ☞ Close the faucet a little.
	Is water leaking from the faucet itself? ☞ Fix the faucet. Water is not supplied.

washing machine won't work?

PROBLEM	CHECK
The water leaks at the water supply hose connector.	Did you press the Start/Pause button after selecting the water supply? ➡ If the Start/Pause button is not pressed, water is not supplied. Press the Start/Pause button.
	Is the faucet closed? ➡ Turn on the faucet.
	Is the filter net at the water supply hose connector clogged with dirty matters? ➡ Clean the filter net by brushing with a toothbrush.
	Is the water supply cut off? ➡ If the water supply is suspended, turn off the faucet and power off.
Spinning makes loud noises and vibrations.	Check if the laundry is spread evenly in the washer. ➡ Spread out the laundry evenly and start again.
	Check if the washing machine levels on a sturdy flat floor. ➡ Set the machine at level.
	Is the handle for leveling legs loose? ➡ Adjust the legs on the feet for leveling.
	Is around the washing machine filled with unnecessary stuffs? ➡ Remove those unnecessary things away from the wash machine.

specification

WA90F4

POWER CONSUMPTION	WASH	330 W	STANDARD WATER LEVEL	HIGH	60 l
	SPIN	240 W		MID	54 l
DIMENSIONS(mm)		W573XD638XH901		LOW	45 l
WEIGHT		31 kg		EXTRA LOW	28 l
WATER PRESSURE		0.05~0.78 MPa (0.5 ~ 8.0 kg · f/cm ²)	WATER USAGE		160 l
WASHING TYPE		Stirring Type	SPIN SPEED		720 rpm



QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com

Code No. DC68-02723G-02_EN



الغسالة

دليل المستخدم

Planet First 100% Recycled Paper

تم تصنيع هذا الدليل من ورق معاد تدويره بنسبة ١٠٠٪.

إمكانيات هائلة

شكراً لشراء أحد منتجات Samsung.
للحصول على خدمة أكثر تكاملاً.
الرجاء تسجيل المنتج على موقع
www.samsung.com/register

SAMSUNG

رقم الكود: DC68-02723G-02_AR

الميزات

• جسم فيبر مقاوم للصدأ

مصنوع من المعدن القوي بجسم فيبر مقاوم للصدأ ويتحمل الرطوبة لمدة طويلة.

• حاوية على شكل معين

حُدث الحاوية المصممة على شكل المعين ضغطاً عالياً من الماء ما يعمل على إزالة الأوساخ من الملابس بشكل فعال. تقلل الحاوية المصممة على شكل المعين من إلحاق الضرر بالأقمشة ما يعمل على زيادة عمر الأقمشة. تتميز الأنبوبة الداخلية البراقة بروعتها وقوتها في تأثيرها على الغسيل.

• نظام التجفيف بالهواء النفاث

- تعمل تقنية "هواء نفاث" على التنشيف بقوة وسرعة بحيث تستغرق وقتاً أقل للتجفيف.
- كما تؤدي تقنية (هواء نفاث الموفرة للوقت) إلى توفير الوقت حيث تضمن تجفيف الملابس بسرعة تفوق التجفيف العادي بنسبة من ٣٠٪ إلى ٤٠٪. وحتى في المواسم الممطرة وفي الأجواء عالية الرطوبة، فإن الملابس التي تحتاج إلى وقت طويل كي تجف مثل الجينز السميك والمعاطف الثقيلة والبطانيات السمكية يتم جفیفها بسرعة أكبر.
- تعتبر تقنية "هواء نفاث" مثالية للملابس الرقيقة والملابس المصنوعة من الألياف الصناعية حيث أنها تعمل على سهولة كي هذه الملابس. فلا مزيد من تعليق الملابس وانتظارها حتى تجف. يمكنك كي الملابس بعد خروجها من الغسالة مباشرة حيث أن تقنية "هواء نفاث" تقوم بتجفيف الملابس بدرجة كافية جعلها مناسبة للكي.

• التحكم الرقمي

تعمل ميزة التحكم "الرقمي" على تشغيل أفضل دورات الغسيل من خلال تقدير وزن الملابس فيما يشبه الذكاء الاصطناعي.

• المضخة القوية المزودة - تشابك أقل وأداء أفضل للغسيل

- عدم التشابك - حيث تساعد تيارات الماء متعددة الاتجاهات على عدم تشابك الملابس.
- تم تصميم تقنية تيارات الماء خصيصاً لتحسين أداء عملية الغسيل. تضمن قوة تيارات الماء القوية متعددة الاتجاهات الحصول على أداء فائق للغسيل.

• المصفاة الفعالة

تضمن لك هذه "المصفاة" الفعالة الفريدة جميع كافة النسالات الموجودة داخل حوض الغسيل ما يرفع كفاءة عملية التصفية للحصول على نتائج فعالة لعملية الغسيل.

• وظيفة التأمين ضد عبث الأطفال

يساعد هذا الجهاز على حماية الأطفال من الإصابة دون قصد أثناء اللعب بالغسالة. (للحصول على مزيد من المعلومات، راجع صفحة ١٠)

إرشادات من أجل السلامة

الرجاء ملاحظة أن احتياطات السلامة التالية تهدف إلى تجنب التعرض للأخطار أو الأضرار غير المتوقعة وذلك عن طريق المساعدة في الاستخدام الملائم من أجل السلامة.

عند استخدام الماء الساخن في الغسيل، الرجاء التأكد أن درجة حرارة الماء لا تتعدى ٥٠ درجة مئوية.

- قد تتعرض الأجزاء البلاستيكية للتشوه أو للتلف، وقد حدث صدمات كهربائية أو حريق.

تحذير



- قد حدث إصابات بالغة أو حوادث مهلكة في حالة خرق هذه التعليمات.
- في حالة تلف قابس الجهاز (سلك التيار الكهربائي)، يجب تغييره من قبل الشركة المصنعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتجنب التعرض لأي خطر.
- لا تنزع سلك التيار أو تلمسه بأيدي رطبة.
- - قد حدث صدمة كهربائية أو حريق.
- لا حاول نزع سلك التيار بالقوة أو الضغط عليه بأشياء ثقيلة.
- - قد حدث صدمة كهربائية أو حريق.
- لا تضع الغسالة بالقرب من أدوات كهربائية ولا تضع شمعة أو سجائر مشتعلة فوق الغسالة.
- - قد يحدث حريق.
- لا تضع يديك أو أي أدوات معدنية أسفل الغسالة أثناء التشغيل.
- - قد تتعرض للأذى عن طريق لوح الدوران الموجود أسفل الغسالة.
- ابتعد عن الغسالة عندما يكون قاع الغسالة مغموراً بالماء.
- - قد حدث صدمة كهربائية، الرجاء الانتظار حتى يتم تصريف الماء بشكل كامل.
- لا تضع ملابس ملطخة بالجازولين أو البنزين أو الكحول في الغسالة، واحتفظ بتلك الملابس بعيداً عن الغسالة.
- - قد يحدث انفجار أو حريق.
- أثناء التنشيف، لا تضع يديك في حوض التنشيف.
- - قد تتعرض يداك للأذى، في حالة عدم توقف الغسالة عن العمل في غضون ١٥ ثانية بعد قيامك بفتح الغطاء، اتصل بوكيل الصيانة على الفور.
- هذا الجهاز غير مخصص للاستخدام بواسطة الأطفال الصغار أو الأشخاص ذوي الاحتياجات الخاصة ما لم يخضعوا لإشراف شخص مسؤول للتأكد من إمكانية استخدامهم للجهاز بشكل آمن.
- يجب أن يخضع الأطفال للإشراف لضمان عدم عبثهم بالجهاز.
- يجب أن يتم توصيل هذا الجهاز من خلال مأخذ قوي الاحتمال لضمان الاستهلاك الصحيح للطاقة.
- يجب وضع هذا الجهاز في مكان يتيح الوصول إلى مأخذ التوصيل بعد تركيبه.
- لا توجد قطع غيار قابلة للصيانة بواسطة المستخدم داخل الغسالة، لذا، استعن بفني صيانة مؤهل للقيام بأعمال الصيانة.
- - وإلا فقد يحدث خطأ ميكانيكي، أو صاعقة كهربائية، أو حرائق، أو تلف.
- - لا يسري الضمان الخاص بالمنتج على المشاكل الناتجة عن فك المنتج.
- لا تستخدم هذا المنتج للأغراض التجارية.
- للغسالات التي تحتوي على فتحات تهوية بقاعدتها، يجب ألا تعوق المفروشات الأرضية هذه الفتحات.

إرشادات من أجل السلامة

تنبيهات



- قد تتعرض لإصابات خفيفة أو أضرار طفيفة في حالة خرق هذه الإرشادات.
- لا تقم بتركيب الغسالة في منطقة رطبة أو خارج المنزل حيث يتساقط المطر أو الجليد.
- - قد تحدث صدمة كهربائية أو حريق.
- الرجاء فصل سلك التيار الكهربائي عند عدم استخدامه.
- - قد تحدث صدمة كهربائية أو حريق.
- في حالة وجود أتربة أو ماء على قابس التيار الكهربائي والجزء المتصل به، الرجاء إزالته بالكامل.
- - قد تحدث صدمة كهربائية أو حريق.
- لا تجعل أطفالك ينظرون داخل الغسالة.
- - إذا سقط الأطفال داخل الغسالة، قد تكون حياتهم عرضة للخطر.
- قم بالتهوية على الفور دون لمس القابس في حالة تسرب الغاز.
- - قد تحدث صدمة كهربائية أو حريق في حالة اشتعاله.
- إذا أحدثت الغسالة صوتاً غريباً، أو أخرجت رائحة غير عادية، أو دخان قم بفصلها بسرعة واتصل بوكيل الصيانة.
- - قد تحدث صدمة كهربائية أو حريق.
- عند تنظيف الغسالة، لا ترش الماء على أجزاء الغسالة بشكل مباشر.
- - قد يؤثر ذلك على عمر الغسالة.
- قد تحدث أيضاً صدمة كهربائية أو حريق.
- لا تقم بتوصيل عدة أجهزة في آن واحد بمصدر تيار كهربائي واحد.
- - قد يحدث حريقاً بسبب الحرارة الزائدة.
- لا تضغط الزر بمثقاب أو بديوس.
- - قد تحدث صدمة كهربائية أو حريق.
- استخدم أطقم خراطيم جديدة، حيث يجب عدم إعادة استخدام الخراطيم القديمة.
- في حالة تلف السلك المستخدم حالياً، يجب استبداله بمعرفة الشركة المصنعة أو مركز الصيانة أو أي شخص مخول وذلك لتجنب التعرض لأي مخاطر.
- وصل سلك الأرضي باللوحة الأساسية وخبئه تحت عمق ٢٥ سم تقريباً تحت الأرض. أو يمكنك بدلاً من ذلك، توصيل سلك الأرضي بقضيب أو مقبس طاقة لتصرف الأرضي. يحظر توصيل السلك بسلك هاتف أو قضيب البرق أو أنبوب توصيل غاز.



المحتويات

إعداد الغسالة	٦
وصف الأجزاء	٩
تعتمد طريقة الغسل بشكل تلقائي على نوعية الغسيل	١٠
لوحة التحكم	

٦

وظائف يدوية	١٣
-------------	----

١٣

التركيب والصيانة	١٤
البيئة	١٤
الاستواء	١٥
توصيل خرطوم تزويد الماء	١٦
تركيب لوحة الحماية من الفئران	١٦
كيفية توصيل خرطوم التصريف	١٨
كيفية إضافة المسحوق	١٨
كيفية إضافة منعم الأقمشة	١٨
مصفاة وصلة تزويد الماء	١٩
تنظيف المصفاة	١٩
تنظيف مصفأة المضخة	١٩

١٤

استكشاف المشاكل وحلها	٢٠
-----------------------	----

٢٠

الغسالة لا تعمل؟	٢١
------------------	----

٢١


المواصفات	٢٣
-----------	----

٢٣

إعداد الغسالة

وصف الأجزاء

دليل المستخدم مخصص للاستخدام العام.
استعن بدليل المستخدم الخاص بطراز الغسالة.

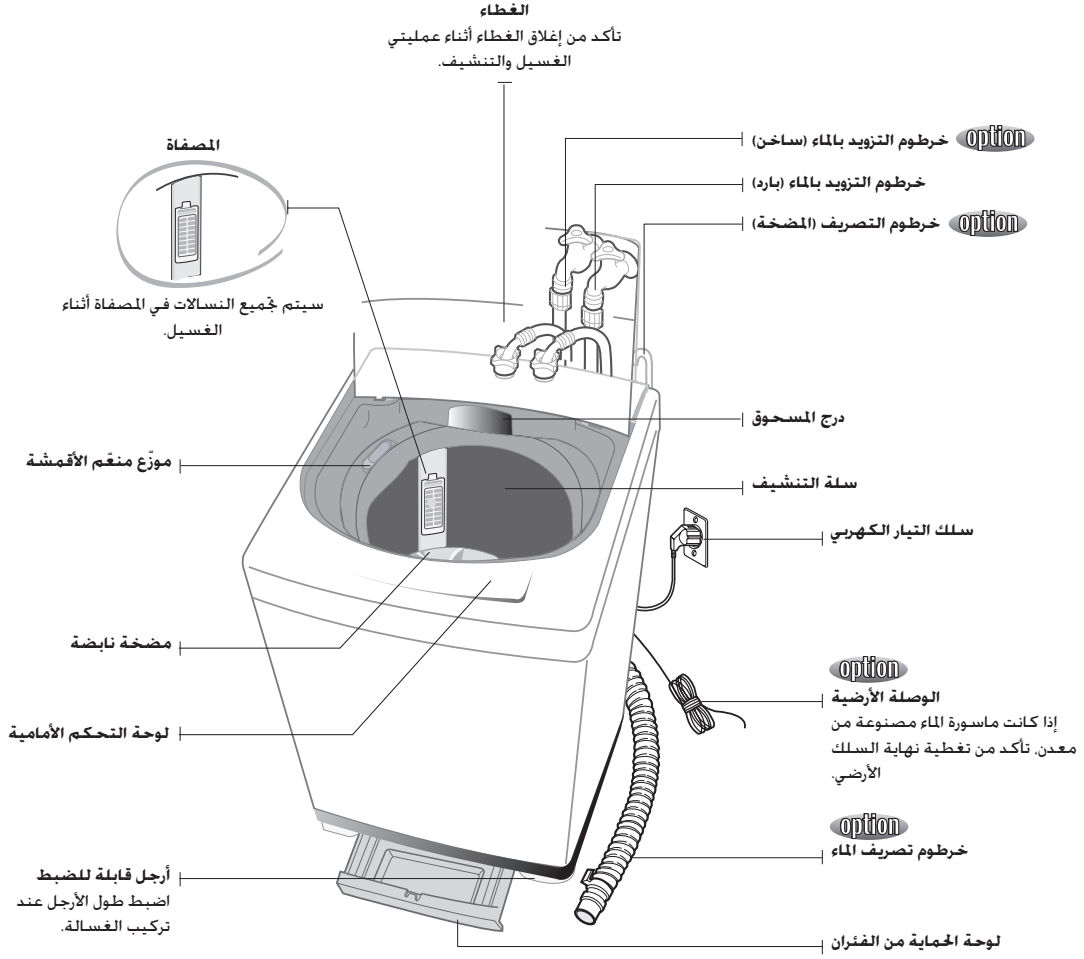

التحقق من السلامة قبل الغسيل والاعتناء بالملابس

يجب إتباع تعليمات الفحص لتجنب المشاكل التي قد تواجهها أثناء استخدام الغسالة أو التلفيات التي قد تصيب الملابس.

- إذا حدثت المشاكل المذكورة أدناه بسبب أخطاء من العميل، يتم خصيل مصاريف خدمة منفصلة.


تعليمات الفحص التي يجب إتباعها قبل بدء الغسيل

- تحقق إذا كانت الملابس تبهت أم لا.
- أضف المنظف السائل إلى منشفة بيضاء وقطعة الملابس في مكان لا يمكنك ملاحظته جيداً. ثم قم بدعكهما معاً بقوة. تحقق ما إذا كان اللون قد انتقل إلى المنشفة أم لا.
- تعامل بحذر مع الوشاحات والملابس المستوردة حيث أنها تفقد لونها بسهولة.
- تحقق ما إذا كان يوجد أية بقع أو أوساخ بالملابس.
- في حالة العثور على بقع، استخدم منشفة رطبة عليها مسحوق غسيل وادعكها في اتجاه واحد.
- قبل الغسيل، تتم معالجة الأساور، والياقات، وثنيات الفساتين والجيوب بالتنظيف بفرشاة عليها مسحوق.
- يتم تعديل هيئة الأقمشة المجدولة والمصنوعة من الصوف باستخدام خيوط خاصة قبل عملية الغسيل. تتم إزالة هذه الخيوط عقب جفيف الملابس.

الملابس غير القابلة للغسيل



- الملابس التي تتأثر بسهولة حتى بالنقع في الماء.
- حتى بالنقع في الماء، يمكن أن يحدث تغيير في أربطة العنق والصدرية والسترات والبذل والمعاطف فقد تنكمش هذه الملابس أو يتغير لونها الخارجي وذلك لأن معظمها مصنوع من الرايون والبولينوسيك والألياف ومشتقاتهم من الألياف الخلطة.
- يمكن أن تتغير ألوان الأقمشة المعالجة أو المنقوشة أو الصناعية حتى بمجرد النقع في الماء.
- وتعتبر الأقمشة المصنوعة من القطن والصوف والحرير المعالج والمنتجات الجلدية والأدوات المصنوعة من الجلود والملابس المزينة بالجلد من المنتجات التي تفقد لونها بسهولة.
- لا تغسل تلك الملابس دون معرفة إرشادات الغسيل أو المنتج التي توضح كيفية التعامل معه.

حول مسحوق الغسيل



- عندما يكون مسحوق الغسيل غير قابل للذوبان بشكل جيد، استخدم الماء الدافئ (حوالي ٤٠ درجة مئوية) لإذابة المسحوق.
- استخدم كمية ملائمة من مسحوق الغسيل.
-  حتى إذا تم الإفراط في استخدام مسحوق الغسيل، فلن تختلف النتيجة بعد الغسيل. فقد يؤدي ذلك إلى تلف الملابس لعدم شطفها بدرجة كافية.
- قد تتسبب مواد التبييض في إتلاف الملابس حيث إنها مواد شديدة القلوية.
- اشطف الملابس بالشكل الكافي حيث أن بقاء المسحوق عليها يسبب رائحة كريهة.
- إذا تم الإفراط في استخدام المسحوق أو الماء البارد، فلن يذوب المسحوق بالكامل وسيظل عالق بالملابس أو الخرطوم أو سلة التنشيف مما يسبب تلوثها.
- في حالة وجود غسيل متبقي، يجب وضع المسحوق في درج المسحوق. قد يؤدي انتشار مسحوق الغسيل في الغسيل بشكل مباشر إلى تلطيخ ألوانها.

إعداد الغسالة

العناية بالملابس قبل الغسيل

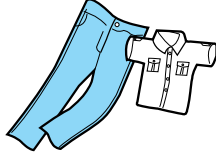

- أخرج المتعلقات الشخصية من الجيوب.
- تنبيه. افحص الجيوب! تتسبب بنس الشعر والعملات المعدنية في تلف الملابس والغسالة. حيث أنها تسبب ضوضاء ومشاكل للغسالة. يجب فحص الجيوب.
- إذا تركت السوست مفتوحة أثناء الغسيل، فإن هذا قد يتسبب في تلف سلة التنشيف. يجب غلق السوست وتثبيتها بخيط قبل الغسيل.
- قد تؤدي المعادن الموجودة على الملابس إلى تلف هذه الملابس وحوض الغسيل.
- اقلب الملابس المزينة بالأزهار والمطرزة على ظهرها قبل الغسيل.
- قد تتشابك الملابس ذات الخيوط الطويلة مع ملابس أخرى وقد يؤدي ذلك إلى تلف هذه الملابس. احرص على تثبيت الخيوط قبل الغسيل.
- غير مسموح بوضع الملابس المقاومة للماء (لباس التزلج على الجليد وحفاضات الأطفال والدواسات) في الغسيل.
- قد يؤدي ذلك إلى تحريك الغسيل أو اهتزاز الغسالة بشكل غير طبيعي مما قد يؤدي إلى وجود إصابة شخصية أو تلف الغسالة أو الأرضية أو الملابس. (الحفاضات والملابس المقاومة للماء ومعاطف المطر وأغطية المظلات وملابس التزلج على الجليد وأغطية السيارات وحقائب النوم، إلخ).
- عند دوران الحوض. قد يبقى الماء داخل الملابس أو الأقمشة المقاومة للماء وقد يتجمع في أحد الأركان مما يؤدي إلى اهتزاز الغسالة بشكل غير طبيعي. وقد يرتفع الغسيل ويخرج من الغسالة مما يؤدي إلى الإصابة.
- انفض الأوساخ والأتربة عن الملابس.
- يؤدي دك الأوساخ والأتربة المتراكمة على الملابس الرقيقة إلى تعريضها للتلف والحصول على نتائج غير مرضية بعد الغسيل.
- اغسل الجوارب البيضاء والأكمام والياقات مسبقاً قبل دورة الغسيل الأساسية.
- إزالة أي بقع أو أوساخ على الياقات والأكمام والبطانات والجيوب. ضع بعض من مسحوق الغسيل عليها وانقعها في الماء قليلاً قبل الغسيل.
- يمكن استخدام المنظفات السائلة أو المساحيق. لا تستخدم الصابون فقد يتسبب الحوض من الأوساخ الموجودة عليه.
- اقلب الملابس المزينة على ظهرها قبل الغسيل.
- إذا كانت الملابس بها أوساخ خارجية. يجب فصلها قبل الغسيل. حيث قد تعلق هذه الأوساخ (الأوساخ والخيوط) بالملابس الأخرى.
- اغسل الملابس السوداء والمناشف القطنية كل على حدة. إذا تم غسلها معاً. قد تعلق الأوساخ بالمناشف. افحص الملابس قبل الغسيل.
- قد يتسبب غسيل الملابس ذات الأحجام الكبيرة والأوزان الخفيفة (على سبيل المثال الملابس المزينة بالدانتيل، والملابس النسائية، والمنسوجات المصنوعة من النيلون، إلى آخره) في إلحاق الضرر بالملابس نفسها كما قد تتسبب في مشاكل لجهاز الغسالة. استخدم شبكة الغسيل أو اغسلها على حدة.
- يجب وضع الملابس المزينة بالخيوط، والدانتيل، وملابس الأتربة، والملابس الصوفية في شبكة غسيل قبل وضعها في الغسالة.
- ضع الملابس الخفيفة في شبكة الغسيل.
- استخدم شبكة الغسيل الاقتصادية في عملية الغسيل.
- يجب ضغط الستائر والملابس العائمة أو الجينز حتى لا تطفو فوق سطح الماء.
- في حالة طفو هذه الملابس فوق سطح الماء. اضغط على الزر تشغيل/توقف لإيقاف التشغيل ثم اضغط على تلك الملابس حتى يغمرها الماء. إذا استمرت عملية الغسيل والملابس طافية فوق سطح الماء. قد يتسبب ذلك في إلحاق الضرر بالملابس والغسالة علاوة على الحصول على نتائج غير مرضية بعد الغسيل.

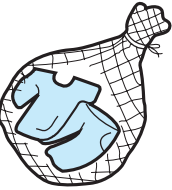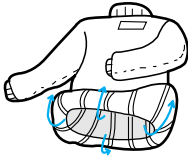

تعتمد طريقة الغسل بشكل تلقائي على نوعية الغسيل

قبل بدء عملية الغسيل، تحقق مما يلي:

- صل خرطوم تزويد الماء بصنبور الماء. اترك الصنبور مفتوحاً. قم بتوصيل سلك التيار الكهربائي. تأكد من أن اتجاه خرطوم التصريف لأسفل.

الغسل للمرة الأولى

قبل غسيل الملابس للمرة الأولى، يجب تشغيل الجهاز دورة كاملة دون ملابس.

للقيام بذلك:

١. اضغط على زر الطاقة.
 ٢. افتح درج المسحوق وضع قليلاً منه.
 ٣. قم بتزويد الغسالة بالماء.
 ٤. اضغط على الزر تشغيل/توقف.
- يزيل ذلك أي ماء متبقي في الغسالة نتيجة للتشغيل الاختباري الذي قامت به الشركة المصنعة للجهاز.

ملاحظات خاصة!

وظيفة التحسس التلقائي

- في كل دورة (باستثناء تنظيف الحوض ودورة الصوف) تقوم الغسالة بتحسس كمية الغسيل تلقائياً ومن ثم يتم تحديد مستوى الماء اللائم ووقت الغسيل ودورة الشطف ووقت التنشيف تلقائياً للغسيل التلقائي.
- عقب التشغيل، يتم تحديد الدورة ويتم ضغط الزر تشغيل/توقف. ثم تبدأ لوحة الغسيل في الدوران بدون ماء. يتعرف هذا الإجراء على حجم الغسيل الموجود في حوض الغسيل، وهو ليس خلافاً في أداء الجهاز. بعد عملية التحسس هذه، يتم تزويد الماء تلقائياً.

إضافة مسحوق الغسيل ومنعم الأقمشة


- يتعرف هذا الإجراء على كم الغسيل ويشير إلى مستوى الماء وكمية المسحوق. ثم يبدأ تزويد الماء في الحال.
- أثناء عملية تزويد الماء، يمكن فتح درج المسحوق وإضافته.
- على الرغم من ذلك، يفضل ضغط الزر تشغيل/توقف لإيقاف تزويد الماء وإضافة المسحوق.
- أغلق الباب واضغط الزر تشغيل/توقف مرة أخرى. تعد هذه الطريقة مناسبة أكثر.
- إذا تم إدخال منعم الأقمشة في موزع المنعم، يتم إضافته تلقائياً في دورة الشطف الأخيرة.
- ضع الملابس في الغسالة وأضف المسحوق أيضاً.
- يجب الانتباه إلى عدم جاوز وزن الملابس المحدد في الغسالة. استخدم المسحوق الملائم للمنسوجات التي تغسلها.
- إذا كان الباب مفتوحاً أثناء التشغيل، تتوقف الغسالة عن العمل تلقائياً للأمان. (فيما عدا ذلك، يستمر تزويد الماء أثناء فتح الباب.)
- عندما يتم اختيار الماء الساخن، يتم توريد كلاً من الماء البارد والساخن في العشرين دقيقة الأولى لحماية الملابس.
- يمكن التحكم في مدة الغسيل ودورة الشطف ومدة التنشيف في كل دورة أثناء الغسيل.



إعدادات الغسالة

لوحة التحكم

للحصول على مزيد من التفاصيل، راجع لوحة التحكم الخاصة بالغسالة.

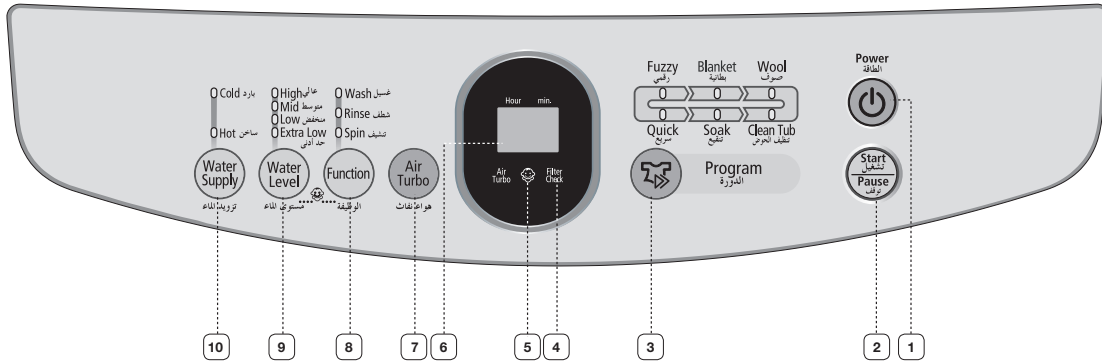

الزر الطاقة	1	اضغط هذا الزر مرة واحدة للتشغيل. اضغط هذا الزر مرة أخرى لإيقاف التشغيل.
الزر تشغيل/توقف	2	استخدم هذا الزر للإيقاف المؤقت لعملية التشغيل وإعادة التشغيل. لتغيير أحد إجراءات الغسيل أثناء عملية التشغيل، اضغط هذا الزر للإيقاف. ومرة أخرى لإعادة التشغيل بعد تغيير الإجراء.
زر تحديد الدورة	3	تتغير دورة الغسيل في كل مرة تضغط فيها على هذا الزر: رقمي ← بطانية ← صوف ← سريع ← نقع ← تنظيف الحوض
التحقق من المصفاة	4	عند انتهاء الغسيل، يضيء مصباح التحذير في (التحقق من المصفاة). عند فتح الباب، ينطفئ المصباح. (لا يعد ذلك خلافاً). عند انسداد (لمصفاة الفعالة) قد تلتصق المواد الغريبة بالغسيل. لضمان الحصول على غسيل نظيف، الرجاء إزالة أي مواد غريبة من على المصفاة بعد كل غسلة.
وظيفة التأمين ضد عبث الأطفال	5	يساعد هذا الجهاز على حماية الأطفال من التعرض للأذى دون قصد أثناء اللعب بالغسالة. <ul style="list-style-type: none"> • كيفية تشغيل وظيفة (التأمين ضد عبث الأطفال): - اضغط على الزر "الطاقة" للانتقال إلى وضع الغسيل الأولي. - بواسطة الضغط على الزر "تشغيل/توقف"، تبدأ عملية الغسيل وفي حالة الاحتياج إلى وظيفة (التأمين ضد عبث الأطفال) أثناء الغسيل - اضغط على كل من الزرين "مستوى الماء" و "وظيفة" في نفس الوقت. (لمدة 3 ثوان) (ملاحظة: لا يمكنك تشغيل الوظيفة دون الضغط على الزر "الطاقة"). • لإلغاء تشغيل وظيفة (التأمين ضد عبث الأطفال): في حالة برمجة "التأمين ضد عبث الأطفال"، اضغط على كل من الزرين "مستوى الماء" و "الوظيفة" في نفس الوقت.
الوقت المتبقي، وقت تأجيل التشغيل، شاشة الأخطاء	6	لعرض الوقت المتبقي للغسيل. لعرض وقت تأجيل التشغيل المحفوظ. لعرض حالة الخطأ إذا حدثت مشكلة في الغسالة لتتمكن من اتخاذ الإجراء اللازم.
الزر هواء نفاث	7	اضغط على هذا الزر للحصول على خفيف سريع للغسيل. يمكن تحديد هذه الوظيفة فقط في حالة ضبط دورة التنشيف. يمكنك إضافة هذه الوظيفة لجميع الدورات ماعدا دورة (صوف).
الزر الوظيفة	8	تتغير الوظيفة في كل مرة يتم فيها الضغط على هذا الزر: غسيل و شطف و تنشيف ← غسيل ← شطف ← غسيل و شطف ← شطف و تنشيف ← غسيل و شطف و تنشيف
الزر مستوى الماء	9	يتم ضبط مستوى الماء تلقائياً. ومع ذلك، يمكنك تحديد مستوى الماء يدوياً بالضغط على هذا الزر. متوسط ← عالي ← متوسط ← منخفض ← حد أدنى ← منخفض ← متوسط
الزر تزويد الماء	10	في كل مرة تقوم فيها بالضغط على هذا الزر، يتم تحديد نوع الماء كما يلي: بارد ← بارد + ساخن ← ساخن ← بارد

الدورة رقمي




١. خديد دورة الغسيل المثلى تلقائياً.
٢. اضغط على الزر الطاقة لـ "تشغيل" الغسالة.
٣. اضغط الزر تشغيل/توقف.
- يتم خديد مستوى الماء تلقائياً. ثم تتم متابعة عمليات الغسيل والشطف والتنشيف. إذا كنت ترغب في التوقف المؤقت. اضغط على الزر تشغيل/توقف مرة أخرى. يمكنك تغيير الدورة أثناء التوقف المؤقت.
٤. أغلق الغطاء.

دورة البطانية



١. الغسيل ذو الحجم الكبير مثل البطاطين وملءات الأسرة).
٢. اضغط على الزر الطاقة لـ "تشغيل" الغسالة.
٣. اضغط على زر خديد الدورة مرة واحدة.
٤. اضغط الزر تشغيل/توقف.
- يتم خديد مستوى الماء تلقائياً. تتم متابعة عمليات الغسيل والشطف والتنشيف. إذا كنت ترغب في التوقف المؤقت. اضغط على الزر تشغيل/توقف مرة أخرى. يمكنك تغيير الدورة أثناء التوقف المؤقت.
٥. أغلق الغطاء.

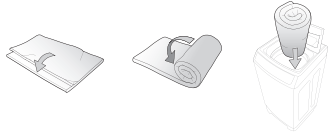

- قم بطي الغسيل ذي الحجم الكبير (البطاطين وملءات السرير) بالطريقة التالية قبل وضعه بداخل سلة التنشيف.
- لا تغسل البطانية الكهربائية والسجاد.
- ضع الغسيل الخفيف وكبير الحجم في شبكة الغسيل (على سبيل المثال. الملابس الصوفية) حيث أن حجمها يزيد في الماء مما قد يتسبب في الضرر.

الدورة صوف



١. تستخدم هذه الدورة للسترات القابلة للغسيل والسترات الصوفية والملابس الخفيفة. الخ.
٢. اضغط على الزر الطاقة لـ "تشغيل" الغسالة.
٣. اضغط على زر خديد الدورة مرتين.
٤. اضغط على الزر تشغيل/توقف.
- ثم تتم متابعة عمليات الغسيل والشطف والتجفيف. إذا كنت ترغب في التوقف المؤقت. اضغط على الزر تشغيل/توقف مرة أخرى. يمكنك تغيير الدورة أثناء التوقف المؤقت.
٥. أغلق الغطاء.
- ⚠ تنبيه
- يمكنك خديد ماء بارد فقط.
- تعمل وظيفة التنشيف الأخير بخفة لمنع تشابك الملابس.
- استخدم مسحوق الغسيل الموضح في الغسيل.
- لا يمكن خديد وظيفة (هواء نفاث) في الدورة "صوف".

الدورة سريع



١. تستخدم هذه الدورة عندما تريد غسل المناشف التي تستخدم بشكل متكرر أو الغسيل قليل الاتساخ.
٢. بما أن الغسيل يكون سريعاً. يفضل استخدام هذه الدورة للغسيل المتساخ اتساخاً خفيفاً أو أقل.
٣. اضغط على الزر الطاقة لـ "تشغيل" الغسالة.
٤. اضغط على زر خديد الدورة ثلاث مرات.
٥. اضغط الزر تشغيل/توقف.
- يتم خديد مستوى الماء تلقائياً. تتم متابعة عمليات الغسيل والشطف والتنشيف. إذا كنت ترغب في التوقف المؤقت. اضغط على الزر تشغيل/توقف مرة أخرى. يمكنك تغيير الدورة أثناء التوقف المؤقت.
٦. أغلق الغطاء.

إعدادات الغسالة

الدورة تنقيع



- حدد هذه الوظيفة عند الحاجة إلى غسيل الملابس عن طريق نقيعها.
- اضغط على الزر الطاقة لـ "تشغيل" الغسالة.
- اضغط على زر تحديد الدورة أربع مرات.
- اضغط على الزر تشغيل/توقف وضع الكمية المناسبة من المسحوق في الحوض.
- أغلق الغطاء.

الاحتفاظ بالحوض نظيفاً

عند استخدام الغسالة في الأجواء الرطبة لفترة طويلة، قد تلتصق البكتيريا العالقة في الهواء بأنواعها المختلفة بالحوض وتكون أجزاء متسخة سوداء (فطريات) مما قد يلحق الضرر بالإنسان. للاحتفاظ بالحوض نظيفاً وصحياً دوماً، ينصح بقراءة الجزء "دروة تنظيف الحوض" الموجود أدناه واستخدام المواد المطهرة أو المنظفة الموصى بها فقط لتنظيف الحوض بانتظام مرة واحدة على الأقل كل شهر وبما لا يزيد عن ثلاثة أشهر.

الدورة تنظيف الحوض



- استخدم هذه الدورة لتنظيف الحوض. فهي تؤدي إلى إبقاء الحوض نظيفاً ومعقماً.
- اضغط على الزر الطاقة لـ "تشغيل" الغسالة.
 - اضغط على زر تحديد الدورة خمس مرات.
 - اضغط على الزر تشغيل/توقف.
 - أضف المسحوق ثم أغلق الباب.
- لا تقم أبداً بوضع الغسيل في الحوض عند القيام بتنظيفه، فقد يؤدي ذلك إلى تلطيخ ألوان الغسيل أو تلفه.
 - عند القيام بالغسيل بعد تنظيف الحوض، قد تجد بعض الرواسب، التي ترجع إلى بقايا المادة المنظفة الناجمة عن عملية التنظيف. قم بإجراء دورة الشطف من مرتين إلى ثلاث مرات.
 - سيتم ضبط الوظيفة "تنقيع" (٢٠ دقيقة) تلقائياً.
 - سيتم ضبط مستوى الماء إلى (متوسط) في بداية الأمر ثم يتغير إلى (عالي) أثناء عملية الشطف.

وظائف يدوية

يمكن تحديد الوظيفة لكل دورة.

على سبيل المثال) إذا كنت ترغب في الغسيل باستخدام الدورة السريعة:
الطاقة ← تحديد الدورة سريع ← اضغط على زر الوظيفة مرة واحدة ← الزر تشغيل/توقف

<p>اضغط على زر الطاقة.</p> <p>اضغط على الزر تحديد الوظيفة مرة واحدة.</p> <p>اضغط على الزر تشغيل/توقف مرة واحدة.</p> <p>تستمر عملية الغسيل لمدة ١٥ دقيقة.</p> <p>عند الضغط على الزر الوظيفة أثناء الغسيل، يمكن تغيير مدة الغسيل لمدة تتراوح بين ٤ دقائق و ٣٠ دقيقة.</p>	<p>الغسيل فقط</p>  <p>مرة واحدة</p>
<p>اضغط على الزر الوظيفة مرتين.</p> <p>اضغط على الزر تشغيل/توقف مرة واحدة.</p> <p>تتم عملية الشطف على مرتين.</p> <p>عند الضغط على الزر الوظيفة أثناء الشطف، يمكن تغيير عدد مرات الشطف لتتراوح من مرتين إلى خمس مرات.</p>	<p>الشطف فقط</p>  <p>مرتين</p>
<p>اضغط على الزر الوظيفة ثلاث مرات.</p> <p>اضغط على الزر تشغيل/توقف مرة واحدة.</p> <p>تستمر عملية الدوران لمدة ٥ دقائق.</p> <p>عند الضغط على الزر الوظيفة أثناء الدوران، يمكن تغيير مدة الدوران من دقيقة إلى ٩ دقائق.</p>	<p>التشفيف فقط</p>  <p>ثلاث مرات</p>
<p>اضغط على الزر الوظيفة أربع مرات.</p> <p>اضغط على الزر تشغيل/توقف مرة واحدة.</p> <p>يقوم ذلك بالتحقق من كمية الغسيل، ويحدد زمن فترة الغسل والشطف تلقائياً.</p> <p>عندما يتم الضغط على الزر الوظيفة أثناء التشغيل، يمكن تغيير عدد مرات الشطف لتتراوح من مرتين إلى خمس مرات.</p>	<p>الغسيل والشطف</p>  <p>أربع مرات</p>
<p>اضغط على الزر الوظيفة خمس مرات.</p> <p>اضغط على الزر تشغيل/توقف مرة واحدة.</p> <p>تتم متابعة عمليتي الشطف والتشفيف.</p> <p>عند الضغط على الزر وظيفة أثناء التشغيل، يمكن تغيير عدد مرات الشطف لتتراوح من مرتين إلى ٥ مرات.</p>	<p>الشطف والتشفيف</p>  <p>خمس مرات</p>

التركيب والصيانة

دليل المستخدم مخصص للاستخدام العام.
استعن بدليل المستخدم الخاص بطراز الغسالة.

البيئة

اترك مساحة

اترك مساحة تقدر بـ ١٠ سم بين الغسالة والجائط.

ضع الغسالة على أرض ثابتة ومستوية.

إذا تم وضع الغسالة على سطح غير مستو أو ضعيف سيؤدي هذا إلى ارتفاع صوت الغسالة أو اهتزازها أثناء التشغيل.
(المسافة المسموح بها ١ ياردة)

قم بتعديل الأرجل للوضع المتوازن.

لا تقم أبداً بتركيب الغسالة بالقرب من الماء.



لا تضع الغسالة في غرف ينبعث منها البخار أو حيث تكون معرضة بشكل مباشر إلى المطر. قد تتسبب الرطوبة في تلف المادة العازلة التي تحيط بالأسلاك الكهربائية مما ينتج عنه صدمات كهربائية.

جانب الضوء المباشر لأشعة الشمس أو الأجهزة الحرارية.

تتأثر مكونات الأسلاك الكهربائية المصنوعة من البلاستيك بالحرارة المباشرة. لا تقم أبداً بوضع الغسالة بالقرب من الفرن. أو غلايات الماء. إلى آخره. ولا تضعها تحت أشعة الشمس المباشرة.

الاستواء


- إذا لم تكن الغسالة مستوية على الأرض. فستتهتز بشكل كبير أو ستكون غير صالحة للتشغيل. ولذلك. تأكد من أن الغسالة مستوية بشكل صحيح.

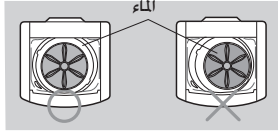


- تأكد من وضع الغسالة بشكل مستو من خلال فحص وضع حوض الغسيل.
- افتح باب الغسالة. اسكب الماء داخل حاوية الغسيل حتى المستوى الذي يقع أدنى المضخة.
- وقم بتعديل الأرجل بحيث تكون المضخة في وسط الماء كما هو مبين في الشكل.
- قم بإبعاد الغسالة أكثر من ١٠ سم عن الجائط.
- اضبط استواء الأرجل.

توصيل خرطوم تزويد الماء


١. قم بإزالة الحول من خرطوم تزويد الماء.




٢. أولاً، باستخدام مفك برغي من نوع "٠*"، أرخ البراغي الأربعة الموجودة بالحول. ثم أخرج الحول وقم بلف الجزء (ب) باتجاه السهم لإحداث فجوة تقدر بنحو ٥ مم بينهما.

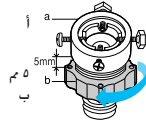


٣. صل الحول بصنبور الماء عن طريق ربط البراغي بإحكام. ثم لف الجزء (ب) باتجاه السهم وضع الجزأين (أ) و (ب) معاً.

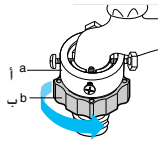

٤. صل خرطوم تزويد الماء بالحول. اسحب الجزء (ج) من خرطوم تزويد الماء لأسفل. عند إرخاء الجزء (ج)، يتصل الخرطوم إلى الحول تلقائياً محدثاً صوت "إغلاق".

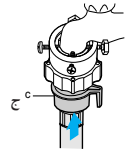

٥. صل الطرف الآخر من خرطوم تزويد الماء بصمام دخول الماء الموجود في خلفية الغسالة. لف خرطوم تزويد الماء في اتجاه عقارب الساعة.

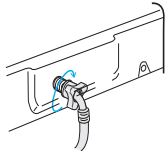


option

١-٥. صل الطرف الآخر من خرطوم تزويد الماء بصمام دخول الماء الموجود في أعلى الغسالة. لف خرطوم تزويد الماء في اتجاه عقارب الساعة.



option

• إذا كان صنبور الماء من نوع برغي، ركب خرطوم توريد للماء يلائم الصنبور كما هو موضح. بعد اكتمال التوصيل، إذا تسرب الماء من الخرطوم، كرر نفس الخطوات.

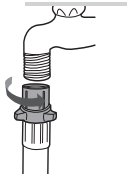

option

بعد اكتمال التوصيل، إذا تسرب الماء من الخرطوم، كرر نفس الخطوات.





استخدم صنبور من النوع العادي للتزويد بالماء.

إذا كان الصنبور مربعاً أو كبيراً جداً، أزل حلقة الإبعاد قبل إدخال الصنبور إلى الحول.


التركيب والصيانة

تركيب لوحة الحماية من الفئران option

قم بإزالة الغسالة قليلاً وارفع اللوحة حتى يتم إغلاقها. وفي النهاية قم بتثبيت اللوحة ببرغي في القاعدة كما هو موضح بالشكل.

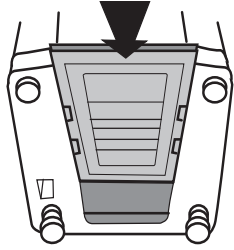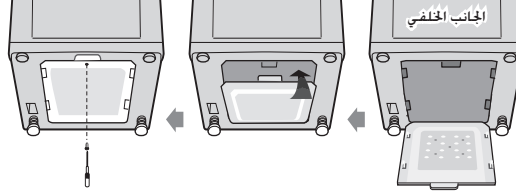


٢. إذا واجهتك صعوبات في إدخال اللوحة ارفع الغسالة قليلاً وقيم بإدخالها.

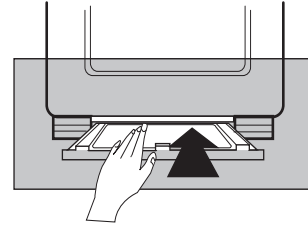


١. أدخل لوحة الحماية من الفئران في فتحة التجميع الموجودة في الجانب الخلفي بشكل تام.

كيفية توصيل خرطوم التصريف option


في حالة استخدام غسالة ذات مضخة تصريف

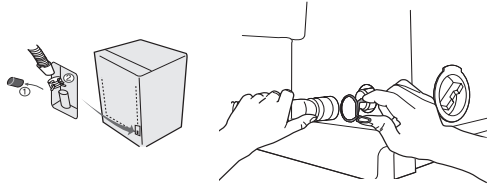


تأكد من توصيل خرطوم تصريف الماء بإحكام في مخرج التصريف الموجود على اللوحة الخلفية للغسالة.

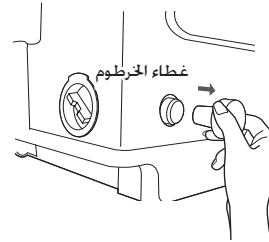

انزع غطاء الخرطوم وصل خرطوم الصرف.

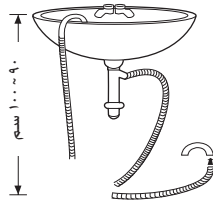

ثبت خرطوم تصريف الماء على بعد يقدر بنحو ٩٠ ~ ١٠٠ سم فوق الأرض.

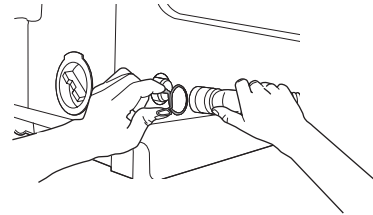



تأكد من توصيل خرطوم تصريف الماء بإحكام في مخرج التصريف الموجود في جانب الغسالة.

في حالة الغسالة العامة

١. بعد الضغط على حلقة الوصل، أدخل خرطوم تصريف الماء.




٢. بعد توجيه خرطوم تصريف الماء إلى المصرف، صله بمخرج التصريف الخاص بالغسالة.

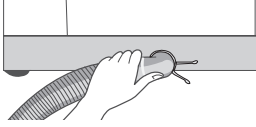


٣. تأكد من اتصاله بإحكام بالضغط على حلقة الوصل ودفعها في مخرج التصريف.

• يمكن تعديل طول خرطوم التصريف بحيث يمكنك إطلالته ليصل إلى الطول الملائم.




كيفية تغيير اتجاه خرطوم تصريف الماء


• يتم الضغط على مقبض حلقة الوصل لدفع خرطوم تصريف الماء، قم بتغيير اتجاه خرطوم التصريف واتبع الإرشادات المذكورة أعلاه مرة أخرى.

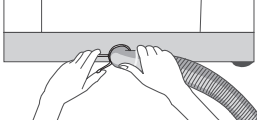


تنبيهات حول إدخال خرطوم تصريف الماء

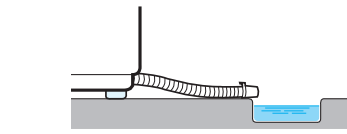


٢. كن حذراً في تصريف الماء حتى نهاية خرطوم التصريف.

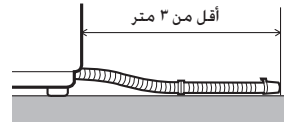

١. في حالة استخدام خرطوم تصريف الماء ووصله بخراطيم أخرى يجب ألا يزيد طوله عن ٣ متر.

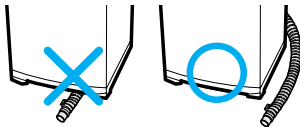

٤. لا تقم بتثبيت خرطوم تصريف الماء أسفل الغسالة.



٣. يجب ألا تزيد عتبة الباب عن ٥ سم.


التركيب والصيانة

كيفية إضافة المسحوق




١. افتح درج المسحوق بدفعه بإجاء السهم كما هو موضح في الشكل ثم ضع المسحوق في الدرج المخصص له.
٢. ضع في كل مرة كمية ملائمة من المسحوق بحيث لا يفيض المسحوق من الدرج.

كيفية إضافة منعم الأقمشة

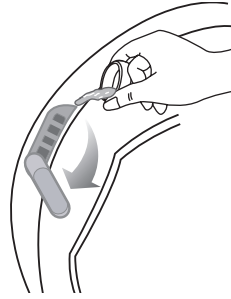

- قم بإزاحة الغطاء وفتحه في اتجاه السهم. ثم ضع مسحوق الغسيل وقم بدفع الغطاء في الاتجاه العاكس لإغلاقه.
- عند تخزين كمية مناسبة (مقدار مرة واحدة) من ملين الأقمشة في مكان توريد المليّنات. يتم وضعها في الدورة الأخيرة من الشطف.
 - لا تستخدم المسحوق. أو المبيض. أو المنشأ في درج المنعم.
 - يؤدي الإفراط في استخدام المنعم إلى نتائج غير مرضية.
 - لا تفتح الباب أثناء دورة (التجفيف بالتنشيف). إذا تم إضافة منعم الأقمشة في وقت سابق. فإن هذا سينقص من فعاليته.
 - لا تترك منعم الأقمشة في موزع منعم الأقمشة لمدة طويلة. حيث أن المنعم يصبح يابساً.

مصفاء وصلة تزويد الماء

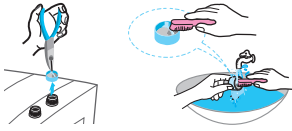

١. انزع المصفاء واغسلها جيداً.




٢. ادفع المصفاء وصل الخرطوم بصمام تزويد الماء بإحكام.




٣. تحقق من عدم وجود ارتشاحات. انتبه إلى إحكام الوصلة.

تنظيف المصفاة

نظف شبكة المصفاة بانتظام للمحافظة على نظافة الغسالة.

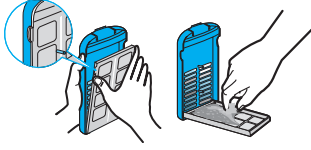

٢. افتح الغطاء كما هو مبين بالشكل.

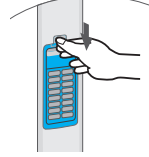

١. ادفع الجزء العلوي من المصفاة الفعالة واجذبه للداخل.






٤. أغلق الغطاء وأدخل أولاً الجزء السفلي في الحاوية ثم ادفع المصفاة. حتى تسمع صوت "تثبيتها".



٣. نظف المصفاة الفعالة.

تنظيف مصفاة المضخة

١. ضع قطعة من القماش أو منشفة أسفل مصفاة الغسيل حتى لا تبتل الأرض. ولف المصفاة عكس اتجاه حركة عقارب الساعة واسحبها للخارج.
٢. قم بإزالة أي أوساخ من المصفاة.
٣. قم بإعادة المصفاة إلى مكانها عن طريق لف المصفاة في اتجاه عقارب الساعة لإعادتها إلى مكانها.

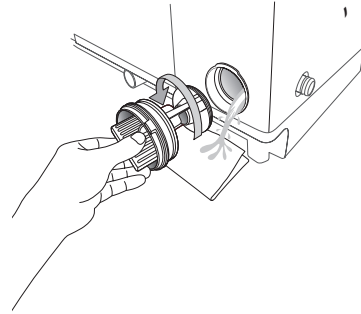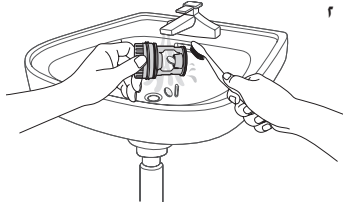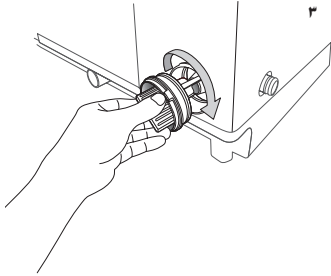

استكشاف المشاكل وحلها

المشكلة	الفحص
الغسالة لا تعمل	<ul style="list-style-type: none"> هل صنبور الماء مفتوح؟ هل جهاز الغسالة متصل بمصدر التيار الكهربائي؟ هل التيار الكهربائي مقطوع؟ هل ضغط الماء كافٍ؟
لا يتم تصريف الماء	<ul style="list-style-type: none"> هل خرطوم التصريف موضوع لأسفل؟ (بدون مضخة) هل خرطوم التصريف متجمد؟ هل خرطوم التصريف مسدود؟ إذا لم يتم تصريف الماء خلال ١٥ دقيقة، سيسمع طنين، وسيعرض مؤشر الوقت المتبقي "5E".
لا يتم تزويد الماء	<ul style="list-style-type: none"> هل صنبور الماء مفتوح؟ هل الماء مقطوع؟ هل خرطوم تزويد الماء أو وصلة الخرطوم مسدودة؟ هل صنبور الماء متجمد؟ في حالة عدم انتهاء تزويد الماء في غضون ساعة أو عدم تغيير مستوى الماء خلال ٤ دقائق، ستسمع صوت طنين، ويعرض مؤشر الوقت المتبقي "4E".
التنشيف لا يعمل	<ul style="list-style-type: none"> هل تم توزيع الغسيل بالتساوي في الغسالة؟ هل تم وضع الغسالة على أرض ثابتة ومستوية؟
زيادة الماء	<ul style="list-style-type: none"> إعادة التشغيل بعد التنشيف. في حالة استمرار ظهور مؤشر العطل، اتصل بالشركة.

الغسالة لا تعمل؟

المشكلة	الفحص
انقطاع التيار الكهربائي.	هل فولتية التيار الكهربائي طبيعية؟
	هل جهاز الغسالة متصل بمصدر التيار الكهربائي؟ قم بتوصيل سلك التيار الكهربائي. ❌ لا يتم تصريف الماء.
	هل يتجه خرطوم التصريف إلى أسفل؟ ضع خرطوم التصريف لأسفل.
	هل خرطوم التصريف مثني؟ فك الثنيات الموجودة في خرطوم التصريف.
	هل فتحة خرطوم التصريف مسدودة؟ قم بإزالة النفايات.
الغسالة لا تعمل.	هل غطاء الغسالة مفتوح؟ ❌ أغلق الغطاء.
	هل الزر توقف في وضع تشغيل؟ ❌ اضغط على الزر تشغيل/توقف مرة أخرى وتأكد من أنه تم بدء تشغيل الغسالة.
	هل تم ملء الماء حتى المستوى المطلوب؟ ❌ إذا كان ضغط الماء منخفضاً، فستستغرق عملية بدء تشغيل الغسالة وقتاً طويلاً.
	هل الصنبور مغلق؟ ❌ افتح الصنبور لتزويد الماء.
	• أضف الماء الساخن إلى حاوية الغسيل المتجمدة وأزل خرطوم التصريف. انقع الخرطوم في الماء الساخن. • اسكب الماء الساخن في الجفف لمدة ١٠ دقائق. • ضع منشفة مبللة بالماء الساخن على وصلة خرطوم التصريف. • بعد فك تجميد خرطوم التصريف، قم بتوصيله مرة أخرى وحقن ما إذا كان تصريف الماء يتم بالشكل الملائم.
يتم تصريف الماء في الحال.	• خرطوم التصريف مسدود بعمليات معدنية أو دبابيس. قم بتعليق خرطوم التصريف على الخطاف. قم بملء نصف سلة التنشيف بالماء وحاول إجراء التنشيف مرة أخرى.
يتسرب الماء في وصلة خرطوم تزويد الماء.	❌ إذا كان الجزء الخاص بوصلة الصنبور غير محكم الربط. قد يتسرب الماء. كرر خطوات التجميع مرة أخرى. (راجع "توصيل خرطوم تزويد الماء")
	❌ حقق ما إذا كان المطاط الخاص بخرطوم تزويد الماء في وضعه الصحيح. اربط البراغي مرة أخرى بإحكام.
	هل خرطوم تزويد الماء مثني؟ ❌ فك الثنايا الموجودة في خرطوم التصريف.
	❌ إذا كانت عملية تزويد الماء قوية جداً، قد يحدث تسرب. أغلق الصنبور قليلاً.
	هل يحدث تسرب للماء من الصنبور؟ ❌ أصلح الصنبور. لا يتم تزويد الماء.

الغسالة لا تعمل؟

المشكلة	الفحص
يترسب الماء من وصلة خرطوم تزويد الماء.	هل قمت بالضغط على الزر تشغيل/توقف بعد خديد تزويد الماء؟ في حالة عدم الضغط على الزر تشغيل/توقف، لن يتم تزويد الماء، اضغط على الزر تشغيل/توقف.
	هل الصنبور مغلق؟ افتح الصنبور.
	هل شبكة المصفاة الموجودة في خرطوم تزويد الماء مسدودة بأوساخ؟ نظف شبكة المصفاة بفرشاة أسنان.
	هل تم إيقاف تزويد الماء؟ في حالة توقف تزويد الماء، أغلق الصنبور وافصل التيار.
حدث عملية التنشيف ضجيجاً واهتزازات.	تحقق ما إذا كان قد تم توزيع الغسيل بالتساوي في الغسالة. وزع الغسيل بالتساوي وابدأ تشغيل الغسالة مرة أخرى.
	تحقق ما إذا كانت الغسالة مستوية على أرض ثابتة ومسطحة. اجعل الغسالة مستوية.
	هل المقابض الخاصة باستواء الأرجل غير مربوطة بإحكام؟ اضبط استواء الأرجل.
	هل يوجد حول الغسالة مواد غير ضرورية؟ أبعد تلك الأشياء غير الضرورية عن الغسالة.

المواصفات

WA90F4

٦٠ لتر	عالي	مستوى الماء القياسي	٣٣٠ وات	غسيل	استهلاك الطاقة
٥٤ لتر	متوسط		٢٤٠ وات	التنظيف	
٤٥ لتر	منخفض		العرض ٥٧٣ x العمق ١٣٨ x الارتفاع ٩٠١	الأبعاد (مم)	
٢٨ لتر	حد أدنى		٣١ كجم	الوزن	
١٦٠ لتر	استخدام الماء		٠,٧٨ ~ ٠,٠٥ مللي باسكال (٨,٠ ~ ٠,٥ كجم . قدم/سم ^٢)	ضغط الماء	
٧٢٠ لفة في الدقيقة	سرعة التنظيف		نوع الحركة	نوع الغسيل	



هل لديك أسئلة أو تعليقات؟

البلد	اتصل بـ	أو قم بزيارة موقعنا على الإنترنت على
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com

رقم الكود: DC68-02723G-02_AR