



WT70H3200MG/NQ
WT90H3230MG/NQ
WT70H3200MG/SG
WT90H3230MG/SG
WT80H3200MG/FH
WT10H3230MG/FH

Washing Machine

user manual

imagine the possibilities

Thank you for purchasing this Samsung product.

SAMSUNG

contents

FEATURES2
SAFETY INSTRUCTIONS2
cautions2
precautions when operating3
DESCRIPTION OF PARTS4
CONTROL PANEL5
INSTALLATION6
Environment6
Connecting the inlet hose6
CLEANING THE MACHINE.6
Cleaning the lint filter6
Cleaning the wash tub6
WASHING PROCEDURE6
Washing6
Soaking.7
Spinning dry7
Heavy wash7
Over flow wash8
Spinning rinse8
LAUNDRY GUIDE8
MAINTENANCE9
TROUBLESHOOTING.9
SPECIFICATIONS	10

Instruction about the WEEE mark

Correct Disposal of This Product (Waste Electrical & Electronic Equipment)



This marking on the product, accessories or literature indicates that the product and its electronic accessories should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

For more information on safe disposal and recycling visit our website www.samsung.com or contact our Helpline number - 1800 3000 8282, 1800 266 8282

features

- **Double Storm Pulsator (option)**
 - By rotating an inner and outer blade at different speeds, two powerful currents of water created that ensure that clothes get clean with less damage than a conventional washing machine. The Double Storm like water currents enhance both washing and rinsing power while reducing unnecessary fractions and in creating both the durability and reliability of your fine fabrics by preventing the laundry from getting twisted and knotted.
- **Transparent Window (option)**
 - This Transparent Window is the new concept to solve the curiosity of users to see inside of washing machine while operation. While operation, the laundry progress inside of washing machine can be checked by looking through the transparent window.

safety instructions

- Must follow the cautions and precautions for safety intend to prevent unpredictable danger and damage by helping the proper use in safety.

cautions

- **Do not put your hands into the spin dryer basket when it is spinning.**
Your fingers can be caught by spinning laundry and damaged.
- **Never allow children to operate or play with the washing machine.**
Children playing with the washing machine may accidentally fall into the washing tub.
- **Do not climb up the Washing Machine or lid.**



- **Must follow the cautions below when the washing machine is working.**

Do not fall the WASH-TRAY to the wash-tub when the washing machine running.



- **Disconnect the power cord from the power supply when not in use.**
- **Ventilation opening must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.**
- **If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**
- **To avoid overfilling and damages this appliance must be filled with the operator present using a moderate water supply pressure only.**
- **For washing machines with ventilation openings in the base, that a carpet must not obstruct the openings.**
- **Do not use adapter or extension cord to supply power to your washing machine.**
- **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.**
- **Children should be supervised to ensure that they do not play with the appliance.**


precautions when operating

- **Don't use excessively hot water. (50°C or more)**
Plastic parts may be deformed or damaged. Also, clothing may be deformed or decolored.



Do not connect to the hot water supply.

- **Before washing, check all pockets.**
If nails or pins remain in pockets, they may damage the washing machine or clothes.
- **Close the water tap a little if the water pressure is too high.**
- **To avoid water splashes, close the wash tub lid.**
- **Never splash water on the control panel.**
- **Take out personal belongings from pockets.**



Check the pockets! Hairpins and coins cause damages to clothes and washing machine. They make noise and problems to the machine. Must check the pocket.


- **Put only washing cloths on WASH-TRAY. Heavy cloths & thing not to be kept.**




- **Don't put candle & Hot Things on washing machine.**




- **Be able to hang the WASH-TRAY on the side hook, while operating the Washing Machine or not.**

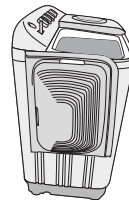

- **Be sure to cover with the inner cover on laundry before spinning.**
This prevents laundry from being tossed out and damaged.

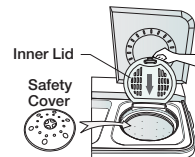


- **Be sure lay the drain hose(A) down.**

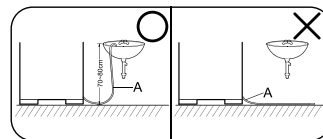

- **Heavy laundry or loads on WASH-TRAY may make it buckle and fall out of washing machine.**
Do not overload WASH-TRAY
- **Don't pull off the Knobs. Knobs can't take off from outside of the Panel.**


description of parts

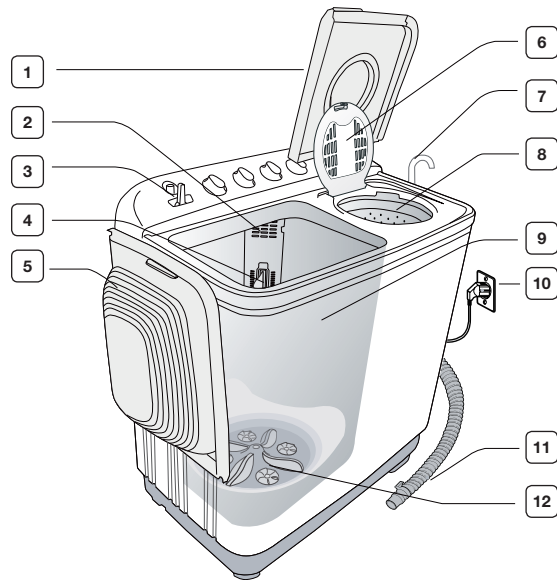


1	SPIN DRYER LID When you open this lid while the spin basket is spinning, the spinning will be stopped by brake system.
2	OVER FLOW FILTER
3	WATER SELECTOR
4	LINT FILTER This is used for gathering the dregs which are made during washing.
5	WASH TRAY Be sure to keep the tray closed during washing and spinning.
6	INNER LID
7	DRAIN HOSE (WITH PUMP)
8	SPIN DRYER BASKET
9	WASH TUB
10	POWER CORD The plug's shape may not correspond with this drawing
11	WATER DRAIN HOSE
12	PULSATOR

control panel


WT70H3200MG/NQ




WT90H3230MG/NQ




WT70H3200MG/SG




WT90H3230MG/SG



WT80H3200MG/FH



WT10H3230MG/FH

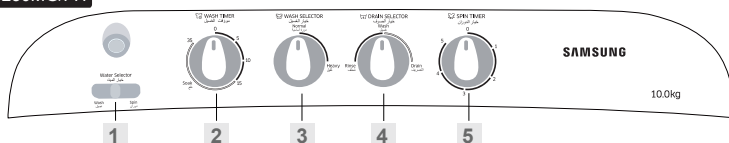

1	WATER SELECTOR	During washing, WATER SELECTOR KNOB should be selected to wash. During spin rinsing, WATER SELECTOR KNOB should be selected to spin.
2	WASH TIMER	This is used to set the wash time, 1-15 minutes and can close the "Soak" function by 1-20 minutes.
3	WASH SELECTOR	You can wash laundry effectively by various methods.
4	DRAIN SELECTOR	This is used to set the Wash/Rinse or Drain.
5	SPIN TIMER	This is used to set the spin time, 1-5 minutes.

installation

Environment

- **How to move the machine.**
Wheels are provided for easy translocation of machine.
 - Hold the machine firmly as shown in the figure below.




Do not move machine when it is loaded.

- **Leave some space.**
Space at last 15 cm between the washing machine and the wall.
- **Place the washing machine on a sturdy flat surface.**
If the washing machine is placed on an uneven or weak surface, noise or vibration may be occurred. (Allowable is 2°)
- **Never install the washing machine near water.**
Do not place the washing machine in steamy rooms or where the washing machine is directly exposed to rain. Moisture may destroy the electrical insulation and cause an electrical shock hazard.
- **Avoid direct sunlight or heating devices.**
As plastic and electrical components are affected by direct heat, never place the washing machine near heaters, boilers, etc. Do not place under direct sunlight.


Connecting the drain hose

Insert the drain hose(a) and push it tightly to be connected as arrow direction.



- Push it with force further to the bottom of the drain outlet
- Check the drain hose for not getting apart from the outlet by drawing it.

Connecting the inlet hose



(Insert the inlet hose into washing machine)

(Insert the inlet hose into faucet)

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.


6_ installation

cleaning the machine

Cleaning the lint filter

If the dregs are filled up in the lint filter after finishing the wash, push down(1) and pull it out(2) as shown in figure.

Remove the collected lint and rinse the filter net.

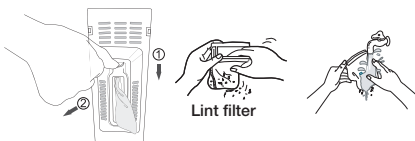

Cleaning the wash tub


Wipe off stains on the cabinet and operation panel with soft cloth.

Do not use benzene, thinners, cleanser, or wax, nor scrub the washing machine with a brush. Painted surfaces or plastic parts will be damaged.

washing procedure

Washing

1. Before starting washing, check the following;
 - Connect the water inlet hose and open the water tap.
 - Connect the power cord to the power supply outlet.
 - Lay the drain hose (A) toward a sinkhole.

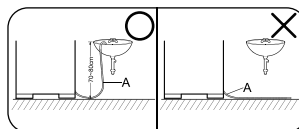


2. Set the NORMAL / HEAVY SELECTOR KNOB to the desired mode.



3. Set the WATER INLET SELECTOR.



4. Load laundry in the wash tub.

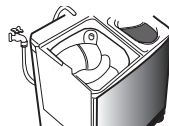

5. Fill water in the wash tub and add the detergent.



6. Set the WASH TIMER.



Set the Wash Timer 1-15 min. (option)

7. After washing, set the DRAIN SELECTOR KNOB to 'DRAIN' for draining.




Soaking


1. Place clothes into the WASH TUB.
2. Turn on tap or use bucket to fill the WASH TUB with desired amount of water.
3. Put detergent depending on the water volume and detergent package indications.
4. Set WASH TIMER to point between "15" to "35" in the timer.
 - Soak-Washing automatically starts the wash (15 min.) after the soak (2 to 20 min.) is completed.
 - The SOAK function (20 min.) repeats the cycle that is 1.5 ~ 2.0 min. turning and the next 5 min. resting 3 times.

Spinning dry


1. Transfer the clothes into the spin basket and arrange the clothes evenly.

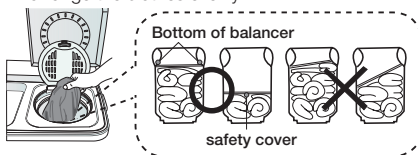


2. Be sure to attach the safety cover and close the inner lid.

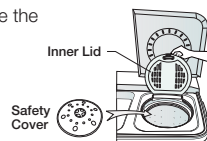

3. Close the spin dryer lid.



4. Set the SPIN DRYER TIMER 1-5 minutes.



5. Incomplete spinning (Severe vibration or unbalance) See "When you load ..." on page 9.

Heavy wash


1. Set the WASH SELECTOR KNOB to 'HEAVY'.



2. Supply the proper amount of water as not to overflow the top of the washing tub.
3. Set the WASH TIMER 10~15 minutes.



4. Drain the water. Set the DRAIN SELECTOR KNOB to 'DRAIN'.




5. Repeat this cycle until drain water is clean. (2~3 cycles)
6. Be sure lay the drain hose down.

Over flow wash

1. Keep supplying water.




Adjust water pressure to ensure that the amount of water supplied does not exceed that water drained.




2. Set the WASH TIMER 6~8 minutes.



3. As soon as the WASH TIMER shuts off, turn off the water tap.



4. Set the DRAIN SELECTOR KNOB to 'DRAIN'.




Spinning rinse

After rinsing you can select this course for more effective rinse (Don't select only this course for rinse.)


1. Load the laundry evenly into the spin basket.



2. Connect the water inlet pipe.
set the water selector to the right side.
And set the time of spinning as per your favor.




3. After stopping water supply, cover the laundry with safety cover and close the inner lid.

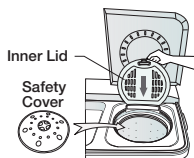

4. Close the spin dryer lid.



5. Set the SPIN DRY TIMER 2~3 minutes.



laundry guide

Washing time

Kinds of clothing	Washing time	Washing Selection
Extremely soiled heavy fabric	10 to 35 minutes (soak 20)	HEAVY
Linen, cotton, etc.	8 to 10 minutes	
Ordinary clothes (underwear, etc)	7 minutes	NORMAL
Slightly soiled synthetic fiber	2 to 5 minutes	
100% wool, mixed wool knitting, thin synthetic fiber with tags indicating hand washing	2 to 5 minutes	

Detergent

Amount of detergent	Water level
40 g	Low (40 ℓ)
50 g	Med (50 ℓ)
61 g	High (61 ℓ)
66 g	High I (66 ℓ)

The amount of detergent is average.

Follow the instruction detergent printed on the package for amount of detergent.

Choose the amount of detergent depending on the fabric type.


Spin dry time

Type of laundry	Time
Thin (synthetic fiber)	1 min.
Wool	1~2 min.
Cotton	3~5 min.
Thick (cotton)	5 min.

maintenance

WHEN YOU LOAD THE LAUNDRY INTO THE SPIN BASKET.

Press the laundry evenly and put the safety cover into the spin basket drum as shown in the figure.

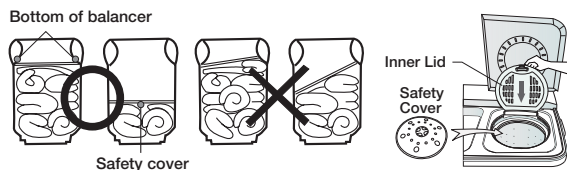

troubleshooting

TROUBLE	CHECK POINT
The washing machine does not work.	<p>Check that the power supply is in good condition.</p> <p>Check that the power plug is inserted properly.</p> <p>Check that the wash timer knob or the spin timer knob is not in the "0" position.</p>
The drain hose does not work.	<p>Check that the drain hose is not laid too high.</p> <p>Check that the drain hose is not frozen.</p>
There is abnormal noise during washing.	<p>Check that there are no coins or any other foreign objects dropped into the wash tub.that the drain hose is not blocked by foreign matter.</p>
There is abnormal noise and violent vibration during spinning.	<p>Check that the washing machine is placed on flat, stable floor.</p> <p>Check that clothes are evenly distributed in the spin tub.</p> <p>Check that there are no washing materials or foaming debris dropped into the outside of the spin tub.</p>

specifications

CAPACITY	MODEL	WASH	SPIN	
	WT70H3200MG/NQ WT90H3230MG/NQ WT70H3200MG/SG WT90H3230MG/SG WT80H3200MG/FH WT10H3230MG/FH	7.0 kg 9.0kg 7.0kg 9.0kg 8.0kg 10.0kg	4.6 kg	
	DIMENSIONS (WxDxH)mm	WT70H3200MG/NQ WT70H3200MG/SG WT80H3200MG/FH	W832xD483xH872mm	
		WT90H3230MG/NQ WT90H3230MG/SG WT10H3230MG/FH	W832xD483xH902mm	
	WATER PRESSURE	0.1~0.6 MPa		
	WEIGHT	WT70H3200MG/NQ WT70H3200MG/SG WT80H3200MG/FH	23 kg	
		WT90H3230MG/NQ WT90H3230MG/SG WT10H3230MG/FH	24 kg	
STANDARD QUANTITY OF WATER	Low : 40L Middle : 50L High : 61L High I : 66L			
RATING TIME	Washing 35minutes (Soak 20) / Spinning 5minutes			

memo



QUESTIONS OR COMMENTS?

Country	Contact Center	Web Site
RUSSIA	8-800-555-55-55	www.samsung.com/ru/support
AUSTRALIA	1300 362 603	www.samsung.com/au/support
INDIA	1800 3000 8282 - Toll Free 1800 266 8282 - Toll Free	www.samsung.com/in/support
MALAYSIA	1800-88-9999 603-77137477(Overseas contact)	www.samsung.com/my/support
PHILIPPINES	1-800-10-7267864 [PLDT] 1-800-8-7267864 [Globe landline amd Mobile] 02-4222111 [Other landline]	www.samsung.com/ph/support
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com/sg/support
VIETNAM	1 800 588 889	www.samsung.com/vn/support
SOUTH AFRICA	0860-SAMSUNG(726-7864)	www.samsung.com/support

This product is RoHS compliant.

WT70H3200MG/NQ
WT90H3230MG/NQ
WT70H3200MG/SG
WT90H3230MG/SG
WT80H3200MG/FH
WT10H3230MG/FH



آلة الغسيل

دليل المستخدم

تخيل الاحتمالات

نشكرك على شراء هذا المنتج من سامسونج

SAMSUNG

الميزات

الفهرس

2	المواصفات
2	تعليمات السلامة
2	تنبيه
3	احتياطات عند التشغيل
4	شرح الأجزاء
5	لوحة التحكم
6	تنظيف الجهاز
6	التركيب
6	تنظيف جيوب الغسالة
6	تنظيف حوض الغسيل
6	إجراءات التنظيف
6	بيئة
6	توصيل خرطوم التصريف
6	الغسل
7	الغسيل الثقيل
7	النفخ
7	عملية التجفيف
8	دليل الغسيل
8	الغسل بالماء الزائد
8	مغزل الشطف
9	الصيانة
9	اكتشاف الأخطاء وإصلاحها
10	الميزات

● محرك دوران مزدوج (اختياري).

- بدوران الشفرة الداخلية والخارجية بسرعات مختلفة، يتم إنشاء تيارين مائيين التي تم إنشاؤها اللذان يضمنان الحصول ملابس نظيفة دون ضرر أقل مقارنته مع الغسالة التقليدية. محرك الدوران المزدوج مثل التيارات المائية يعزز قوة كل الغسيل والشطف ويقلص من حدة الاضرار غير الضرورية ويخلق متانة وموثوقية للأقمشة ويجعلها ناعمة ويمنع من التوائها وتعقدها.

● نافذة شفافة (اختياري)

- النافذة الشفافة هو مفهوم جديد لحل فضول المستخدمين لرؤية داخل الغسالة أثناء التشغيل. أثناء العمل، وتقدم عملية الغسيل داخل الغسالة ويمكن التحقق من العمل من خلال النظر الى النافذة الشفافة.

تعليمات السلامة

- يجب اتباع التحذيرات والاحتياطات اللازمة للسلامة لمنع الأخطار التي لا يمكن التنبؤ بها والاضرار عن طريق الاستخدام السليم والأمان.

تنبيهات

- لا تضع يديك في سلة وضع الملابس أثناء هو الدوران. يمكن صيد أصابعك بواسطة شفرات الدوران أثناء الغسيل أو التجفيف.
- لم تسمح للأطفال بالعمل أو اللعب مع الغسالة. الأطفال الذين يلعبون مع الغسالة قد يقعون بطريق الخطأ في حوض الغسيل.
- لا تصعد على غسالة أو غطائها.



تعليمات حول علامة نفايات المعدات الكهربائية (WEEE) يرجى التخلص الصحيح من هذا المنتج (النفايات معدات كهربائية والإلكترونية)

هذه العلامة على المنتج ومرفقاته أو على الدليل تشير إلى أن المنتج وملحقاته الإلكترونية لا ينبغي التخلص منها مع النفايات المنزلية الأخرى في نهاية فترة عملها. لتجنب أي ضرر بالبيئة أو بصحة الإنسان ناتج عن التخلص غير المسؤول من النفايات، يرجى فصل هذه العناصر عن أنواع النفايات الأخرى، كما ينبغي إعادة تدويرها بطريقة مسؤولة لتعزيز إعادة استخدامها بشكل مناسب.



لمزيد من المعلومات حول التخلص من وإعادة تدوير المنتجات الإلكترونية والكهربائية يرجى زيارة موقعنا على الانترنت www.samsung.com أو الاتصال بخط المساعدة على الرقم - 8282 266 1800 ، 8282 3000 1800



- يجب اتباع التحذيرات أدناه عندما تعمل الغسالة. لا تسقط صينية الغسيل في الحوض عند التشغيل.




- ضع الملابس فقط صينية وضع الملابس الخاصة للغسيل. الملابس الثقيلة والأشياء الأخرى يجب إبعادها.




- لا تضع الشموع والأشياء الساخنة على الغسالة.

- كن قادر على تعليق صينية الغسل على جانب الخطاف، أثناء تشغيل غسالة أو عدم تشغيلها.

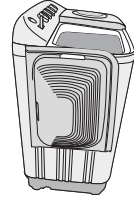


- أفضل سلك الطاقة من مصدر الطاقة عندما لا تكون قيد الاستعمال.
- يجب عدم إعاقة فتحات التهوية بواسطة السجاد عند تثبيت الغسالة على أرضية مغطاة بالسجاد.
- في حالة تلف سلك الإمدادات، يجب أن استبداله من قبل الشركة المصنعة، أو وكيل خدماتها أو الأشخاص المؤهلين من أجل تجنب المخاطر.
- لتجنب التسرب والأضرار يجب ملء هذا الجهاز مع مشغل المرفق باستخدام ضغط المياه المعتدل فقط.
- لآلات الغسيل ذات فتحات التهوية في القاعدة، يجب منع السجاد كي يعيق الفتحات.
- لا تستخدم محول أو وصلة تمديد لسلك التيار لتوفير الطاقة لآلة الغسيل.
- لا يجب استخدام الجهاز من قبل أشخاص (بمن فيهم الأطفال) إذا كانت قدراتهم الجسدية والعقلية غير عالية، أو عدم وجود الخبرة والمعرفة، إلا إذا حصلوا على إشراف أو تعليمات بخصوص استخدام الجهاز من قبل شخص مسؤول عن سلامتهم.
- وينبغي أن يكون الأطفال تحت إشراف للتأكد من أنها لا تلعب مع الجهاز.

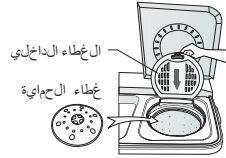

- تأكد تغطية الغسالة بالغطاء الداخلي أثناء الغسيل قبل دوران محرك الغسالة. هذا يمنع قذف الملابس خارجا وتلفها.

- تأكد من ان وضع خرطوم شفط الماء (A) نحو الأسفل.

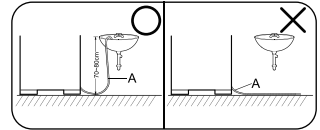

- الملابس الثقيلة أو الأحمال الثقيلة صينية الغسيل قد يجعلها تهتز وتسقط الغسالة. لا تزيد من كمية الماء في حوض الغسيل.
- لا تسحب مفاتيح التشغيل. المفاتيح لا يمكن ازلتها من على لوحة التحكم.

⚠ احتياطات عند التشغيل

- لا تستخدم الماء الساخن بشكل مفرط (50 درجة مئوية أو أكثر) الأمر الذي يسبب تلف القطع البلاستيكية. أيضا، قد يحدث اهتزاز في الملابس أو تغير لونها. لا تقم بتوصيل إمدادات المياه الساخنة.




- قبل الغسيل، افحص جميع الجيوب. إذا بقيت المسامير أو الدبابيس في الجيوب، فإنها قد تؤدي إلى تلف الغسالة أو الملابس.
- اغلق صنبور الماء قليلا إذا كان ضغط المياه عالية جدا.
- لتجنب رذاذ الماء، أغلق غطاء حوض الغسيل.
- لا ترش الماء على لوحة التحكم.
- إخراج ممتلكاتك الشخصية من الجيوب.









- افحص الجيوب! دبابيس الشعر والنقود تسبب أضرار للملابس والغسالة. وتسبب ضوضاء ومشاكل في الجهاز. يجب فحص جيوب الملابس جيدا.

شرح الأجزاء

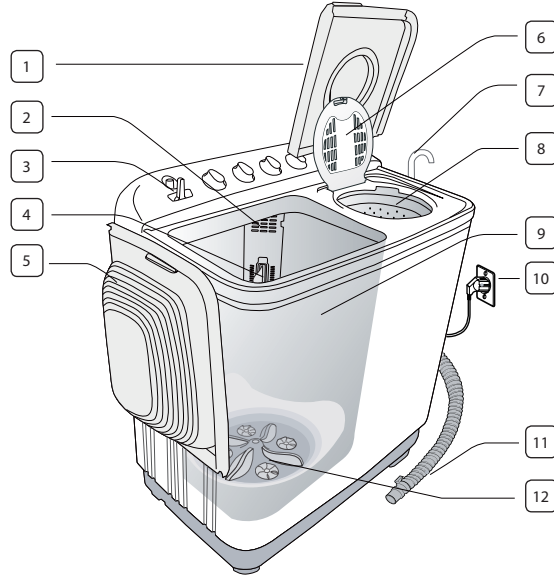

1	غطاء معزل التجفيف عند فتح الغطاء جينما يدور حوض الغسالة، سيتم إيقاف الدوران من قبل نظام الأمان.
2	مرشح الماء الزائد
3	محدد الغسالة
4	جيوب الغسالة تستخدم هذه لجمع الأوساخ التي تنتج أثناء الغسيل.
5	صينية الغسل اترك صينية الغسل مغلقة أثناء الغسل أو التجفيف.
6	الغطاء الداخلي
7	خروم التفريغ (مزود بمضخة)
8	سلة معزل التجفيف
9	حوض الغسل
10	سلك التيار الموصل في الشكل قد لا يتطابق مع الموصل الفعلي.
11	خرطوم شفط الغسل
12	محرك الدوران

لوحة التحكم

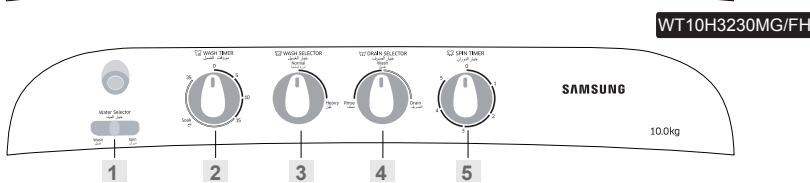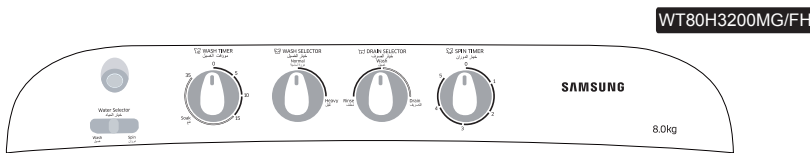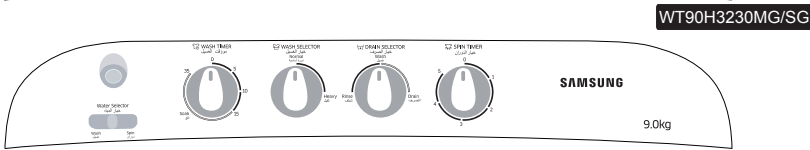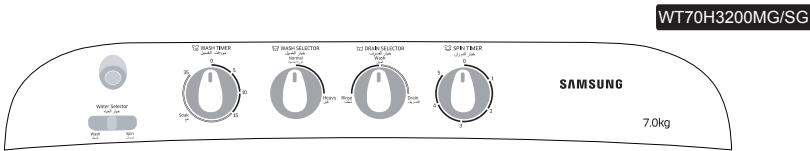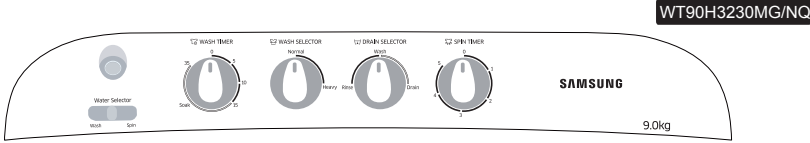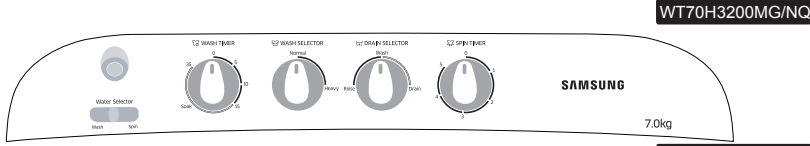

أثناء الغسيل ينبغي اختيار مفتاح تحديد الماء للغسل. أثناء الشطف، ينبغي اختيار مفتاح تحديد الماء لزيادة ونقصان المياه.	محدد الماء	1
يستخدم هذا لضبط وقت الغسل، 1-15 دقيقة، ويمكن إغلاق وظيفة "النقع" بنسبة 1-20 دقيقة.	مؤقت الغسل	2
يمكنك غسل الغسيل بشكل فعال عن طريق وسائل مختلفة.	محدد الغسل	3
يستخدم هذا لتعيين غسل / شطف أو تجفيف	محدد التجفيف	4
ويستخدم هذا لضبط وقت الدوان، 1-5 دقيقة.	مؤقت المغزل	5

التركيب

بيئة

- كيفية نقل الجهاز. يتم توفير عجلات لنقل الجهاز بسهولة.
- امسك الجهاز بقوة كما هو مبين في الشكل أدناه.




لا تتحرك الجهاز عند تحميله.

- اترك بعض المساحة. المساحة يجب ان تكون في 15 سم بين الغسالة والجدار.
- ضع الغسالة على سطح مستو قوي. إذا تم وضع الغسالة على سطح مهتز أو ضعيف، ضجيج أو اهتزاز قد يحدث. (المسموح به 2 درجة)
- لا تثبت الغسالة بالقرب من المياه. لا تضع الغسالة في غرفة مليئة بالدخان أو حيث تتعرض الغسالة مباشرة للمطر. الرطوبة قد تدمر العزل الكهربائي وتسبب خطر الصدمة الكهربائية.
- تجنب وضعها بالقرب من أشعة الشمس المباشرة أو أجهزة التدفئة. قد تتأثر مكوناتها البلاستيكية والكهربائية بواسطة الحرارة المباشرة، لا تضع الغسالة بالقرب السخانات، الغلايات، إلخ. لا تضعها تحت أشعة الشمس المباشرة.


توصيل خرطوم التصريف

إدراج خرطوم التصريف (a) وادفعه بقوة ليصبح متصلًا كما اتجاه السهم .



- ادفعه بقوة الى الأسفل نحو منفذ التصريف.
- تأكد من خرطوم التصريف بحيث لا يذهب بعيدا عن المنفذ.

توصيل مدخل الخرطوم



(أدخل مدخل الخرطوم في الغسالة)

(أدخل مدخل خرطوم إلى صنبور)

مجموعات خراطيم جديدة متوفرة مع الجهاز لاستخدامها وإعادة استخدامها لا ينبغي استخدام مجموعات خراطيم قديمة.

تنظيف الجهاز

تنظيف جيوب الغسالة

إذا علقت الأوساخ في مرشح الوبر بعد الانتهاء من الغسل، ادفع إلى الأسفل (1) لإخراجها (2) كما هو مبين في الشكل. إزالة الوبر و اشطف مرشح التصفية.




تنظيف حوض الغسيل

امسح الأوساخ من لوحة التحكم باستخدام قطعة قماش ناعمة. لا تستخدم البنزين، المخففات، المطهر، أو الشمع، ولا تفرك الغسالة بفرشاة. سوف تتضرر الأسطح المطلية أو قطع البلاستيك.

إجراءات التنظيف

الغسل


1. قبل بدء الغسيل، افحص مما يلي؛
 - وصل خرطوم مدخل المياه وصنبور الماء.
 - قم بتوصيل سلك الطاقة إلى منفذ امدادات الطاقة.
 - وضع خرطوم التصريف (A) الى الأسفل نحو المجرى.

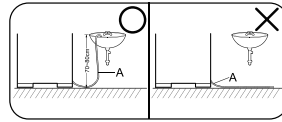

2. قم بتعيين محدد الغسالة طبيعي / ثقيل إلى الوضع المطلوب.



2. تأكد من تركيب غطاء الحماية واغلق الغطاء الداخلي.

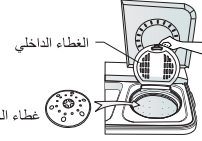

3. اغلق غطاء معزل التجفيف.



4. قم بتعيين مؤقت مغزل التجفيف 1-15 دقيقة.



5. إذا لم يتم الغزل والتجفيف. (الاهتزاز الشديد أو عدم الاتزان)
انظر "عند التحميل..." في الصفحة 9.

الغسيل الثقيل

1. قم بتعيين مفتاح محدد طبيعي/ثقيل الى طبيعي/ثقل



2. قم بتوفير كمية مناسبة من الماء حتى لا تتجاوز الجزء العلوي من حوض الغسيل

3. قم بتعيين مؤقت الغسل 1-15 دقيقة



4. بعد عملية الغسل، قم بتعيين مفتاح محدد التصريف الى "تصريف" لأجراء عملية التجفيف.




5. قم بتكرار هذه العملية حتى يصبح الماء نظيفا (2 الى 3 مرات).

6. تأكد من تركيب خرطوم التصريف.

3. قم بتعيين محدد الماء.



4. قم بوضع الملابس في حوض الغسل

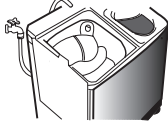

5. أملئ حوض الغسل بالماء.




6. حدد مؤقت الغسل.



قم بتعيين مؤقت الغسل 1-15 دقيقة (اختياري)

7. بعد عملية الغسل، قم بتعيين مفتاح محدد التصريف الى "تصريف" لأجراء عملية التجفيف.




النقع

1. وضع الملابس في حوض المياه الغسيل.
2. أدر الصنبور أو استخدام الدلو لملء المياه في الحوض بالكمية المطلوبة من المياه.
3. ضع المنظفات اعتمادا على حجم المياه ومؤشرات حزمة المنظفات.
4. اضبط مؤقت الغسالة الى نقطة بين 35 و 15 دقيقة.
 - نقع الغسيل تلقائيا يبدأ العمل (15 دقيقة) بعد النقع (2-20 دقيقة) تنتهي عملية النقع.
 - وظيفة النقع (20 دقيقة) تتكرر دوريا 1.5 الى 2.0 دقيقة. تعمل 5 دقائق، لـ 3 مرات.

عملية التجفيف


1. انقل الملابس الى سلة التجفيف وقم بترتيب الملابس بشكل متساو.

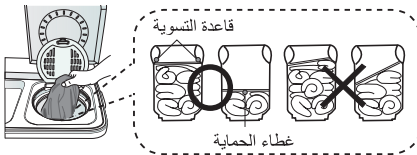

الغسل بالماء الزائد


1. استمر في امداد الماء.

قم بضبط ضغط المياه لضمان أن كمية المياه المزودة لا تتجاوز أن تصريف المياه.



2. قم بتعيين مؤقت الغسل 6-8 دقيقة

3. طالما وان مؤقت الغسل مغلقا، اغلق صنبور الماء.



4. قم بتعيين مفتاح محدد التصريف الى "تصريف" لأجراء عملية التجفيف.





مغزل الشطف

بعد الشطف يمكنك اختيار هذه الدورة لشطف أكثر فعالية (بالطبع، لا تتم بتحديد هذا لشطف فقط).


1. تحميل الغسيل بالتساوي في سلة تدور.




2. قم بتوصيل انبوب مدخل المياه. ثم قم بتعيين محدد المياه إلى الجانب الأيمن. وضبط الوقت الغزل حسب طلبك.



3. بعد وقف إمدادات المياه، قم بتغطية الغسالة بغطاء الحماية قم اغلق الغطاء الداخلي.

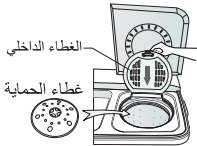

4. إغلاق غطاء مغزل التجفيف.



5. قم بتعيين مؤقت التجفيف 2-3 دقيقة

دليل الغسيل

زمن الغسل

نوع الملابس	زمن الغسيل	نوع الغسل
الأقمشة الثقيلة المشبعة للغاية	10 إلى 35 دقائق (تغ 20)	ثقل
الكتان، القطن، وغيرها	8 إلى 10 دقائق	
الملابس العادية (الملابس الداخلية، الخ)	7 دقائق	دورة أساسية
الألياف الاصطناعية المشبعة قليلا	5-2 دقائق	
100% من الصوف، حياكة الصوف مختلطة، الألياف الاصطناعية رقيقة مع علامات غسل البدين.	5-2 دقائق	

المنظفات

كمية المنظفات	مستوى الماء
40 غرام	منخفضة (40 لتر)
50 غرام	ميد (50 لتر)
61 غرام	عالية (61 لتر)
66 غرام	عالية الأول (66 لتر)

كمية المنظفات متوسطة. اتبع تعليمات المنظفات المطبوعة على حزمة المنظفات. اختيار كمية المنظفات تبعا لنوع النسيج.


زمن مغزل التجفيف

نوع الغسيل	الزمن
رفيع (الألياف الصناعية)	1 دقيقة .
صوف	2 ~ 1 دقيقة .
قطن	5 ~ 3 دقائق .
سميك (القطن)	5 دقائق.

الصيانة

عند تحميل الغسيل في سلة الغزل.

اضغط على الغسيل بالتساوي ثم ضع غطاء الحماية على سلة الأسطوانة الغزل كما هو مبين في الشكل.

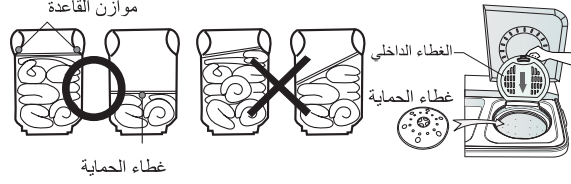

اكتشاف الأخطاء واصلاحها

المشكلة	الفحص ما
الغسالة لا تعمل	<p>تأكد من أن التيار الكهربائي في حالة جيدة.</p> <p>تأكد من إدخال قابس الطاقة بشكل صحيح.</p> <p>تأكد من أن مفتاح الوقت الغسل أو الوقت الغزل ليسا على الموضع "0".</p>
خرطوم التصريف لا يعمل.	<p>تأكد من أن خرطوم التصريف ليس موضوع عالي.</p> <p>تأكد من أن خرطوم التصريف غير مجمدة .</p>
هناك ضجيج غير طبيعي أثناء الغسل.	<p>تأكد من عدم وجود نقود أو أي أجسام غريبة أخرى في حوض الغسيل. أن خرطوم التصريف قد يتسدّد.</p>
هناك ضجيج غير طبيعي واهتزاز عنيف أثناء الغزل.	<p>تأكد من وضع الغسالة على سطح مستو، ومستقر.</p> <p>تأكد من توزيع الملابس بالتساوي في الحوض.</p> <p>تأكد من عدم تسرب مواد غسيل أو رغوة خارج الحوض.</p>

المواصفات

المغزل	الفصل	الموديل	
4.6 كجم	7.0 كجم	WT70H3200MG/NQ	السعة
	9.0 كجم	WT90H3230MG/NQ	
	7.0 كجم	WT70H3200MG/SG	
	9.0 كجم	WT90H3230MG/SG	
	8.0 كجم	WT80H3200MG/FH	
	10.0 كجم	WT10H3230MG/FH	
W832xD483xH872 ملم		WT70H3200MG/NQ WT70H3200MG/SG WT80H3200MG/FH	الابعاد (عرض * عمق * ارتفاع) ملم
W832xD483xH902 ملم		WT90H3230MG/NQ WT90H3230MG/SG WT10H3230MG/FH	
0, 1~0,6 ميغا باسكال			ضغط الماء
23 كجم		WT70H3200MG/NQ WT70H3200MG/SG WT80H3200MG/FH	الوزن
24 كجم		WT90H3230MG/NQ WT90H3230MG/SG WT10H3230MG/FH	
منخفض: 40 لتر، متوسط: 50 لتر، مرتفع: 61 لتر، مرتفع أكثر: 66 لتر			جودة الماء القياسية
التغسيل 35 دقيقة (النقع 20) / الغزل والتجفيف 5 دقائق			معدل الوقت



أي أسئلة أو تعليقات؟

الدولة	مركز الاتصال	الموقع الإلكتروني
روسيا	8-800-555-55-55	www.samsung.com/ru/support
أستراليا	1300 362 603	www.samsung.com/au/support
الهند	1800 3000 8282 الرقم المجاني 1800 266 8282 الرقم المجاني	www.samsung.com/in/support
ماليزيا	1800-88-9999 (لاصرتال فقي رط) 603-77137477	www.samsung.com/my/support
الفلبين	[1-81-800-10-7267864 [PLDT 7267864-8-800-1 [الهاتف الثابت عالمي AMD موبايل] 4222111 02 [الهاتف الثابت أخرى]	www.samsung.com/ph/support
سنغافورة	1800-SAMSUNG(726-7864)	www.samsung.com/sg/support
فيتنام	1 800 588 889	www.samsung.com/vn/support
جنوب أفريقيا	0860-SAMSUNG(726-7864)	www.samsung.com/support

هذا المنتج متوافق مع معيار RoHS