

The Samsung logo is displayed in white, bold, uppercase letters inside a dark gray oval shape.

HW-H760

User manual

Wireless Audio - Soundbar

Imagine the possibilities

Thank you for purchasing this Samsung product.

To receive a more complete service, please register your product at

www.samsung.com/register

FEATURES

TV SoundConnect

TV SoundConnect lets you listen to audio from your TV on your Soundbar via a Bluetooth connection and lets you control the sound.

HDMI

HDMI transmits video and audio signals simultaneously, and provides a clearer picture.

The unit is also equipped with the ARC function which lets you listen to sound from your TV through the Soundbar via an HDMI cable. This function is only available if you connect the unit to an ARC compliant TV.

Surround Sound Expansion

The Surround Sound Expansion feature adds depth and spaciousness to your listening experience.

Surround Sound Expansion is powered by Sonic Emotion.

Wireless Subwoofer

Samsung's wireless module does away with cables running between the main unit and the subwoofer.

Instead, the subwoofer connects to a compact wireless module that communicates with the main unit.

Special Sound Effects

You can select different Sound Effects - CINEMA / SPORTS / VOICE / MUSIC / STANDARD (Original Sound) - depending on the type of content you want to enjoy.

Multi-function Remote Control

You can use the supplied remote control to control various operations with the simple press of a button.

USB Host Support

You can connect and play music files from external USB storage devices such as MP3 players, USB flash memory, etc. using the Soundbar's USB HOST function.

Bluetooth Function

You can connect a Bluetooth device to the Soundbar and enjoy music with high quality stereo sound, all without wires!

Multiroom Link

Once the Soundbar is connected to a smart device with Multiroom Link App, you can connect multiple Samsung Multiroom devices together wirelessly.

LICENSES



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0 Channel is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

HDMI





The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

- To send inquiries and requests regarding open sources, contact Samsung via Email (oss.request@samsung.com).

SAFETY INFORMATION

SAFETY WARNINGS

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK).
NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

	<div>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</div>			This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.
				This symbol indicates important instructions accompanying the product.

WARNING : To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.


CAUTION : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

- This apparatus shall always be connected to a AC outlet with a protective grounding connection.
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.


CAUTION

- Do not expose this apparatus to dripping or splashing. Do not put objects filled with liquids, such as vases on the apparatus.
- To turn this apparatus off completely, you must pull the power plug out of the wall socket. Consequently, the power plug must be easily and readily accessible at all times.


PRECAUTIONS

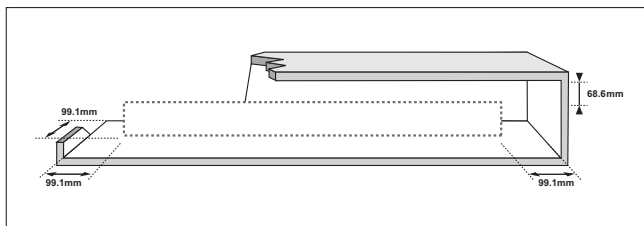

Ensure that the AC power supply in your house complies with the power requirements listed on the identification sticker located on the back of your product. Install your product horizontally, on a suitable base (furniture), with enough space around it for ventilation 7~10 cm. Make sure the ventilation slots are not covered. Do not place the unit on amplifiers or other equipment which may become hot. This unit is designed for continuous use. To fully turn off the unit, disconnect the AC plug from the wall outlet. Unplug the unit if you intend to leave it unused for a long period of time.

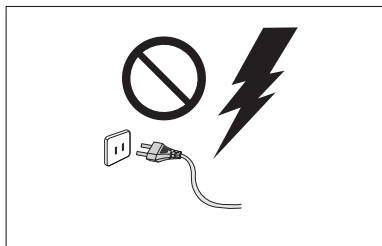


During thunderstorms, disconnect the AC plug from the wall outlet. Voltage peaks due to lightning could damage the unit.

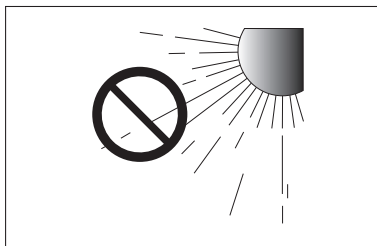


Do not expose the unit to direct sunlight or other heat sources.

This could lead to overheating and cause the unit to malfunction.

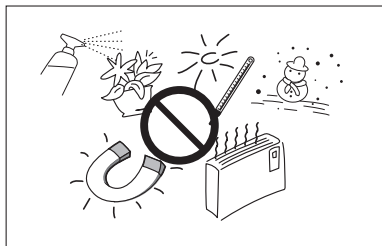

Protect the product from moisture (i.e. vases), and excess heat (e.g. a fireplace) or equipment creating strong magnetic or electric fields. Disconnect the power cable from the AC supply if the unit malfunctions. Your product is not intended for industrial use. It is for personal use only.

Condensation may occur if your product has been stored in cold temperatures. If transporting the unit during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

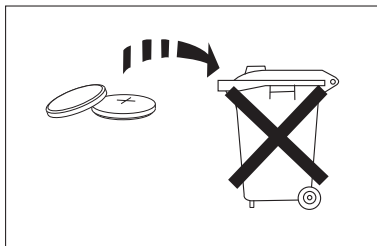

The batteries used with this product contain chemicals that are harmful to the environment.

Do not dispose of batteries in the general household trash.

Do not dispose of batteries in a fire.

Do not short circuit, disassemble, or overheat the batteries.

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type.

CONTENTS

2 FEATURES

- 2 Licenses

3 SAFETY INFORMATION

- 3 Safety Warnings
- 4 Precautions

6 GETTING STARTED

- 6 Before reading the User's Manual
- 6 What's Included

7 DESCRIPTIONS

- 7 Front/Bottom Panel
- 8 Rear Panel

9 REMOTE CONTROL

- 9 Remote Control Buttons and Functions

11 CONNECTIONS

- 11 Installing the Wall Mount
- 12 Detaching the Wall Mount
- 12 Installing the bracket without referring to the Wall-mount Installation Guide
- 13 Connecting the Wireless Subwoofer
- 14 Attaching the Toroidal Ferrite Core to the Soundbar Power Cord
- 15 Connecting an External Device using an HDMI cable
- 16 Connecting an External Device using Optical (digital) cable or Audio (analogue) cable
- 16 Assembling the Cable Clip

17 FUNCTIONS

- 17 Input Mode
- 17 ARC (HDMI OUT)
- 18 Bluetooth
- 20 TV SoundConnect
- 21 USB
- 22 Using the Network Standby On function
- 22 Using the AUTO POWER LINK Function
- 23 Using the Multiroom Link
- 25 Software update

26 TROUBLESHOOTING

27 APPENDIX

- 27 Specifications



- Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance.
- An administration fee may be charged if either
 - (a) an engineer is called out at your request and there is no defect with the product (i.e. where the user manual has not been read).
 - (b) you bring the unit to a repair centre and there is no defect with the product (i.e. where the user manual has not been read).
- You will be informed of the administration fee amount before a technician visits.

GETTING STARTED

BEFORE READING THE USER'S MANUAL

Note the following terms before reading the user manual.

► Icons used in this manual

Icon	Term	Definition
	Caution	Indicates a situation where a function does not operate or settings may be canceled.
	Note	Indicates tips or instructions on the page that help you operate a function.

► Safety Instructions and Troubleshooting

- 1) Be sure to familiarise yourself with the Safety Instructions before using this product. (See page 3)
- 2) If a problem occurs, check Troubleshooting. (See page 26)


► Copyright

©2014 Samsung Electronics Co.,Ltd.

All rights reserved; no part of this user's manual may be reproduced or copied without the prior written permission of Samsung Electronics Co.,Ltd.

WHAT'S INCLUDED


Check for the supplied accessories shown below.

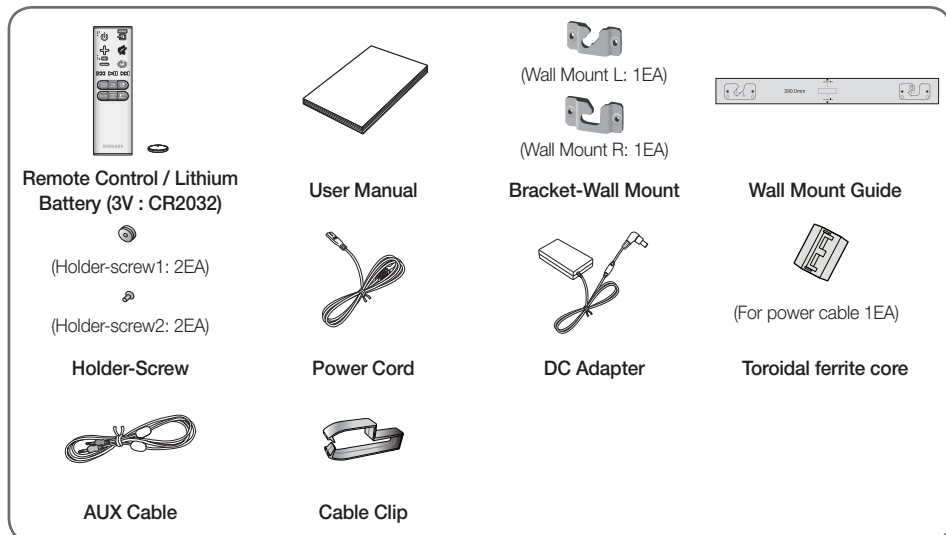

- The appearance of the accessories may differ slightly from the illustrations above.

DESCRIPTIONS

FRONT/BOTTOM PANEL

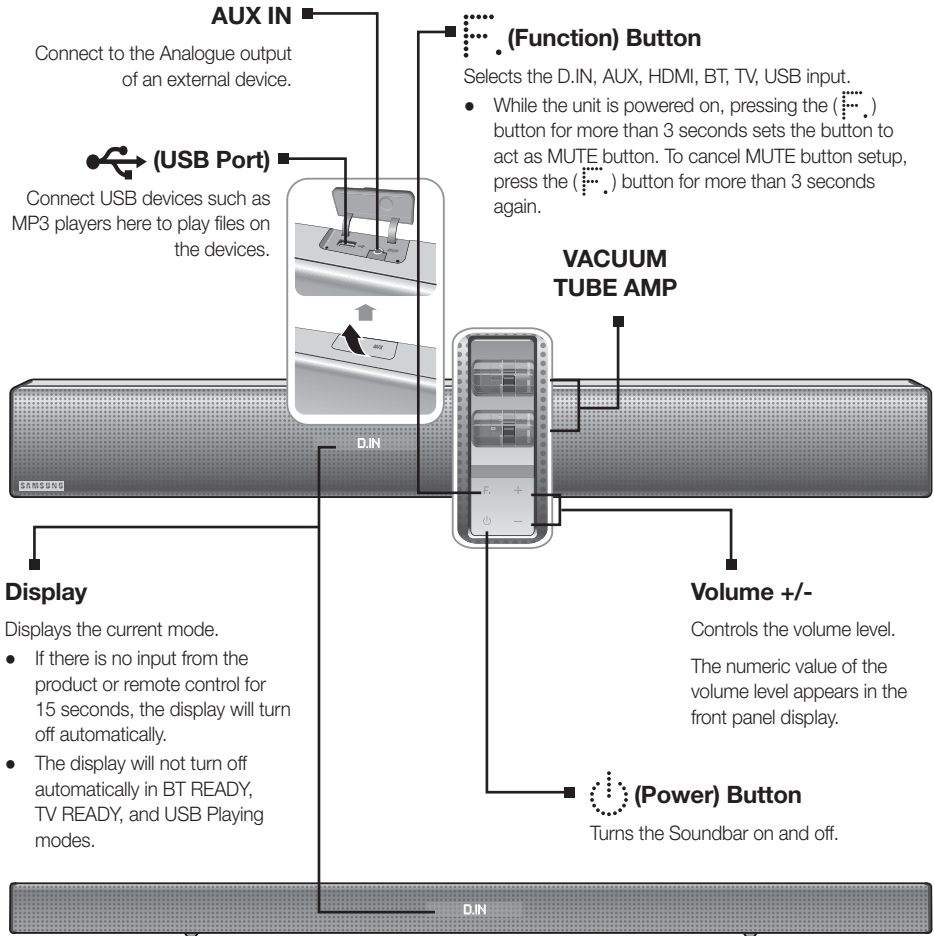

- When you turn on this unit, there will be a 10 to 12 second delay before it produces sound.
- Do not bring cellular phones or mobile devices near the vacuum tube amp, or put other electronic devices on the top of the product. Signals from these devices can cause noise or distortion in the audio.
- Do not let children touch the product's surface when the set is on. It will be hot.
- Open the USB COVER to use USB or AUX port.

REAR PANEL

WPS/Wi-Fi SETUP Button


Press this button to connect your Soundbar to your network using WPS or Wi-Fi setup.

SPK ADD Button

Press the button to connect Soundbar to the HUB. (not supplied)

DC 24V (Power Supply In)

Connect the DC power adaptor to the power supply jack, and then connect the AC power adaptor plug to a wall outlet.

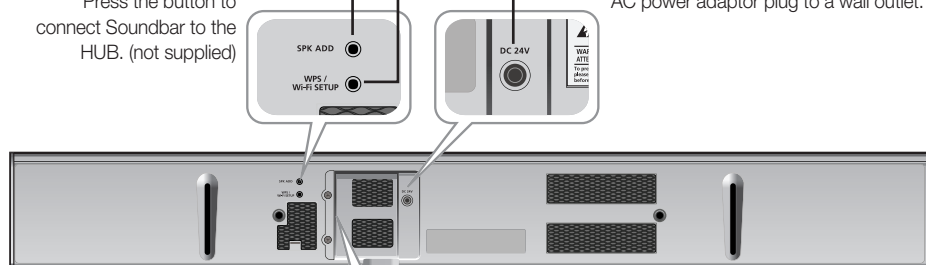

LAN


Lets you connect to a network using a LAN cable.

HDMI IN

Inputs digital video and audio signals simultaneously using an HDMI cable. Use when connecting a supported external device.

HDMI OUT (TV)

Outputs digital video and audio signals simultaneously using an HDMI cable.

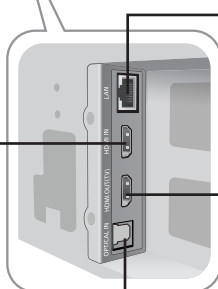

OPTICAL IN


Connect to the digital (optical) output of an external device.



- When disconnecting the power cable of the AC power adaptor from the wall outlet, pull the plug. Do not pull the cable.
- Do not connect this unit or other components to an AC outlet until all connections between components are complete.

REMOTE CONTROL

REMOTE CONTROL BUTTONS AND FUNCTIONS



SOURCE
Press to select a source connected to the Soundbar.

MUTE
You can turn the volume down to 0 with the push of a button. Press again to restore the sound to the previous volume level.

REPEAT
Press to set the REPEAT function during music playback from a USB device.
REPEAT OFF : Cancels Repeat Playback.
REPEAT FILE : Repeatedly play a track.
REPEAT ALL : Repeatedly play all tracks.
REPEAT RANDOM : Plays tracks in random order.
(A track that has already been played may be played again.)

Skip Forward
If there is more than one file on the device you are playing, and you press the ►► button, the next file is selected.


AUDIO SYNC
If the Soundbar is connected to a digital TV and the video appears out of sync with the audio, press the **AUDIO SYNC** buttons to sync the audio with the video. Use the ◀◀, ►► buttons to set the audio delay between 0 ms and 300 ms. In USB mode, TV mode, and BT mode, the Audio Sync function may not work.
Press and hold the **AUDIO SYNC** button on the remote for over 7 seconds to activate **Wi-Fi SETUP** function.

DIMMER/AnyNet+
DIMMER : Press the **DIMMER/AnyNet+** button to control the brightness of the VACUUM TUBE AMP. DIMMER does not function for 30 seconds after you turn on the product for the very first time.
AnyNet+ : Press and hold the **DIMMER/AnyNet+** button for more than 5 seconds to turn the AnyNet+ function and AUTO POWER LINK function on or off. The AnyNet+ function lets you control the Soundbar with the remote from an AnyNet+ compatible Samsung TV. The Soundbar must be connected to the TV via an HDMI cable. See page 22 for details about AUTO POWER LINK.


TREBLE BASS
Press to select Treble or Bass. Then, use the ◀◀, ►► button to adjust the Treble or Bass volume from -3 to +3.



- Soundbar is a Samsung proprietary name.
- Operate the TV using the TV's remote control.

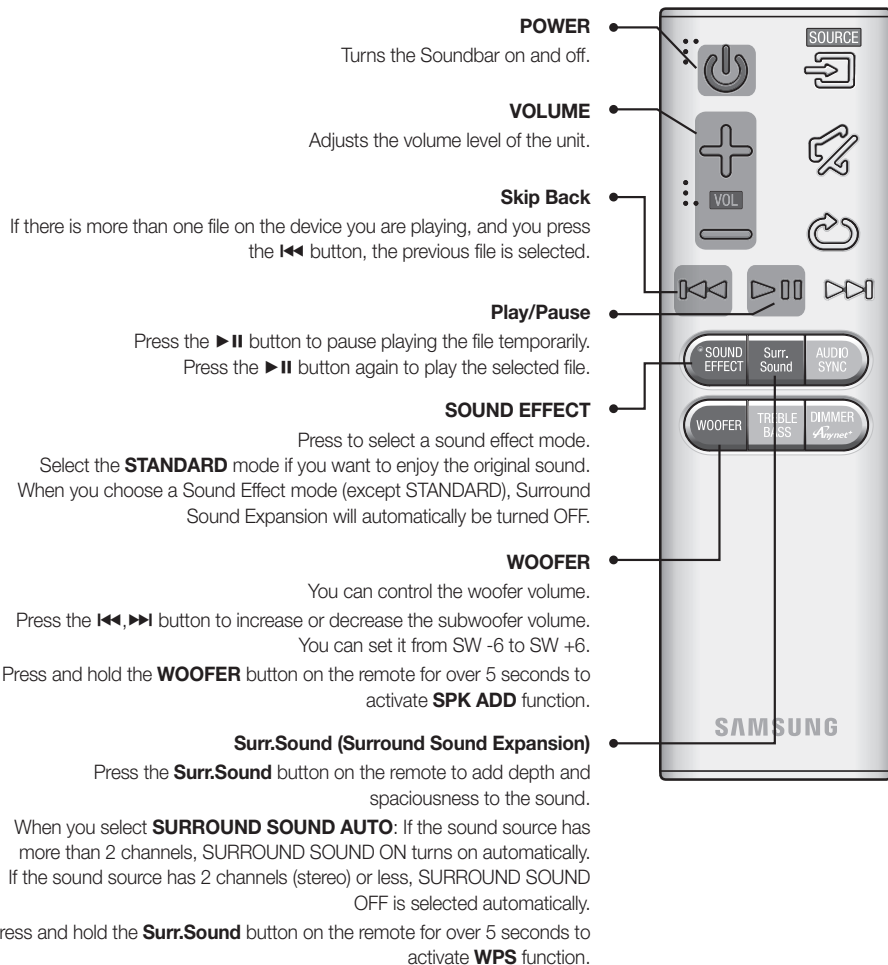

► Installing the Batteries in the Remote Control

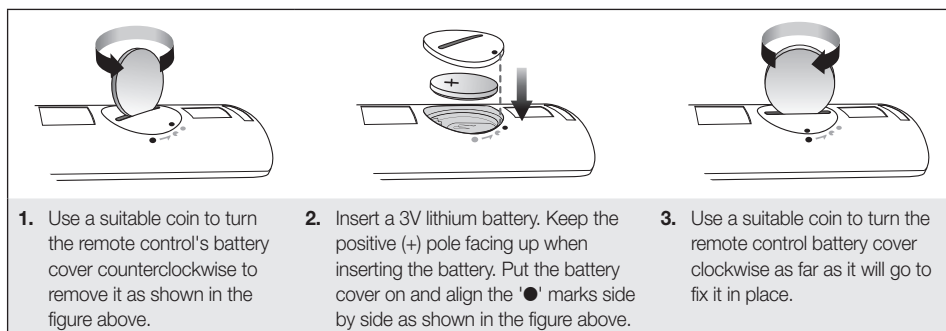

CONNECTIONS

INSTALLING THE WALL MOUNT

You can use the wall mount bracket to mount this unit on a wall.

► Installation Precautions

- Install on a vertical wall only.
- For the installation, avoid a location with high temperature or humidity, or a wall that cannot sustain the weight of the set.
- Check the strength of the wall. If the wall is not strong enough to support the unit, reinforce the wall or install the unit on a different wall that can support the unit's weight.
- Purchase and use the fixing screws or anchors appropriate for the kind of wall you have (plaster board, iron board, wood, etc.). If possible, fix the support screws into wall studs.
- Purchase wall mounting screws according to the type and thickness of the wall you will mount the Soundbar on.
 - Diameter : M5
 - Length: L 35 mm or longer recommended

- Connect cables from the unit to external devices before you install it on the wall.
- Make sure the unit is turned off and unplugged before you install it. Otherwise, it may cause an electric shock.

1. Place the installation guide against the wall surface.
 - The installation guide must be level.
 - Install at least 5 cm below the TV, if the TV is mounted on the wall.

2. Mark the location where the screws will go through on the wall using a pen, and then remove the installation guide.





3. Fasten the wall mounts and screws to the marked locations.

- The left and right mounts are different shapes.


4. Secure the two holder screws to the screw holes on the back of the Soundbar's main body, one on the left and one on the right.

5. Dust may be introduced into the Soundbar's inside if mounted on the wall. Make sure to keep the USB COVER closed.

6. Set the holder screws on the back of the Soundbar into the grooves of the wall mount. For safe installation, make sure to push the holder screws all the way to the bottom of the grooves.

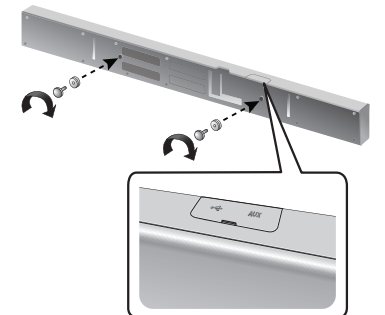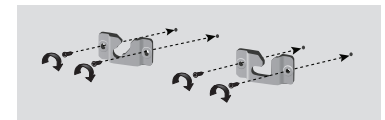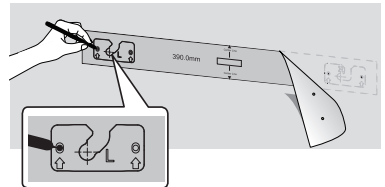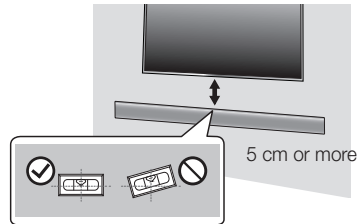


Using the Soundbar with Wall Mount




[Wall Mounting the Soundbar]

DETACHING THE WALL MOUNT

1. Pull the Soundbar upwards as shown in the figure to separate it from the wall mount.

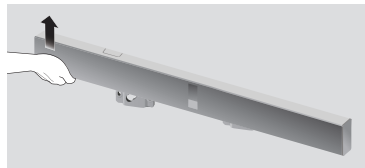

Using the Soundbar with Wall Mount




[Detaching the Soundbar from the Wall Mount]



- Do not hang onto the installed unit and avoid striking or dropping the unit.
- Secure the unit firmly to the wall so that it does not fall off. If the unit falls off, it may cause an injury or damage the product.
- When the unit is installed on a wall, please make sure that children do not pull any of the connecting cables, as it may cause it to fall.
- For the optimal performance of a wall mount installation, install the speaker system at least 5 cm below the TV, if the TV is mounted on the wall.
- For your safety, if you do not mount the unit on the wall, install it on a secure, flat surface where it is unlikely to fall.


INSTALLING THE BRACKET WITHOUT REFERRING TO THE WALL-MOUNT INSTALLATION GUIDE

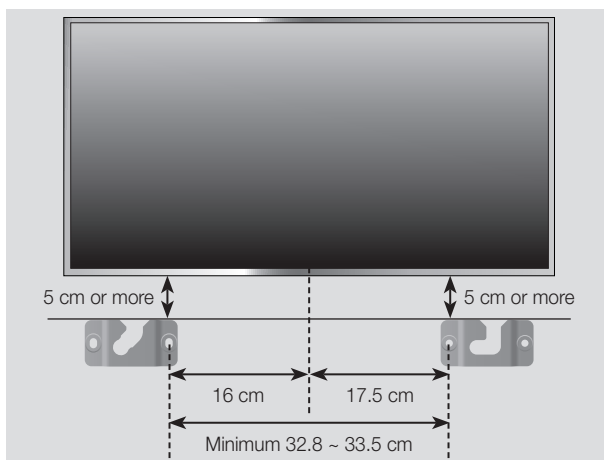




1. Place the "Wall Mount L" on the desired wall surface while paralleled to the floor as shown above, and fix a screw through the hole on its right end.
2. Place the "Wall Mount R" on the desired wall surface while paralleled to the floor as shown above, and fix a screw through the hole on its left end.
 - If Wall Mount L/R are to be mounted beneath the TV, check their fixing hole positions in steps 1 and 2, so that they are aligned appropriately to the center of the TV's bottom.
3. Fix screws through the rest of holes.

CONNECTING THE WIRELESS SUBWOOFER

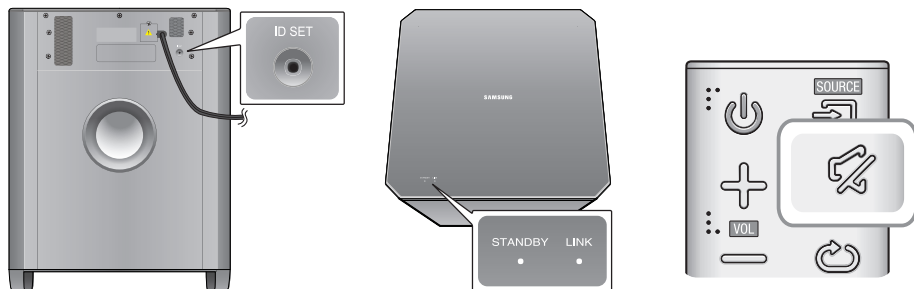The Subwoofer's linking ID is preset at the factory and the main unit and subwoofer should link (connect wirelessly) automatically when the main unit and subwoofer are turned on. If the **LINK** indicator does not light when the main unit and subwoofer are turned on, please set the ID by following the procedure below. Complete this process within 30 seconds after the Link Indicator on the subwoofer starts blinking.




1. Plug the power cords of the main unit and subwoofer into an AC wall outlet.
 2. Confirm that the main unit is off (in **STANDBY Mode**).
 3. Press the **ID SET** button on the back of the subwoofer with a small, pointed object for 5 seconds.
 - The **LINK** indicator (Blue LED) on the subwoofer blinks quickly.
 4. While the main unit is powered off (in **STANDBY mode**), press and hold the **MUTE** () on the remote control for 5 seconds.
 5. The **ID SET** message appears on the Soundbar's display.
 6. To finalise the link, turn the main unit's power on while the subwoofer's **LINK** LED blinks.
 - The main unit and the subwoofer should now be linked (connected).
 - The **LINK** indicator (blue LED) on the subwoofer should be on and solid blue.
 - If the **LINK** indicator is not solid blue, the linking process has failed. Turn off the main unit and start again from Step 2.
 - You can enjoy better sound from the wireless subwoofer by selecting a Sound Effect. (See page 10)
-
- 

- Before moving or installing the product, be sure to turn off the power and disconnect the power cord.
 - If the main unit is powered off, the wireless subwoofer will be in standby mode and the **STANDBY** LED on the upper side will come on after the **LINK** indicator (Blue LED) blinks for 30 seconds.
 - If you use a device that uses the same frequency (2.4GHz) as the Soundbar near the Soundbar, interference may cause some sound interruption.
 - The transmission distance of the wireless signal between the main unit and subwoofer is about 10 m, but may vary depending on your operating environment.
If a steel-concrete or metallic wall is between the main unit and the wireless subwoofer, the system may not operate at all, because the wireless signal cannot penetrate metal.
 - If the main unit doesn't make a wireless connection, follow steps 1-6 in the left hand column to re-set the connection between the main unit and wireless subwoofer.
-
- 

- The wireless receiving antenna is built into the wireless subwoofer. Keep the unit away from water and moisture.
 - For optimal listening performance, make sure that the area around the wireless subwoofer location is clear of any obstructions.


ATTACHING THE TOROIDAL FERRITE CORE TO THE SOUNDBAR POWER CORD

You can reduce noise caused by electromagnetic radiation by fitting the ferrite core to the your Soundbar power cord.

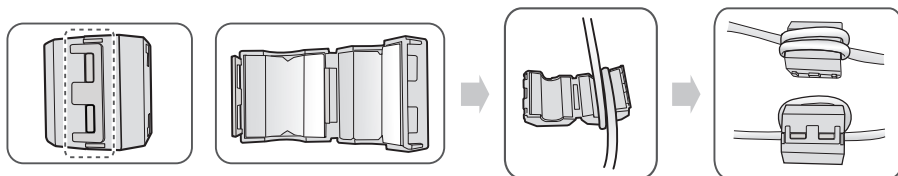

1. Unlock and open the ferrite core.
2. Wind the Soundbar power cable around the ferrite core twice.
(Start winding 5 to 10 cm away from the core).
3. Close the ferrite core by pressing it until it clicks.


<Soundbar Power Cable>

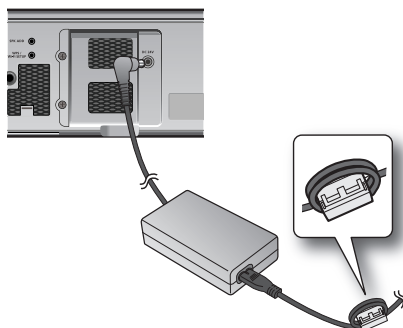

CONNECTING AN EXTERNAL DEVICE USING AN HDMI CABLE

HDMI is the standard digital interface for connecting to such TVs, projectors, DVD players, Blu-ray players, set top boxes, and more.

Because HDMI transmits the highest quality digital signal, you can enjoy superior video and audio - as it was originally created at the digital source.

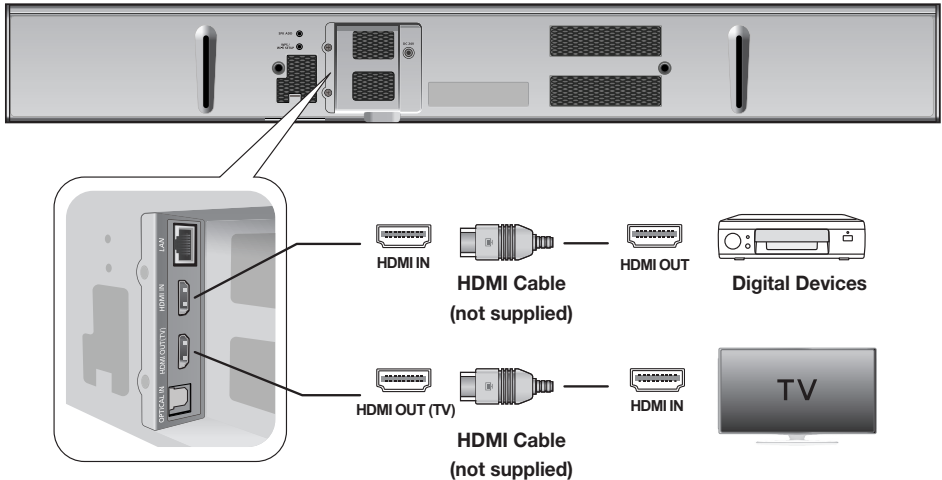

HDMI IN

Connect an HDMI cable (not supplied) from the **HDMI IN** jack on the back of the product to the HDMI OUT jack on your digital device.

and,

HDMI OUT (TV)

Connect an HDMI cable (not supplied) from the **HDMI OUT (TV)** jack on the back of the product to the HDMI IN jack on your TV.



- HDMI is an interface that enables the digital transmission of video and audio data with just a single connector.

ARC (HDMI OUT)

The ARC function allows digital audio to output via the **HDMI OUT (ARC)** port.


It can be enabled only when the Soundbar is connected to a TV that supports the ARC function.



- Anynet+ must be turned on.
- This function is not available if the HDMI cable does not support ARC.

CONNECTING AN EXTERNAL DEVICE USING OPTICAL (DIGITAL) CABLE OR AUDIO (ANALOGUE) CABLE

This unit comes equipped with one optical in digital jack and one audio Analogue in jack, giving you two ways to connect it to a TV.

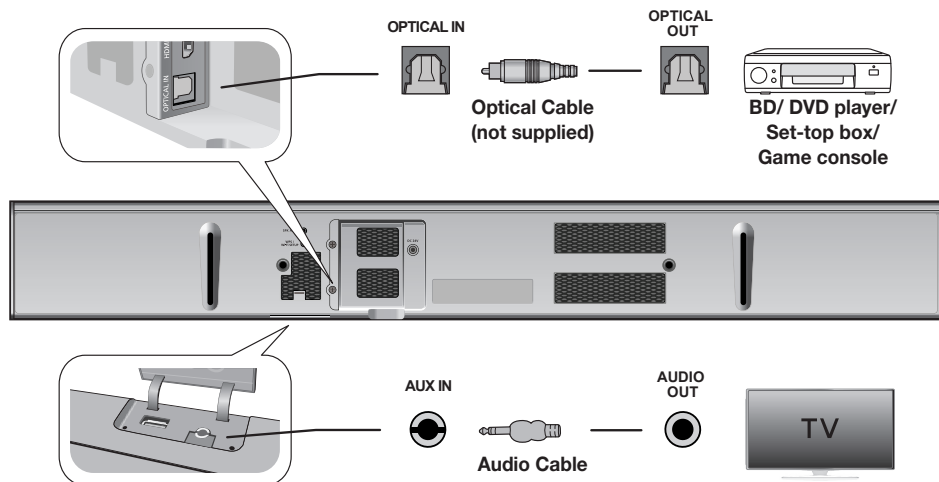

OPTICAL IN

Connect the **OPTICAL IN** (Audio) on the main unit to the OPTICAL OUT jack of the TV or Source Device.
Change the function to **D.IN**.




- Do not connect the power cord of this product or your TV to the wall outlet until all connections between components are complete.
- Before moving or installing this product, be sure to turn off the power and disconnect the power cord.

or,

AUX IN

Connect **AUX IN** (Audio) on the main unit to the AUDIO OUT jack of the TV or Source Device.
Change the function to **AUX**.

ASSEMBLING THE CABLE CLIP

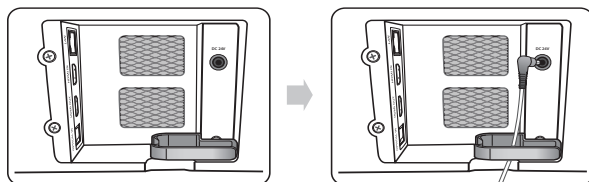


Attach the cable clip to the unit as shown, and then run the cables through the clip to keep them neat.

FUNCTIONS

INPUT MODE

Press the () button on the main unit's front panel or the  (**SOURCE**) button on the remote control to select the mode you want.

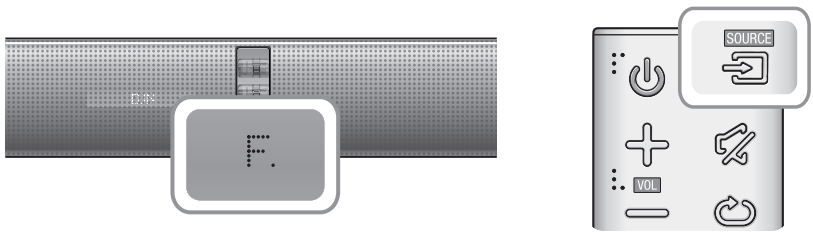


Input mode	Display
Optical Digital input	D.IN
AUX input	AUX
HDMI input	HDMI
BLUETOOTH mode	BT
TV SoundConnect	TV
USB mode	USB

The unit turns off automatically in the following situations:


- D.IN/HDMI/BT/TV/USB/ARC Mode
 - If there is no audio signal for 15 minutes.
- AUX Mode
 - If there is no KEY input for 8 hours when the AUX cable is connected.
 - If the AUX cable is disconnected for 15 minutes.





- To disable Auto Power down Off, press the  button for over 5 seconds in AUX mode.

ARC (HDMI OUT)

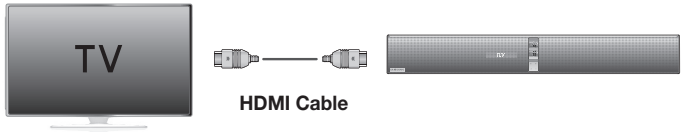ARC (Audio Return Channel) transfers digital audio signal to the HDMI OUT (ARC) port.



1. Connect the TV supporting ARC to the Soundbar with an HDMI cable.
2. Turn on the TV, and turn on the Soundbar's Anynet+.
3. Press the () button on the main unit's front panel or the  (**SOURCE**) button on the remote control to select the **D.IN** mode.




- If the HDMI cable does not support ARC feature, ARC may not work properly.
- To turn off the ARC function, turn Anynet+ off.


BLUETOOTH

You can connect a Bluetooth device to the Soundbar and enjoy music with high quality stereo sound, all without wires!

► To connect the Soundbar to a Bluetooth device

Check if the Bluetooth device supports the Bluetooth compliant stereo headset function.

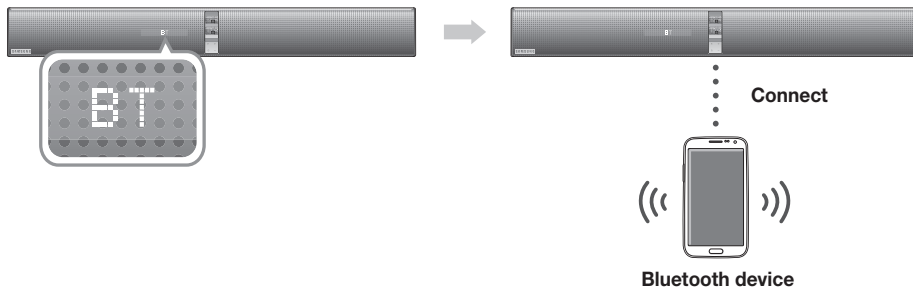

1. Press the (BT) button on the main unit's front panel or the  (SOURCE) button on the remote control to select the **BT** mode.
2. Select the Bluetooth menu on the Bluetooth device you want to connect. (Refer to the Bluetooth device's user manual.)
3. Select the Stereo headset menu on the Bluetooth device.
 - You will see a list of scanned devices.
4. Select "[Samsung] Soundbar" from the list.
 - When the Soundbar is connected to the Bluetooth device, it will display **BT READY** → **[Bluetooth Device Name]** → **BT** on the front display.
 - The device name can only be displayed in English. An underline " _ " will be displayed if the name is not in English.
 - If the Bluetooth device has failed to pair with the Soundbar, delete the previous "[Samsung] Soundbar" found by the Bluetooth device and have it search for the Soundbar again.
5. Play music on the connected device.
 - You can listen to the music playing on the connected Bluetooth device over the Soundbar.
 - In BT mode, the Play/Pause/Next/Prev functions are not available. However, these functions are available in Bluetooth devices supporting AVRCP.





- If asked for PIN code when connecting a Bluetooth device, enter <0000>.
- Only one Bluetooth device can be paired at a time.
- The Bluetooth connection will be terminated when you turn the Soundbar off.
- The Soundbar may not perform Bluetooth search or connection correctly under the following circumstances:
 - If there is a strong electrical field around the Soundbar.
 - If several Bluetooth devices are simultaneously paired with the Soundbar.
 - If the Bluetooth device is turned off, not in place, or malfunctions.
 - Note that such devices as microwave ovens, wireless LAN adaptors, fluorescent lights, and gas stoves use the same frequency range as the Bluetooth device, which can cause electric interference.
- The Soundbar supports SBC data (44.1kHz, 48kHz).
- Connect only to a Bluetooth device that supports the A2DP (AV) function.
- You cannot connect the Soundbar to a Bluetooth device that supports only the HF (Hands Free) function.

► To disconnect the Bluetooth device from the Soundbar

You can disconnect the Bluetooth device from the Soundbar. For instructions, see the Bluetooth device's user manual.

- The Soundbar will be disconnected.
- When the Soundbar is disconnected from the Bluetooth device, the Soundbar will display **BT DISCONNECTED** on the front display.

► To disconnect the Soundbar from the Bluetooth device

Press the  (**SOURCE**) button on the remote control or the () button on the product's front panel to switch from **BT** to another mode or turn off the Soundbar.

- The connected Bluetooth device will wait a certain amount of time for a response from the Soundbar before terminating the connection. (Disconnection time may differ, depending on the Bluetooth device)



- In Bluetooth connection mode, the Bluetooth connection will be lost if the distance between the Soundbar and the Bluetooth device exceeds 5 m.
- The Soundbar automatically turns off after 15 minutes in the Ready state.

More About Bluetooth


Bluetooth is a technology that enables Bluetooth-compliant devices to interconnect easily with each other using a short wireless connection.

- A Bluetooth device may cause noise or malfunction, depending on usage, when:
 - A part of your body is in contact with the receiving/transmitting system of the Bluetooth device or the Soundbar.
 - It is subject to electrical variation from obstructions caused by a wall, corner, or office partition.
 - It is exposed to electrical interference from same frequency-band devices including medical equipment, microwave ovens, and wireless LANs.
- Pair the Soundbar with the Bluetooth device while they are close together.
- The further the distance between the Soundbar and Bluetooth device, the worse the quality is. If the distance exceeds the Bluetooth operational range, the connection is lost.
- In poor reception areas, the Bluetooth connection may not work properly.
- The Bluetooth connection only works when it is close to the unit. The connection will be automatically cut off if the Bluetooth device is out of range. Even within range, the sound quality may be degraded by obstacles such as walls or doors.
- This wireless device may cause electric interference during its operation.

TV SOUNDCONNECT

You can enjoy TV sound through your Soundbar when it is connected to a Samsung TV that supports the TV SoundConnect function.

► Connecting a TV to the Soundbar

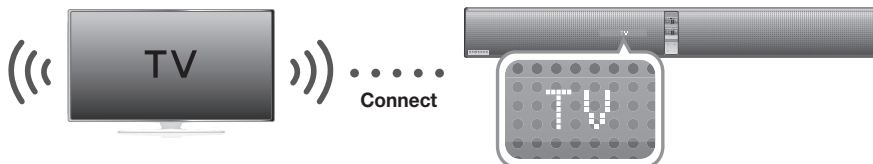

1. Turn on the TV and Soundbar.
 - Turn on the menu of the TV.
 - Move to Speaker Settings on "Sound" tab.
 - Set the "Add New Device" menu to "On".
2. Press the () button on the main unit's front panel or the (**SOURCE**) button on the remote control to select the **TV** mode.
3. On the TV, a message asking whether to enable the TV SoundConnect function. "[**Samsung**]
Soundbar" is displayed on the TV screen.
4. Select <Yes> to finish connecting the TV and Soundbar by TV remote control.




- Switching the Soundbar's mode from TV to another mode automatically terminates TV SoundConnect.
- To connect the Soundbar to another TV, the existing connection must be terminated.
- Terminate the connection to the existing TV, and then press the ►|| button on the remote control for 5 seconds to connect to another TV.




- The TV SoundConnect (SoundShare) function is supported by some Samsung TVs released from 2012 on. Check whether your TV supports the TV SoundConnect (SoundShare) function before you begin. (For further information, refer to the TV's user manual.)
- If your Samsung TV was released before 2014, check the SoundShare setting menu.
- If the distance between the TV and Soundbar exceeds 5 m, the connection may not be stable or the audio may stutter. If this occurs, relocate the TV or Soundbar so that they are within operational range, and then re-establish the TV SoundConnect connection.
- TV SoundConnect Operational Ranges:
 - Recommended pairing range: within 50 cm
 - Recommended operational range: within 5 m
- The **Play/Pause**, **Next**, **Prev** buttons are not operable in TV SoundConnect mode.



USB

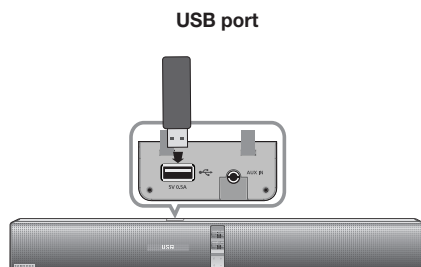You can play music files located on USB storage devices through the Soundbar.

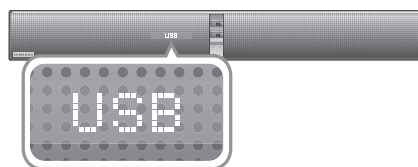

Display



1. Connect the USB device to the USB port of the product.
2. Press the  button on the main unit's front panel or the  (SOURCE) button on the remote control to select the **USB** mode.
3. **USB** appears on the display screen.
 - The Soundbar connection to the USB device is complete.
 - The Soundbar automatically turns off (Auto Power Off) if no USB device has been connected for more than 15 minutes.

► Before you connect a USB device

Be aware of the following:

- If the file name of a file or folder on a USB device exceeds 10 characters, it is not displayed on the Soundbar's display.
- This product may not be compatible with certain types of USB storage media.
- The Soundbar supports the FAT16 and FAT32 file systems.
 - The NTFS file system is not supported.
- Connect USB devices directly to the USB port of the product. Otherwise, you may encounter a USB compatibility problem.
- Do not connect multiple storage devices to the product via a multi-card reader. It may not operate properly.
- Digital camera PTP protocols are not supported.

- Do not remove the USB device while it is transferring files.
- DRM-protected music files (MP3, WMA) from commercial web sites cannot be played.
- External HDDs are not supported.
- Mobile phone devices are not supported.
- File Format Type Compatibility list:

Format	Codec
*.mp3	MPEG 1 Layer2
	MPEG 1 Layer3
	MPEG 2 Layer3
	MPEG 2.5 Layer3
*.wma	Wave_Format_MSAudio1
	Wave_Format_MSAudio2
*.aac	AAC
	AAC-LC
	HE-AAC
*.wav	-
*.ogg	OGG 1.1.0
*.flac	FLAC 1.1.0, FLAC 1.2.1

※ Supported Sampling Rate above 16KHz

USING THE NETWORK STANDBY ON FUNCTION

The Network Standby On function becomes available if wireless connection was properly established between the smart device and Soundbar. This function turns on the Soundbar automatically when a smart device attempts to connect to the Soundbar via Bluetooth or Wi-Fi. If the Soundbar was turned on via Bluetooth connection, its input mode is set to **BT** automatically. Turning on the Soundbar via Wi-Fi is available only by using the App. For further information, refer to the Web manual.

4. Connect the Smart device to your Soundbar.
5. Turn the Network Standby On function on by pressing the **▶▶I** button on the Soundbar remote for more than 5 seconds. You can turn the function off by pressing the **▶▶I** button again for more than 5 seconds.



- Available only if the Soundbar is listed among the Smart device's paired devices.
(The Smart device and the Soundbar must have been previously paired at least once.)
- Soundbar will appear in the Smart device's searched devices list only when the Soundbar is displaying [BT READY] or [WiFi READY].
- In the TV SoundConnect mode, the Soundbar cannot be paired to another Smart device.
- If Network Standby On function did not work
 - The Network Standby On is set to Off.
- Wi-Fi connection to the Soundbar will be terminated if its power cord was disconnected or the power was cut off. Turn on the Soundbar and reconnect.

USING THE AUTO POWER LINK FUNCTION

If Soundbar was connected to an external device with optical cable, AUTO POWER LINK function can be used. If you connect the main unit to a TV with a digital optical cable, set the Auto Power function ON to have the Soundbar turn on automatically when you turn the TV on.

1. Connect the Soundbar and an External Device with an Optical cable.
2. Press and hold the **DIMMER/AnyNet+** button for over 5 seconds to toggle the function.


AUTO POWER LINK	Display
ON	ANYNET+ OFF / POWER LINK ON
OFF	ANYNET+ ON / POWER LINK OFF

USING THE MULTIROOM LINK

Once the Soundbar is connected to a smart device with Multiroom Link App, you can connect multiple Samsung Multiroom devices together wirelessly.

► Before you begin

Communication Basics

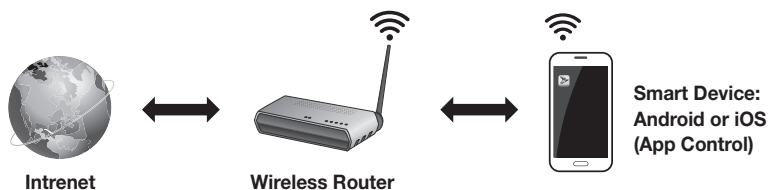

1. Requirements: Wireless Router, Smart Device
2. The wireless router should be connected to the Internet.
3. The smart device should be connected to the router via a Wi-Fi connection.

► Installing the Samsung Multiroom App

To use the Soundbar, you must download and then install the Samsung Multiroom App by accessing the app through Google play or the App Store. With the Samsung Multiroom App installed, you can play music stored in your smart device, from connected devices and other content providers, and from Internet radio stations.

Android or iOS

Download the Samsung Multiroom app from Google Play or the App Store of your smart device.

* Market search : Samsung Multiroom




or



Accessing the Samsung Multiroom App


To access the Samsung Multiroom app, press the Multiroom app icon on your smart device.

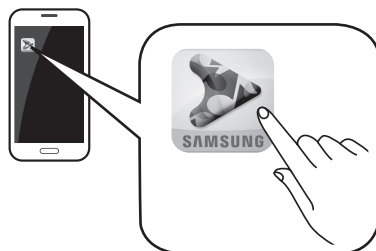

► Connecting with Soundbar

Connect the Soundbar to a wired/wireless router. Wired or wireless connection (using **Wi-Fi SETUP** or **WPS**, you can see the guide on Multiroom APP) to the router can be established.

Connecting the Soundbar to Your Network with a LAN Cable

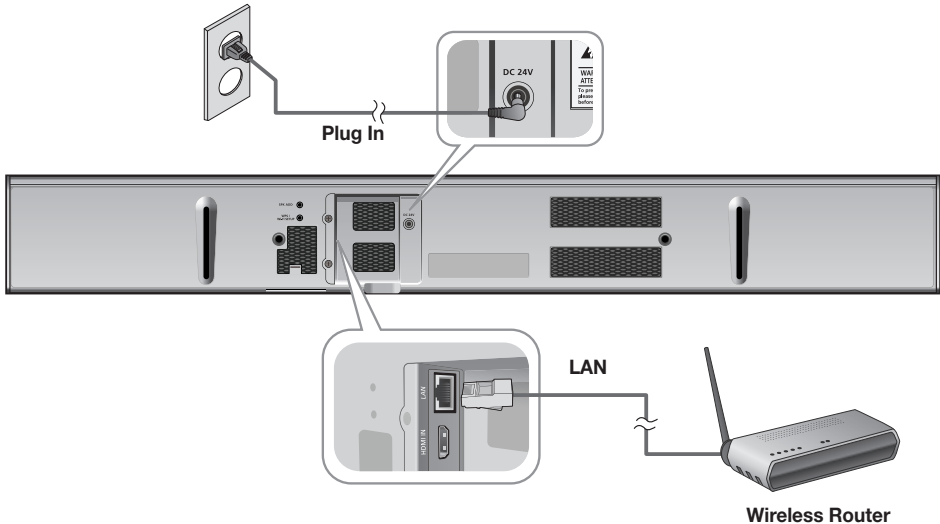


1. Connect your smart device to your Wi-Fi network.
2. On your Smart device, select the Samsung Multiroom app. Setup starts.
3. In the app, select "**I don't have a Hub**", and then press **Next**. On the next screen, select **Soundbar** from the device type, and then press **Next**.
4. Select **Wired** from the network type, and then press **Next**.
5. Connect one end of the LAN cable to the Soundbar's **LAN** port. Connect the other end to your wireless router. (You cannot use the Soundbar without a wireless router.)
6. Plug the Soundbar into an electrical outlet.



- For further information on connecting the Soundbar with a wired/wireless router, refer to the manual on the Web.
- For further information on connecting the product for Multiroom Link, please refer to the web-based user manual or manual provided within the app.
 - Web manual : www.Samsung.com → Support → Product name search → HW-H750 or HW-H751 PDF file download.

SOFTWARE UPDATE

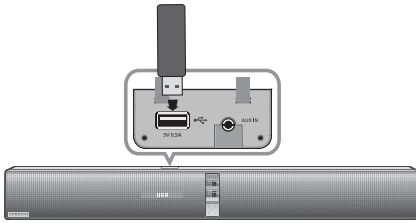

► Updating with USB

Samsung may offer updates for the Soundbar's system firmware in the future.

If an update is offered, you can update the firmware by connecting a USB device with the firmware update stored on it to the USB port on your Soundbar.

Note that if there are multiple update files, you must load them onto the USB device singly and use them to update the firmware one file at a time.

Please visit Samsung.com or contact the Samsung call center to receive more information about downloading updates files.

1. While the Soundbar is turned off, connect the USB storage device that contains the updating firmware to the Soundbar's USB port.
2. Turn on the Soundbar **UPDATE** appears on the display and updating begins within 3 minutes.
 - Upon completion of updating, the Soundbar turns off and on automatically.

If UPDATE was not displayed

1. Turn off the Soundbar, connect the USB storage device that contains update files to the Soundbar's USB port.
2. Disconnect the power cord, reconnect it and turn it on.



- Updating firmware may not work properly if audio files supported by the Soundbar are stored in the USB storage device.
- Do not disconnect the power or remove the USB device while updates are being applied. The main unit will turn off automatically after completing the firmware update.
- After reset, all settings are reset to their factory default settings. We recommend you write down your settings so that you can easily reset them after the update. Note that updating firmware resets subwoofer connection too. If connection to the subwoofer is not established automatically after resetting, refer to page 13. If the firmware fails to update, we recommend formatting the USB device in FAT16 and trying again.
- Do not format the USB device in the NTFS format. The Soundbar does not support the NTFS file system.
- Depending on the manufacturer, some USB devices may not be supported.

► Auto update

Even when the Soundbar is turned off, the Soundbar will automatically check latest software version and continue to update if it was connected to the Internet.



- The Soundbar is configured to run auto update by default.
- To use auto update function, the Soundbar must be connected to the Internet.
- Wi-Fi connection to the Soundbar will be terminated if its power cord was disconnected or the power was cut off. Turn on the Soundbar and reconnect.

TROUBLESHOOTING

Before requesting service, please check the following.

The unit will not turn on.

- | | |
|----------------------------------------------|-----------------------------------------|
| • Is the power cord plugged into the outlet? | → Connect the power plug to the outlet. |
|----------------------------------------------|-----------------------------------------|

A function does not work when the button is pressed.

- | | |
|-------------------------------------------|---------------------------------------------------|
| • Is there static electricity in the air? | → Disconnect the power plug and connect it again. |
|-------------------------------------------|---------------------------------------------------|

Sound is not produced.

- | | |
|---------------------------------|-------------------------------------------------|
| • Is the Mute function on? | → Press the Mute button to cancel the function. |
| • Is the volume set to minimum? | → Adjust the Volume. |

The remote control does not work.

- | | |
|---------------------------------------------------------------------|-------------------------------|
| • Are the batteries drained? | → Replace with new batteries. |
| • Is the distance between the remote control and main unit too far? | → Move closer to the unit. |

The TV SoundConnect (TV pairing) failed.

- | | |
|-------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| • Does your TV support TV SoundConnect? | → TV SoundConnect is supported by some Samsung TVs released from 2012 on. Check your TV to see if it supports TV SoundConnect. |
| • Is your TV firmware the latest version? | → Update your TV with the latest firmware. |
| • Does an error occur when connecting? | → Contact the Samsung call centre. |
| • Reset the TV MODE and connect again. | → Press and hold the ► button for 5 seconds to reset the TV SoundConnect connection. |

The red LED on the subwoofer blinks and the subwoofer is not producing sound.

- | | |
|------------------------------------------------------------------------|---------------------------------------------------------|
| • Your subwoofer may not be connected to the main body of the product. | → Try to connect your subwoofer again.
(See Page 13) |
|------------------------------------------------------------------------|---------------------------------------------------------|

The subwoofer drones and vibrates noticeably.

- | | |
|--------------------------------------------------|------------------------------------------------------------------------------------------------------|
| • Try to adjust the vibration of your subwoofer. | → Press the WOOFER button on your remote control to adjust its value (between SW-6 and SW+6). |
|--------------------------------------------------|------------------------------------------------------------------------------------------------------|

APPENDIX

SPECIFICATIONS

Model name		HW-H760	
GENERAL	USB		5V/0.5A
	Weight	Main Unit	3.3 kg
		Subwoofer (PS-WH760)	9.8 kg
	Dimensions (W x H x D)	Main Unit	943 x 123 x 57 mm
		Subwoofer (PS-WH760)	305.5 x 388.5 x 305.5 mm
	Operating Temperature Range		+5 °C to +35 °C
	Operating Humidity Range		10 % to 75 %
AMPLIFIER	Rated Output Power	Main Front	40W/CH, 6 OHM, THD = 1%, 1kHz
		Main Bottom	40W/CH, 6 OHM, THD = 1%, 1kHz
		Subwoofer (PS-WH760)	160W, 3 OHM, THD = 10%, 100Hz
	S/N Ratio (Analogue Input)		65 dB
	Separation (1kHz)		65 dB

* S/N ratio, distortion, separation, and usable sensitivity are based on measurements using AES (Audio Engineering Society) guidelines.

* Nominal specification

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.
- For the power supply and Power Consumption, refer to the label attached to the product.

※ Open Source License Notice

For further information on Open Sources used in this product, please visit the website:
<http://opensource.samsung.com>

※ Spotify License

- The Spotify Software is subject to third party licenses found here : www.spotify.com/connect/third-party-licenses.
- For more information about Spotify Connect, please visit www.spotify.com/connect





Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care Centre.

Area	Contact Centre ☎	Web Site
▪ Asia Pacific		
AUSTRALIA	1300 362 603	www.samsung.com/au/support
NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz/support
CHINA	400-810-5858	www.samsung.com/cn/support
HONG KONG	(852) 3698 4698	www.samsung.com/hk/support (Chinese) www.samsung.com/hk_en/support (English)
INDIA	1800 3000 8282 - Toll Free 1800 266 8282 - Toll Free 30308282 - Non Toll Free	www.samsung.com/in/support
INDONESIA	0800112888 021-56997777	www.samsung.com/id/support
JAPAN	0120-327-527	www.samsung.com/jp/support
MALAYSIA	1800-88-9999	www.samsung.com/my/support
PHILIPPINES	1-800-10-7267864 [PLDT] 1-800-8-7267864 [Globe landline and Mobile] 02-4222111 [Other landline]	www.samsung.com/ph/support
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com/sg/support
THAILAND	0-2689-3232, 1800-29-3232	www.samsung.com/th/support
TAIWAN	0800-32-9999	www.samsung.com/tw/support
VIETNAM	1800 588 889	www.samsung.com/vn/support
▪ MENA		
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)
OMAN	800-SAMSUNG(726-7864)	
KUWAIT	183-2255 (183-CALL)	
BAHRAIN	8000-4726	
QATAR	800-2255 (800-CALL)	
EGYPT	08000-726786 16580	www.samsung.com/eg/support
ALGERIA	021 36 11 00	www.samsung.com/n_africa/support
PAKISTAN	0800-Samsung (72678)	www.samsung.com/pk/support
TUNISIA	80-1000-12	www.samsung.com/n_africa/support
JORDAN	0800-22273 06 5777444	www.samsung.com/Levant/support (English)
SYRIA	18252273	www.samsung.com/Levant/support (English)
IRAN	021-8255	www.samsung.com/iran/support
MOROCCO	080 100 2255	www.samsung.com/n_africa/support
SAUDI ARABIA	920021230	www.samsung.com/sa/support www.samsung.com/sa_en/support (English)
TURKEY	444 77 11	www.samsung.com/tr/support
▪ Africa		
NIGERIA	0800-726-7864	www.samsung.com/africa_en/support
Ghana	0800-10077 0302-200077	
Cote D' Ivoire	8000 0077	
SENEGAL	800-00-0077	www.samsung.com/africa_fr/support
CAMEROON	7095- 0077	
KENYA	0800 545 545	www.samsung.com/support
UGANDA	0800 300 300	
TANZANIA	0685 88 99 00	
RWANDA	9999	
BURUNDI	200	
DRC	499999	
SUDAN	1969	
SOUTH AFRICA	0860 SAMSUNG (726 7864)	www.samsung.com/support
BOTSWANA	8007260000	
NAMIBIA	08 197 267 864	
ZAMBIA	0211 350370	
MOZAMBIQUE	847267864 / 827267864	

SAMSUNG

HW-H760

دفترچه راهنما

Wireless Audio - Soundbar

فرصت ها را مجسم کنید

بابت خرید این دستگاه Samsung از شما ممنونیم.
برای دریافت خدمات کامل تر، لطفاً محصول خود را در این نشانی ثبت نمایید

www.samsung.com/register



AH68-02769A-00



AH68-02769A-00

ویژگی ها

TV SoundConnect

TV SoundConnect امکان گوش دادن به صدای تلویزیون را از طریق اتصال Bluetooth روی Soundbar و همچنین کنترل صدا را برای شما فراهم می سازد.

HDMI

HDMI سیگنال های صوتی و تصویری را به طور همزمان انتقال داده و یک تصویر شفاف ارائه می دهد. این دستگاه همچنین مجهز به عملکرد ARC می باشد که امکان گوش دادن به صدای تلویزیون از طریق Soundbar به وسیله یک کابل HDMI برای شما فراهم می سازد. این قابلیت فقط زمانی در دسترس است که دستگاه را به یک تلویزیون سازگار با ARC وصل کرده باشید.

Surround Sound Expansion

قابلیت توسعه صدای سوراند عمق و فضای خاصی به تجربه شنیداری شما می بخشد. توسعه صدای سوراند با امکانات Sonic Emotion عرضه می گردد.

ساب ووفر بیسیم

مدول بیسیم Samsung، نیاز به سیم کشی بین دستگاه اصلی و ساب ووفر را حذف نموده است. در عوض، ساب ووفر به یک مدول بیسیم جمع و جور متصل می شود که با دستگاه اصلی ارتباط برقرار می کند.

حالت ویژه صوتی

بسته به نوع محتوایی که می خواهید از شنیدن آن لذت ببرید، می توانید جلوه های صوتی مختلفی - CINEMA (سینما) / SPORTS (ورزشی) / VOICE (صدا) / MUSIC (موسیقی) / STANDARD (استاندارد) (صدای اصلی) انتخاب کنید.

دستگاه کنترل از راه دور چندمنظوره

با استفاده از کنترل از راه دور می توانید عملیات مختلف را فقط با فشار دادن یک دکمه کنترل کنید.

پشتیبانی هاست USB

می توانید فایل های موسیقی دستگاه های ذخیره USB بیرونی مانند پخش کننده های MP3، حافظه USB و غیره را با استفاده از ویژگی هاست USB سیستم Soundbar متصل کرده و پخش نمایید.

قابلیت Bluetooth

شما می توانید وسایل Bluetooth را برای لذت بردن از موسیقی با کیفیت صدای بالای استریو، بدون نیاز به سیم به Soundbar متصل و استفاده کنید!

Multiroom Link

بعد از اینکه Soundbar از طریق برنامه Multiroom Link به یک وسیله هوشمند متصل شده، می توانید چندین دستگاه Samsung Multiroom را بطور بیسیم بهم وصل کنید.

مجوز



ساخته شده تحت امتیاز Dolby Laboratories. نشان Dolby و دو حرف D علامت های تجاری Dolby Laboratories می باشند.



درخصوص شماره های ثبت DTS به <http://patents.dts.com> مراجعه کنید. تولید شده تحت لیسانس محدود DTS. DTS، علامت آن، و DTS در کنار علامت آن علامت تجاری ثبت شده بوده و DTS 2.0 Channel علامت تجاری ثبت شده متعلق به DTS, Inc. © DTS, Inc می باشند. کلیه حقوق محفوظ است.

HDMI




عبارت های HDMI و HDMI High-Definition Multimedia Interface (HDMI) واسط چندرسانه ای وضوح بالا، و آرم HDMI علامت تجاری و یا علامت تجاری ثبت شده HDMI Licensing LLC در ایالات متحده آمریکا و کشورهای دیگر می باشند.

- برای ارسال سوالات و درخواست های مربوط به کدهای باز، از طریق ایمیل به آدرس (oss.request@samsung.com) با Samsung تماس بگیرید.

اطلاعات ایمنی

هشدارهای ایمنی

جهت کاهش خطر برق گرفتگی، از برداشتن درپوش (یا پشت) دستگاه خودداری کنید. هیچ قطعه ای در داخل دستگاه وجود ندارد که مصرف کنندگان بتوانند آنها را تعمیر کنند. جهت تعمیرات به پرسنل خدماتی واجد شرایط مراجعه نمایید.

این علامت نشان دهنده وجود "ولتاژ خطرناک" در داخل دستگاه است که خطر برق گرفتگی یا جراحت شخصی را نشان می دهد.		<div data-bbox="700 316 902 354" data-label="Section-Header">احتیاط</div> <div data-bbox="730 365 866 389" data-label="Text">خطر برق گرفتگی باتر نکند</div> <div data-bbox="919 320 1009 405"></div>
این علامت، نشان دهنده وجود دستورالعمل های مهم همراه دستگاه می باشد.		

هشدار : برای کاهش خطر آتش سوزی یا برق گرفتگی، از قرار دادن این دستگاه در معرض باران یا رطوبت خودداری نمایید.


احتیاط : برای جلوگیری از خطر برق گرفتگی، تیغه پهن دوشاخه را با شکاف عریض میزان کرده و بطور کامل داخل نمایید.

- این دستگاه باید همیشه با یک اتصال زمین محافظ به پریز برق متصل شود.
- برای جدا کردن دستگاه از برق، باید دوشاخه را از پریز بکشید، در نتیجه دوشاخه قابل استفاده خواهد بود.


احتیاط

- دستگاه را در معرض قطرات یا پاشش مایعات قرار ندهید. اجسام پر شده با مایعات، مانند گلدان روی دستگاه قرار ندهید.
- برای خاموش کردن کامل دستگاه باید دوشاخه برق آنرا از پریز دیواری بکشید. به همین خاطر، دوشاخه باید همیشه برآحتی در دسترس باشد.

نکات احتیاطی

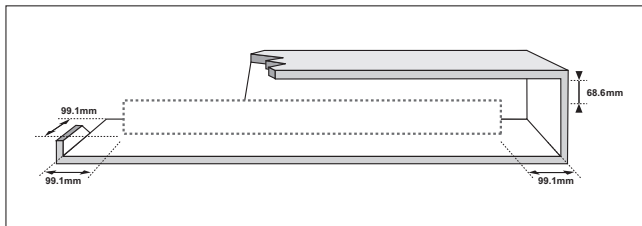


مطمئن شوید که منبع برق متناوب خانه شما با الزامات ذکر شده در برجسب مشخصات پشت دستگاه مطابقت داشته باشد. دستگاه خود را به صورت افقی و بر روی یک پایه (میز) مناسب و با فضای کافی در اطراف آن برای گردش هوا ۷ الی ۱۰ سانتی متر نصب نمایید. مطمئن شوید که شکاف های گردش هوا پوشانده نشده باشند. از قرار دادن دستگاه روی آمپلیفایرها یا سایر تجهیزاتی که ممکن است داغ شوند، خودداری نمایید. این دستگاه برای استفاده مداوم طراحی شده است. برای خاموش کردن کامل دستگاه، دوشاخه برق متناوب را از پریز برق بکشید. اگر نمی خواهید برای مدت طولانی از دستگاه استفاده کنید، دوشاخه آنرا بکشید.

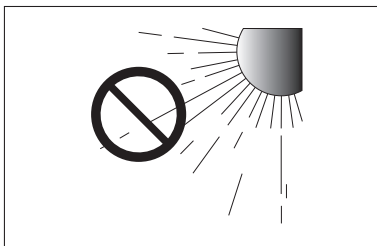


دستگاه را در معرض تابش نور مستقیم خورشید یا سایر منابع حرارتی قرار ندهید.

این امر می تواند منجر به بیش از حد گرم شدن دستگاه و نقص در عملکرد آن گردد.

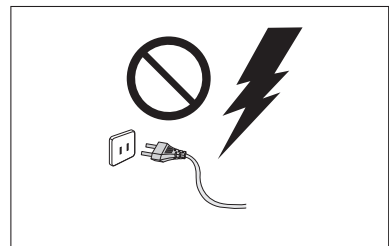

در حین وقوع طوفان و رعد و برق، دوشاخه برق متناوب را از پریز دیواری بیرون بکشید. ولتاژهای بالا ناشی از وقوع رعد و برق می توانند به دستگاه آسیب برسانند.

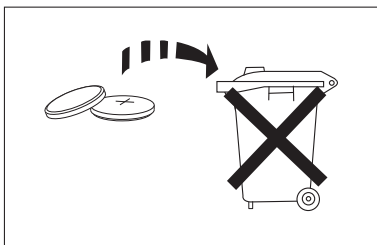

باتری های استفاده شده در این دستگاه حاوی مواد شیمیایی هستند که برای محیط زیست مضرند.


از انداختن باتری ها در زباله خانگی عمومی خودداری کنید.

باتری ها را در آتش نیندازید.

از ایجاد اتصال کوتاه، باز کردن یا حرارت بیش از حد باتری ها خودداری کنید.

اگر باتری ها بطور نادرست تعویض شوند خطر انفجار وجود خواهد داشت.

باتری ها را فقط با همان نوع یا انواع مشابه تعویض کنید.

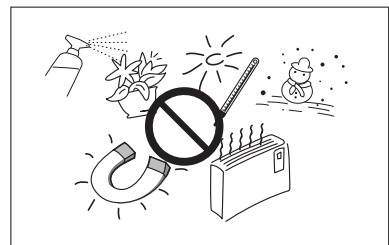

دستگاه را از رطوبت (مانند گلدان ها)، و گرمای بیش از حد (مانند شومینه) یا دستگاه هایی که میدان های مغناطیسی یا الکتریکی قوی ایجاد می کنند دور نگهدارید. اگر عملکرد دستگاه دچار اختلال شده است، سیم برق را از پریز برق متناوب جدا کنید. دستگاه شما برای کاربرد صنعتی در نظر گرفته نشده است. این محصول فقط برای مصارف شخصی است. اگر دستگاه در دماهای پایین نگهداری شده باشد، احتمال وقوع چگالش رطوبت وجود دارد. اگر دستگاه را در فصل زمستان جابجا می کنید، پیش از استفاده حدود 2 ساعت صبر کنید تا دستگاه به دمای اتاق برسد.

فهرست مطالب

۱۷ قابلیت ها

حالت ورودی	۱۷
(HDMI OUT) ARC	۱۷
Bluetooth	۱۸
TV SoundConnect	۲۰
USB	۲۱
استفاده از قابلیت Network Standby On	۲۲
استفاده از قابلیت AUTO POWER LINK	۲۲
استفاده از Multiroom Link	۲۳
بروزرسانی نرم افزار	۲۵

۲۶ عیب یابی

۲۷ ضمیمه

مشخصات فنی	۲۷
------------	----

۲ ویژگی ها

مجوز	۲
------	---

۳ اطلاعات ایمنی

هشدارهای ایمنی	۳
نکات احتیاطی	۴

۶ آغاز به کار

قبل از خواندن دفترچه راهنما	۶
آنچه همراه دستگاه است	۶

۷ شرح

پانل جلو/زیر	۷
پانل پشت	۸

۹ کنترل از راه دور

دکمه و عملکردهای کنترل از راه دور	۹
-----------------------------------	---

۱۱ اتصالات

نصب نگهدارنده دیواری	۱۱
جداکردن پایه دیواری	۱۲
نصب پایه بدون استفاده از راهنمای نصب پایه دیواری	۱۲
متصل کردن سابل ووفر بیسیم	۱۳
وصل کردن سیم پیچ هسته فریت به سیم برق	۱۴
Soundbar	
وصل کردن دستگاه های بیرونی با کابل HDMI	۱۵
وصل کردن وسایل بیرونی با استفاده از کابل نوری (دیجیتال) یا صدا (آنالوگ)	۱۶
نصب گیره کابل	۱۶



- تصاویر و شکل های ارائه شده در این دفترچه راهنما صرفاً جنبه مرجع داشته و شاید با شکل واقعی دستگاه متفاوت باشند.
- در موارد زیر کارمزد دریافت خواهد شد:
a. یک مهندس به درخواست شما به منزل تان اعزام شده و دستگاه هیچ اشکالی نداشته باشد (مانند زمانی که شما دفترچه راهنما را مطالعه نکرده باشید)
- b. شما دستگاه را به مرکز تعمیرات می آورید و دستگاه هیچ اشکالی ندارد (مانند زمانی که شما دفترچه راهنما را مطالعه نکرده باشید).
- مقدار این کارمزد پیش از انجام هرگونه کار یا مراجعه به منزل به شما اعلام خواهد شد.

آغاز به کار

قبل از خواندن دفترچه راهنما

قبل از خواندن دفترچه راهنما، حتماً به اصطلاحات زیر توجه کنید.

◀ نمادهای استفاده شده در این راهنما

نماد	اصطلاح	تعریف
	احتیاط	بیانگر مواردی است که قابلیت کار نمی کند یا تنظیمات لغو می شوند.
	تذکر	بیانگر توصیه ها یا دستورالعمل های روی صفحه است که به کارکرد هریک از قابلیت ها کمک می کند.

◀ دستورالعمل های ایمنی و عیب یابی

۱) حتماً قبل از استفاده از این محصول، با دستورالعمل های ایمنی آشنا شوید. (صفحه ۳ را ملاحظه کنید)

۲) در صورت بروز مشکل، بخش عیب یابی را ملاحظه کنید. (صفحه ۲۶ را ملاحظه کنید)


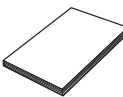










◀ کپی راییت

© Samsung Electronics Co., Ltd 2014

کلیه حقوق محفوظ است؛ هیچ قسمتی از این راهنمای کاربر نمی تواند بدون مجوز کتبی قبلی Samsung Electronics Co., Ltd بازآفرینی یا نسخه برداری شود.

آنچه همراه دستگاه است

لوازم جانبی ارائه شده زیر را کنترل کنید.


	 (پایه دیواری L: 1EA)		
راهنمای پایه دیواری	 (پایه دیواری R: 1EA)	دفترچه راهنما	کنترل از راه دور / باتری لیتیوم (CR2032 : 3V)
	 نگهدارنده دیواری		 (نگه دارنده پیچ: 2EA)
(برای کابل برق ر 1EA)	 آداپتور برق مستقیم	سیم برق	 (نگه دارنده پیچ: 2EA)
سیم پیچ هسته فریت			نگهدارنده پیچ
		گیره کابل	 کابل AUX

• ممکن است شکل لوازم جانبی کمی با تصاویر فوق متفاوت باشد.




شرح

پاتل جلو/زیر

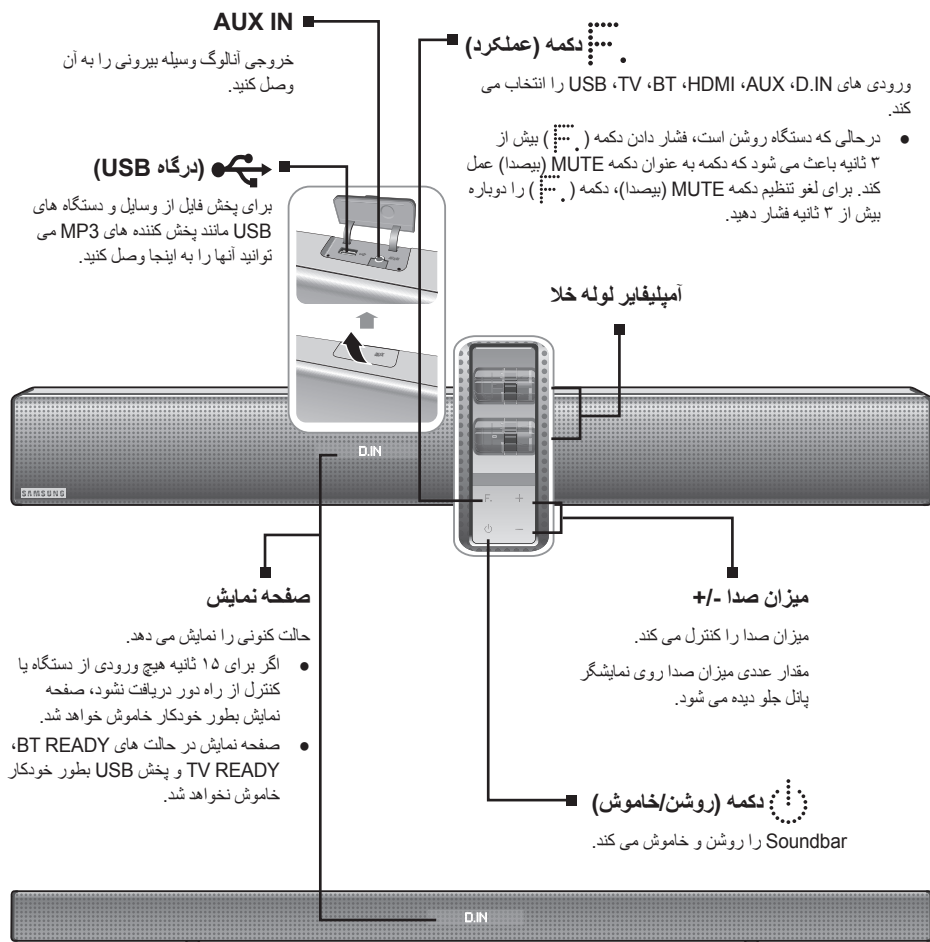

- وقتی این دستگاه را روشن می کنید، پیش از اینکه صدایی به گوش برسد ۱۰ تا ۱۲ ثانیه تاخیر وجود خواهد داشت.
- از نزدیک کردن تلفن های همراه یا سایر تجهیزات موبایل به آمپلیفایر لوله خلا، یا قرار دادن تجهیزات الکترونیکی دیگر روی دستگاه خودداری کنید. سیگنال های این تجهیزات باعث ایجاد نویز و پارازیت در صدا خواهد شد.
- لطفاً هنگامی که دستگاه در حال کار است، به کودکان اجازه دست زدن به سطح دستگاه را ندهید. چون داغ خواهد بود.
- قالب USB را برای استفاده از درگاه USB یا AUX باز کنید.



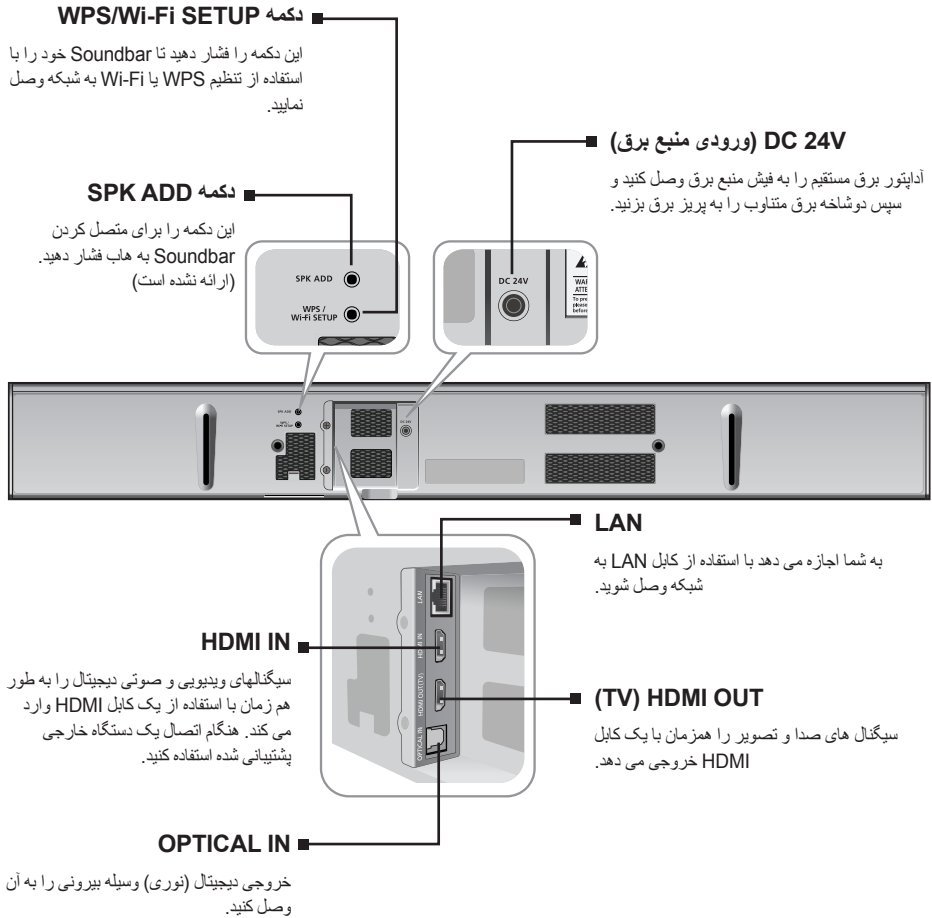


- برای جدا کردن سیم برق آداپتور برق متناوب از پریز دیواری، دوشاخه را بکشید. سیم را نکشید.
- قبل از اینکه تمام اتصالات بین اجزا را برقرار نکرده اید، این دستگاه یا اجزا را به پریز برق وصل نکنید.



کنترل از راه دور


دکمه و عملکردهای کنترل از راه دور

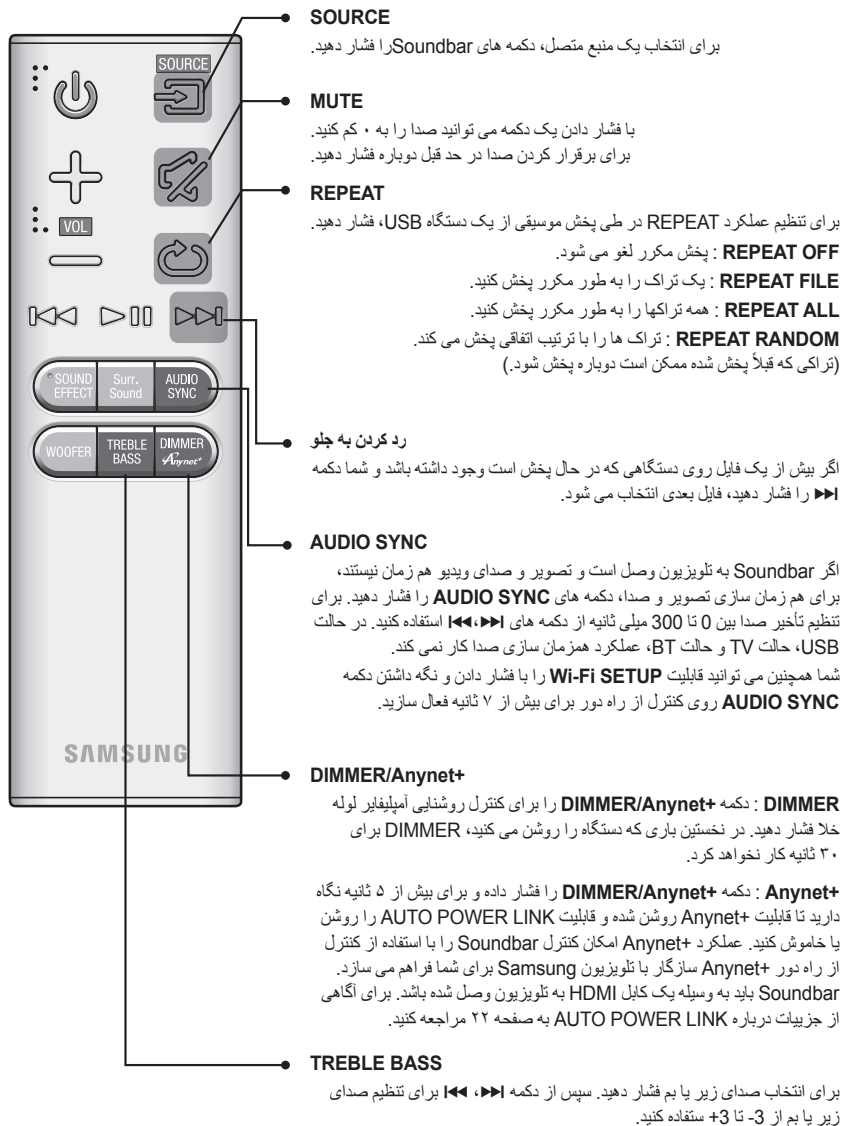


• Soundbar نام انحصاری Samsung است.

• برای کار با تلویزیون از کنترل از راه دور تلویزیون استفاده کنید.



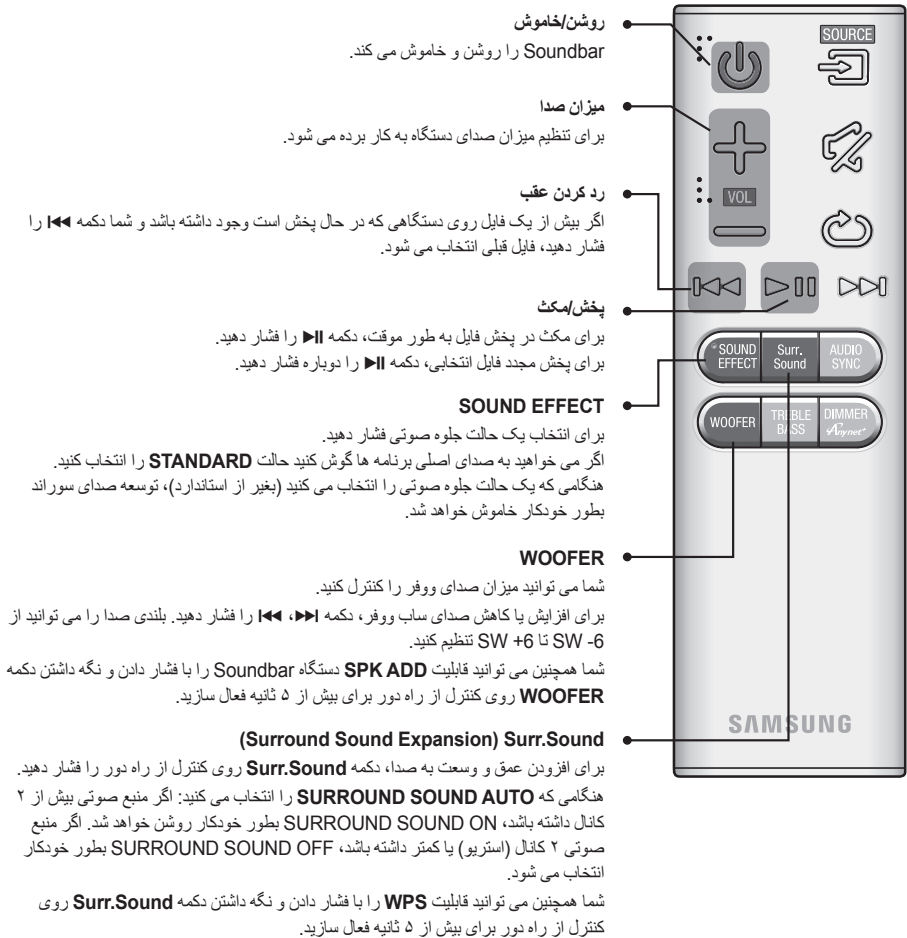

قرار دادن باتری در دستگاه کنترل از راه دور

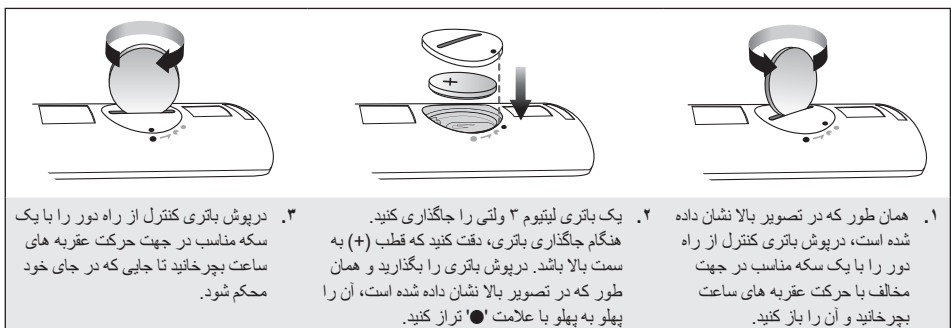

اتصالات

نصب نگهدارنده دیواری

برای نصب دستگاه روی دیوار از نگهدارنده دیواری استفاده کنید.

نکات احتیاطی نصب

- فقط روی یک دیوار عمودی نصب کنید.
- نباید در محیط هایی با دما و رطوبت بالا یا روی دیواری که قادر به تحمل وزن دستگاه نیست نصب شود.
- قدرت تحمل دیوار را کنترل کنید. اگر دیوار برای تحمل وزن دستگاه به اندازه کافی قدرت ندارد، دیوار را تقویت کرده و یا دستگاه را روی دیواری دیگر که بتواند وزن آنرا تحمل کند نصب نمایید.
- پیچ های محکم کننده یا مهار های مناسب با جنس دیوار (روکش گچی، آهنی، چوبی و غیره) خریداری و استفاده کنید.
- در صورت امکان پیچ های پشتیبان را در پروفیل های دیواری محکم کنید.
- پیچ های پایه دیواری مطابق با نوع و ضخامت دیواری بخريد که می خواهید Soundbar را روی آن نصب کنید.

- قطر: M5

- طول: ۳۵ میلی متر یا بیشتر توصیه می شود

- پیش از نصب دستگاه روی دیوار باید کابل های آنرا به وسایل و تجهیزات بیرونی وصل کرده باشید.
- پیش از نصب مطمئن شوید که دستگاه خاموش بوده و سیم برق آنرا کشیده اید. در غیر اینصورت، خطر برق گرفتگی وجود خواهد داشت.

۱. راهنمای نصب را روی سطح دیوار قرار دهید.

- راهنمای نصب باید تراز باشد.

- اگر تلویزیون روی دیوار نصب شده است، این دستگاه را حداقل ۵ سانتی متر زیر تلویزیون نصب کنید.

۲. محل پیچ ها را با قلم روی دیوار علامتگذاری کنید و سپس راهنمای نصب را بردارید.

۳. پایه های دیواری و پیچ ها را به محل های علامتگذاری شده محکم کنید.


- شكا پایه های چپ و راست باهم متفاوت است.

۴. دو پیچ نگهدارنده را به سوراخ های پیچ روی پشت بدنه اصلی Soundbar محکم کنید، یکی در سمت چپ و یکی در سمت راست.

۵. اگر Soundbar را روی دیوار نصب کنید ممکن است گرد و غبار وارد آن شود. حتماً قاب USB را بسته نگاه دارید.


۶. پیچ های نگهدارنده پشت Soundbar را در شیار های پایه دیواری تنظیم کنید. برای نصب درست، پیچ های نگهدارنده را فشار دهید تا به آخر شیار ها برسند.

استفاده از Soundbar با پایه دیواری




[نصب Soundbar روی دیوار]

جدا کردن پایه دیواری

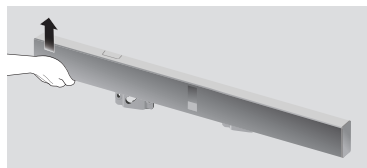

- همان طور که در تصویر نشان داده شده است، Soundbar به طرف بالا بکشید تا از پایه دیواری بیرون بیاید.

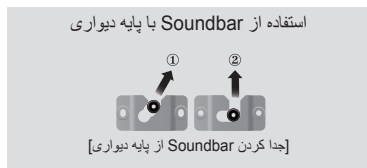

- به دستگاه نصب شده آویز نشوید و از ضربه زدن یا انداختن دستگاه خودداری کنید.
- دستگاه را به دیوار محکم کنید تا نیافتد. اگر دستگاه بیافتد، احتمال بروز جراحت فردی یا آسیب دیدن دستگاه وجود دارد.
- وقتی که دستگاه روی دیوار نصب شد، مطمئن شوید که هیچ کودکی سیم های اتصالی آنرا نکشد چون امکان افتادن آن وجود خواهد داشت.
- برای عملکرد مطلوب نصب پایه دیواری، اگر تلویزیون روی دیوار نصب شده است، سیستم بلندگو را حداقل ۵ سانتی متر زیر تلویزیون نصب کنید.
- جهت ایمنی خود، اگر دستگاه را روی دیوار نصب نمی کنید، آن را روی یک سطح صاف و محکم نصب کنید، جایی که احتمال سقوط آن وجود نداشته باشد.


نصب پایه بدون استفاده از راهنمای نصب پایه دیواری



- همان طور که در تصویر بالا نشان داده شده است، "پایه دیواری L" را روی سطح دیوار مورد نظر قرار دهید به طوری که موازی با زمین باشد و یک پیچ را در سوراخ انتهایی سمت چپ آن پیچ کنید.
- همان طور که در تصویر بالا نشان داده شده است، "پایه دیواری R" را روی سطح دیوار مورد نظر قرار دهید به طوری که موازی با زمین باشد و یک پیچ را در سوراخ انتهایی سمت راست آن پیچ کنید.
- اگر پایه دیواری چپ/راست را می خواهید زیر تلویزیون نصب کنید، موقعیت های سوراخ محکم کننده آنها را در مراحل ۱ و ۲ بررسی کنید، به طوری که به درستی با وسط زیر تلویزیون تراز باشند.
- پیچ ها را در بقیه سوراخ ها محکم کنید.

متصل کردن ساب ووفر بیسیم


شناسه لینک ساب ووفر در کارخانه تنظیم شده است و وقتی دستگاه اصلی و ساب ووفر روشن می شوند، ساب ووفر باید بطور خودکار با آن ارتباط (اتصال بی سیم) برقرار کند. اگر بعد از روشن کردن دستگاه اصلی و ساب ووفر نشانگر LINK روشن نمی شود، لطفاً با دنبال کردن مراحل زیر شناسه را تنظیم کنید. این روال را ظرف مدت ۳۰ ثانیه پس از شروع چشمک زدن نشانگر لینک روی ساب ووفر تکمیل کنید.

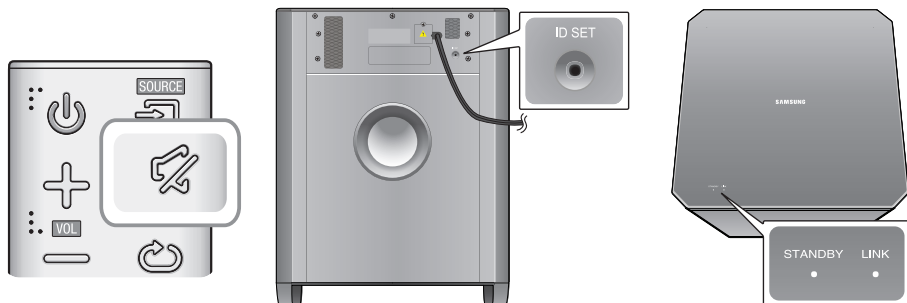



۱. دوشاخه برق دستگاه اصلی و ساب ووفر را به پریز دیواری برق متناوب وصل کنید.
 ۲. اطمینان حاصل کنید که دستگاه اصلی خاموش باشد (در حالت آماده بکار).
 ۳. دکمه ID SET واقع در پشت ساب ووفر را با یک شی نوک تیز کوچک برای ۵ ثانیه فشار دهید.
 - نشانگر LINK (LED آبی رنگ) روی ساب ووفر با سرعت چشمک می زند.
 ۴. در حالی که دستگاه اصلی خاموش است (حالت آماده بکار)، دکمه MUTE (🔇) روی کنترل از راه دور را برای ۵ ثانیه فشار داده و نگه دارید.
 ۵. پیام ID SET در صفحه نمایش Soundbar نمایش داده می شود.
 ۶. برای نهایی سازی پیوند و لینک، در حالی که LED لینک ساب ووفر چشمک می زند برق دستگاه اصلی را روشن کنید.
 - اکنون دستگاه اصلی و ساب ووفر باید لینک (وصل) شده باشند.
 - نشانگر لینک (LED آبی) روی ساب ووفر باید روشن بوده و به رنگ آبی باشد.
 - اگر نشانگر به رنگ آبی نیست، فرآیند لینک انجام نشده است. دستگاه اصلی را خاموش کرده و دوباره از مرحله ۲ شروع کنید.
 - اگر حالت جلوه صوتی را انتخاب کنید می توانید صدایی بهتر از ساب ووفر بیسیم بشنوید. (صفحه ۱۰ را ملاحظه کنید)
-
- پیش از جابجا کردن یا نصب دستگاه، حتماً آنرا را خاموش کرده و سیم برق را قطع کنید.
 - اگر دستگاه اصلی خاموش شود، ساب ووفر در حالت آماده بکار خواهد بود و پس از اینکه نشانگر لینک (LED آبی رنگ) برای ۳۰ ثانیه چشمک زد، LED آماده بکار در بالای آن روشن خواهد شد.
 - در صورت استفاده از دستگاهی با فرکانس مشابه (۲،۴ گیگاهرتز) Soundbar در مجاورت Soundbar، تداخل ممکن است باعث اختلال در صدا شود.
 - مسافت انتشار سیگنال بی سیم میان دستگاه اصلی و ساب ووفر حدود ۱۰ متر است، اما ممکن است بسته به محیط کار شما متفاوت باشد.
 - اگر دیواری بتنی یا فلزی بین دستگاه اصلی و ساب ووفر بیسیم قرار داشته باشد، سیستم شاید به دلیل عدم نفوذ امواج رادیویی در فلز اصلاً کار نکند.
 - اگر دستگاه اصلی نمی تواند ارتباطی بی سیم برقرار کند، برای برقراری مجدد ارتباط میان دستگاه اصلی و ساب ووفر بی سیم مراحل ۱ تا ۶ در ستون سمت چپ را دنبال کنید.
-
- آنتن گیرنده بیسیم در داخل ساب ووفر بیسیم تعبیه شده است. دستگاه را باید بدور از آب و رطوبت نگهدارید.
 - برای بهینه شدن تجربه شنیداری خود باید اطمینان حاصل کنید که هیچ مانعی در اطراف محل ساب ووفر بیسیم قرار نداشته باشد.

وصل کردن سیم پیچ هسته فریت به سیم برق Soundbar

شما می‌توانید با نصب هسته فریت روی سیم برق Soundbar از تداخلات ناشی از امواج الکترومغناطیسی بکاهید.

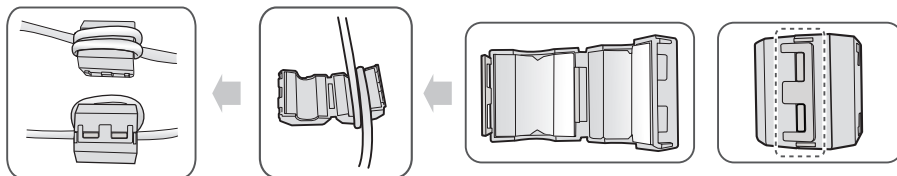

<سیم برق Soundbar>

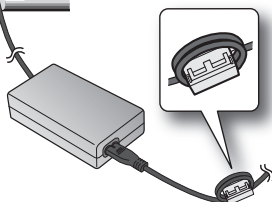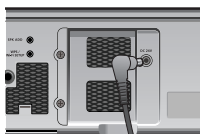

۱. قفل هسته فریتی را باز کنید.


۲. سیم برق Soundbar را دو بار دور هسته فریت بپیچید.
(کار پیچیدن را از فاصله ۵ الی ۱۰ سانتیمتری از هسته شروع کنید).

۳. هسته فریتی را فشار دهید تا وقتی که با صدای کلیک بسته شود.

•

وصل کردن دستگاه های بیرونی با کابل HDMI

HDMI رابط دیجیتالی استاندارد برای اتصال این نوع تلویزیون ها، پروژکتور ها، دستگاه های پخش DVD، دستگاه های پخش Blu-ray، ست تاپ باکس ها و از این قبیل است. از آنجایی که HDMI سیگنال دیجیتالی را با بالاترین کیفیت انتقال می دهد، می توانید از صدا و تصویر برتر لذت ببرید - گویی از منبع دیجیتال اصلی پخش می شود.

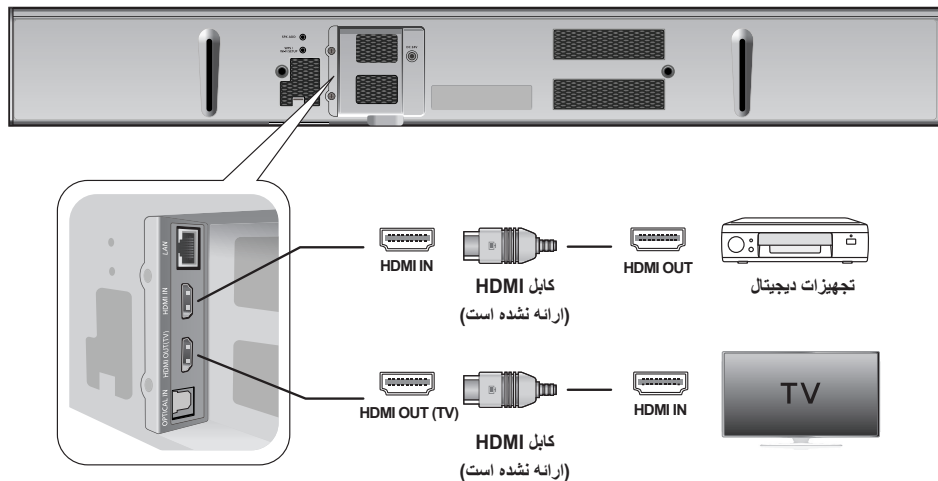

(HDMI OUT) ARC

با قابلیت ARC می توانید صدای دیجیتال را از طریق درگاه HDMI OUT (ARC) خروجی دهید.

این قابلیت را زمانی می توان فعال کرد که Soundbar به یک تلویزیون پشتیبانی کننده از ARC وصل شود.

HDMI IN

یک کابل HDMI (ارائه نشده است) را از فیش ورودی HDMI IN پشت دستگاه به فیش HDMI OUT روی دستگاه دیجیتال خود وصل کنید.

و

(TV) HDMI OUT

یک کابل HDMI (ارائه نشده است) را از فیش ورودی HDMI OUT پشت دستگاه به فیش HDMI IN روی تلویزیون خود وصل کنید.

- Anynet+ باید روشن باشد.


- در صورتیکه کابل HDMI از ARC پشتیبانی نکند، این قابلیت قابل دسترس نخواهد بود.



- HDMI واسطی است که تبادل دیجیتال داده های صدا و تصویر را تنها با یک رابط امکان پذیر می سازد.

وصل کردن وسایل بیرونی با استفاده از کابل نوری (دیجیتال) یا صدا (آنالوگ)

این دستگاه مجهز به یک فیش ورودی دیجیتال نوری و یک فیش ورودی آنالوگ صدا است تا بتوانید دو شیوه اتصال به تلویزیون در اختیار داشته باشید.

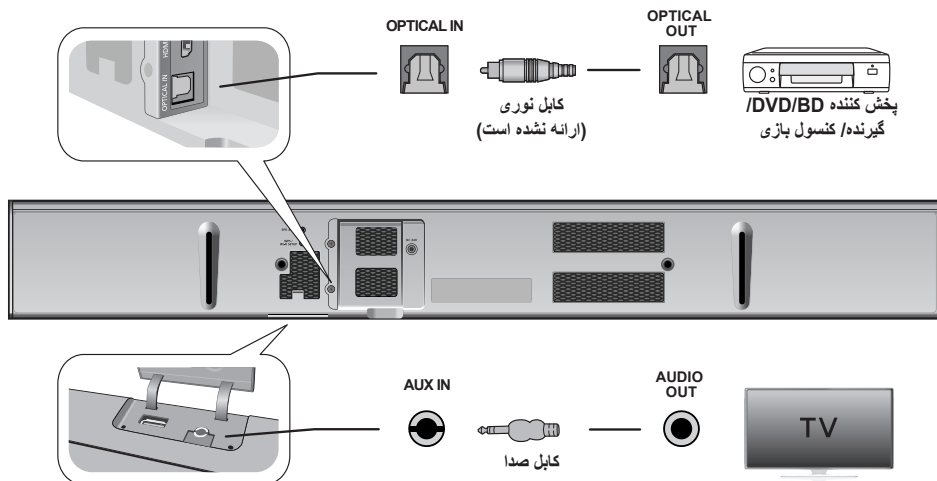

یا،

OPTICAL IN

OPTICAL IN (صدا) روی دستگاه اصلی را به فیش **OPTICAL OUT** تلویزیون را دستگاه منبع خود وصل کنید.

قابلیت را به **D.IN** تغییر دهید.

AUX IN (صدا) دستگاه اصلی را به **AUDIO OUT** تلویزیون یا دستگاه منبع وصل کنید.


قابلیت را به **AUX** تغییر دهید.



- قبل از اینکه تمام اتصالات بین اجزا را برقرار نکرده اید، سیم برق دستگاه یا تلویزیون را به پریز برق وصل نکنید.
- پیش از جابجاکردن یا نصب کردن دستگاه، حتماً دستگاه را خاموش کرده و سیم برق را قطع کنید.

نصب گیره کابل

گیره کابل را مطابق شکل به دستگاه وصل کرده و سپس کابل ها را از گیره عبور دهید تا بطور مرتب قرار گیرند.

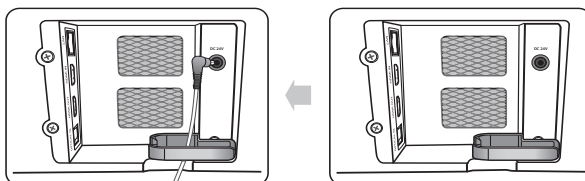

قابلیت ها

حالت ورودی

برای انتخاب حالت دلخواه دکمه () پائل جلوی دستگاه اصلی و یا دکمه **(SOURCE)** کنترل از راه دور را فشار دهید.



دستگاه در شرایط زیر به طور خودکار خاموش می شود:


- حالت ARC/USB/TV/BT/HDMI/D.IN
 - اگر هیچ سیگنال صوتی برای ۱۵ دقیقه وجود نداشته باشد.
- حالت AUX
 - اگر زمانی که کابل AUX وصل است، به مدت ۸ ساعت هیچ یک از کلیدها فشار داده نشود.
 - اگر کابل AUX برای ۱۵ دقیقه قطع باشد.


- برای غیرفعال کردن Auto Power down Off، دکمه  را برای بیش از ۵ ثانیه در حالت AUX فشار دهید.

صفحه نمایش	حالت ورودی
D.IN	ورودی دیجیتال نوری
AUX	ورودی AUX
HDMI	ورودی HDMI
BT	حالت BLUETOOTH
TV	TV SoundConnect
USB	حالت USB

(HDMI OUT) ARC

ARC (کنال بازگشت صدا) سیگنال صدای دیجیتال را به پورت HDMI OUT (ARC) انتقال می دهد.

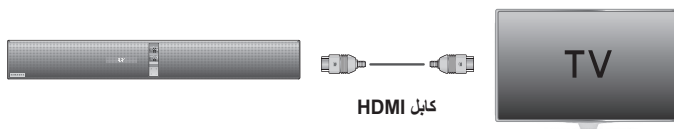

۱. ARC با قابلیت پشتیبانی از تلویزیون را با یک کابل HDMI به Soundbar وصل کنید.
۲. تلویزیون را روشن کنید و Soundbar Anynet+ را روشن کنید.
۳. دکمه () پائل جلوی دستگاه اصلی و یا دکمه **(SOURCE)** روی کنترل از راه دور را فشار دهید تا حالت **D.IN** انتخاب شود.


- اگر کابل HDMI از ویژگی ARC پشتیبانی نکند، ممکن است ARC درست کار نکند.
- برای خاموش کردن ویژگی ARC، Anynet+ را خاموش کنید.

BLUETOOTH

شما می توانید وسایل Bluetooth را برای لذت بردن از موسیقی با کیفیت صدای بالای استریو، بدون نیاز به سیم به Soundbar متصل و استفاده کنید!

◀ برای وصل کردن Soundbar به یک وسیله Bluetooth

بینید آیا وسیله Bluetooth از قابلیت هدست استریو سازگار با Bluetooth پشتیبانی می کند یا خیر.

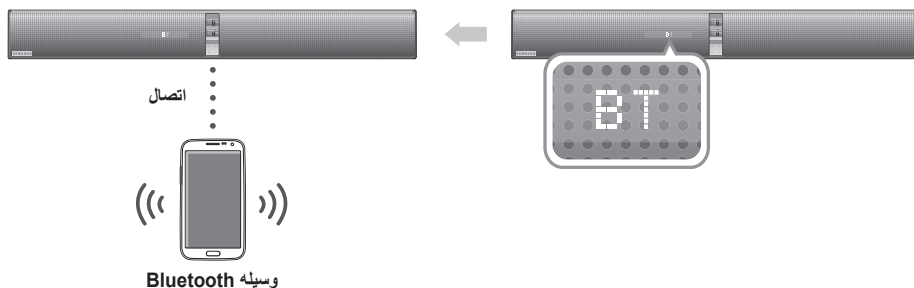


۱. دکمه () پائل جلوی دستگاه اصلی و یا دکمه BT (SOURCE) روی کنترل از راه دور را فشار دهید تا حالت انتخاب شود.
 ۲. منوی Bluetooth را در وسیله Bluetooth می که خواهید به آن وصل شوید انتخاب کنید.
(به دفترچه راهنمای وسیله Bluetooth مراجعه شود)
 ۳. منوی هدست استریو را در وسیله Bluetooth انتخاب کنید.
 - یک فهرست از وسایل اسکن شده مشاهده خواهید کرد.
 ۴. "Samsung Soundbar" را از فهرست انتخاب کنید.
 - وقتی Soundbar به دستگاه Bluetooth وصل شود، عبارت **Bluetooth Device Name** ← **BT READY** (نام دستگاه Bluetooth) ← **BT** در صفحه نمایش جلو نشان داده می شود.
 - نام دستگاه فقط به انگلیسی نمایش داده می شود. اگر نام به انگلیسی نباشد، یک " _ " نمایش داده خواهد شد.
 - اگر جفت سازی وسیله Bluetooth با Soundbar انجام نشد، "Samsung Soundbar" قبلی یافت شده توسط وسیله Bluetooth را حذف کرده و دوباره با آن Soundbar را جستجو کنید.
 ۵. آهنگ های خود را در دستگاه وصل شده پخش کنید.
 - شما می توانید به آهنگ های پخش شده از وسیله Bluetooth وصل شده در سیستم Soundbar گوش دهید.
 - در حالت BT، عملکردهای Play (پخش)/Pause (مکث)/Next (بعدی)/Prev (قبلی) در دسترس نمی باشند. اما این ویژگی ها در دستگاه های Bluetooth از AVRCP پشتیبانی می کنند در دسترس می باشند.
-
- اگر هنگام وصل کردن دستگاه Bluetooth کد PIN از شما خواسته شد، <0000> را وارد کنید.
 - هر بار فقط می توان یک وسیله Bluetooth را جفت کرد.
 - اگر Soundbar را خاموش کنید، اتصال Bluetooth خاتمه می یابد.
 - در شرایط زیر، ممکن است Soundbar جستجوی Bluetooth یا اتصال را به درستی انجام ندهد:
 - اگر یک میدان الکتریکی قوی در اطراف Soundbar وجود داشته باشد.
 - اگر چند وسیله Bluetooth همزمان با Soundbar جفت شده باشند.
 - اگر وسیله Bluetooth خاموش شده باشد، در محل نباشد و یا دچار اشکالات کاری باشد.
 - لطفاً توجه داشته باشید که وسایلی مانند فر مایکروویو، مبدل LAN بیسیم، لامپ فلورسنت و اجاق گاز از محدوده فرکانسی مشابه وسایل Bluetooth استفاده می کنند که می تواند باعث بروز اختلالات الکتریکی گردد.
 - Soundbar از داده های SBC (۴۰۱ کیلو هرتز، ۴۸ کیلو هرتز پشتیبانی می کند).
 - فقط به تجهیزات Bluetooth که از قابلیت A2DP (AV) پشتیبانی می کنند وصل کنید.
 - Soundbar را نمی توانید به دستگاه های Bluetooth که فقط از عملکرد HF (هندزفری) پشتیبانی می کنند وصل کنید.

◀ برای قطع اتصال وسیله Bluetooth از Soundbar

شما می توانید اتصال Soundbar را از وسیله Bluetooth قطع کنید. برای آگاهی از شیوه این کار به دفترچه راهنمای وسیله Bluetooth مراجعه کنید.

- وسیله Soundbar قطع می شود.
- هنگامی که Soundbar از وسیله Bluetooth قطع شده باشد، عبارت **BT DISCONNECTED** در نمایشگر جلوی Soundbar مشاهده خواهد شد.

◀ برای قطع اتصال Soundbar از وسیله Bluetooth

دکمه  (SOURCE) کنترل از راه دور یا دکمه () پائل جلوی دستگاه را برای تعویض حالت از **BT** به حالتی دیگر یا خاموش کردن Soundbar فشار دهید.

- وسیله Bluetooth متصل پیش از اقدام به قطع اتصال مدت زمان مشخصی را برای دریافت پاسخ از Soundbar منتظر خواهد ماند. (زمان قطع اتصال ممکن است بسته به وسیله Bluetooth متفاوت باشد)

-
- در حالت اتصال Bluetooth، اگر فاصله بین Soundbar و وسیله Bluetooth از ۵ متر بیشتر شود، اتصال Bluetooth قطع خواهد شد.
 - Soundbar بطور خودکار بعد از سپری شدن ۱۵ دقیقه در حالت آماده خاموش خواهد شد.
-



اطلاعات بیشتر درباره Bluetooth

- Bluetooth یک فن آوری است که به تجهیزات سازگار با Bluetooth اجازه می دهد بر راحتی و با یک اتصال بیسیم کوتاه بهم وصل شوند.
- وسایل Bluetooth ممکن است بر حسب شرایط استفاده ایجاد نویز یا اشکالات کاری بنمایند، مانند شرایط زیر:
 - هنگامی که بخشی از بدن با سیستم گیرنده/فرستنده وسیله Bluetooth یا Soundbar در تماس است.
 - در صورت وجود اختلالات الکتریکی ناشی از دیوار، کنج یا پارتیشن های اداری.
 - قرار گرفتن در معرض تداخلات الکتریکی از وسایل هم فرکانس شامل تجهیزات پزشکی، فرمایکروویو و LAN بیسیم.
- Soundbar و وسیله Bluetooth را زمانی با هم جفت کنید که بهم نزدیک باشند.
- هرچه فاصله بین Soundbar و وسیله Bluetooth بیشتر باشد، کیفیت افت خواهد کرد.
- اگر فاصله از حداکثر برد مفید Bluetooth بیشتر شود، اتصال قطع خواهد شد.
- در مناطقی که گیرندگی ضعیف است، اتصال Bluetooth ممکن است درست کار نکند.
- اتصال Bluetooth فقط وقتی نزدیک دستگاه باشد کار می کند. اگر فاصله وسیله Bluetooth از این محدوده بیشتر شود اتصال بطور خودکار قطع خواهد شد. حتی در این محدوده، کیفیت صدا ممکن است به دلیل وجود موانعی مانند دیوار یا در افت کند.
- این وسیله بیسیم ممکن است به دلیل کارکرد خود باعث ایجاد اختلالات الکتریکی گردد.

TV SOUNDCONNECT

می توانید صدای تلویزیون را از Soundbar بشنوید، البته در صورتی که به یک Samsung TV که از عملکرد TV SoundConnect پشتیبانی می کند.

◀ وصل کردن تلویزیون به Soundbar



۱. تلویزیون Samsung و Soundbar را روشن کنید.

- منوی تلویزیون را روشن کنید.
- به تنظیم بلندگو در زبانه "صدا" بروید.
- منوی "افزودن دستگاه جدید" را روی "روشن" تنظیم کنید.

۲. دکمه () پائل جلوی دستگاه اصلی و یا دکمه (SOURCE) روی کنترل از راه دور را فشار دهید تا حالت انتخاب TV شود.

۳. روی صفحه تلویزیون، پیامی ظاهر می شود که می پرسد آیا عملکرد TV SoundConnect فعال شود. "[Samsung] Soundbar" روی صفحه تلویزیون نمایش داده می شود.

۴. <Yes> را انتخاب کنید تا اتصال تلویزیون و Soundbar به وسیله کنترل از راه دور خاتمه یابد.



• با جابجایی از حالت Soundbar از تلویزیون به یک حالت دیگر، به طور خودکار به TV SoundConnect پائین می دهد.

• برای وصل کردن Soundbar به یک تلویزیون دیگر، اتصال موجود باید خاتمه یابد.

• اتصال موجود را خاتمه دهید و سپس دکمه II روی کنترل از راه دور را ۵ ثانیه فشار دهید تا به یک تلویزیون دیگر وصل شود.



• عملکرد TV SoundConnect (SoundShare) در بعضی از تلویزیون های Samsung که از سال 2012 به بعد به بازار عرضه شده اند، پشتیبانی می شود. قبل از شروع بررسی کنید که آیا تلویزیون از عملکرد TV SoundConnect (SoundShare) پشتیبانی می کند. (برای اطلاعات بیشتر به دفترچه راهنمای تلویزیون مراجعه شود.)

• اگر تلویزیون Samsung شما قبل از سال 2014 عرضه شده است، منوی تنظیمات SoundShare را بررسی کنید.

• اگر فاصله بین تلویزیون و Soundbar از ۵ متر بیشتر باشد، ممکن است اتصال یکنواخت نباشد یا صدا قطع و وصل شود. در صورت بروز این حالت، جای تلویزیون یا Soundbar را تغییر دهید و آنها را در محدوده برد عملیاتی TV SoundConnect دوباره اتصال برقرار کنید.

• TV SoundConnect محدوده های برد عملیاتی:


- محدوده برد جفت سازی توصیه شده: در ۵۰ سانتی متر
- محدوده برد عملیاتی توصیه شده: در ۵ متر

• دکمه های Play (پخش)/Pause (مکث)، Next (بعدی)، Prev (قبلی) در حالت TV SoundConnect عمل نمی کنند.


USB

از طریق Soundbar می توانید فایل های موسیقی ذخیره شده روی دستگاه های ذخیره USB را پخش کنید.

صفحه نمایش

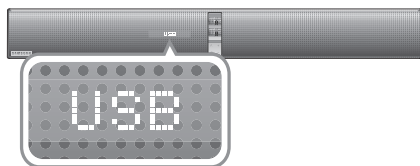

درگاه USB

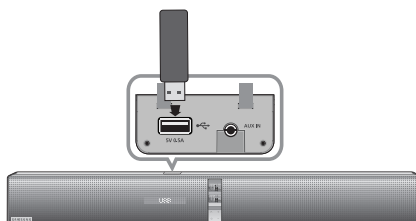

- وقتی دستگاه USB در حال انتقال فایل است، آن را برنارید.
- فایل های موسیقی محافظت شده توسط DRM (WMA، MP3) از وب سایت های تجاری را نمی توان پخش کرد.
- HDD (دیسک سخت) بیرونی پشتیبانی نمی شود.
- تجهیزات تلفن همراه پشتیبانی نمی شوند.
- فهرست سازگاری نوع و فرمت فایل ها:

فرمت	کدگذاری
*.mp3	MPEG 1 Layer2
	MPEG 1 Layer3
	MPEG 2 Layer3
	MPEG 2.5 Layer3
*.wma	Wave_Format_MSAudio1
	Wave_Format_MSAudio2
*.aac	AAC
	AAC-LC
	HE-AAC
*.wav	-
*.ogg	OGG 1.1.0
*.flac	FLAC 1.1.0, FLAC 1.2.1

✗ پشتیبانی از نرخ نمونه برداری بالای ۱۶ کیلوهرتز

۱. دستگاه USB را به پورت USB محصول وصل کنید.
 ۲. دکمه (SOURCE) پانل جلوی دستگاه اصلی و یا دکمه روی کنترل از راه دور را فشار دهید تا حالت USB انتخاب شود.
 ۳. USB روی صفحه نمایش ظاهر می شود.
- اتصال Soundbar با دستگاه USB برقرار شده است.
 - اگر برای بیش از ۱۵ دقیقه هیچ وسیله USB وصل نشده باشد، Soundbar بطور خودکار خاموش خواهد شد (خاموش شدن خودکار).

پیش از وصل کردن وسیله USB

به نکات زیر توجه داشته باشید:

- اگر نام یک فایل یا یک پوشه روی دستگاه USB بیش از ۱۰ نویسه باشد، روی صفحه نمایش Soundbar نشان داده نمی شود.
- این دستگاه ممکن است با برخی تجهیزات ذخیره سازی USB خاص سازگاری نداشته باشد.
- Soundbar از سیستم های فایل FAT16 و FAT32 پشتیبانی می کند.
- سیستم فایل NTFS پشتیبانی نمی شود.
- وسایل USB را مستقیماً به درگاه USB دستگاه وصل کنید. در غیر اینصورت ممکن است با مشکلات سازگاری USB روبرو شوید.
- وسایل ذخیره سازی متعدد را با یک کارت خوان چندمنظوره به دستگاه وصل نکنید. ممکن است بطور صحیح کار نکنند.
- پروتکل های PTP دوربین های دیجیتال پشتیبانی نمی شوند.

استفاده از قابلیت NETWORK STANDBY ON

قابلیت Network Standby On زمانی در دسترس خواهد بود که اتصال بیسیم بطور صحیح میان وسیله هوشمند و Soundbar برقرار شده باشد. این قابلیت Soundbar را در زمانی که یک وسیله هوشمند میادرت به اتصال به Soundbar از طریق Bluetooth یا Wi-Fi بنماید بطور خودکار روشن خواهد کرد. اگر Soundbar از طریق اتصال Bluetooth روشن شده باشد، حالت ورودی آن بطور خودکار روی BT تنظیم خواهد شد. روشن کردن Soundbar از طریق Wi-Fi فقط با استفاده از برنامه میسر است. جهت کسب اطلاعات بیشتر به راهنمای وب مراجعه کنید.

۱. وسیله هوشمند را به Soundbar خود وصل کنید.

۲. قابلیت Network Standby On را با فشار دادن دکمه ► روی کنترل از راه دور Soundbar برای بیش از ۵ ثانیه روشن کنید. برای خاموش کردن قابلیت می توانید دکمه ►► را دوباره برای بیش از ۵ ثانیه فشار دهید.



• فقط زمانی در دسترس است که Soundbar در میان فهرست دستگاه های جفت شده وسیله هوشمند ذکر شده باشد. (وسيله هوشمند و Soundbar باید قبلاً حداقل یک بار جفت سازی شده باشند.)

• Soundbar فقط زمانی در فهرست دستگاه های جستجو شده وسیله هوشمند نمایان خواهد شد که Soundbar عبارت [BT READY] یا [WiFi READY] را نمایش دهد.

• در حالت TV SoundConnect نمی توان Soundbar را با یک وسیله هوشمند دیگر جفت سازی کرد.

• اگر قابلیت Network Standby On کار نمی کند

- Network Standby On روی خاموش تنظیم شده است.

• در صورتی که سیم برق جدا شده یا برق قطع شده باشد اتصال Wi-Fi به Soundbar خاتمه خواهد یافت. Soundbar را روشن کرده و دوباره وصل شوید.

استفاده از قابلیت AUTO POWER LINK

اگر Soundbar با یک کابل اپتیکال به وسیله بیرونی وصل شده باشد می توان از قابلیت AUTO POWER LINK استفاده کرد. اگر دستگاه اصلی را با یک کابل اپتیکال دیجیتال به یک تلویزیون وصل کرده اید، با تنظیم قابلیت روشن شدن خودکار می توانید ترتیبی دهید که هرگاه که تلویزیون را روشن می کنید، Soundbar نیز بطور خودکار روشن شود.

۱. Soundbar و وسیله بیرونی را با یک کابل اپتیکال بهم وصل کنید.

۲. برای جابجا کردن قابلیت دکمه DIMMER/Anynet+ را فشار داده و برای بیش از ۵ ثانیه نگاه دارید.


صفحه نمایش	AUTO POWER LINK
/ ANYNET+ OFF POWER LINK ON	ON
/ ANYNET+ ON POWER LINK OFF	OFF

استفاده از MULTIROOM LINK

بعد از اینکه Soundbar از طریق برنامه Multiroom Link به یک وسیله هوشمند متصل شد، می توانید چندین دستگاه Samsung Multiroom را بطور بیسیم بهم وصل کنید.

◀ قبل از شروع

ملزومات اتصال

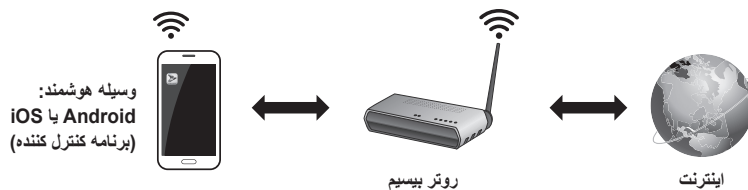


۱. ملزومات: روتر بیسیم، وسیله هوشمند
۲. روتر بیسیم باید به اینترنت وصل باشد.
۳. وسیله هوشمند باید از طریق اتصال Wi-Fi به روتر وصل باشد.

◀ نصب برنامه Samsung Multiroom

برای استفاده از Soundbar باید برنامه Samsung Multiroom را از طریق Google play یا App Store دانلود و نصب نمایید. بعد از نصب برنامه Samsung Multiroom می توانید آهنگ های ذخیره شده در وسیله هوشمند خود، دستگاه های متصل و سایر ارائه کنندگان و نیز ایستگاه های رادیویی اینترنتی را پخش نمایید.

دسترسی به برنامه Samsung Multiroom

برای دسترسی یافتن به برنامه Samsung Multiroom نماد برنامه Multiroom را در وسیله هوشمند خود فشار دهید.

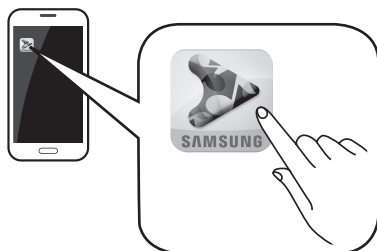

iOS یا Android

برنامه Samsung Multiroom را از Google Play یا App Store در وسیله هوشمند خود دانلود کنید.

* جستجوی بازار: Samsung Multiroom




یا



◀ اتصال با Soundbar

Soundbar را به روتر بیسیم/سیمی وصل کنید. اتصال سیمی یا بیسیم (با استفاده از **Wi-Fi SETUP** یا **WPS**، می توانید به راهنمای برنامه Multiroom مراجعه کنید) با روتر قابل برقراری است.

متصل کردن Soundbar به شبکه با استفاده از یک کابل LAN

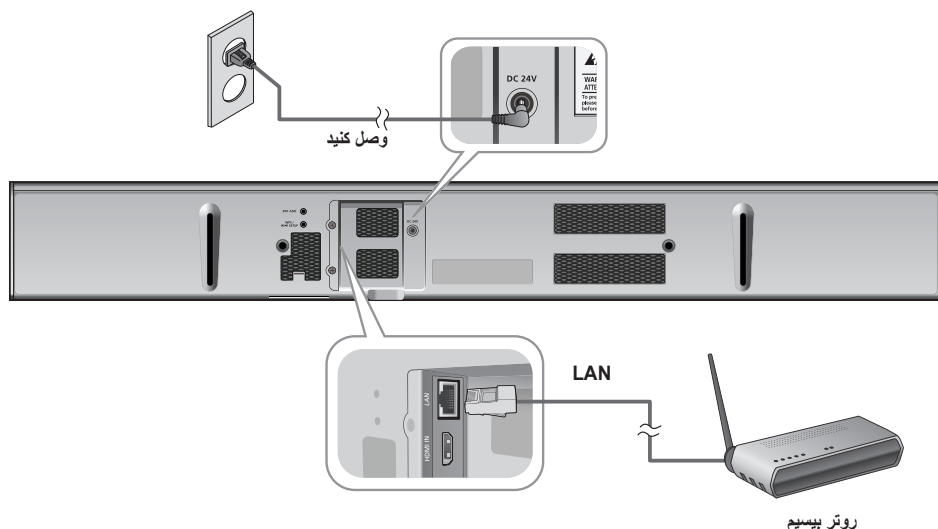

۱. وسیله هوشمند را به شبکه Wi-Fi خود وصل کنید.
۲. برنامه Samsung Multiroom را در وسیله هوشمند خود انتخاب کنید. تنظیم آغاز می شود.
۳. گزینه "I don't have a Hub" را در برنامه انتخاب کرده و سپس **Next** را فشار دهید. در صفحه بعد، **Soundbar** را بعنوان نوع وسیله انتخاب کرده و سپس **Next** را فشار دهید.
۴. گزینه **Wired** را بعنوان نوع شبکه انتخاب کرده و سپس **Next** را فشار دهید.
۵. یک انتهای کابل LAN را به درگاه **LAN** دستگاه Soundbar وصل کنید. انتهای دیگر آنرا به روتر بیسیم خود وصل نمایید. (شما نمی توانید بدون یک روتر بیسیم از Soundbar استفاده کنید.)
۶. Soundbar را به یک پریز برق وصل کنید.



- برای کسب اطلاعات بیشتر درباره نحوه اتصال Soundbar به روتر سیمی/بیسیم، به راهنمای موجود در وب مراجعه کنید.
- برای کسب اطلاعات بیشتر درباره متصل ساختن دستگاه برای **Multiroom Link**، لطفاً به راهنمای اینترنتی یا راهنمای ارائه شده در برنامه مراجعه کنید.

- راهنمای اینترنتی: www.Samsung.com ← Support (پشتیبانی) ← Product name search (جستجوی نام دستگاه) ←
HW-H750 یا PDF HW-H751 دانلود فایل.




- اگر فایل های صوتی پشتیبانی شده توسط Soundbar روی دستگاه ذخیره USB ذخیره شده باشند، ممکن است به روزرسانی ثابت افزار درست کار نکند.
- وقتی به روزرسانی درحال انجام است، از کشیدن دوشاخه از برق یا برداشتن دستگاه USB خودداری کنید. پس از اتمام به روزرسانی ثابت افزار، دستگاه اصلی به طور خودکار خاموش می شود.
- پس از بازنشانی، همه تنظیمات به تنظیمات پیش فرض کارخانه بازنشانی می شوند. توصیه می کنیم تنظیمات خود را یادداشت کنید تا پس از به روز رسانی بتوانید به آسانی آنها را باز نشانی کنید.
- توجه داشته باشید که به روزرسانی ثابت افزار اتصال ساب ووفر را نیز بازنشانی می کند. اگر پس از بازنشانی، اتصال به ساب ووفر به طور خودکار برقرار نشد، به صفحه ۱۳ مراجعه کنید. اگر ثابت افزار به روزرسانی نشد، توصیه می کنیم دستگاه USB را با FAT16 قالب بندی کنید و دوباره امتحان کنید.
- دستگاه USB را با قالب NTFS قالب بندی نکنید.
- Soundbar از فایل سیستم NTFS پشتیبانی نمی کند.
- برخی وسایل USB ممکن است بسته به سازنده پشتیبانی نشوند.

◀ بروزرسانی خودکار

حتی وقتی که Soundbar خاموش است، Soundbar در صورت وصل بودن به اینترنت بطور خودکار آخرین نسخه نرم افزار را بررسی کرده و به بروزرسانی ادامه می دهد.



- Soundbar بطور پیش فرض برای اجرای خودکار بروزرسانی تنظیم شده است.
- برای استفاده از قابلیت بروزرسانی خودکار، Soundbar باید به اینترنت وصل باشد.
- در صورتی که سیم برق جدا شده یا برق قطع شده باشد، اتصال Wi-Fi Soundbar خاتمه خواهد یافت.
- Soundbar را روشن کرده و دوباره وصل شوید.

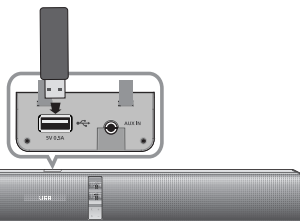

◀ بروزرسانی با USB

Samsung ممکن است در آینده به روزرسانی هایی برای ثابت افزار سیستم Soundbar ارائه دهد.

در صورت ارائه به روزرسانی، می توانید با وصل کردن یک دستگاه USB که به روزرسانی ثابت افزار روی آن ذخیره شده است به پورت USB روی Soundbar، ثابت افزار را به روزرسانی کنید.

توجه داشته باشید که در صورت وجود چند فایل به روزرسانی، باید آنها را جداگانه روی دستگاه USB بارگیری کرده و هر بار از یکی از آنها برای به روزرسانی ثابت افزار استفاده کنید.

جهت کسب اطلاعات بیشتر درباره دانلود فایل های به روزرسانی، لطفاً به Samsung.com مراجعه کرده یا با مرکز تماس Samsung تماس بگیرید.

۱. هنگامی که Soundbar خاموش است، وسیله ذخیره سازی USB محتوی ثابت افزار را به درگاه USB دستگاه Soundbar وصل کنید.
۲. Soundbar را روشن کنید. **UPDATE** در نمایشگر نمایان شده و بروزرسانی ظرف مدت ۳ دقیقه آغاز خواهد شد.
- Soundbar بعد از تکمیل بروزرسانی بطور خودکار خاموش و روشن خواهد شد.

اگر UPDATE نمایش داده نشد

۱. Soundbar را خاموش کنید، وسیله ذخیره سازی USB محتوی فایل های بروزرسانی را به درگاه USB دستگاه Soundbar وصل کنید.
۲. سیم برق را جدا کنید، آنرا دوباره وصل کرده و روشن کنید.

عیب یابی

قبل از درخواست خدمات، لطفاً موارد ذیل را کنترل کنید.

دستگاه روشن نمی شود.	
• آیا سیم برق داخل پریز شده است؟	← دوشاخه را به پریز بزنید.

موقعی که دکمه را فشار می دهید قابلیت آن کار نمی کند.	
• آیا الکتریسیته سلکن در هوا وجود دارد؟	← دوشاخه را از پریز خارج کرده و دوباره بزنید.

صدا پخش نمی شود.	
• آیا قابلیت قطع صدا فعال است؟	← برای لغو قابلیت دکمه Mute (بیصدا) را فشار دهید.
• آیا میزان صدا را روی حداقل قرار داده اید؟	← میزان صدا را تنظیم کنید.

دستگاه کنترل از راه دور کار نمی کند.	
• آیا باتری ها خالی شده اند؟	← باتری جدید بگذارید.
• آیا فاصله بین کنترل از راه دور و دستگاه اصلی خیلی زیاد است؟	← فاصله با دستگاه را کم کنید.

TV SoundConnect (جفت سازی تلویزیون) انجام نشد.	
• آیا تلویزیون شما از TV SoundConnect پشتیبانی می کند؟	← TV SoundConnect در بعضی از تلویزیون های Samsung که از سال 2012 به بعد به بازار عرضه شده اند، پشتیبانی می شود. تلویزیون خود را بررسی کنید و ببینید آیا از TV SoundConnect پشتیبانی می کند.
• آیا آخرین نسخه ثابت افزار را در تلویزیون خود دارید؟	← تلویزیون خود را با آخرین نسخه ثابت افزار بروز سازید.
• آیا هنگام اتصال خطایی رخ می دهد؟	← با مرکز تماس Samsung تماس بگیرید.
• TV MODE (حالت تلویزیون) را بازنشانی کرده و دوباره متصل کنید.	← دکمه II ► را برای ۵ ثانیه فشار داده و نگه دارید تا اتصال TV SoundConnect دوباره برقرار شود.

LED قرمز روی ساب ووفر چشمک می زند و ساب ووفر صدایی را پخش نمی کند.	
• ممکن است ساب ووفر به بنده اصلی محصول وصل نشده باشد.	← ساب ووفر را دوباره وصل کنید. (صفحه ۱۳ را ملاحظه کنید)

ساب ووفر وزوز می کند و به طور محسوس می لرزد.	
• سعی کنید لرزش ساب ووفر را تنظیم کنید.	← دکمه WOOFER روی کنترل از راه دور را فشار دهید تا مقدار آن را (بین SW-6 و SW+6) تنظیم کنید.

ضمیمه

مشخصات فنی

نام مدل		HW-H760	
کلی	USB		۰,۵A/۵V
	وزن	دستگاه اصلی	۳,۲ کیلوگرم
		ساب ووفر (PS-WH760)	۹,۸ کیلوگرم
	ابعاد (طول x ارتفاع x عرض)	دستگاه اصلی	۹۴۳ x ۱۲۳ x ۵۷ میلیمتر
		ساب ووفر (PS-WH760)	۳۰۵,۵ x ۳۸۸,۵ x ۳۰۵,۵ میلیمتر
	محدوده نمای کاری		۵+ درجه سانتیگراد تا ۳۵+ درجه سانتیگراد
	محدوده رطوبت کاری		۱۰ تا ۷۵ درصد
آمپلیفایر	توان اسمی خروجی	اصلی جلو	۴۰ وات/کانال، ۶ اهم، THD = ۱٪، ۱ کیلوهرتز
		اصلی پایین	۴۰ وات/کانال، ۶ اهم، THD = ۱٪، ۱ کیلوهرتز
		ساب ووفر (PS-WH760)	۱۶۰ وات، ۳ اهم، THD = ۱۰٪، ۱۰۰ هرتز
	نسبت S/N سیگنال به نویز (ورودی آنالوگ)		۶۵ دسی بل
	تفکیک (1 کیلوهرتز)		۶۵ دسی بل

* سنسجس نسبت S/N، اعوجاج، تفکیک و حساسیت مفید بر اساس استاندارد های AES (انجمن مهندسی صدا) انجام شده اند.

* مشخصات اسمی

- Samsung Electronics Co., Ltd حق تغییر مشخصات بدون اعلام قبلی را برای خود محفوظ می دارد.
- وزن و ابعاد دستگاه تقریبی هستند.
- برای آگاهی از مشخصات منبع تغذیه و توان مصرفی به برجسب دستگاه مراجعه کنید.

※ اطلاعیه مجوز کد باز

جهت کسب اطلاعات بیشتر درباره کد باز مورد استفاده در این محصول، لطفاً از وب سایت زیر دیدن کنید: <http://opensource.samsung.com>

※ Spotify مجوز

- نرم افزار Spotify مشمول مجوز های اشخاص ثالث است که در اینجا قابل دسترسی است: www.spotify.com/connect/third-party-licenses.
- برای کسب اطلاعات بیشتر درباره Spotify Connect به www.spotify.com/connect مراجعه کنید.



تماس با SAMSUNG در سراسر دنیا
اگر هرگونه پرسش یا نظری در رابطه با محصولات Samsung دارید، لطفاً با مرکز خدمات مشتریان SAMSUNG تماس بگیرید.

Area	Contact Centre ☎	Web Site
■ Asia Pacific		
AUSTRALIA	1300 362 603	www.samsung.com/au/support
NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz/support
CHINA	400-810-5858	www.samsung.com/cn/support
HONG KONG	(852) 3698 4698	www.samsung.com/hk/support (Chinese) www.samsung.com/hk_en/support (English)
INDIA	1800 3000 8282 - Toll Free 1800 266 8282 - Toll Free 30308282 - Non Toll Free	www.samsung.com/in/support
INDONESIA	0800112888 021-56997777	www.samsung.com/id/support
JAPAN	0120-327-527	www.samsung.com/jp/support
MALAYSIA	1800-88-9999	www.samsung.com/my/support
PHILIPPINES	1-800-10-7267864 [PLDT] 1-800-8-7267864 [Globe landline and Mobile] 02-4222111 [Other landline]	www.samsung.com/ph/support
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com/sg/support
THAILAND	0-2689-3232, 1800-29-3232	www.samsung.com/th/support
TAIWAN	0800-32-9999	www.samsung.com/tw/support
VIETNAM	1800 588 889	www.samsung.com/vn/support
■ MENA		
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)
OMAN	800-SAMSUNG(726-7864)	
KUWAIT	183-2255 (183-CALL)	
BAHRAIN	8000-4726	
QATAR	800-2255 (800-CALL)	www.samsung.com/eg/support
EGYPT	08000-726786 16580	
ALGERIA	021 36 11 00	
PAKISTAN	0800-Samsung (72678)	
TUNISIA	80-1000-12	www.samsung.com/n_africa/support
JORDAN	0800-22273 06 5777444	www.samsung.com/Levant/support (English)
SYRIA	18252273	www.samsung.com/Levant/support (English)
IRAN	021-8255	www.samsung.com/iran/support
MOROCCO	080 100 2255	www.samsung.com/n_africa/support
SAUDI ARABIA	920021230	www.samsung.com/sa/support www.samsung.com/sa_en/support (English)
TURKEY	444 77 11	www.samsung.com/tr/support
■ Africa		
NIGERIA	0800-726-7864	www.samsung.com/africa_en/support
Ghana	0800-10077 0302-200077	
Cote D' Ivoire	8000 0077	
SENEGAL	800-00-0077	
CAMEROON	7095- 0077	www.samsung.com/africa_fr/support
KENYA	0800 545 545	www.samsung.com/support
UGANDA	0800 300 300	
TANZANIA	0685 88 99 00	
RWANDA	9999	
BURUNDI	200	
DRC	499999	
SUDAN	1969	
SOUTH AFRICA	0860 SAMSUNG (726 7864)	www.samsung.com/support
BOTSWANA	8007260000	
NAMIBIA	08 197 267 864	
ZAMBIA	0211 350370	
MOZAMBIQUE	847267864 / 827267864	