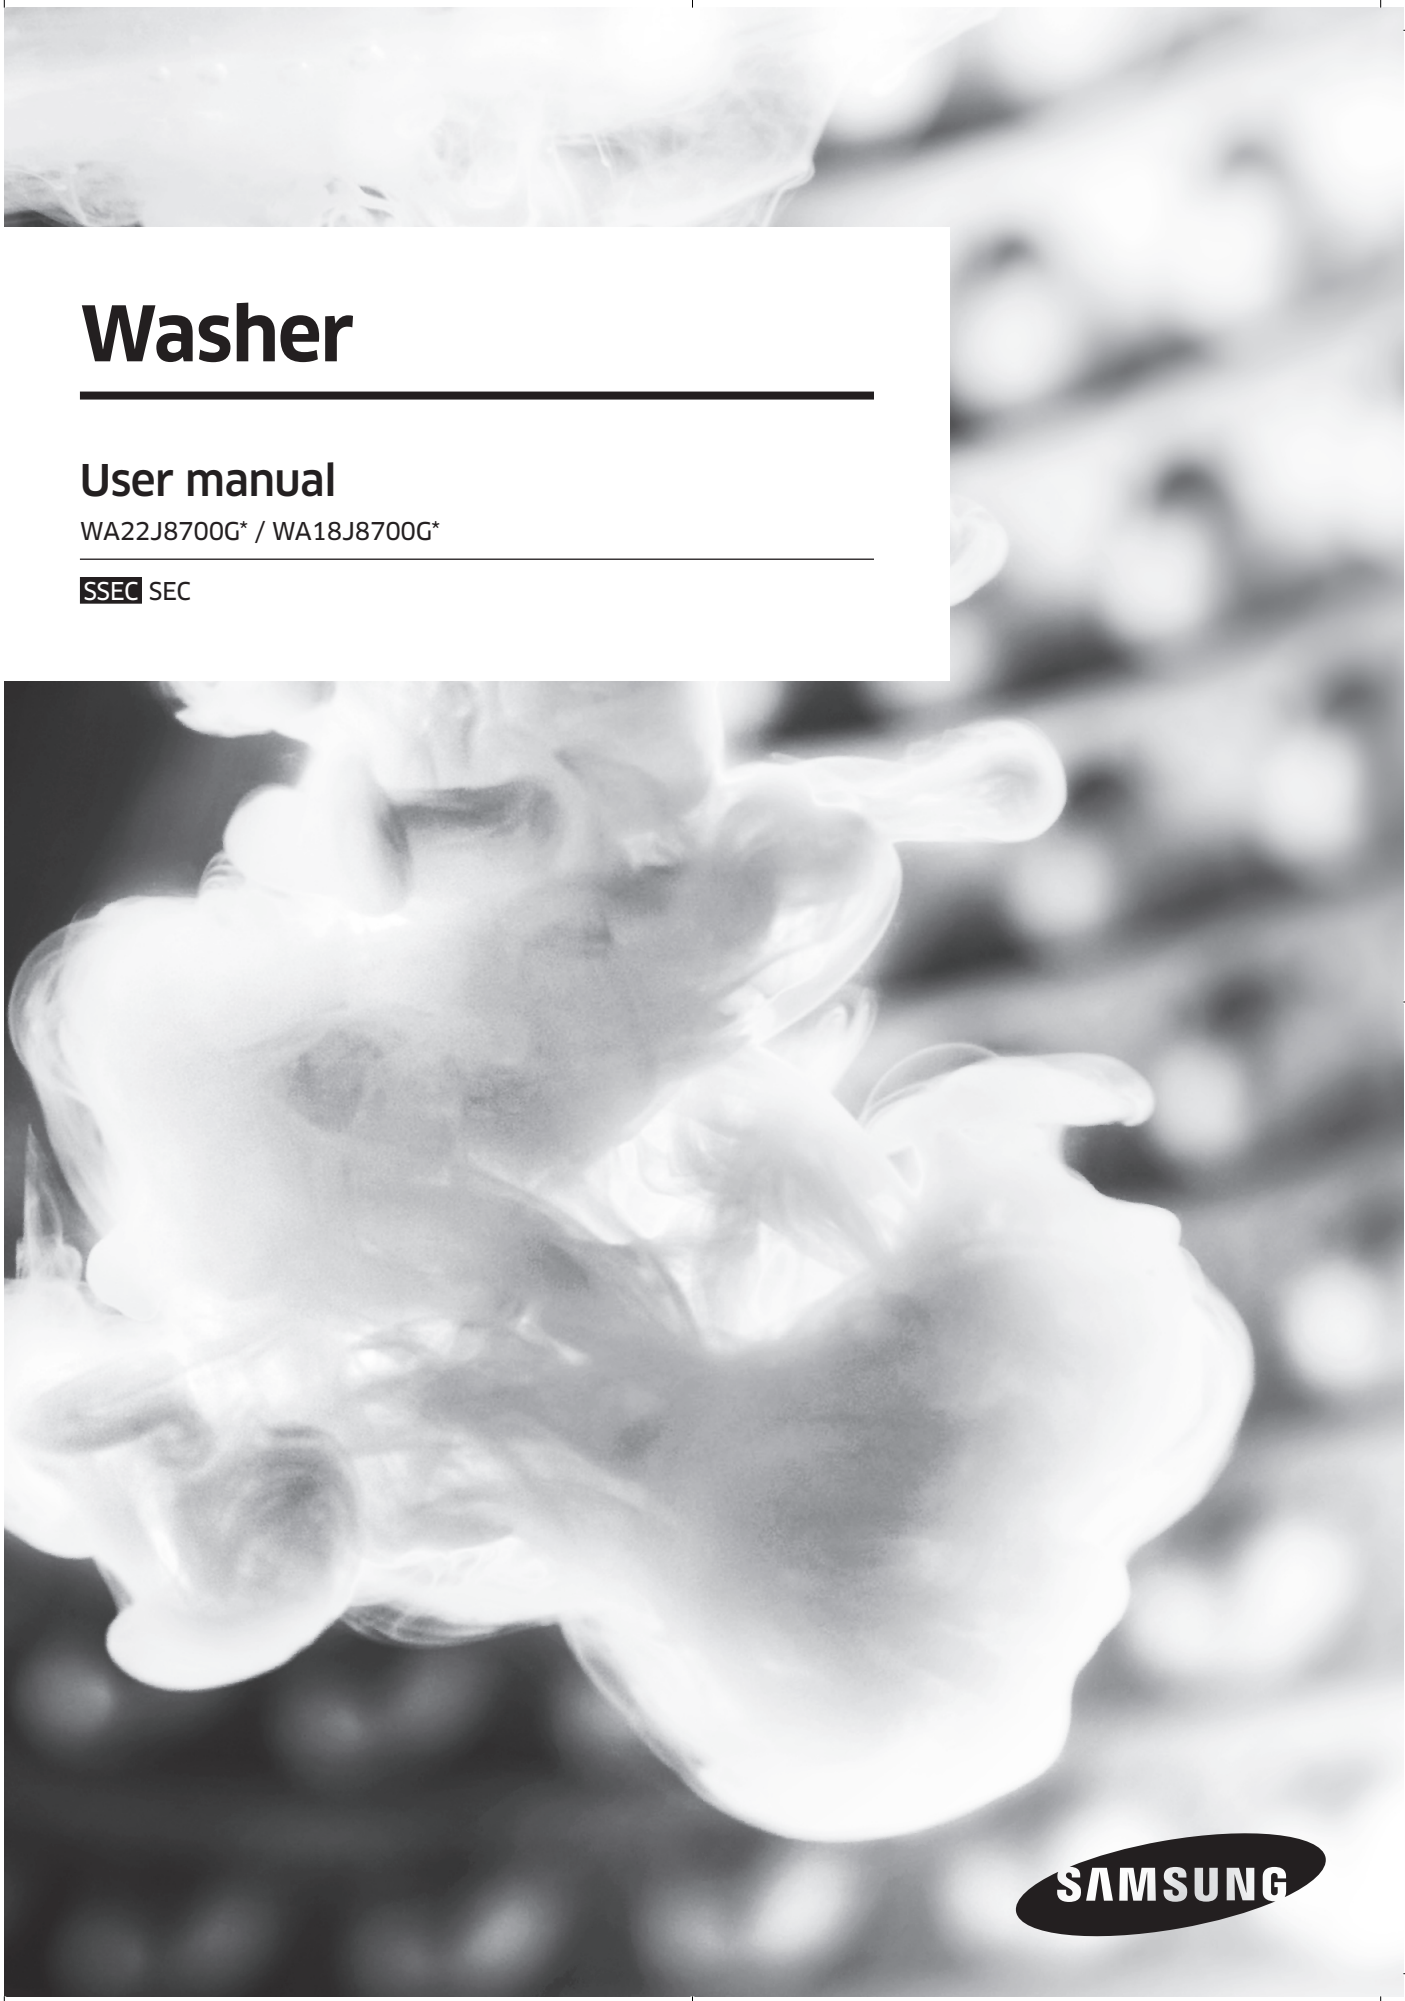

Washer

User manual

WA22J8700G* / WA18J8700G*

SSEC SEC

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 1 2015/7/27 16:55:33

Contents

Safety information **4**

What you need to know about the safety instructions 4
Important safety symbols 4
Important safety precautions 5

Installation **11**

Unpacking your washer 11
Overview of your washer 12
Basic location requirements 14
Important note to installer 18
Step-by-step installation 18

Operating instructions **26**

Loading your washer 26
Getting started 27

Washing a load of laundry **28**

Control panel 28
Cycle overview 30
Options 31
Washing clothes using the cycle selector 34
ATC (Auto Temperature Control) 35
The basics 36
Detergent use 38
Features 39

Maintaining your washer **42**

Cleaning the exterior 42
Cleaning the interior 42
Storing your washer 42
Preserving the top cover and the front frame 43
Cleaning the built-in sink and lint filter 43
Cleaning the dispensers 44
Eco Tub clean 46

Troubleshooting **47**

Checkpoints 47
Information codes 51

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 2 2015/7/27 16:55:33

Specifications **54**

Fabric care chart 54
Helping the environment 56
Specification sheet 57
Cycle chart 58

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 3 2015/7/27 16:55:33

Safety information

Congratulations on your new Samsung washer. This manual contains important information on the installation, use and care of your appliance. Please take some time to read this manual to take full advantage of your washer's many benefits and features.

What you need to know about the safety instructions

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance. Please store the manual in a safe location close to the appliance for future reference. Use this appliance only for its intended purpose as described in this instruction manual.
Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution and care when installing, maintaining and operating your washing machine.
Because the following operating instructions cover various models, the characteristics of your washing machine may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at www.samsung.com.

Important safety symbols

What the icons and signs in this user manual mean:

⚠ WARNING

Hazards or unsafe practices that may result in **severe personal injury, death and/or property damage**.

⚠ CAUTION

Hazards or unsafe practices that may result in **personal injury and/or property damage**.

NOTE

Indicates that a risk of personal injury or material damage exists.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 4 2015/7/27 16:55:33

These warning signs are here to prevent injury to yourself and others.
Please follow them explicitly.
After reading this manual, store it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment that uses electricity and moving parts, potential hazards exist. To safely operate this appliance, familiarize yourself with its operation and exercise care when using it.

Important safety precautions

⚠ WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

Do not let children (or pets) play in or on your washing machine. The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.

This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

For use in Europe: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 5 2015/7/27 16:55:33

Safety information

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This appliance should be positioned so that the power plug, the water supply taps, and the drain pipes are accessible.

For appliances with ventilation openings in the base, that a carpet must not obstruct the openings.

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.

⚠ CAUTION

In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

⚠ CAUTION

Do not use the water to exceed 50 °C when using the hot water in your washing machine.
Plastic parts may be deformed or damaged, and this may result in electric shock or fire.

Critical installation warnings

⚠ **WARNING**

The installation of this appliance must be performed by a qualified technician or service company.

- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 6 2015/7/27 16:55:34

Plug the power cord into an AC 220-240 V / 50 Hz wall socket or higher and use the socket for this appliance only. Never use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency, and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.
- Plug the power plug into the wall socket so that the cord is running towards the floor. If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

This appliance must be properly grounded.
Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product.
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national regulations.

Do not install this appliance near a heater or any inflammable material.
Do not install this appliance in a humid, oily or dusty location, or in a location exposed to direct sunlight or water (rain drops).

Do not install this appliance in a location exposed to low temperatures.

- Frost may cause the tubes to burst.

Do not use an electric transformer.

- This may result in electric shock or fire.

Do not use a damaged power plug, damaged power cord, or loose wall socket.

- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.
Do not twist or tie the power cord.
Do not hook the power cord over a metal object, place a heavy object on the power cord, Insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 7 2015/7/27 16:55:34

Safety information

Installation cautions

⚠ CAUTION

This appliance should be positioned in such a way that the power plug is easily accessible.
- Failure to do so may result in electric shock or fire due to electric leakage.

Critical usage warnings

⚠ WARNING

If the appliance is flooded, turn off the water & power supplies immediately and contact your nearest service centre.
- Do not touch the power plug with wet hands.
- Failure to do so may result in electric shock.

If the appliance generates a strange noise, a burning smell, or smoke, unplug the power plug immediately and contact your nearest Samsung Customer Service.
- Failure to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.
- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Do not let children play in or on the washing machine. In addition, when disposing of the appliance, remove the lid.
- If trapped inside the product, children may suffocate to death.

Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other inflammable or explosive substances.
- This may result in electric shock, fire, or an explosion.

Do not touch the power plug with wet hands.
- This may result in electric shock.

Do not insert your hand or a metal object under the washing machine while an operation is in progress.
- This may result in injury.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 8 2015/7/27 16:55:34

Do not attempt to repair, disassemble, or modify the appliance yourself.
- Do not use a fuse (such as copper, steel wire, etc.) other than a standard fuse.
- When the appliance needs to be repaired or reinstalled, contact your nearest service centre.
- Failure to do so may result in electric shock, fire, problems with the product, or injury.
- In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from doing it.

Unplug the power plug when the appliance is not being used for long periods of time or during a thunder or lightning storm.
- Failure to do so may result in electric shock or fire.

Do not put your hand into the spinning tub during the spin cycle.
- This may result in injury. If the tub does not stop spinning within 15 seconds after you open the lid, contact your nearest Samsung Customer Service.

Usage cautions

⚠ CAUTION

When the washing machine is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power plug and clean the washing machine using a damp, soft cloth.
- Failure to do so may result in discolouration, deformation, damage, or rust.

The product you have purchased is designed for domestic use only.
Using the product for business purposes qualifies as a product misuse. In this case, the product will not be covered by the standard warranty provided by Samsung and no responsibility can be attributed to Samsung for malfunctions or damages resulting from such misuse.

Do not stand on the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.
- This may result in electric shock, fire, problems with the product, or injury.

Do not press the buttons using sharp objects such as pins, knifes, fingernails, etc.
- This may result in electric shock or injury.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 9 2015/7/27 16:55:34

Safety information

Critical cleaning warnings

⚠ **WARNING**

Do not clean the appliance by spraying water directly onto it.

Do not use the strong acid cleaning agent.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.

- Failure to do so may result in electric shock or fire.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 10 2015/7/27 16:55:34

Installation

Follow these instructions carefully to ensure proper installation of the washer and to prevent accidents when using it.

Unpacking your washer

Unpack your washer and inspect it for shipping damage. Make sure you have received all the items shown below. If your washer was damaged during shipping, or you do not have all of the items, contact 800-SAMSUNG (800-7267864) (U.A.E), 183-CALL (183-2255) (KUWAIT). To prevent personal injury or strain, wear protective gloves whenever lifting or carrying the unit.

⚠ WARNING

Packing materials can be dangerous to children; Keep all packing material (plastic bags, polystyrene, etc.) well out of children's reach.

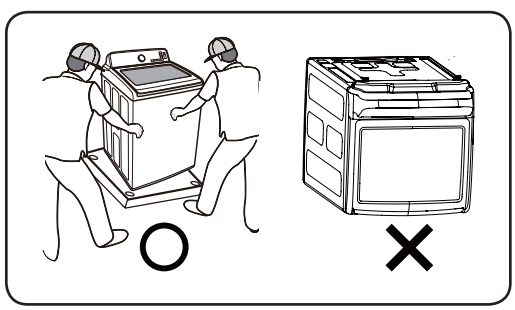

⚠ CAUTION

When unpacking the washer, 2 person collaboration is needed. To remove the cushion bottom of the packing materials, forward dumping is strictly prohibited.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 11 2015/7/27 16:55:34

Installation

Overview of your washer

Make sure all the parts are included in the product package. If you have a problem with the washer or the parts, contact a local Samsung customer center or the retailer.

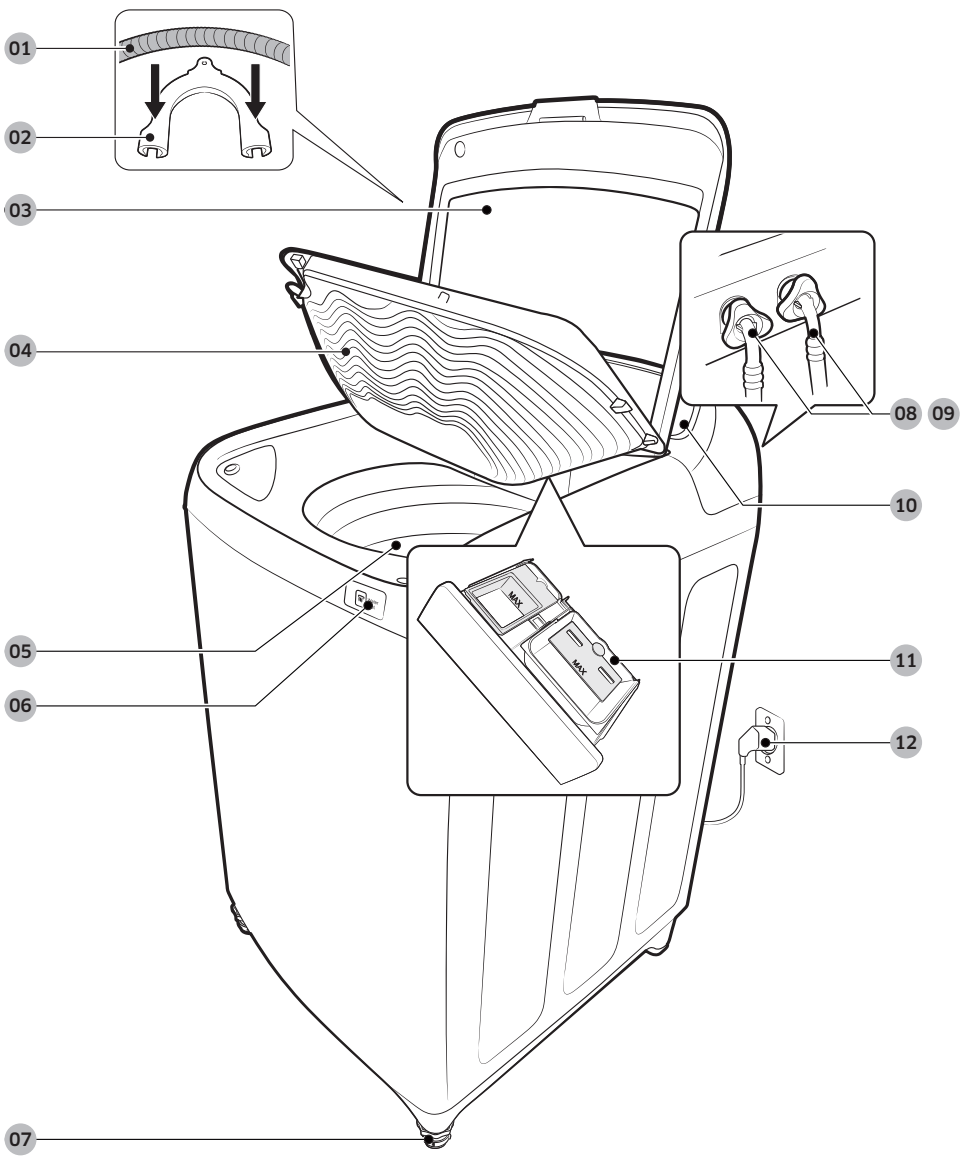

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 12 2015/7/27 16:55:34

01 Drain hose
02 Hose guide
03 Lid
04 Built-in sink
05 Tub
06 Water Jet
07 Leveling feet
08 Water hose (Cold)
09 Water hose (Hot)
10 Control panel
11 Detergent drawer
12 Power cord

Parts supplied


Hose guide


User manual


Plastic zip hose tie


Water intake cap

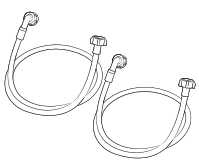
Water supply hoses

Tools needed for installation

Wrench


Flat screwdriver

Leveller

NOTE

- If you lose an accessory and want to purchase a replacement, contact the Samsung service center 800-SAMSUNG (800-7267864) (U.A.E), 183-CALL (183-2255) (KUWAIT).
- The design of the parts and accessories may differ from the pictures above. Their design is subject to change without notice for product improvement.
- Do not reuse old hoses. Only use new water supply hoses when you install the washer. Old water supply hoses can leak or burst causing flooding and property damage.
- Confirm that there are rubber washers inside each coupling of the water supply hoses.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 13 2015/7/27 16:55:35

Installation

Basic location requirements

Electrical

- 220-240 Volt 50 Hz fuse or circuit breaker.
- Individual branch circuit serving only your Washer is recommended.
- Your washer is equipped with a power cord.

⚠ CAUTION

Never use an extension cord.

Grounding

Electrical grounding is required for this appliance.

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.
This appliance is equipped with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.
The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

⚠ WARNING

An improperly connected equipment-grounding conductor can increase the risk of electrical shock. Check with a qualified electrician or serviceman if you are not sure whether the appliance is properly grounded. Do not modify the plug provided with the appliance – if it does not fit the outlet, have a proper outlet installed by a qualified electrician.

Important safety precautions

To prevent unnecessary risk of fire, electrical shock or personal injury, all wiring and grounding must be done in accordance with the National Electrical Code ANSI/ FNPA, No.70 Latest Revision and local codes and ordinances. It is the personal responsibility of the appliance owner to provide adequate electrical service for this appliance.

⚠ CAUTION

Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Water

To correctly fill your Washer in the proper amount of time, water pressure of 20 to 116psi (137 to 800kPa) is required.
Water pressure less than 20 psi may cause water valve failure, or may not allow the water valve to shut off completely, or may extend the fill time beyond what your Washer controls allow, causing your Washer to turn off. A time limit is built into the controls to prevent flooding in your home if a hose becomes loose.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 14 2015/7/27 16:55:35

The water faucets must be within 4 feet (122 cm) to the back of your Washer to match the inlet hoses provided with your Washer.

NOTE

Accessory inlet hoses are available in various lengths up to 10 feet (275 cm) for faucets that are further away from the back of your washer.
To avoid the possibility of water damage:

- Have water faucets easily accessible.
- Turn off faucets when the washer is not in use.
- Periodically check that there is no leakage from the water inlet hose fittings.

WARNING

Check all connections at the water valve and faucet for leaks

Drain facility

The recommended height of the standpipe is 39 in (99 cm). The drain hose must be routed through the drain hose clip to the standpipe. The standpipe must be large enough to accept the outside diameter of the drain hose. The drain hose is attached to the washer at the factory.

Flooring

For best performance, you must install your washer on a solidly constructed floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced load situations. Carpeting and soft tile surfaces are contributing factors to vibration which can cause your washer to move slightly during the spin cycle.

Never install your washer on a platform or weakly supported structure.

Location considerations

Do not install your washer in areas where water may freeze, since your washer will always retain some water in its water valve, pump, and hose areas. Frozen water can damage the belts, the pump, hoses, and other components.

Alcove or closet installation

Minimum clearances for closet and alcove installations:

Sides	1 in / 25 mm	Closet front	2 in / 51 mm
Rear	6 in / 152 mm	Top	21 in / 533 mm

If the washer and dryer are installed together, the closet front must have at least a 72 in^2 (465 cm^2) unobstructed air opening. Your washer alone does not require a specific air opening.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 15 2015/7/27 16:55:35

Installation

Recessed area

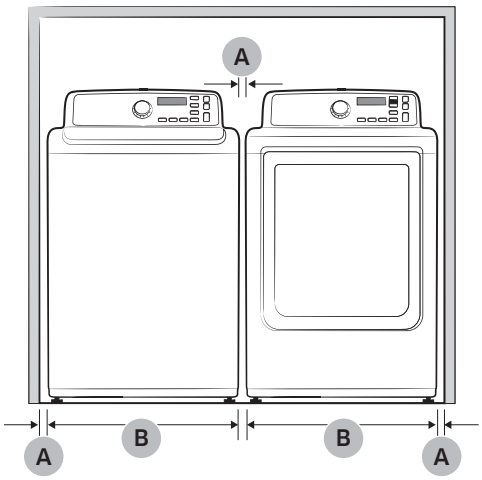

A	1 in (2.5 cm)
B	27.0 in (68.6 cm)

Side view - closet or confined area

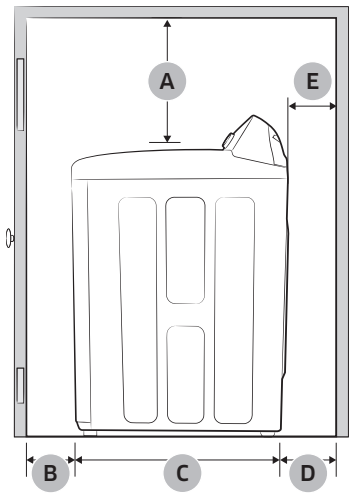

A	21 in (53.3 cm)
B	2 in (5.1 cm)
C	29.3 in (74.4 cm)
D	6 in (15.2 cm)
E	Gap between end of water valve and the wall • Case 1. Assemble supply hose after installing : Over 3.9 in (10 cm). • Case 2. Assemble supply hose before installing : Over 2.8 in (7 cm).

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 16 2015/7/27 16:55:35

Required dimensions for Installation

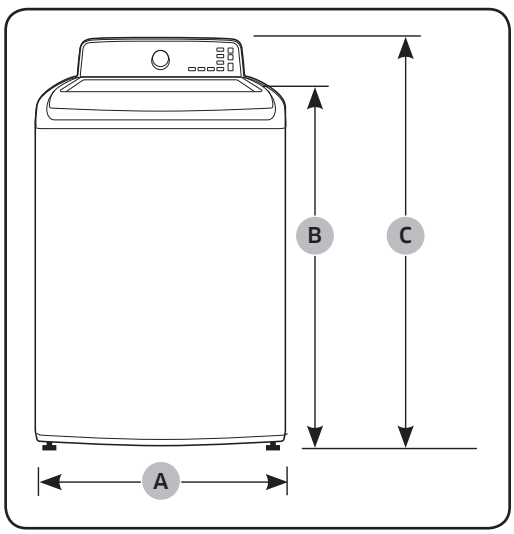

A	27.0 in (68.6 cm)
B	39.2 in (99.5 cm)
C	46.0 in (116.8 cm)

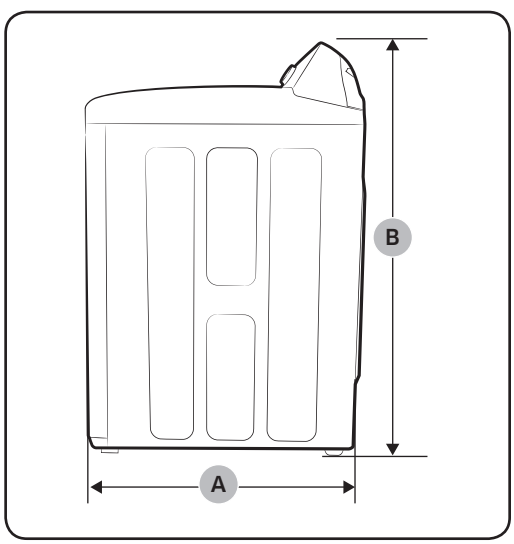

A	29.3 in (74.4 cm)
B	46.0 in (116.8 cm)

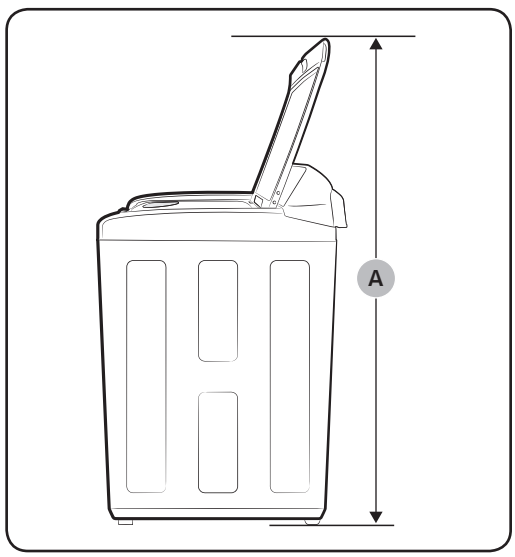

A	59.8 in (152.0 cm)

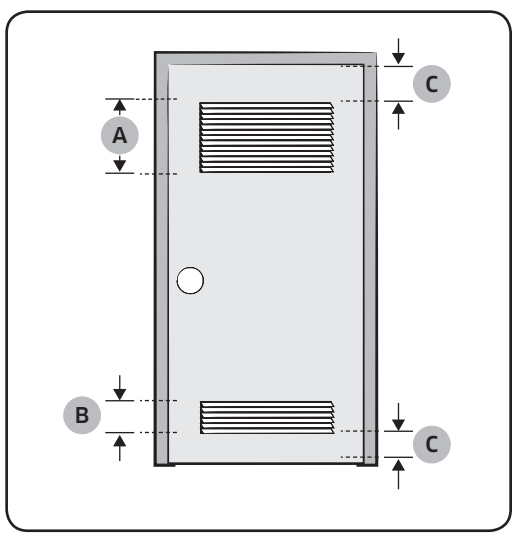

A*	48.0 in^2 (310.0 cm^2)
B*	24.0 in^2 (155.0 cm^2)
C	3.0 in (7.6 cm)

NOTE

* Required spacing

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 17 2015/7/27 16:55:36

Installation

Important note to installer

Please read the following instructions carefully before installing your washer.
These instructions should be retained for future reference.
We recommend you hire a professional to install this washer.

Installation flow chart

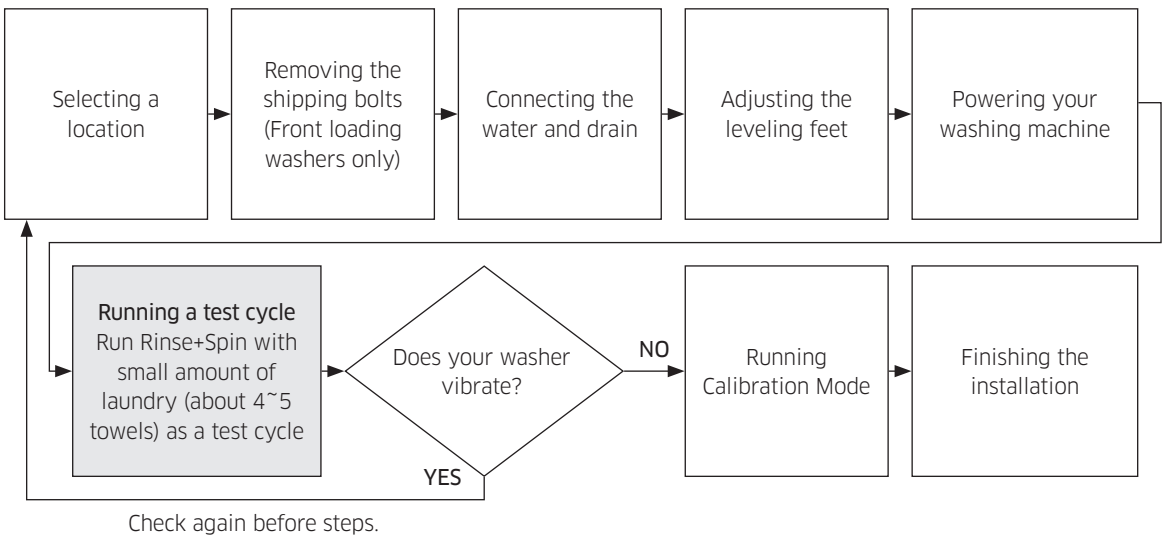

Step-by-step installation

STEP 1 Selecting a location

NOTE

Before you install the washer, make sure the location:

- Has a hard, level surface without carpeting or flooring that may obstruct ventilation.
- Is away from direct sunlight.
- Has adequate ventilation.
- Is not exposed to freezing temperatures (temperatures under 32 °F or 0 °C).
- Is away from heat sources such as oil or gas.
- Has enough space so that the washer doesn't rest on its power cord.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 18 2015/7/27 16:55:36

STEP 2 Connecting the water supply hose

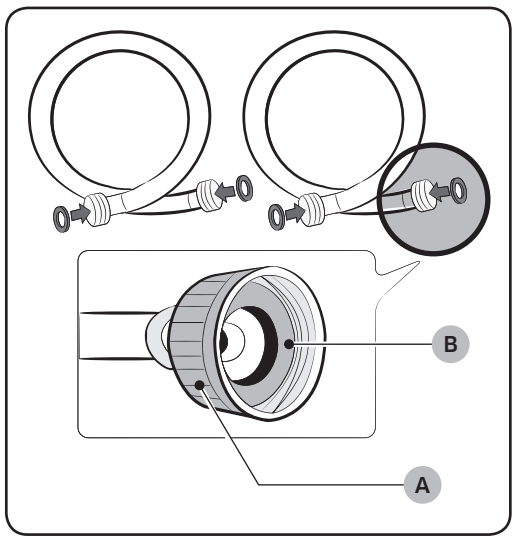

⚠ CAUTION

Before installing the water supply hoses, make sure there are **rubber gaskets (B)** inside the **couplings (A)** at both ends of each new water hose. Installing the water supply hoses without rubber gaskets can cause water leakage.

⚠ CAUTION

When you initially install the washer, be sure to use new hoses. Failing to do so may result in a water leakage or overflow and may damage your property.

⚠ CAUTION

Do not connect multiple water supply hoses together to increase the length of the supply hose. Hoses connected this way can leak and the leakage can cause electrical shock. If a hose is too short, replace the hose with a longer, high pressure hose.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 19 2015/7/27 16:55:36

Installation

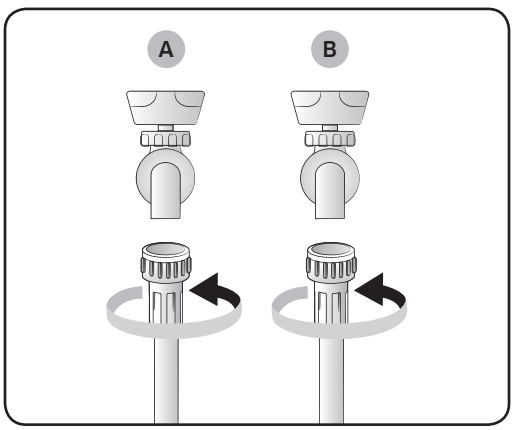

1. Connect the ends of the water supply hoses to the hot (B) and cold (A) faucets.
2. Tighten the fittings by hand until they are snug, and then tighten them an additional two-thirds of a turn with a wrench.

⚠ CAUTION

When you fasten the fittings, do not fasten them too tightly or apply tape or sealant to the faucets or water supply intakes. This can damage the fittings.

NOTE

After you have connected the water supply hoses to the faucets, ensure that they are connected correctly by pulling the water supply hoses downwards.

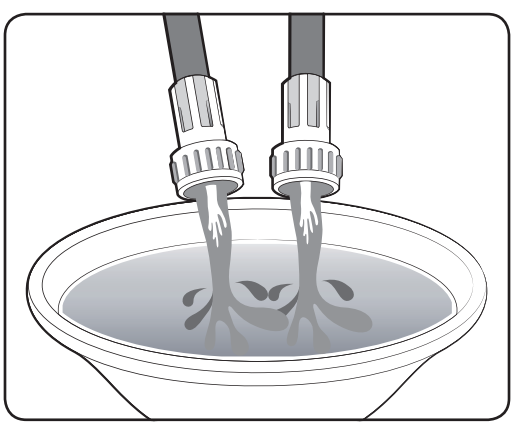

3. Place the unconnected ends of the hoses into a bucket and open the faucets connected to the two water supply hoses for 10 or 15 seconds to remove any foreign substances from the hoses. Close the faucets before continuing.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 20 2015/7/27 16:55:37

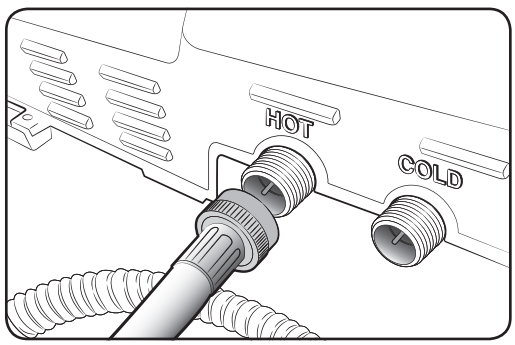

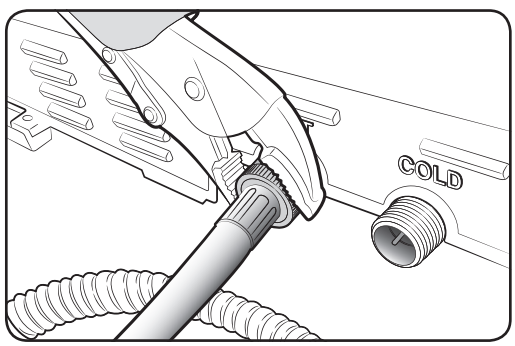

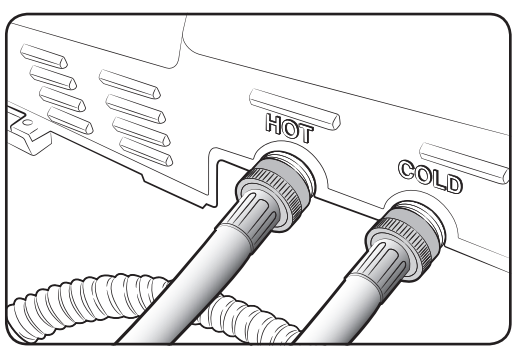

4. Connect the ends of the water supply hoses to the water supply intake connections at the back of the washer.

⚠ CAUTION

The water supply hose connected to the hot faucet must be connected to the hot water supply intake and the water hose connected to the cold faucet must be connected to the cold water supply intake.

5. Tighten the fittings by hand until they are snug, and then tighten them an additional two-thirds of a turn with a wrench.

NOTE

To ensure the correct water usage, connect both the hot and cold water faucets. If either or both are not connected, an “4C” (no fill) code can be displayed.

NOTE

If you do not want to use the hot water supply hose, insert the water intake cap into the hot water supply intake hole. In this case, you must select the **Tap Cold** for the water temperature. If you select the **Tap Cold**, all the lamps for the water temperature options are turned off.

⚠ CAUTION

Confirm that the water supply hoses are not twisted or bent. If the hoses are twisted or bent, the hoses can leak and cause electric shock due to the water leakage.

6. Turn on the hot and cold water supplies and check all the water supply intake connections and the faucets for water leaks.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 21 2015/7/27 16:55:37

Installation

STEP 3 Connecting the drain hose

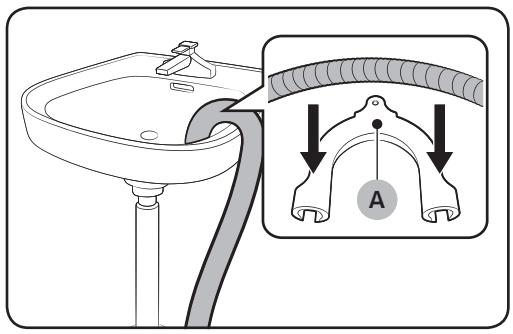

The end of the drain hose can be positioned in three ways:

Over the edge of a wash basin

Secure the **hose guide (A)** to the side of the basin wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.

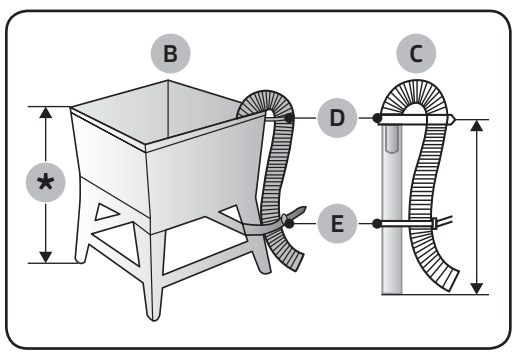

In a standpipe or laundry tub

The **standpipe (B)** and **laundry tub (C)** must be no shorter than 39 in (99 cm)* and no longer than 96 in (245 cm)*.

NOTE

- Make sure that the connection between the drain hose and the standpipe is not airtight.
- **D:** Hose retainer, **E:** Tie strap

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 22 2015/7/27 16:55:37

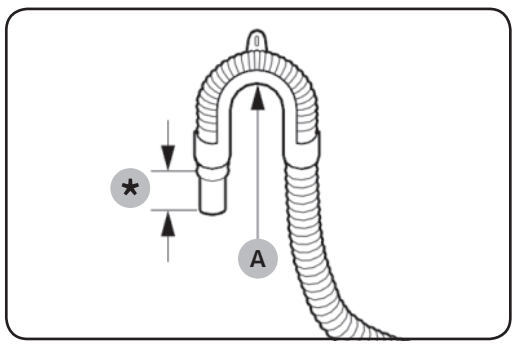

NOTE

Connect the **hose guide (A)** within 4 in (10 cm)* from the end of the drain hose. If the drain hose is extended more than 4 in (10 cm) beyond the end of the hose guide, mold or microorganisms could spread to the inside of the washer.

NOTE

The drain hose can be installed to a 96 in (245 cm) maximum, but the draining capability can be reduced at this height. It can cause the washer to have an odor because of remaining water in the drain system.

NOTE

If the drain hose is installed below 39 in (99 cm), water can be drained in cycles due to a siphon phenomenon. It causes the washer to display "**4C**".

STEP 4 Leveling your washer

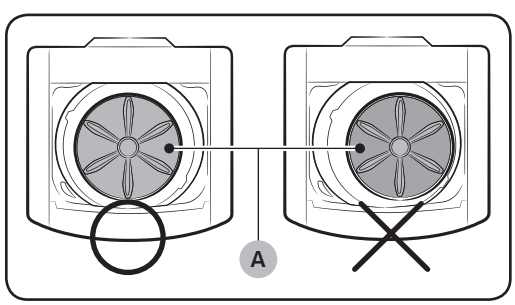

See if the washer is level by checking the position of the tub:

1. Slide the washer into position.
2. Open the lid of the washer, and pour the water into the tub to just below the pulsator level.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 23 2015/7/27 16:55:38

Installation

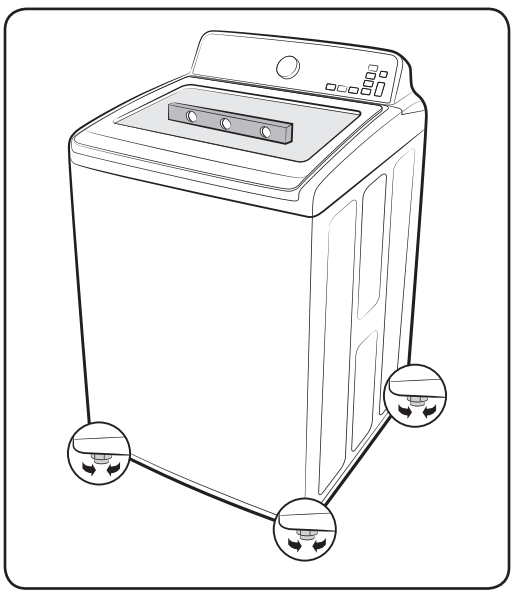

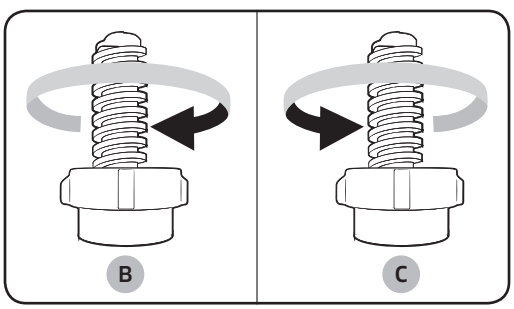

3. If the washer is level, the **pulsator (A)** is positioned at the center of the water as shown in the figure.
If not, level your washer by turning the front leveling feet clockwise or counterclockwise as necessary.

NOTE

Turn the front leveling feet **clockwise (B)** to lower the washer, and **counterclockwise (C)** to raise the washer.

STEP 5 Powering your washer

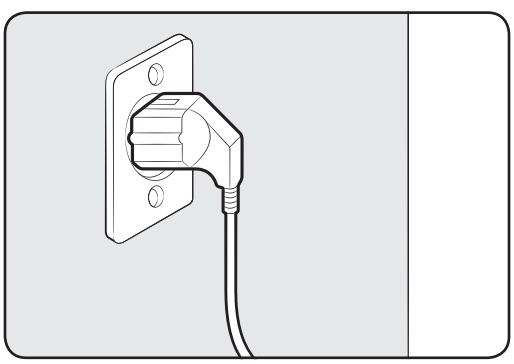

Plug the power cord into a 3-prong, well grounded 220-240 volt 50 Hz approved electrical outlet protected by a fuse or comparable circuit breaker.
Your washer is grounded through the third prong of the power cord when plugged into a three-prong grounded electrical outlet.

Test run

Make sure that you install your washer correctly by running the **Rinse+Spin** after the installation is complete.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 24 2015/7/27 16:55:38

STEP 6 Running a test cycle

Run a test cycle as follows to check if your washer is properly installed.

1. Load about 6 pounds of laundry into the tub.
2. Press **Power** to turn on your washer.
3. Select **Rinse+Spin** by turning the **Cycle Selector**.
4. Press **Start/Pause** to start the test cycle.
5. The washer should not rock or vibrate excessively when water is supplied or when washing or spinning, and should drain well during the spin cycle.

NOTE

If water leaks while water is being supplied or drained, check the water connections. Refer to the "**STEP 2 Connecting the water supply hose**" section on page **19** for instructions.

NOTE

If the washer rocks and vibrates excessively, level your washer again. Refer to the "**STEP 4 Leveling your washer**" section on page **23** for instructions.

STEP 7 Calibration Mode

Your Samsung washer detects the laundry weight automatically.
For more accurate weight detection, please run Calibration Mode after the installation.
To run Calibration Mode, follow these steps:

1. Remove laundry or any contents in the machine.
2. Press and hold **Water Level** and **Delay End** simultaneously for at least 3 seconds when the power is turned on.
3. Press **Start/Pause** to activate Calibration Mode.
4. The pulsator rotates clockwise and counterclockwise approximately 1 minute.
5. When Calibration Mode is finished, "**End**" appears on the display, and the washer automatically turns off. The washer is now ready for use.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 25 2015/7/27 16:55:38

Operating instructions

⚠ WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including the following:

Loading your washer

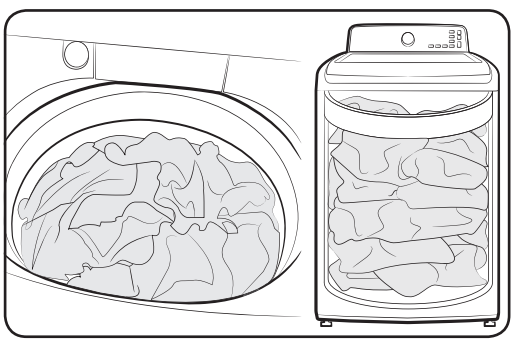

- Fill the tub with dry, unfolded clothes evenly around in order to enhance washing efficiency and prevent excess wear, or wrinkling of the load.
- For optimal washing performance, make sure the laundry is piled up evenly.
- Wash delicate items such as bras, hosiery, and other lingerie in the Delicates cycle with similar lightweight items.
- When washing big bulky items or a few smaller items that don't fill the tub completely – a rug, a pillow, stuffed toys, or one or two sweaters, for example – add a few towels to improve spin performance.
- Do not insert bulky items except for Bedding in this cycle.

NOTE

During the spin cycle, the washer may add additional water to redistribute the clothes and correct an imbalance inside the drum.

- When washing heavily soiled loads, do not overload your washer to ensure good cleaning results.

To add a forgotten item:

1. Press **Start/Pause** to pause the washer.
2. Wait for the door to unlock automatically, and then open the door.
3. Add the item, close the door, and then press **Start/Pause**. The cycle will resume.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 26 2015/7/27 16:55:38

Getting started

1. Load your washer.
2. Add liquid (or powder) detergent and additives to the dispenser (see the "**Detergent use**" section on page **39**).
3. Select the appropriate cycle and options for the load (see the "**Washing a load of laundry**" section page **28**).
4. Close the lid.
5. Press **Start/Pause**.
6. The **Wash** Indicator illuminates.
7. The estimated cycle time will appear in the display.
   The time may fluctuate to indicate the time remaining in the cycle.

NOTE

The actual time required for a cycle may differ from the estimated time in the display depending on the water pressure, water temperature, detergent, and laundry.

8. Before your washer starts to fill, it will make a series of clicking noises to check the door lock and do a quick drain.

NOTE

- When the cycle is complete, the **Door Lock** indicator will go out and "**End**" will appear in the display.
- Pressing **Power** cancels the cycle and stops your washer.
- The **Wash**, **Rinse**, and **Spin** indicators will illuminate during those portions of the cycle.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 27 2015/7/27 16:55:39

Washing a load of laundry

⚠ WARNING

To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS before operating this appliance.

Control panel

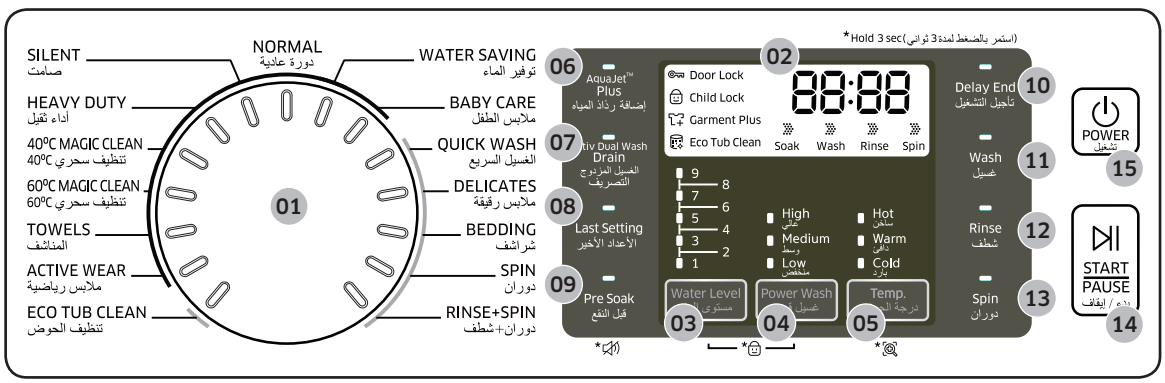

01 Cycle Selector	Turn the **Cycle Selector** to select the desired cycle. The indicator by the cycle name lights up.
02 Display	Provides instructions and diagnostics while keeping you updated on the cycle status and time remaining.
03 Water Level	The water level is automatically adjusted. However, you can select the water level manually by pressing this button. According to the texture and humidity of clothes, water level and water consumption may differ.
04 Power Wash	You can select the water stream type. Medium → High → Low → Medium You can change the setting depending on the cycle. You cannot change the setting during a Spin cycle.
05 Temp.	Press the button repeatedly to cycle through the different water temperature options. • **Hot** - Whites and heavily soiled, colorfast items. • **Warm** - Colorfast items. • **Cold** - Brightly colored, very lightly soiled items.
06 AquaJet™ Plus	Improve washing performance through AquaJet spray action.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 28 2015/7/27 16:55:39

07 Activ Dual Wash Drain	This button provides two options, and is available only when the washing machine is stopped or in Standby state. • Water Save (default): Reuse water in the tub that remains after using Water Jet. The water will be used for the main cycle. • Drain: Select to drain water that remains after using Water Jet. When draining is complete, the washing machine switches to Water Save mode automatically. Then, you can choose a cycle.
08 Last Setting	Selects this cycle to load the settings for the last cycle. Perform a wash cycle using the last used settings without having to enter them manually again. Your choices are automatically saved when you press the Start/Pause button. To use a memorized cycle, press the Last Setting button and then press the Start/Pause button.
09 Pre Soak	Remove stains more thoroughly by specifying additional time.
10 Delay End	Delay the end of any cycle for up to 19 hours in one-hour increments. Displayed hour indicates the time the wash will be ended.
11 Wash	Press this button to only perform a wash cycle or to adjust the wash time.
12 Rinse	Press this button to only perform a rinse cycle or to adjust the rinse count.
13 Spin	Press this button to perform a spin cycle only or to adjust the spin time. You can set the spin time from between 1 to 9 minutes. (except for WATER SAVING) When only a spin is selected, the spin time will be different from the total remaining time. This is because the total remaining time includes the actual spin time and the times for water draining and stopping.
14 Start/Pause	Press to pause and restart cycles.
15 Power	Press once to turn your washer on. Press again to turn your washer off. If the washer is left on for more than 10 minutes without any buttons being pressed, the power automatically turns off.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 29 2015/7/27 16:55:39

Washing a load of laundry

Cycle overview

Cycle	Description
NORMAL	For most fabrics including cottons, linens, and normally soiled garments.
SILENT	This cycle minimizes noise for night washes by decreasing the spinning power of the product.
HEAVY DUTY	For sturdy, colorfast fabrics and heavily soiled garments.
40℃ MAGIC CLEAN	This cycle effectively removes dirt using a customized water temperature.
60℃ MAGIC CLEAN	This cycle effectively removes dirt using a customized water temperature.
TOWELS	For bath towels, washcloths, and mats.
ACTIVE WEAR	Use this cycle to wash exercise wear such as sports jerseys, training pants, shirts/tops and other performance clothing. This cycle provides effective soil removal with gentle action for special fabric care.
ECO TUB CLEAN	Use this program to clean the tub. It will keep the tub clean and sanitary.
WATER SAVING	This is a specially designed cycle that enables you to wash laundry effectively with the minimum amount of water.
BABY CARE	This cycle washes frequently washed items such as baby clothes and underwear to prevent damage to the fabric and adds extra rinse cycles to ensure cleanness.
QUICK WASH	For lightly soiled garments needed quickly.
DELICATES	This cycle is for washing delicate clothes that are easily deformed or damaged and woollen sweaters and cardigans with a water wash sign.
BEDDING	For bulky items such as blankets and sheets. When you are washing comforters, use liquid detergent.
SPIN	Drains the water and spins at a high speed.
RINSE + SPIN	Use for loads that need rinsing only or to add rinse-added fabric softener to a load.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 30 2015/7/27 16:55:39

Options

Child Lock

Child Lock prevents children from playing with your washer.

Activating the Child Lock function

Press and hold **Water Level** and **Power Wash** simultaneously for approximately 3 seconds.

- When you activate the Child Lock function, the **Child Lock** indicator blinks.

Using the Child Lock function

If the lid is opened when the Child Lock function is on, "**dC**" is displayed and an alarm sounds.

- If the water level in the tub is above the safe water level, "**dC**" is displayed on the LED display and the washer starts to drain water by force after 30 seconds. The Power button is disabled while the washing machine drains water in Child Lock mode.
- If the water level in the tub is above the safe water level and the Child Lock function is turned on while the door is open, "**CL**" is displayed on the LED display even if the power of the washer is turned off and the washer drains water by force.
- Even if the power of the washer is turned off, if the lid is opened while the water level in the tub is above the Reset water level, "**CL**" is displayed on the LED display without the alarm sounding and the washer starts to drain water. When the draining operation finishes, the power is automatically turned off again.
- Even if the Child Lock function is activated, every button works until the door opens.
- After the compulsory drain, the "**CL**" blinks at 1 second intervals and the product enters the "**CL**" mode. (When the product is in the "**CL**" mode, only the **Power** button works.)
- To cancel the "**CL**" mode, you need to turn the power off and then on again.
- To cancel the "**dC**" mode, deactivate the Child Lock function. To deactivate the Child Lock function, press and hold **Water Level** and **Power Wash** simultaneously for at least 3 seconds.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 31 2015/7/27 16:55:39

Washing a load of laundry

NOTE

Adding laundry when Child Lock is on

To add laundry, deactivate the Child Lock function. To deactivate the Child Lock function, press and hold **Water Level** and **Power Wash** simultaneously for at least 3 seconds. See the "**Pause Option**" section on page **34** for additional details.

Deactivating the Child Lock function

Press and hold both **Water Level** and **Power Wash** simultaneously for approximately 3 seconds.

- When you deactivate the Child Lock function, the **Child Lock** indicator is turned off.
- The Child Lock function prevents children or the infirm from accidently operating the washer and injuring themselves.

WARNING

If a child enters the washer, the child may become trapped and suffocate.

CAUTION

- Once you have activated the Child Lock function, it continues working even if the power is turned off.
- Forcing the lid open can result in injury or damage to the product.

NOTE

To add laundry after you have activated the Child Lock function, you must first deactivate the Child Lock function.

Sound

The Sound Off function can be selected during all cycles.

Garment Plus

You can add or take out laundry items even after the wash has started, as long as the **Garment Plus** indicator is on. Pressing **Start/Pause** unlocks the lid. If you open the lid and want to continue the wash cycle, close the lid, and then press **Start/Pause**.

Delay End

You can set the washer to start your wash automatically at a later time, by choosing a delay time.

The hour displayed indicates the time at which the wash will be ended.

1. Set your wash cycle.
2. Press **Delay End** repeatedly until the delay time is set.
3. Press **Start/Pause**. The "Delay End" indicator will be lit, and the clock will begin counting down until it reaches the set time.
4. To cancel a Delay End function, press the Power button and then turn the washer on again.

Pre Soak

Use this function when the laundry is heavily contaminated or stained. This function improves the wash performance by adding a Pre Soak cycle.

- If you select this function, the total cycle time is increased by 10 or 20 minutes.
- When the Pre Soak cycle starts, the washer repeats a wash cycle after supplying water and then performs a 10 or 20 minute soak cycle.
- When the Pre Soak cycle is complete, the configured wash cycle starts without draining water.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 32 2015/7/27 16:55:39

AquaJet™ Plus

After supplying additional water, the drum rotation creates a waterfall that dissolves the detergent thoroughly. This allows the detergent to penetrate more evenly into the clothes and remove stains effectively, even on big loads, giving you a better wash, during the rinse cycle, the waterfall passes through the fabric, removing detergent residue thoroughly.

Cycles	AquaJet™
NORMAL, SILENT, HEAVY DUTY, 40℃ MAGIC CLEAN, 60℃ MAGIC CLEAN, TOWELS, ACTIVE WEAR, WATER SAVING, BABY CARE	Available
BEDDING, ECO TUB CLEAN, QUICK WASH, DELICATES, RINSE+SPIN, SPIN	Not available

Mist Shower

Mist Shower sprays water from a nozzle that is independent of the main water supply system. It states that is soaks the laundry with water from the beginning of the rinse cycle and ensures an effective wash, but it's not part of the wash cycle, it's part of the rinse cycle, so this needs to state that it ensures an effective rinse.
(The Mist Shower function may not work if there is too large of a load in the machine.)

Smart Check

This function enables you to check the status of the washer using a smartphone.

1. To enable the Smart Check function, press and hold **Temp.** for 3 seconds after turning the power on or when an error occurs.

NOTE

The error code history is deleted after you use this function.

2. The Smart Check indicator is lit on the display.
3. Run the Smart Check app on your smart phone.
   - Android: Galaxy S series, Galaxy Note series. (Other devices may not be normal operation).
     Supported OS : Android 2.2 or higher
   - iOS: iPhone series
     Supported OS : iOS 4.3 or higher
4. Focus your smart phone's camera on the display panel of the washer.
5. If the smart phone's camera is focused on the display panel of the washer, the panel and error message is automatically recognized and the error type and countermeasures are displayed on the smart phone.
6. If the smartphone fails to recognize the error code more than twice, please enter the error code displayed on the display panel of the washer manually into the Smart Check app.

NOTE

Downloading the Smart Check app

- Download the Samsung Laundry App into your mobile phone from the Android market or Apple App store. (Search word : Samsung Smart Washer/ Dryer)

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 33 2015/7/27 16:55:40

Washing a load of laundry

NOTE

Precautions when using Smart Check

- If light from a light bulb, fluorescent bulb, or lamp is reflected on the display panel of the washer, the smartphone may not be able to recognize the panel or error message easily.
- If you hold the smartphone at too large an angle relative to the front of the display panel, it may not be able to recognize the error code. For best results, hold the smartphone so that the front of the panel and the smartphone are parallel or nearly parallel.

Washing clothes using the cycle selector

Your new washer makes washing clothes easy, using Samsung's "Fuzzy Control" automatic control system. When you select a wash program, the machine will set the correct temperature, washing time, and washing speed.

1. Press **Power**.
2. Open the lid.
3. Load the articles of clothing one at a time loosely into the drum, without overfilling it.
4. Add liquid (or powder) detergent, softener, and/or bleach (if necessary) to the appropriate compartments. See the "**Detergent use**" section on page 39.
5. Close the lid.
6. Use the **Cycle Selector** to select the appropriate cycle according to the type of material: **NORMAL**, **SILENT**, **HEAVY DUTY**, **40℃ MAGIC CLEAN**, **60℃ MAGIC CLEAN**, **TOWELS, ACTIVE WEAR**, **ECO TUB CLEAN**, **WATER SAVING**, **BABY CARE**, **QUICK WASH**, **DELICATES**, **BEDDING**, **SPIN**, and **RINSE+SPIN**. The relevant indicators will illuminate on the control panel.
7. At this time, you can control the wash temperature, the number of rinse cycles, the spinning speed, and the delay time by pressing the appropriate option button.
8. Press **Start/Pause** and the wash will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

Pause Option

To remove or add laundry items, follow these steps:

1. Press **Start/Pause** to unlock the lid.

NOTE

The lid cannot be opened when the water is too HOT.

2. Remove or add laundry items.
3. Close the lid, and then press **Start/Pause** to restart the wash.

NOTE

If you have Child Lock on, you must deactivate it first. See page **31**.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 34 2015/7/27 16:55:40

When the cycle is finished:

After the total cycle has finished, the power will turn off automatically.

1. Open the lid.
2. Remove laundry.

ATC (Auto Temperature Control)

ATC is the control function that the washer controls water temperature with temperature sensor (thermistor).

NOTE

Because there are numerous water temperatures depending on the customer's environments (cold areas, warm areas, various water temperatures, settings of heater temperature, etc.), ATC function in our washer maintains the certain level of wash temperature to output the best washing performance at each cycle.

NOTE

If you select NORMAL, this cycle is the regulation and UL cycle. Since new washers must reduce the amount of energy usage as a first priority, customers will notice more cold water entering the washer. But, this is normal, not a problem.
In those regulation cycles, Hot temperature is similar to acceptable adult bath-water temperature and warm temperature is similar to comfortable swimming-pool water temperature.

NOTE

If customers want to wash clothes in specific water temperatures, customers should choose a different cycle at each temperature (Hot/Warm).

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 35 2015/7/27 16:55:40

Washing a load of laundry

The basics

Prewash (Water Jet & Built-in sink)

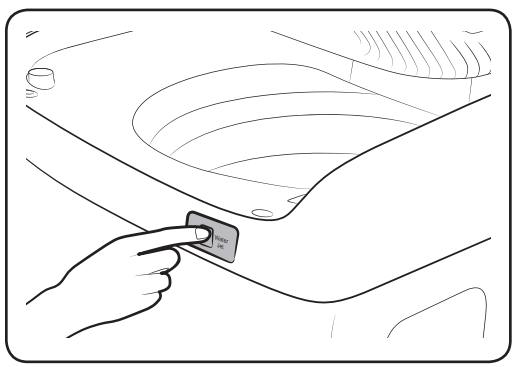

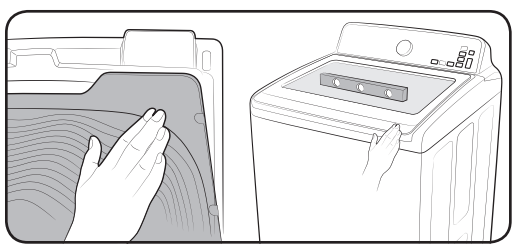

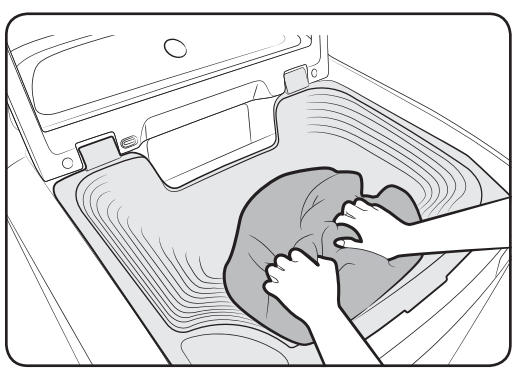

Water Jet and Built-in sink help you handwash before the washing machine starts operation. Water Jet is available only when the door is open with the water level set to less than High. For prewashing, use the Built-in sink that is designed to facilitate the hand-wash.

1. With the door open, lower the Built-in sink . To open only the door, press and release the front right corner of the door. **To close and lock both the door and the Built-in sink, press down the door until you hear a clicking sound**.
2. Put clothes to prewash in it.
3. Press Water Jet to supply water to the Built-in sink, and hand-wash.
4. When done, gently lift up the Built-in sink to drain water into the tub.

NOTE

- If you want to hand-wash while the machine is operating, press Start/Pause to stop operation, and then follow steps 1-4 above.
- If you open both the door and the Builtin sink, lower the Built-in sink manually for prewashing.

[Water Jet stops]

- Water Jet stops operation automatically when the washing machine detects the maximum water level.
- Water Jet stops operation automatically 5 minutes after it begins. To add more water, press Water Jet again to resupply water.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 36 2015/7/27 16:55:40

[Water Jet drains]

- Select a cycle and press Start/Pause. Then the washing machine drains the water to be used during the prewash.

NOTE

- Water Jet extracts the water through the Mist Shower nozzle for 1 second and then through the Water Jet nozzle from then on when it is first activated after the washing machine turns on.

CAUTION

- Do not abuse Water Jet. Excessive use of Water Jet increases water consumption.
- When running water to the tub, do that gently. Otherwise, water may overflow the tub.
- Use caution when removing laundry from the tub. You may bump your head on the Built-in sink.
- Do not block the outlet of Water Jet with hands. Water may leak outside the tub, causing a system failure.
- Put only clothes to prewash in the Built-in sink. Other items such as shoes, food, or animals can not be used for prewash.
- Do not open the Built-in sink in a hurry. Remaining water in the sink may splash on the door or control panel.
- Due to a difference in air pressure, Water Jet may splash water from its outlet when it is first activated.
- This lid must be closed tightly to do the laundry.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 37 2015/7/27 16:55:40

Washing a load of laundry

Detergent use

- The use a good quality top loader detergent is recommended.
- It is also important to:
  Pre-treat stains before washing.
  Sort clothes by color.
  Sort clothes by the amount of soiling.
  Avoid overloading.

NOTE

- When using powdered detergent it is recommended that the powder be dissolved in warm water to ensure optimum cleaning results.
- The detergent/water mixture can be added to either the tub or to the detergent dispenser tray.
- Reducing the amount of detergent used may reduce the effectiveness of the cleaning action.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 38 2015/7/27 16:55:41

Features

Automatic dispenser

Your washer has separate compartments for dispensing detergent and color-safe bleach and fabric softener. Add all laundry additives to their respective compartments before starting your washer.
The automatic dispenser must always be in place before you start your washer.
DO NOT open the automatic dispenser when your washer is running.

NOTE

- Never exceed the manufacturer's recommendations when adding detergent.
- This compartment holds liquid detergent for the main wash cycle, which is added to the load at the beginning of the cycle.
- When using powdered detergent, remove the liquid detergent compartment from the detergent drawer. The washer will not dispense powdered detergent from the liquid detergent compartment.

To add detergent to the automatic dispenser:

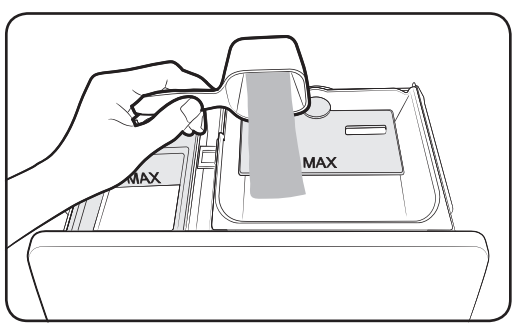

1. Open the dispenser drawer.
2. Load the recommended amount of liquid (or powder) detergent into the detergent compartment before you start your wash.
3. Close the drawer slowly and smoothly to avoid spilling, splashing, or premature dispensing of the contents.

NOTE

It is normal for a small amount of water to remain in the dispenser compartments at the end of the cycle.

NOTE

Do not put chlorine bleach in the dispenser drawer.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 39 2015/7/27 16:55:41

Washing a load of laundry

Loading the Liquid (or Powder) detergent compartment

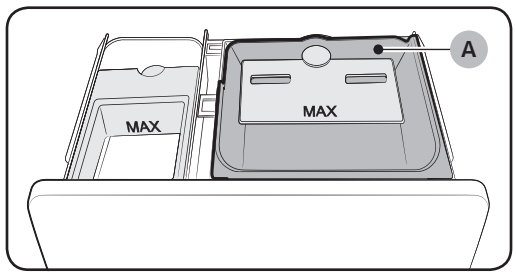

1. Pour the recommended amount of laundry detergent directly into the detergent compartment before starting your washer.
2. If you are using color-safe bleach, add it with the detergent to the detergent compartment.

NOTE

When adding color-safe bleach with detergent, it is best if both laundry products are in the same form – liquid.

NOTE

When using powdered detergent, remove the **liquid detergent compartment (A)** from the detergent drawer. The washer will not dispense powdered detergent from the liquid detergent compartment.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 40 2015/7/27 16:55:41

Loading the fabric softener compartment

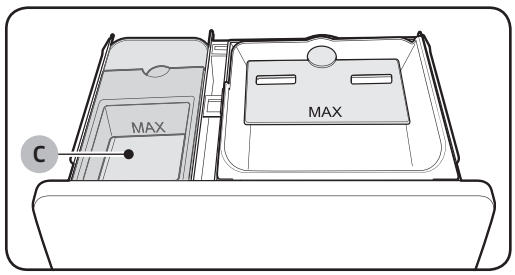

1. Pour the recommended amount of liquid fabric softener into the softener compartment (C).
   For smaller loads, use less than one capful.
2. Dilute the fabric softener with water until it reaches MAX FILL in the compartment.
3. The dispenser automatically releases liquid fabric softener at the proper time during the rinse cycle.

NOTE

- Use the softener compartment ONLY for liquid fabric softeners.
- DO NOT use the Downy Ball* in the fabric softener compartment with this washer. It will not add fabric softener at the appropriate time.
  Use the detergent compartment.
  (* Brand names are trademarks of their respective manufacturers.)
- Do not use liquid fabric softener that is too sticky as it may not mix with the water sufficiently.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 41 2015/7/27 16:55:41

Maintaining your washer

Cleaning the exterior

1. Turn off the water faucets after finishing the day's washing.
   This will shut off the water supply to your washer and prevent the unlikely possibility of damage from escaping water. Leave the lid open to allow the inside of your washer to dry out.
2. Use a soft cloth to wipe up all detergent, bleach or other spills as they occur.
3. Clean the following as recommended:
   Control Panel – Clean with a soft, damp cloth. Do not use abrasive powders or cleaning pads. Do not spray cleaners directly on the panel.

Cleaning the interior

Clean the interior of your washer periodically to remove any dirt, soil, odor, mold, mildew, or bacterial residue that may remain in your washer as a result of washing clothes.

Failure to follow these instructions may result in unpleasant conditions, including odors and/or permanent stains on your washer or laundry.
Hard water deposits may be removed, if needed. Use cleaners labeled "Washer safe".

Storing your washer

Washers can be damaged if water is not removed from hoses and internal components before storage.
Prepare your washer for storage as follows:

1. Select the Quick Wash cycle and add bleach to the automatic dispenser. Run your washer through the cycle without a load.
2. Turn the water faucets off and disconnect the inlet hoses.
3. Unplug your washer from the electrical outlet and leave your washer lid open to let air circulate inside the drum.
   If your washer has been stored in below-freezing temperatures, allow time for any leftover water in your washer to thaw out before use.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 42 2015/7/27 16:55:41

Preserving the top cover and the front frame

Do not place any heavy or sharp objects or a detergent box on the washer. They can scratch or damage the top cover of the unit.

NOTE

Since the entire washer has a high-gloss finish, the surface can be scratched or damaged.
Avoid scratching or damaging the surface when using the washer.

Cleaning the built-in sink and lint filter

Keep the washing machine clean to prevent deteriorated performance and to preserve its life cycle.

Built-in sink

1. Open the door, and use a cloth or sponge to clean the Built-in sink.
2. Press Water Jet to supply water to the board. Use this water to rinse the board.

Lint filter

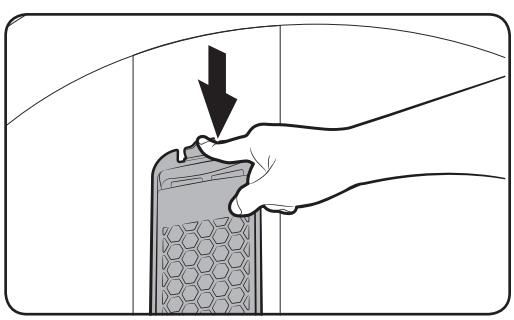

1. Press down the upper area of the filter case to remove.
2. Unlock the cover, and clean the filter with running water and a brush.

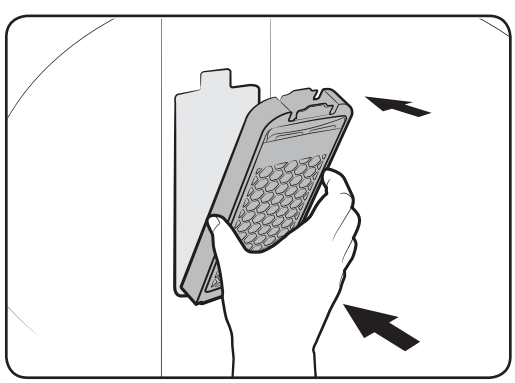

3. When cleaning is complete, close the cover and reinsert the filter case to the original position. You will hear a clicking sound when the filter case fits in.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 43 2015/7/27 16:55:41

Maintaining your washer

Cleaning the dispensers

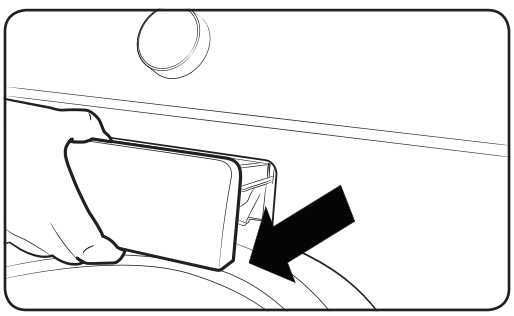

The automatic dispenser may need to be cleaned periodically due to laundry additive buildup.

1. Pull the dispenser drawer straight back until it stops.

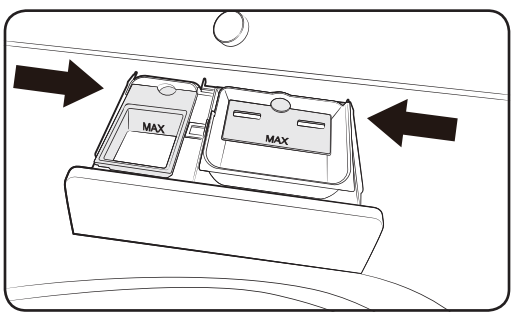

2. Push the ends of each side of the case at the same time.
When you feel the ends push, pull out the dispenser drawer.

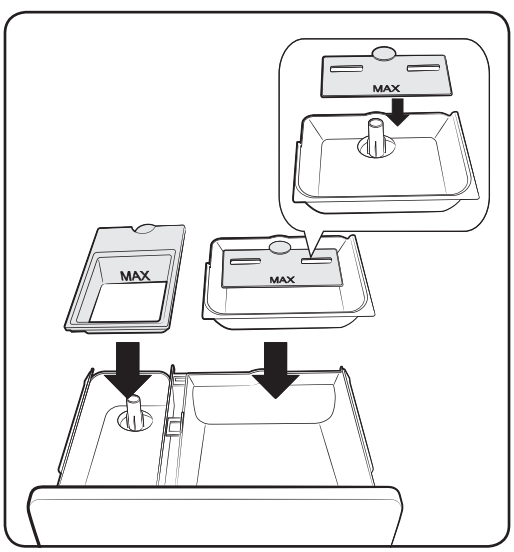

3. Remove the inserts from the 3 compartments. Rinse the inserts and the drawer with warm water to remove traces of accumulated laundry products.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 44 2015/7/27 16:55:42

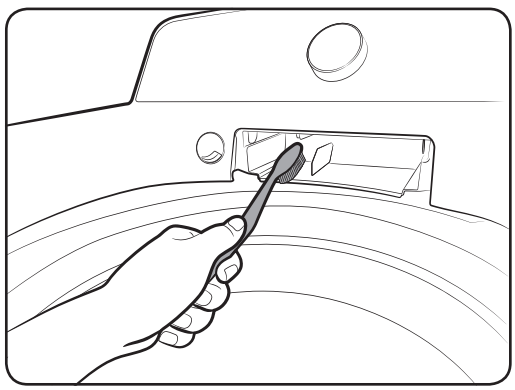

4. To clean the drawer opening, use a small, non-metal brush to clean the recess. Remove all residue from the upper and lower parts of the recess.

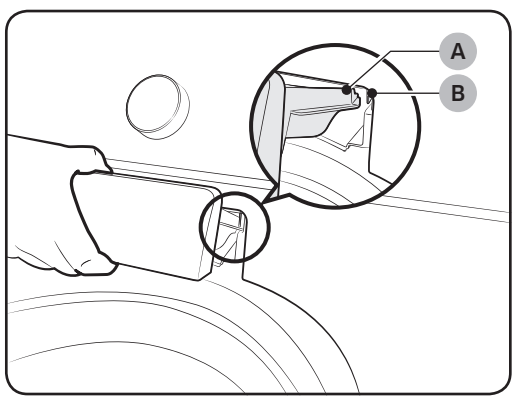

5. Return the inserts to the proper compartments and replace the drawer by placing the **dispenser drawer rail (B)** on top of the **compartment rail (A)** (Tilt the dispenser drawer downward and insert it).
Then push the drawer in firmly and slowly.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 45 2015/7/27 16:55:42

Maintaining your washer

Eco Tub clean

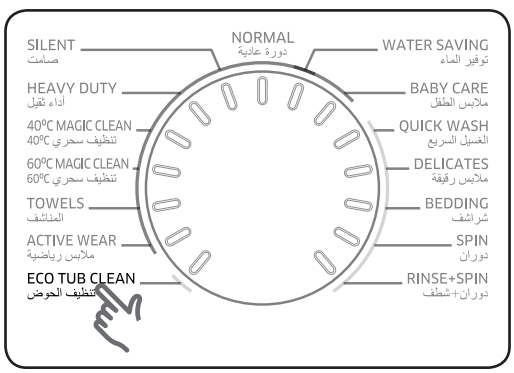

ECO TUB CLEAN is a self-cleaning cycle that removes mold that may occur inside the washer.

1. Press **Power**.
2. Select **ECO TUB CLEAN**.
   Once **ECO TUB CLEAN** is selected, the only function that can be set is Delay End.
3. Press **Start/Pause**.
   ECO TUB CLEAN begins.

⚠ CAUTION

- Using ECO TUB CLEAN, you can clean the drum without using a cleansing agent.
- Never use ECO TUB CLEAN when laundry is in the washer. This may cause damage to the laundry or a problem with the washer.

ECO TUB CLEAN Auto Indicator function

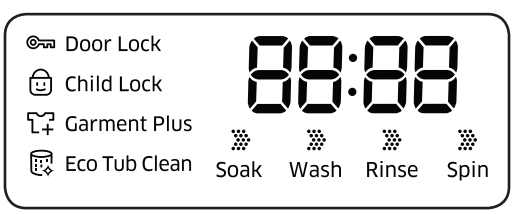

- If the **ECO TUB CLEAN** indicator is lit after a wash, it indicates that tub (drum) cleaning is required. In this case, remove the laundry from the washer, turn the power on, and clean the drum by running ECO TUB CLEAN.
- If you do not run ECO TUB CLEAN, the **ECO TUB CLEAN** indicator turns off. However, the **ECO TUB CLEAN** indicator will light again after two washes. Not running ECO TUB CLEAN at this point will not cause a problem with the washer.
- Although the **ECO TUB CLEAN** indicator is lit once a month or so, the frequency may differ depending on the number of times the washer is used.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 46 2015/7/27 16:55:42

Troubleshooting

Checkpoints

If you encounter a problem with the washer, first check the table below and try the suggestions.

Problem	Action
Does not turn on.	• Make sure you use rated power for the product. • Make sure the power cord is completely plugged in. • Check the fuse or reset the circuit breaker.
Does not start.	• Make sure the door is closed. • Make sure the water taps are open. • Make sure to press or tap Start/Pause to start the washing machine. • Make sure Child Lock is not activated. • Before the washing machine starts to fill, it will make a series of clicking noises to check the door lock and does a quick drain. • Was the door opened during the spinning cycle? Close the door, and press or tap Start/Pause to resume. • The machine enters Standby or is in a soaking cycle. Please wait. • Check the fuse or reset the circuit breaker
Water is not supplied.	• Make sure you press or tap Start/Pause after selecting the water supply. • Make sure the water taps are open. • Is the filter net at the water supply hose connector clogged? Clean the filter net by brushing with a toothbrush. • Is the water supply cut off? If the water supply is cut off, close the tap and power off. • Straighten the water supply hoses. • Open and close the door, then press or tap Start/Pause. • If the water pressure is low, it takes longer to start washing. • If the water level is not as high as necessary or lower than expected, use the level selector to adjust the water level.
After a cycle, detergent remains in the automatic dispenser.	• Make sure the washing machine is running with sufficient water pressure. • Make sure the detergent drawer is properly inserted. • Remove and clean the detergent drawer, and then try again.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 47 2015/7/27 16:55:42

Troubleshooting

Problem	Action
Vibrates excessively or makes noise.	• Make sure the washing machine is set on a level floor. If the floor is not level, use the levelling feet to adjust the washing machine. • Make sure the washing machine is not contacting any other object. • Make sure the laundry load is balanced. • Make sure the laundry is spread evenly in the washing machine. Spread out the laundry evenly and start again. • Make sure the space around the washing machine is free of objects. • Humming is produced normally during operation. • Objects such as coins can cause noise. Remove these objects from the washing machine after washing is complete.
Stops.	• Plug the power cord into a live electrical outlet. • Check the fuse or reset the circuit breaker. • Close the door, and press or tap Start/Pause to start the washing machine. For your safety, the washing machine will not spin unless the door is closed. • Before the washing machine starts to fill, it will make a series of clicking noises to check the door lock and does a quick drain. • There may be a pause or soak period in the cycle. Wait briefly and the washing machine may start. • Make sure the inlet hose screens at the taps are not clogged. Periodically clean the screens. • This problem occurs temporarily due to low voltages, and will be solved when power recovers.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 48 2015/7/27 16:55:42

Problem	Action
Fills with the wrong temperature water.	• Fully open both water taps. • Make sure the temperature selection is correct. • Make sure the hoses are connected to the correct water taps. Flush water lines. • Disconnect the hoses and clean the screens. The hose filter screens may be clogged. • While the washing machine fills, the water temperature may change as the automatic temperature control feature checks incoming water temperature. This is normal. • While the washing machine fills, you may notice just hot and/or just cold water going through the dispenser when cold or warm temperatures are selected. This is a normal function of the automatic temperature control feature as the washing machine determines the water temperature.
Door (Lid) locked or will not open.	• While the washing machine is operating, press or tap Start/Pause to stop the washing machine. • It may take a few moments for the door lock mechanism to disengage.
Does not drain and/or spin.	• Check the fuse or reset the circuit breaker. • Make sure the electrical voltage is normal. • Make sure the washing machine is plugged in. • Make sure the drain hose is pointed downward. (Natural drain models only) • Make sure the drain hose is not clogged. • Make sure the drain hose is not kinked. • Straighten the drain hose. If there is a drain restriction, call for service. • Close the door, and press or tap Start/Pause. For your safety, the washing machine will not spin unless the door is closed.
Load is wet at the end of the cycle.	• Use the High or Extra High spin speed. (Applicable model only) • Use high efficiency (HE) detergent to reduce oversudsing. • Load is too small. Small loads (one or two items) may become unbalanced and not spin completely.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 49 2015/7/27 16:55:43

Troubleshooting

Problem	Action
Leaks water.	• Make sure all hose connections are tight. • Make sure the water supply hose's rubber packing is in the correct position. Screw tightly again. • Make sure the end of the drain hose is correctly inserted and secured to the drain system. • Avoid overloading. • Use high efficiency (HE) detergent to prevent oversudsing. • Make sure the water supply hose is not kinked. • If the water supply is too strong, water may leak. Close the water tap a little. • Make sure water is not leaking from the water tap. If so, repair the water tap.
Excessive suds.	• Use high efficiency (HE) detergent to prevent oversudsing. • Reduce the detergent amount for soft water, small loads, or lightly soiled loads. • Non-HE detergent is not recommended.
The spin basket or drain/supply hose is frozen.	• Use warm water to disconnect the water supply hose and drain hose. Soak them in warm water. • Fill the spin basket with warm water, and then wait for about 10 minutes. • Put a hot towel on the drain hose connector. • Reconnect the water supply hose and drain hose, and check if water is supplied properly.
Water drains out immediately.	• Make sure the drain hose is not clogged, and is hung over the drain hose hook. Fill the spin basket halfway with water, and try spinning again. • Lift the end of the drain hose to prevent water from draining. Fill the spin basket halfway with water, and then run spinning after releasing the drain hose. • Make sure the drain hose is installed correctly. See the installation section of this user manual and adjust the position of the drain hose as instructed.
Stains on clothes.	• Clean the magic filter.
Has odours.	• Excessive suds collect in recesses and can cause foul odours. • Run cleansing cycles to sanitize periodically. • Dry the washing machine interior after a cycle has finished.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 50 2015/7/27 16:55:43

If a problem persists, contact a local Samsung service center.

Information codes

The washer may display information codes to help you understand what is occurring with your washer better.

No	Code	Action
1	1C	The WaterLevel sensor is not working properly. • Check WaterLevel Sensor wire harness. • If the information code remains, contact a customer service centre. **NOTE** When the washer displays "**1C**", the washer do draining for 3 minutes. During this time, the **Power** button is inoperative.
2	3C	Check the motor for operation. • Try restarting the cycle. • If the problem continues, call for service.
3	4C	Water is not supplied. • Make sure the water taps are open. • Make sure the water hoses are not clogged. • Make sure the water taps are not frozen. • Make sure the washing machine is operating with sufficient water pressure. • Make sure that the cold water tap and the hot water tap are properly connected. • Clean the mesh filter as it may be clogged. **NOTE** When the washer displays "**4C**", the washer do draining for 3 minutes. During this time, the **Power** button is inoperative.
4	4C2	• Make sure the cold water supply hose is firmly connected to the cold water tap. If it is connected to the hot water tap, the laundry may be deformed with some cycles.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 51 2015/7/27 16:55:43

Troubleshooting

No	Code	Action
5	5C	Water is not draining. • Make sure the drain hose is not frozen or clogged. • Make sure the drain hose is positioned correctly, depending on the connection type. • Clean the debris filter as it may be clogged. • Make sure the drain hose is straightened all the way to the drain system. • If the information code remains, contact a customer service centre.
6	9C1	The electronic control needs to be checked (Over Voltage Error). • Check the PCB and wire harness. • Check if power is supplied properly. • If the information code remains, contact a customer service centre.
7	9C2	Low voltage detected • Check if the power cord is plugged in. • If the information code remains, contact a customer service centre.
8	AC6	Inverter Communication problem • Check the Inverter PCB and wire harness. • If the information code remains, contact a customer service centre.
9	dC	Operating the washer with the door open. • Make sure the door is properly closed. • Make sure laundry is not caught in the door.
10	HC	High temperature heating check • If the information code remains, contact a customer service centre.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 52 2015/7/27 16:55:43

No	Code	Action
11	LC	Check the drain hose. • Make sure the end of the drain hose is placed on the floor. • Make sure the drain hose is not clogged. • If the information code remains, contact a customer service centre. **NOTE** When the washer displays "**LC**", the washer do draining for 3 minutes. During this time, the **Power** button is inoperative.
12	OC	Water is overflowed. • Restart after spinning. • If the information code remains on the display, contact a local Samsung service centre.
13	PC	When position of the clutch can't be detected. • If the information code remains, contact a customer service centre.
14	PC1	After position of the clutch is detected, if the signal of the clutch hall goes wrong. • If the information code remains, contact a customer service centre.
15	Ub	Spinning does not work. • Make sure laundry is spread out evenly. • Make sure the washing machine is on a flat, stable surface. • Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory, and an "Ub" check message will be shown in the display.

For any codes not listed above, call 800-SAMSUNG (800-7267864) (U.A.E), 183-CALL (183-2255) (KUWAIT).

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 53 2015/7/27 16:55:43

Specifications

Fabric care chart

The following symbols provide garment care direction. The clothing care labels include symbols for drying, bleaching, drying and ironing, or dry cleaning when necessary. The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow care label directions to optimize garment life and reduce laundering problems.

Wash cycle

	Normal
	Permanent press/Wrinkle resistant/Wrinkle control
	Gentle/Delicates
	Hand wash

Water temperature

•••	Hot
••	Warm
•	Cold

NOTE

This represents appropriate wash water temperatures for various items. The temperature range for Hot is 105° - 125 °F / 41° - 52 °C, for Warm 85° - 105 °F / 29° - 41 °C and for Cold 60° - 85 °F / 16° - 29 °C. (Wash water temperature must be a minimum of 60 °F / 16 °C for detergent activation and effective cleaning.)

The clothes washer can not ensure these temperatures because the actual temperature of the water entering your washer depends on water heater settings and regional water supply temperatures. For example, cold water entering the home in the northern states during winter may be 40 °F / 4 °C which is too cold for effective cleaning. In this situation, you will need to adjust the water temperature by selecting a warm setting, adding some hot water to the MAX FILL line, or using your Washer's heating option, if available.

Bleach

	Any bleach (when needed)
	Only non-chlorine (color-safe) bleach (when needed)
	Tumble dry

Normal

	Permanent press/Wrinkle resistant/Wrinkle control
	Gentle/Delicates

Special instructions

	Line dry/Hang to dry
	Drip dry
	Dry flat

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 54 2015/7/27 16:55:44

Heat setting

	High
	Medium
	Low
	Any heat
	No heat / Air

Dry-clean

	Dry-clean
	Do not dry-clean
	Line dry / Hang to dry
	Drip dry
	Dry flat

Iron dry or steam temperatures

	High
	Medium
	Low

Warning symbols for laundering

	Do not wash
	Do not wring
	Do not bleach
	Do not tumble dry
	No steam (added to iron)
	Do not iron

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 55 2015/7/27 16:55:46

Specifications

Helping the environment

- Your washer is manufactured from recyclable materials. If you decide to dispose of it, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the lid so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manufacturers' instructions.
- Use stain removal products and bleaches before the wash cycle only when necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 56 2015/7/27 16:55:46

Specification sheet

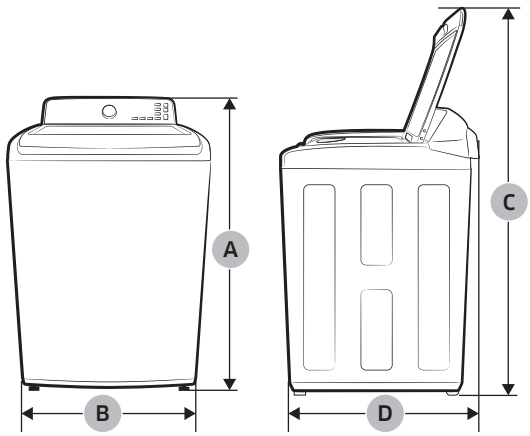

Type		Top loading washer	
Model name		WA22J8700G*	WA18J8700G*
Dimensions (inches (cm))	A. Height	46.0 (116.8)	
	B. Width	27.0 (68.6)	
	C. Height with lid open	59.8 (152.0)	
	D. Depth	29.3 (74.4)	
Capacity (kg)		22.0	18.0
Water pressure (kPa)		137 - 800	
NET weight (kg)		68	
POWER CONSUMPTION		220 V	1400 W
		240 V	1650 W
SPIN REVOLUTION		800 rpm	

NOTE

The design and specifications are subject to change without notice for quality improvement purposes.

The energy label specifications have been determined by using the following program according to UAE.S 5010 2:2013.(Only for U.A.E models)

- The program is Water saving + Water Lever 9.

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 57 2015/7/27 16:55:46

Specifications

Cycle chart

Use this chart to set the best cycle and options for you laundry.

NOTE

Setting	Water Level		Power Wash	Temp.
●: factory setting	1	6	**H:** High	**H:** Hot
●: can be selected	2	7	**M:** Medium	**W:** Warm
	3	8	**L:** Low	**C:** Cold
	4	9		
	5			

Cycle	Water Level									Power Wash			Temp.		
	1	2	3	4	5	6	7	8	9	H	M	L	H	W	C
NORMAL	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
SILENT	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
HEAVY DUTY	●	●	●	●	●	●	●	●	●	●			●	●	●
40℃ MAGIC CLEAN	●	●	●	●	●					●	●	●	●	●	●
60℃ MAGIC CLEAN	●	●	●	●	●					●	●	●	●	●	●
TOWELS	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
ACTIVE WEAR	●	●	●	●	●	●	●	●	●		●		●	●	●
ECO TUB CLEAN							●			●				●	
WATER SAVING	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
BABY CARE	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
QUICK WASH	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
DELICATES	●	●	●	●	●	●	●	●	●			●		●	●
BEDDING	●	●	●	●	●	●	●	●	●	●			●	●	●
SPIN															
RINSE+SPIN	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 58 2015/7/27 16:55:46

Cycle	Options							
	AquaJet™ Plus	Activ Dual Wash Drain	Last Setting	Pre Soak	Delay End	Wash	Rinse	Spin
NORMAL	●	●	●	●	●	●	●	●
SILENT	●	●	●		●	●	●	●
HEAVY DUTY	●	●	●		●	●	●	●
40℃ MAGIC CLEAN	●	●	●		●	●	●	●
60℃ MAGIC CLEAN	●	●	●		●	●	●	●
TOWELS	●	●	●	●	●	●	●	●
ACTIVE WEAR	●	●	●	●	●	●	●	●
ECO TUB CLEAN		●			●			
WATER SAVING	●	●	●	●	●	●	●	●
BABY CARE	●	●	●		●	●	●	●
QUICK WASH		●	●	●	●	●	●	●
DELICATES		●	●		●			
BEDDING		●	●	●	●	●	●	●
SPIN		●	●		●			●
RINSE+SPIN		●	●		●		●	●

WA8700J_WA22J8700GP-03520L-02_SG_EN.indd 59 2015/7/27 16:55:46

QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
KUWAIT	183-CALL (183-2255)	www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)
U.A.E	800-SAMSUNG (800-7267864)	

DC68-03520L-02

الغسالة

دليل المستخدم

WA22J8700G* / WA18J8700G*

SSEC SEC

DC68-03520L-02

SAMSUNG

المحتويات

معلومات السلامة ٤

ما يجب أن تعرفه حول إرشادات السلامة ٤
رموز السلامة الهامة ٤
احتياطات السلامة الهامة ٥

التركيب ١١

إخراج الغسالة من عبوتها ١١
نظرة عامة على الغسالة ١٢
متطلبات الموقع الأساسية ١٤
ملاحظة هامة لجهة التركيب ١٨
التركيب خطوة بخطوة ١٨

تعليمات التشغيل ٢٦

وضع الملابس بالغسالة ٢٦
بدء التشغيل ٢٧

غسل الملابس ٢٨

لوحة التحكم ٢٨
رؤية عامة للدورة ٣٠
خيارات ٣١
غسل الملابس باستخدام قرص تحديد الدورة ٣٤
ATC (التحكم الأوتوماتيكي بدرجة الحرارة) ٣٥
الأساسيات ٣٥
استخدام المادة المنظفة ٣٨
الميزات ٣٩

صيانة الغسالة ٤٢

تنظيف الأسطح الخارجية ٤٢
تنظيف الجزء الداخلي ٤٢
تخزين الغسالة ٤٢
الحفاظ على الغطاء العلوي والإطار الأمامي ٤٣
تنظيف الحوض المدمج ومصفاة المخلفات ٤٣
تنظيف وحدات التوزيع ٤٤
Eco Tub Clean (تنظيف الحوض) ٤٦

استكشاف الأخطاء وإصلاحها ٤٧

نقاط التحقق والفحص ٤٧
أكواد المعلومات ٥١

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 2 2015/7/27 17:04:12

المواصفات ٥٤

جدول العناية بالأقمشة ٥٤
حماية البيئة ٥٦
قائمة المواصفات الفنية ٥٧
جدول الدورات ٥٨

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 3 2015/7/27 17:04:12

معلومات السلامة

تهانينا على شرائك غسالة Samsung الجديدة. يحتوى هذا الدليل على معلومات هامة حول عملية تركيب الجهاز واستخدامه ورعايته. يرجى قراءة هذا الدليل بعناية لتتمكن من الاستفادة الكاملة من الميزات والفوائد العديدة لغسالتك.

ما يجب أن تعرفه حول إرشادات السلامة

الرجاء قراءة هذا الدليل قراءة شاملة للتأكد من أنك تعرف كيفية تشغيل الميزات والوظائف المتنوعة في جهازك الجديد بشكل آمن وفعال. الرجاء الاحتفاظ بهذا الدليل في مكان آمن بالقرب من الجهاز من أجل الرجوع إليه في المستقبل. يستخدم هذا الجهاز للغرض المخصص له فقط كما هو مذكور في دليل المالك هذا.

لا تغطي التحذيرات والتنبيهات وإرشادات السلامة الهامة التالية كافة الظروف والمواقف المحتمل التعرض لها. لذا يجب التعامل بحذر وانتباه وعناية عند تركيب الغسالة وصيانتها وتشغيلها.نظرًا لأن إرشادات التشغيل التالية تنطبق على طرازات متعددة، فإن خصائص الغسالة الخاصة بك قد تختلف قليلاً عن تلك الموصوفة في هذا الدليل. كما أن بعض علامات التحذير المذكورة قد تكون غير قابلة للتطبيق. إذا كانت لديك أي أسئلة أو تساؤلات، اتصل بأقرب مركز خدمة أو اعثر على التعليمات والمعلومات عبر الإنترنت على موقع www.samsung.com.

رموز السلامة الهامة

تشير الرموز والعلامات الموجودة في دليل المستخدم هذا إلى ما يلي:

⚠ **تحذير**

الممارسات الخطيرة أو غير الآمنة التي قد تؤدي **إلى إصابات خطيرة للأفراد أو الموت و/أو تلف الغسالة**.

⚠ **تنبيه**

الممارسات الخطيرة أو غير الآمنة التي قد تؤدي **إلى إصابات للأفراد و/أو تلف الغسالة**.

ملاحظة

حيث يُشير إلى خطوة التعرض لإصابة أو إلحاق ضرر بالغ بالمعدة.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 4 2015/7/27 17:04:12

تهدف علامات التحذير هذه إلى منع حدوث إصابات لك وللآخرين.
لذا الرجاء اتباعها بعناية.
احتفظ بهذا الدليل بعد قراءته في مكان آمن من أجل الرجوع إليه في المستقبل.

اقرأ كافة الإرشادات أولاً قبل استخدام الجهاز.

يوجد احتمال التعرض للمخاطر كما هو الحال مع كافة الأجهزة الكهربائية وأجزائها المتحركة. تعرف بنفسك على تشغيل هذا الجهاز وتوخّ الحذر عند استعماله حتى تتمكن من تشغيله بشكل آمن.

احتياطات السلامة الهامة

⚠ تحذير

لتقليل إمكانية نشوب حريق أو صعقة كهربائية أو إصابة للأشخاص أثناء استخدام الغسالة، قم باتباع احتياطات الأمان الأساسية بما في ذلك ما يلي:

لا تدع الأطفال (أو الحيوانات الأليفة) يلعبون فوق الغسالة أو بداخلها. حيث لا يمكن فتح باب الغسالة بسهولة من الداخل، وقد يصاب الأطفال بإصابات بالغة في حالة احتباسهم بداخلها.

لم يتم تصميم هذا الجهاز للاستخدام من قِبل أشخاص لديهم مشكلات جسدية وعقلية وحسية (بما فيهم الأطفال) أو نقص في المعرفة أو الخبرة، إلا تحت إشراف أو تعليمات بخصوص استخدامه من قِبل الشخص المسؤول عن سلامتهم.

يجب مراقبة الأطفال لضمان عدم عبثهم بالغسالة.
بالنسبة للاستخدام في أوروبا: يمكن استخدام هذا الجهاز بواسطة الأطفال الذين يبلغون من العمر ٨ سنوات أو أكبر وكذلك بواسطة الأشخاص الذين يعانون من قصور جسدي أو حسي أو عقلي أو نقص الخبرة والمعرفة بشرط خضوعهم للإشراف وتوعيتهم بالإرشادات الخاصة باستخدام الجهاز بطريقة آمنة وأن يتفهموا المخاطر الكامنة. يجب منع الأطفال من اللعب بالجهاز. ويجب ألا يقوم الأطفال بعملية التنظيف أو أعمال الصيانة التي يمكن للمستخدم القيام بها بدون إشراف.
في حالة تلف كابل الجهاز (سلك التيار الكهربائي)، يجب تغييره من قِبل الشركة المصنّعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتفادي التعرض لأي خطر.

يجب وضع الجهاز بالقرب من مأخذ التيار الكهربائي، وصنابير توريد الماء وخراطيم تصريف الماء بحيث يسهل الوصول إليها.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 5 2015/7/27 17:04:12

معلومات السلامة

بالنسبة للأجهزة ذات فتحات التهوية في قاعدتها، يتعين عدم إعاقة أو سد هذه الفتحات بالسجادة.

يجب استخدام مجموعات الخراطيم الجديدة ويجب عدم استخدام مجموعة الخراطيم القديمة.

⚠ تنبيه

ولتجنب المخاطر الناجمة عن إعادة الضبط غير القصدي للفاصل الحراري، فإنه يتعين عدم تزويد الجهاز خلال جهاز تبديل خارجي مثل المؤقت أو الاتصال بدائرة يجري تشغيلها وإيقاف تشغيلها بشكل منتظم بواسطة خاصية ما.

⚠ تنبيه

لا تستخدم ماء تتجاوز درجة حرارته ٥٠ درجة مئوية مع أوضاع استخدام الماء الساخن بالغسالة.
قد تتعرض الأجزاء البلاستيكية للتشوه أو التلف، وقد ينتج عن ذلك حدوث صدمة كهربائية أو نشوب حريق.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 6 2015/7/27 17:04:12

تحذيرات هامة عند التركيب

⚠ تحذير

يجب أن يتم تركيب هذا الجهاز بواسطة فني مؤهل أو شركة صيانة متخصصة.

- قد ينتج عن الفشل في اتباع هذه التعليمات حدوث صدمة كهربائية أو حريق أو انفجار أو مشاكل تتعلق بالمنتج أو التعرض للإصابة.

قم بتوصيل سلك الطاقة بمقبس حائط من ٢٢٠ - ٢٤٠ فولت/ ٥٠ هرتز أو أعلى من ذلك. ولا تستخدم المقبس إلا لتشغيل هذا الجهاز. ممنوع استخدام كبلات إضافية.

- قد يؤدي مشاركة مقبس الحائط مع أجهزة أخرى باستخدام سلك طاقة أو مد سلك الطاقة إلى حدوث صدمة كهربائية أو حريق.
- تأكد من أن الجهد الكهربي للطاقة والتردد والتيار مطابقة للقياسات الخاصة بمواصفات المنتج. يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق. لذا، تأكد من توصيل سلك الطاقة في مقبس الحائط بإحكام.

قم بإزالة أي مواد خارجية مثل الأتربة أو الماء من النهايات الطرفية لسلك الطاقة ونقاط الاتصال باستخدام قطعة قماش جافة بشكل منتظم.

- قم بإلغاء توصيل سلك الطاقة وتنظيفه باستخدام قطعة قماش جافة.
- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.
- قم بتوصيل القابس الكهربي "الفيشة" في مقبس التيار الكهربي بالحائط بحيث يتم تمديد سلك التيار الكهربي نحو الأرضية.

إذا قمت بتوصيل سلك الطاقة في المقبس في الاتجاه المعاكس، فقد تتلف الأسلاك الكهربائية الموجودة داخل الكبل وقد يؤدي هذا الأمر إلى حدوث صدمة كهربية أو حريق.

يجب بتثبيت هذا الجهاز على الأرض بشكل سليم.

لا تقم بتثبيت الجهاز على الأرض بجانب أنبوب غاز أو أنبوب ماء بلاستيكي أو خط تليفون.

- قد ينتج عن هذا الأمر حدوث صدمة كهربائية أو حريق أو انفجار أو مشاكل تتعلق بالمنتج.
- لا تقم بتوصيل سلك التيار الكهربي في مقبس غير مؤرض بشكل صحيح وتأكد من توافق هذا المقبس مع القوانين المحلية والوطنية.

يجب عدم تركيب هذا الجهاز بالقرب من سخان أو مواد قابلة للاشتعال.

يجب عدم تركيب هذا الجهاز في بيئة رطبة أو موقع به زيت أو أتربة أو في مكان يتعرض لضوء الشمس المباشر والماء (قطرات المطر).

يجب عدم تركيب هذا الجهاز في موقع تكون درجة حرارته منخفضة.

- قد يؤدي الجليد إلى انفجار الأنابيب.

لا تستخدم محول كهربي.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو حريق.

لا تستخدم سلك طاقة تالف أو كبل طاقة تالف أو مقبس حائط غير محكم.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو حريق.

يجب عدم جذب سلك الطاقة أو ثنيه بقوة.

يجب عدم لف سلك الطاقة أو طيه.

يجب عدم تعليق سلك الطاقة فوق كائن معدني أو وضع كائن ثقيل فوق سلك الطاقة أو إدراج كائنات بين سلك الطاقة أو دفع سلك الطاقة في المساحة الموجودة خلف الجهاز.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو حريق.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 7 2015/7/27 17:04:13

معلومات السلامة

تنبيهات خاصة بالتركيب

⚠ تنبيه

ينبغي وضع هذا الجهاز بطريقة يمكن من خلالها الوصول بسهولة إلى قابس التيار الكهربي.

- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق نتيجة لتسريب الكهرباء.

تحذيرات هامة عند استعمال هذا الجهاز

⚠ تحذير

في حالة تعرض الجهاز لكمية زائدة من الماء، قم بإيقاف تشغيل المياه وقطع اتصال الكهرباء بشكل فوري، واتصل بأقرب مركز صيانة.

- لا تلمس سلك التيار الكهربي بيدين مبتلتين.
- قد ينتج عن هذا الأمر وجود صدمة كهربية.

إذا انبعث من الجهاز صوت ضوضاء غريبة أو رائحة حريق أو دخان، فافصل قابس الطاقة على الفور، واتصل بأقرب مركز لخدمة عملاء Samsung.

- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.

في حالة وجود تسريب للغاز (كغاز البروبان، والغاز النفطي المسال، وما شابه ذلك)، يجب تهوية المكان فورًا بدون لمس سلك الطاقة. لا تقم بلمس الجهاز أو سلك الطاقة.

- لا تستخدم مروحة تهوية.
- قد ينتج عن الشرارة حدوث صدمة كهربية أو حريق.

لا تدع الأطفال يلعبون فوق الغسالة أو بداخلها. بالإضافة إلى ذلك، عند التخلص من الجهاز، قم بإزالة الغطاء.

- قد يموت الأطفال اختناقًا في حالة احتباسهم داخل هذه الغسالة.

يجب عدم غسل العناصر العالق بها الجاز أو الكيروسين أو البنزين أو تنر الطلاء أو الكحول أو أي مواد أخرى قابلة للاشتعال أو الانفجار.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو حريق أو انفجار.

لا تلمس سلك التيار الكهربي بيدين مبتلتين.

- قد ينتج عن هذا الأمر وجود صدمة كهربية.

لا تدخل يدك أو أي شيء معدني تحت الغسالة أثناء تشغيلها.

- قد ينتج عن هذا الأمر إصابات شخصية.

لا تحاول إصلاح الجهاز أو فكه أو تعديله بنفسك.

- يجب عدم استخدام أي منصهر (مثل النحاس أو سلك معدني وما إلى ذلك) خلاف المنصهر القياسي.
- اتصل بأقرب مركز خدمة لك عندما يكون من الضروري إصلاح هذا الجهاز أو إعادة تركيبه.
- قد يؤدي عدم الالتزام بذلك إلى التعرض لصدمة كهربية أو نشوب حريق أو وقوع مشكلات متعلقة بالمنتج أو وقوع إصابات.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 8 2015/7/27 17:04:13

- وفي هذه الحالة، لا يتم تغطية المنتج من قبل الضمان الأساسي الذي تقدمه شركة Samsung. كما أن شركة Samsung لا تتحمل أية مسئولية عن الأعطال أو الخسائر التي تنجم عن سوء الاستخدام.

قم بنزع قابس الطاقة في حال عدم استخدام الجهاز لفترات زمنية طويلة أو أثناء الرعد/ العاصفة البرقية.

- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.

لا تضع يدك على حاوية العصر أثناء دورة العصر.

- قد ينتج عن هذا الأمر إصابات شخصية. إذا لم تتوقف حاوية العصر في غضون ١٥ ثانية من فتح الغطاء، فاتصل بأقرب مركز لخدمة عملاء Samsung.

تنبيهات الاستعمال

⚠ تنبيه

عندما يعلق بالغسالة مادة غريبة مثل المنظفات أو الأتربة أو مخلفات الطعام وما إلى ذلك، قم بإلغاء توصيل سلك الطاقة وتنظيف الغسالة باستخدام قطعة قماش مبللة وناعمة.

- يؤدي الفشل في الالتزام بهذا الأمر إلى وجود تغيير في الألوان أو التشويه أو التلف أو الصدأ.

تم تصميم المنتج الذي قمت بشرائه للاستخدام المنزلي فقط.
يُعد استخدام المنتج لأغراض العمل سوء استخدام له. وفي هذه الحالة، لا يتم تغطية المنتج من قبل الضمان الأساسي الذي تقدمه شركة Samsung. كما أن شركة Samsung لا تتحمل أية مسئولية عن الأعطال أو الخسائر التي تنجم عن سوء الاستخدام.

يجب عدم الوقوف فوق الجهاز أو وضع أشياء فوقه (مثل الغسيل أو الشمعدان المشتعل أو السجائر المشتعلة أو الأطباق أو المواد الكيماوية أو الكائنات المعدنية وما إلى ذلك).

- قد ينتج عن هذا الأمر حدوث صدمة كهربائية أو حريق أو مشاكل تتعلق بالمنتج أو الإصابة.

يجب عدم الضغط على الأزرار باستخدام كائنات حادة مثل المسامير أو السكاكين أو الأظافر وما إلى ذلك.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو إصابة.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 9 2015/7/27 17:04:13

معلومات السلامة

تحذيرات هامة عند التنظيف

⚠ تحذير

يجب عدم تنظيف الجهاز عن طريق رش الماء فوق الجهاز مباشرةً.

لا تقم باستخدام منظف يحتوي على حمض قوي.

قم بفصل قابس الجهاز من مقبس الحائط قبل تنظيفه أو صيانته.

- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حريق.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 10 2015/7/27 17:04:13

التركيب

اتبع هذه التعليمات بعناية لضمان تركيب الغسالة بشكل صحيح ومنع وقوع أية حوادث عند الغسيل.

إخراج الغسالة من عبوتها

قم بإخراج الغسالة من عبوتها وافحصها للتحري عن أي تلف وقع بها أثناء الشحن. تأكد من استلامك كل الأشياء الموضحة أدناه.
إذا تلفت غسالتك أثناء الشحن، أو لم تستلم كل الأشياء، فالرجاء الاتصال على الرقم 800-SAMSUNG (800-7267864) (الإمارات العربية المتحدة)، 183-CALL (183-2255) (الكويت).
لمنع حدوث إصابة شخصية أو إجهاد، الرجاء ارتداء قفازات واقية عند رفع الوحدة أو حملها.

⚠ تحذير

قد تصبح مواد التغليف من الأشياء الخطيرة بالنسبة للأطفال، الرجاء الاحتفاظ بكل مواد التغليف (الأكياس البلاستيكية، البوليسترين، ما شابه ذلك) بعيداً عن أيدي الأطفال.

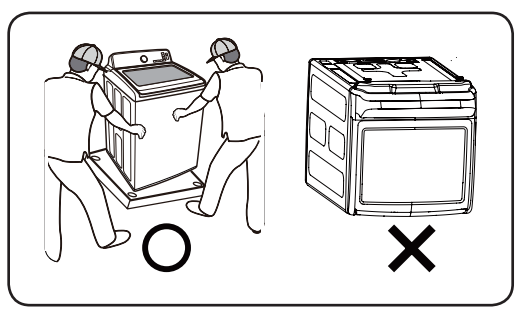

⚠ تنبيه

يحتاج فك التغليف وإخراج الغسالة من عبوتها إلى تعاون شخصين معًا. يحظر الإمالة للأمام نهائيًا عند إزالة قاعدة الوسادة من مواد التغليف والتعبئة.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 11 2015/7/27 17:04:13

التركيب

نظرة عامة على الغسالة

تأكد أن كل الأجزاء موجودة في علبة المنتج. إذا كانت تعاني مشكلة ما في الغسالة أو الأجزاء، اتصل بالمركز المحلي لخدمة عملاء سامسونغ Samsung أو تاجر التجزئة.

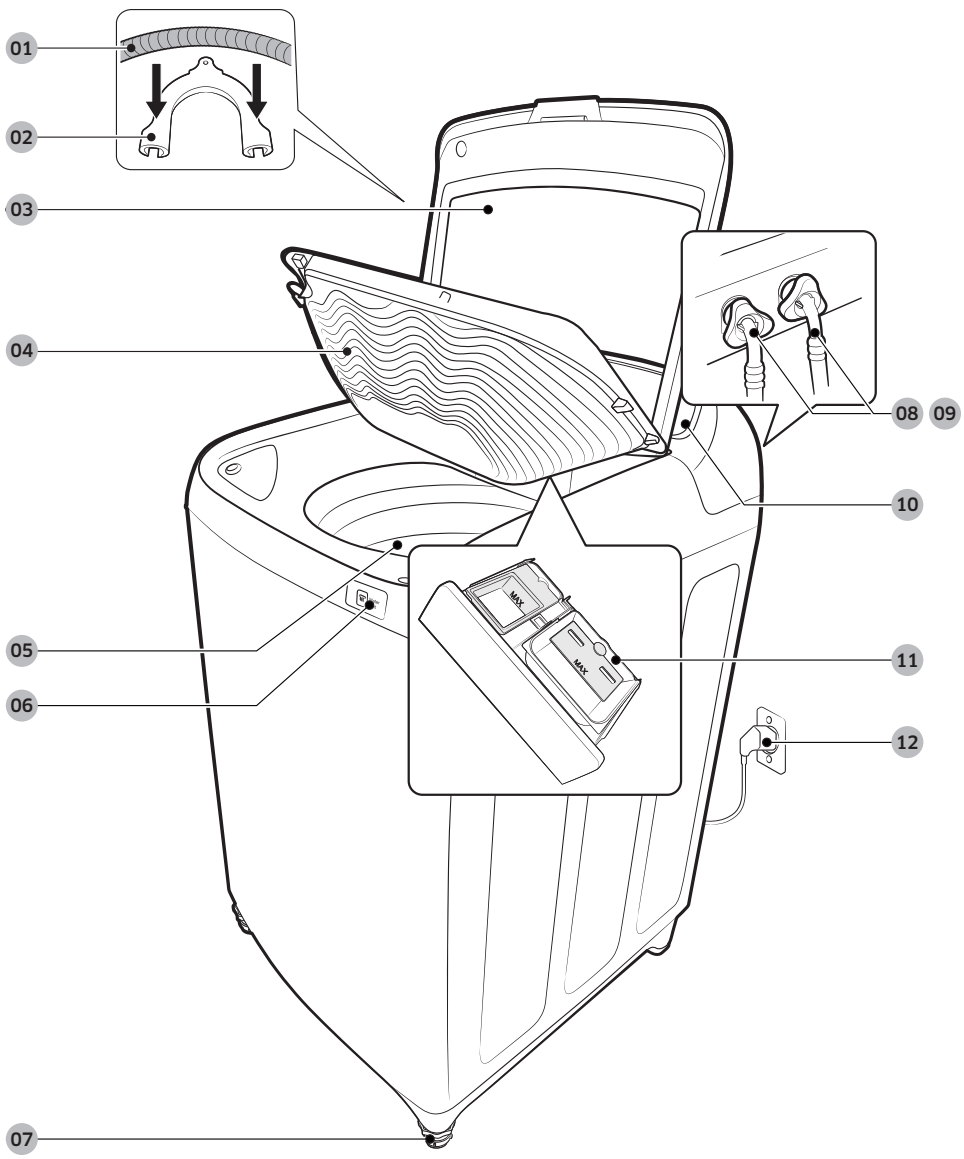

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 12 2015/7/27 17:04:13

٠١ خرطوم التصريف	٠٢ حامل الخرطوم	٠٣ الغطاء
٠٤ حوض مضمّن	٠٥ حوض الغسيل	٠٦ رشاش الماء
٠٧ استواء أرجل الغسالة	٠٨ خرطوم الماء (بارد)	٠٩ خرطوم الماء (حار)
١٠ لوحة التحكم	١١ درج مسحوق الغسيل	١٢ كابل الطاقة

الأجزاء الواردة



حامل الخرطوم



دليل المستخدم



رباط الخرطوم المنزلق البلاستيكي



غطاء سحب الماء

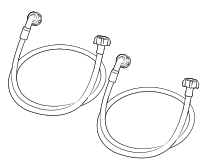

خراطيم إمداد الماء

الأدوات اللازمة

مفتاح الربط



مفك مسطح



أداة قياس اختلاف المستوى

ملاحظة

- إذا فقدت إحدى الملحقات وتود شراء بديلاً لها، اتصل بمركز صيانة سامسونغ (800-7267864) 800-SAMSUNG (الإمارات العربية المتحدة)، (2255-183) 183-CALL (الكويت).
- قد يختلف تصميم الأجزاء والمُلحقات عن الصور أعلاه.
  والتصميم عرضة للتغيير دون إخطار بإدخال تحسينات على المنتج.
- يتعين عدم استعمال الخراطيم القديمة. يتعين استخدام خراطيم إمداد بالماء جديدة، وجديدة فقط، عند تركيب الغسالة. يُرجى العلم أن خراطيم الإمداد بالماء القديمة قد تسرب أو تنفجر مما يُسبب تدفق الماء وتلف الممتلكات.
- يُرجى التحقق والتأكد من وجود حلقات مطاطية داخل كل موضع اقتران بخراطيم الإمداد بالماء.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 13 2015/7/27 17:04:14

التركيب

متطلبات الموقع الأساسية

المتطلبات الكهربية

- قاطع دائرة كهربائية أو منصهر بقدرة ٢٢٠ - ٢٤٠ فولط تيار متردد / ٥٠ هرتز.
- يوصى باستخدام دائرة فرعية مستقلة تخدم غسالتك فقط.
- غسالتك مجهزة بكابل طاقة.

تنبيه

ممنوع استخدام كبلات إضافية.

التوصيل الأرضي

التأريض الكهربائي لازم لهذا الجهاز.

يجب تأريض هذا الجهاز. في حالة وجود عطل أو توقف، فسيقوم التأريض بخفض خطر الصعقة الكهربائية عن طريق توفير مسار لمقاومة التيار الكهربائي على الأقل.

هذا الجهاز مجهز بكابل طاقة به قابس تاريض ثلاثي الشوكات للاستخدام في مصدر التيار الكهربائي المركب بطريقة ملائمة او المؤرض.

يجب توصيل القابس في مصدر التيار الكهربائي الملائم الذي يكون مركباً ومؤرضاً بطريقة ملائمة طبقاً لجميع القوانين واللوائح المحلية.

تحذير

قد تؤدي وصلة تأريض الجهاز المتصلة بطريقة غير ملائمة إلى زيادة خطر التعرض للصعقة الكهربائية. تحقق الأمر مع فني كهرباء أو فني خدمة إذا كنت غير متأكداً من إذا كان الجهاز مؤرضاً بطريقة ملائمة أم لا. يحظر استخدام قابس آخر غير المرفق مع الغسالة.-وفي حالة عدم ملاءمته مع مأخذ التيار، استعن بفني كهربائي مؤهل لتركيب مأخذ مناسب.

احتياطات السلامة الهامة

لمنع حدوث خطر نشوب الحريق بدون داع، أو صعقة كهربائية أو إصابة شخصية، يجب إجراء جميع عمليات وضع الأسلاك والتأريض طبقاً لأحدث نسخة من قانون الكهرباء الوطني ANSI/FNPA، رقم ٧٠ والقوانين واللوائح المحلية. تقع المسؤولية الشخصية على صاحب الجهاز لتقديم خدمة كهربائية ملائمة لهذا الجهاز.

تنبيه

لا تقم بتوصيل السلك الأرضي بخطوط مواسير السباكة البلاستيكية، أو خطوط الغاز، أو مواسير الماء الساخن.

متطلبات المياه

لملء غسالتك بالماء بطريقة ملائمة في وقت مناسب، يلزم أن يكون ضغط الماء ما بين ٢٠ إلى ١١٦ رطل للبوصة المربعة (١٣٧ إلى ٨٠٠ كيلو باسكال).

قد يؤدي ضغط الماء الأقل من ٢٠ رطل للبوصة المربعة إلى خلل بصمام الماء، أو قد لا يتم السماح لصمام الماء بالإيقاف تماماً، أو زيادة وقت الملء بما يتجاوز الوقت المسموح به للغسالة والتسبب في إيقاف تشغيل غسالتك. الحد الزمني مدمج في المحكمات لمنع الغمر بالماء في منزلك إذا كان الخرطوم غير مثبت.

يجب أن تكون حنفيات المياه ضمن مسافة ٤ قدم/ ١٢٢ سم من الجزء الخلفي لغسالتك بما يتلاءم مع الخراطيم المدخلة الواردة مع غسالتك.

ملاحظة

تتوافر الخراطيم المدخلة الملحقة بأطوال متعددة تصل إلى ١٠ قدم / ٢٧٥ سم للوصول إلى الحنفيات التي تكون بعيدة عن الجزء الخلفي لغسالتك.

لتفادي إمكانية تلف الماء:

- يجب أن تكون إمكانية الوصول إلى الحنفيات سهلة.
- إيقاف الحنفيات عندما تكون الغسالة غير مستخدمة.
- افحص بشكل دوري للتأكد من عدم وجود تسرب من تجهيزات خرطوم إدخال الماء.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 14 2015/7/27 17:04:14

⚠ تحذير

افحص كل الوصلات الموجودة في صمام الماء والحنفية للتحري عن التسربات

أداة التصريف

الارتفاع الموصى به للأنبوب القياسي هو ٣٩ بوصة/ ٩٩ سم. يجب توجيه خرطوم التصريف باستخدام مشبك خرطوم التصريف إلى اتجاه الماسورة الرأسية. يجب أن تكون الماسورة الرأسية كبيرة بدرجة كافية لإدخال القطر الخارجي لخرطوم التصريف. يجب توصيل خرطوم التصريف بالغسالة في المصنع.

سطح الأرضية

للحصول على أفضل أداء، يجب عليك تركيب غسالتك على أرضية صلبة. قد يلزم تقوية الأرضيات الخشبية بما يقلل من الاهتزاز، و/ أو حالات التحميل غير المتوازن. الأسطح الموضوع عليها السجاد والبلاط الناعم تعد من العوامل المساهمة في حدوث الاهتزاز بما قد يؤدي إلى حَرك الغسالة قليلاً أثناء دورة اللف.
لا تقم دوماً بتركيب غسالتك على أرضية أو مكان مدعوم بشكل ضعيف.

الاعتبارات الخاصة بالموقع

لا تركب غسالتك في أماكن قد تتعرض فيها المياه للتجمد. لكون غسالتك ستحتفظ دوماً ببعض الماء في أماكن صمام الماء، المضخة، والخرطوم. الماء المتجمد قد يؤدي إلى تلف السيور، المضخة والخراطيم والمكونات الأخرى.

تركيب القنطرة أو الخزانة

المسافات الدنيا بالنسبة لتركيب القنطرة أو الحجرة:

الجوانب	١ بوصة / ٢٥ ملم	مقدمة الحجرة	٢ بوصة / ٥١ ملم
الجانب الخلفي	٦ بوصة / ١٥٢ ملم	الجزء العلوي	٢١ بوصة / ٥٣٣ ملم

في حالة تركيب الغسالة والمجفف سوياص، يجب أن يكون الجزء الأمامي من الحجرة على مسافة لا تقل عن ٧٢ بوصة² (٤٦٥ سم²) به فتحة هواء غير معاقة. يجب أن لا تحتاج غسالتك إلى أي فتحة هواء معينة.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 15 2015/7/27 17:04:14

التركيب

منطقة مجوفة

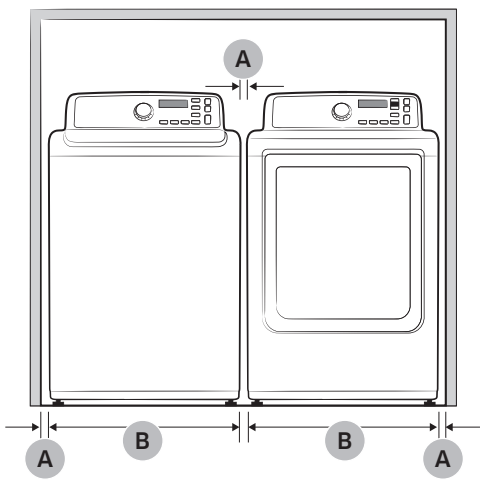

A	١ بوصة (٢,٥ سم)
B	٢٧,٠ بوصة (٦٨,٦ سم)

منظر جانبي - الحجرة أو المنطقة المحصورة

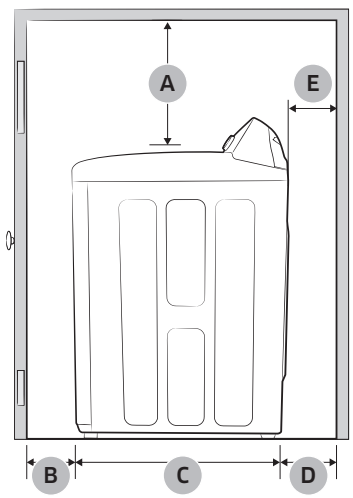

A	٢١ بوصة (٥٣,٣ سم)
B	٢ بوصة (٥,١ سم)
C	٢٩,٣ بوصة (٧٤,٤ سم)
D	٦ بوصة (١٥,٢ سم)
E	المسافة ما بين طرف صمام الماء والحائط • الحالة ١. تجميع خرطوم الإمداد بعد التركيب: أكثر من ٣,٩ بوصة (١٠ سم). • الحالة ٢. تجميع خرطوم الإمداد قبل التركيب: أكثر من ٢,٨ بوصة (٧ سم).

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 16 2015/7/27 17:04:14

الأبعاد المطلوبة للتركيب

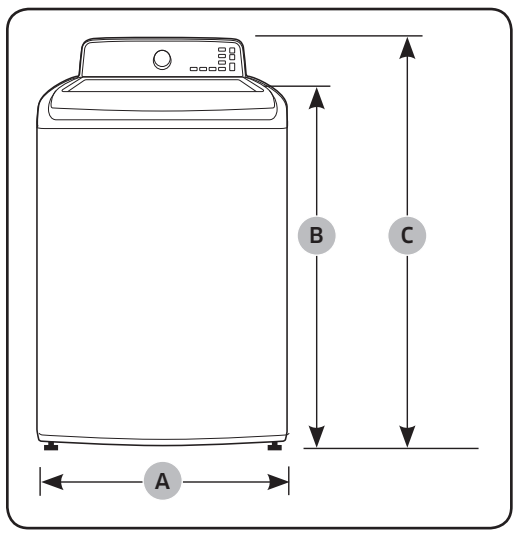

A	٢٧,٠ بوصة (٦٨,٦ سم)
B	٣٩,٢ بوصة (٩٩,٥ سم)
C	٤٦,٠ بوصة (١١٦,٨ سم)

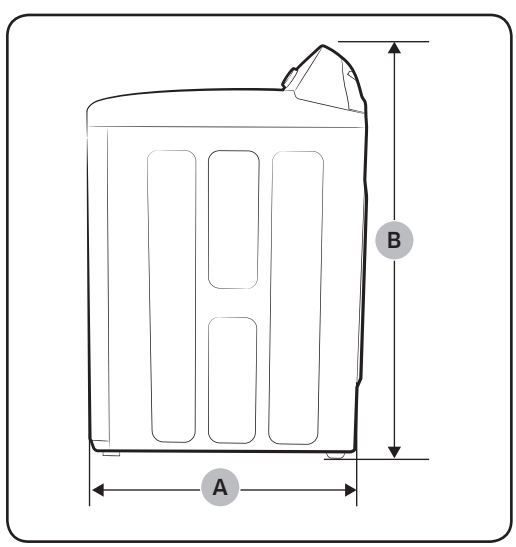

A	٢٩,٣ بوصة (٧٤,٤ سم)
B	٤٦,٠ بوصة (١١٦,٨ سم)

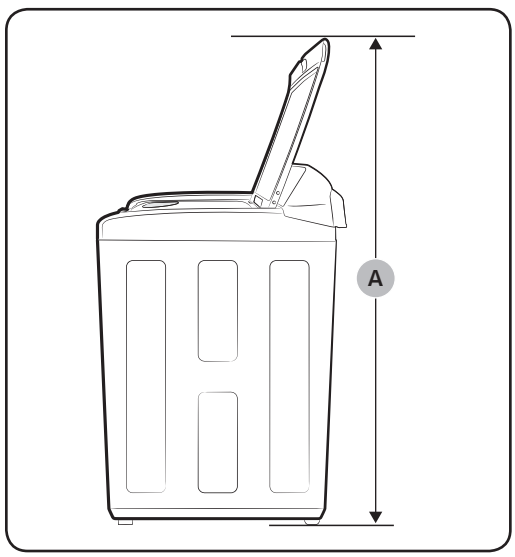

A	٥٩,٨ بوصة (١٥٢,٠ سم)

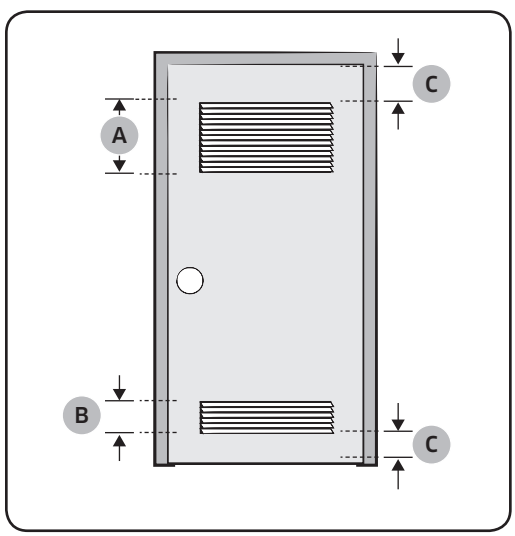

*A	٤٨,٠ بوصة^{٢} (٣١٠,٠ سم^{٢})
*B	٢٤,٠ بوصة^{٢} (١٥٥,٠ سم^{٢})
C	٣,٠ بوصة (٧,٦ سم)

ملاحظة

* التباعد المطلوب

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 17 2015/7/27 17:04:15

التركيب

ملاحظة هامة لجهة التركيب

الرجاء قراءة التعليمات التالية بدقة قبل تركيب غسالتك.
يجب الاحتفاظ بهذه التعليمات للرجوع إليها في المستقبل.
نحن ننصحك بترك أمر تركيب هذه الغسالة لفني متخصص.

الشكل التوضيحي المتبع لعملية التركيب

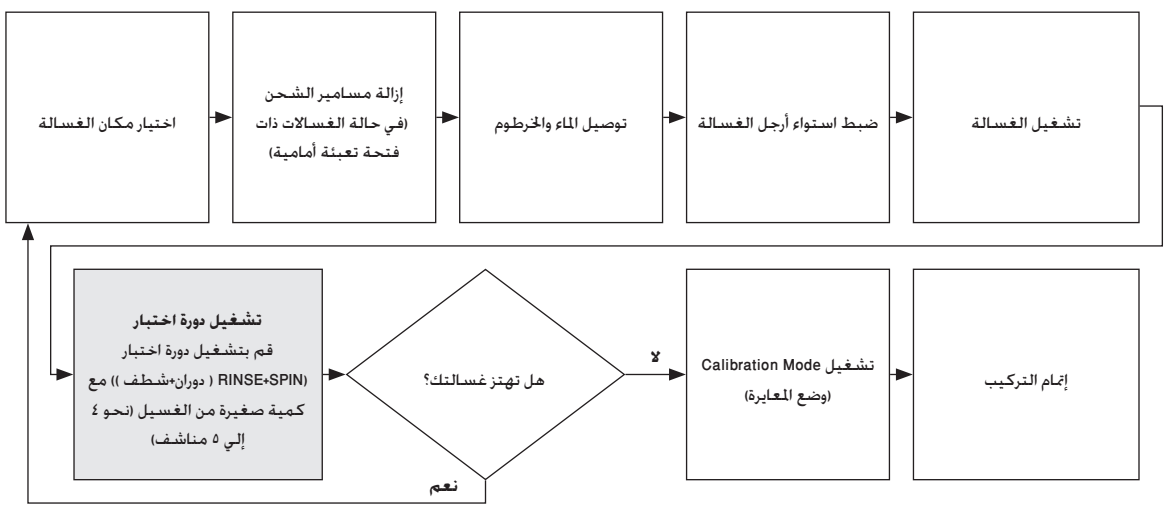

يرجي التحقق ثانية من الخطوات السابقة.

التركيب خطوة بخطوة

الخطوة ١ - اختيار مكان الغسالة

ملاحظة

قبل تركيب الغسالة، تأكد من توفر ما يلي في المكان الذي قمت باختياره:

- سطح صلب ومستوي دون وجود سجاد أو بلاط قد يعوق عملية التهوية.
- مكان بعيد عن أشعة الشمس المباشرة.
- تتوفر به تهوية كافية.
- غير معرض لدرجات حرارة التجمد (درجات الحرارة الأقل من ٣٢ ف أو ٠ مئوية).
- يكون بعيدًا عن مصادر الحرارة مثل البترول أو الغاز.
- به مساحة كافية حتى لا ترتكز الغسالة على سلك الطاقة الخاص بها.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 18 2015/7/27 17:04:15

الخطوة ٢ - توصيل خرطوم توريد الماء

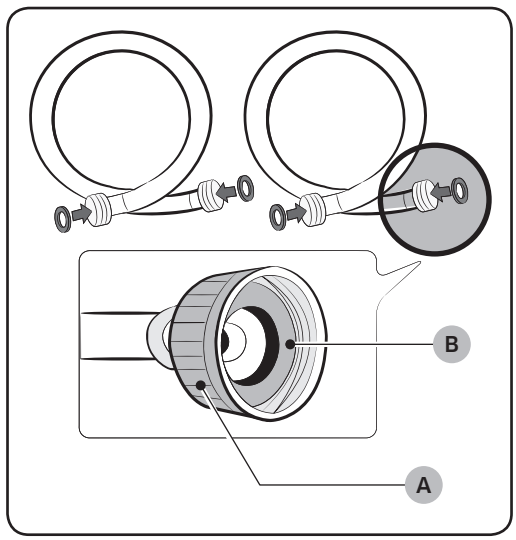

⚠ تنبيه

قبل تركيب خراطيم إمداد الماء، تأكد من **أن الحشيات المطاطية (B)** داخل **الوصلات المجمعة توجد (A)** الموجودة في طرفي كل خرطوم ماء جديد. تركيب خراطيم إمداد الماء بدون الحشيات المطاطية قد يؤدي إلى تسرب الماء.

⚠ تنبيه

عند قيامك بتركيب الغسالة للمرة الأولى، تأكد من استخدام خراطيم جديدة. عدم القيام بذلك قد يؤدي إلى تسرب الماء أو التدفق الزائد بما قد يؤدي إلى تلف ممتلكاتك.

⚠ تنبيه

لا تقم بتوصيل خراطيم إمداد ماء متعددة سوياً لزيادة طول خرطوم الإمداد. قد تؤدي الخراطيم المتصلة بهذه الطريقة إلى حدوث تسرب وقد يتسبب التسرب في حدوث صعقة كهربائية. إذا كان الخرطوم قصيراً للغاية، فقم باستبداله بخرطوم أكثر طولاً وذو ضغط عالي.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 19 2015/7/27 17:04:15

التركيب

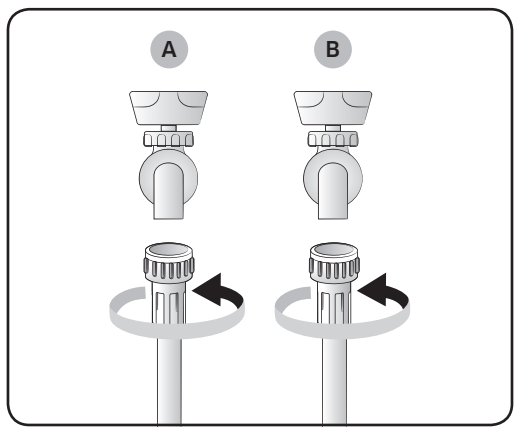

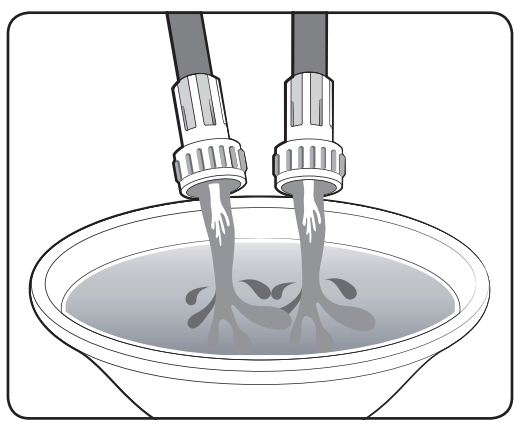

١. صل طرفي خراطيم إمداد الماء بحنفيات الماء **الساخن (B)** و**البارد(A)**.

٢. قم بإحكام ربط التجهيزات يدوياً حتى تصبح ملائمة، ثم قم بإحكام ربطها عن طريق لفها ثلثي مرتين بواسطة مفتاح ربط.

⚠ تنبيه

عندما تقوم بإحكام ربط التجهيزات، لا تقم بربطها بشكل محكم للغاية أو وضع شريط أو مانع تسرب على الحنفيات أو فتحات سحب إمداد الماء. قد يؤدي هذا إلى تلف التجهيزات.

ملاحظة

بعد توصيل خرطوم توريد الماء بالمحول، تأكد من توصيله بشكل صحيح عن طريق سحب خرطوم توريد الماء لأسفل.

٣. قم بوضع الأطراف غير المتصلة للخراطيم في قادوس وافتح الحنفيات المتصلة بخرطومي إمداد الماء لمدة ١٠ أو ١٥ ثانية لإزالة أي مواد غريبة من الخراطيم. قم بغلق الحنفيات قبل المواصلة.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 20 2015/7/27 17:04:15

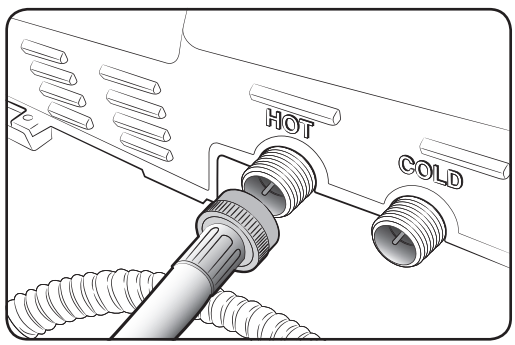

٤. قم بتوصيل أطراف خراطيم إمداد الماء بوصلات سحب إمداد الماء في الجزء الخلفي من الغسالة.

تنبيه

يجب توصيل خرطوم إمداد الماء المتصل بحنفية الماء الساخن بمأخذ إمداد الماء الساخن ويجب توصيل خرطوم الماء بحنفية الماء البارد المتصلة بمأخذ إمداد الماء البارد.

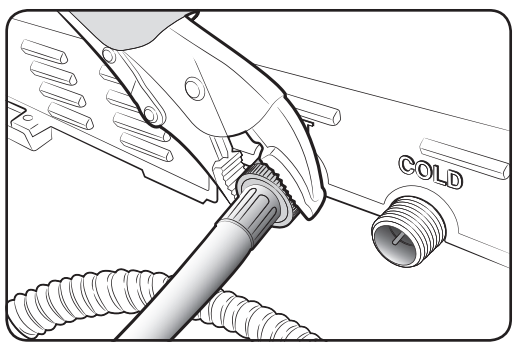

٥. قم بإحكام ربط التجهيزات يدوياً حتى تصبح ملائمة. ثم قم بإحكام ربطها عن طريق لفها ثلثي مرتين بواسطة مفتاح ربط.

ملاحظة

للتأكد من استخدام الماء المناسب، قم بتوصيل حنفية الماء البارد وحنفية الماء الساخن. إذا لم يتم التوصيل بواحدة من الحنفيتين أو كلاهما، فسوف يظهر رسالة خطأ "4C" (عدم الملء).

ملاحظة

إذا لم ترغب في استخدام خرطوم إمداد الماء الساخن، فقم بإدخال غطاء مأخذ الماء في فتحة مأخذ إمداد الماء الساخن. في هذه الحالة، يجب عليك تحديد خيار **Tap Cold (حنفية الماء البارد)** الخاصة درجة حرارة الماء. إذا قمت بتحديد خيار **Tap Cold (حنفية الماء البارد)**، فسيتم إيقاف تشغيل كل المصابيح الخاصة بخيارات درجة حرارة الماء.

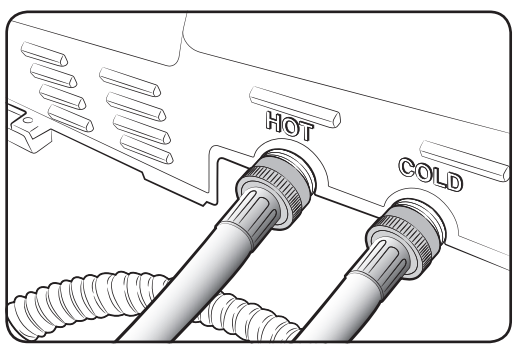

تنبيه

تأكد من عدم التواء أو ثني خراطيم إمداد الماء. إذا كانت الخراطيم ملتوية أو مثنية، فقد يحدث تسرب بالخراطيم والتسبب في حدوث صعقة كهربائية بسبب تسرب الماء.

٦. قم بفتح إمداد الماء البارد والماء الساخن وتحقق من أن كل وصلات سحب إمداد الماء والحنفيات للتحري عن وجود أي تسرب.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 21 2015/7/27 17:04:16

التركيب

الخطوة ٣ - توصيل خرطوم التصريف

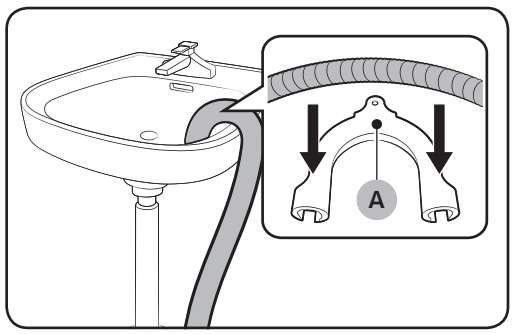

يمكنك وضع نهاية خرطوم التصريف بثلاث طرق:

فوق حافة حوض الغسيل

ثبت **حامل الخرطوم (A)** إلى جدار الحوض بواسطة الخطاف أو بالصنبور مستخدمًا قطعة سلك لمنع حَرك خرطوم التصريف.

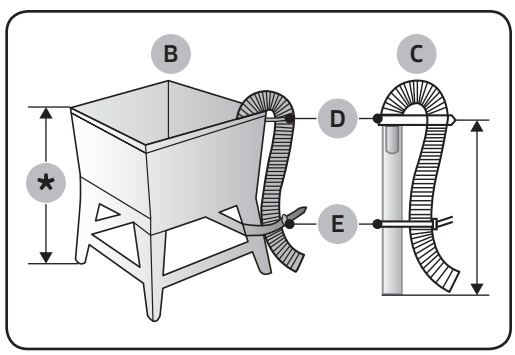

في الأنبوب القياسي أو حوض الغسيل

يتعين ألا يكون **الأنبوب القياسي (B)** و**حوض الغسيل (C)** أقصر من ٣٩ بوصة (٩٩ سم)* ولا أطول من ٩٦ بوصة (٢٤٥ سم)*.

ملاحظة

- تأكد من أن الوصلة ما بين خرطوم التصريف والأنبوب القياسي ليس بها أي عيوب أو مسدودة.
- **D**: ماسك الخرطوم.**E**: شريط الربط

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 22 2015/7/27 17:04:16

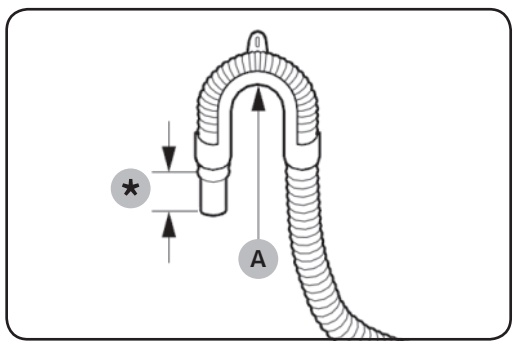

ملاحظة

ثبت **حامل الخرطوم (A)** على مسافة ٤ بوصة (١٠ سم)* من نهاية خرطوم التصريف. في حال كانت المسافة بين حامل الخرطوم ونهاية خرطوم التصريف أكبر من ٤ بوصة (١٠ سم) فإن ذلك من شأنه نشر العفن أو البكتريا داخل الغسالة.

ملاحظة

أقصى ارتفاع لتركيب خرطوم التصريف هي ٩٦ بوصة (٢٤٥ سم) مع العلم أن هذا الإرتفاع من شأنه التأثير سلبًا على قدرة التصريف. وينجم عن ذلك وجود رائحة في الغسالة نظراً للماء المتبقي في نظام التصريف.

ملاحظة

إن تثبيت خرطوم التصريف على ارتفاع أقل من ٣٩ بوصة (٩٩ سم) قد يُسبب ارتداد مياه التصريف إلي دورات الغسالة بسبب ظاهرة السيفون. وهنا تعرض الغسالة رمز "**4C**".

الخطوة ٤ - ضبط مستوى الغسالة

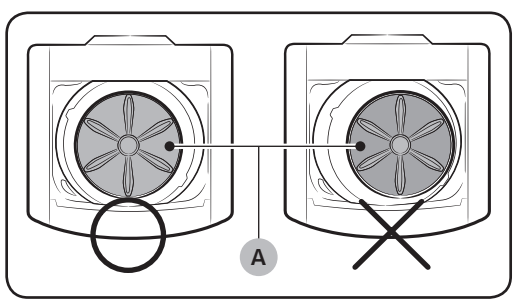

الرجاء التحقق إذا كانت الغسالة مستوية عن طريق فحص وضع الحوض:

١. قم بزلق الحلقة في موضعها.
٢. قم بفتح غطاء الغسالة. وضب الماء في الحوض حتى يصل مستوى الماء إلى أقل من مستوى المضخة النابضة.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 23 2015/7/27 17:04:17

التركيب

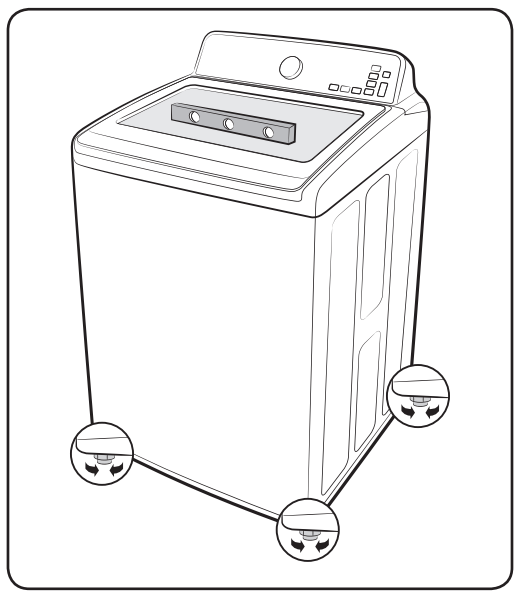

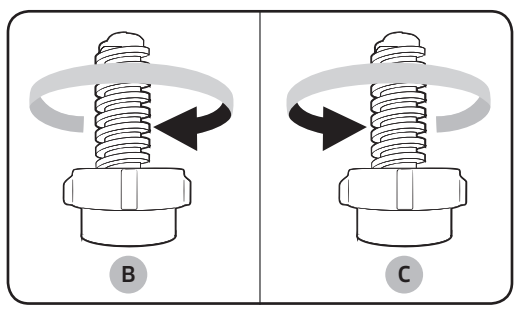

٣. إذا كانت الغسالة على سطح مستو، فإن **مستوى المضخة النابضة (A)** سيكون موضوع عند منتصف الماء كما هو موضح في الشكل.
إذا لم يكن الأمر كذلك، فقم بضبط مستوى الغسالة عن طريق لف قدم ضبط المستوى الأمامي باتجاه حركة عقارب الساعة أو عكس عقارب الساعة حسب الضرورة.

ملاحظة

أدر قدم ضبط المستوى الأمامي في **اتجاه حركة عقارب الساعة (B)** لخفض الغسالة، **وعكس اتجاه حركة عقارب الساعة (C)** لرفع الغسالة.

الخطوة ٥ - تزويد الغسالة بالطاقة

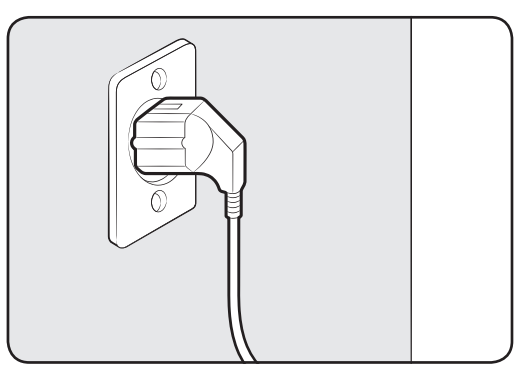

صل سلك الطاقة بمصدر تيار كهربائي ثلاثي الشوكات معتمد جيد التأريض ٢٢٠-٢٤٠ فولت ٥٠ هرتز محمي بواسطة مصهر أو قاطع دائرة مماثل.
غسالتك مؤرضة عبر سلك طاقة ثلاثي الشوكات عندما يتم توصيلها في مصدر تيار كهربائي مؤرض ثلاثي الشوكات.

اختبار تشغيل

تأكد من أنك قمت بتركيب الغسالة الخاصة بك بطريقة صحيحة من خلال تشغيل دورة **RINSE+SPIN (دوران+شطف)** بعد الانتهاء من التركيب.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 24 2015/7/27 17:04:17

الخطوة ٦ - تشغيل دورة تجريبية

قم بتشغيل الدورة التجريبية كما هو متبع للتحقق إذا كانت غسالتك مركبة بطريقة صحيحة أم لا.

١. قم بوضع ٦ باوند تقريباً من الملابس في حوض الغسالة.
٢. اضغط على زر Power **(تشغيل)** لتشغيل غسالتك.
٣. حدد دورة RINSE+SPIN **(دوران+شطف)** عن طريق إدارة **قرص تحديد الدورة**.
٤. اضغط على زر Start/Pause **(بدء/ إيقاف)** لبدء الدورة التجريبية.
٥. يجب عدم اهتزاز الغسالة أو تعريضها للتذبذب بشكل مفرط عندما يتم تزويد الماء أو عند الغسيل أو العصر باللف، ويجب أن يتم التصريف بشكل جيد كل دورة العصر.

ملاحظة

إذا حدث تسرب للماء في أثناء إمداده أو تصريفه، فإن عليك فحص وصلات الماء. الرجاء الاطلاع على قسم **"الخطوة ٢ - توصيل خرطوم توريد الماء"** في صفحة ١٩ لمعرفة التعليمات.

ملاحظة

في حالة اهتزاز الغسالة وتذبذبها بشكل مفرط، فالرجاء ضبط مستوى غسالتك مرة أخرى. الرجاء الاطلاع على قسم **"الخطوة ٤ - ضبط مستوى الغسالة"** في صفحة ٢٣ لمعرفة التعليمات.

الخطوة ٧ - وضع المعايرة

تكتشف غسالة Samsung وزن الغسيل تلقائيًا.
لاكتشاف الوزن بطريقة أفضل دقة، الرجاء تشغيل "وضع المعايرة" بعد التركيب.
لتشغيل Calibration Mode (وضع المعايرة)، الرجاء اتباع تلك الخطوات:

١. فرغ الغسالة من الغسيل أو أي محتويات أخري بداخلها.
٢. عليك بالضغط المستمر علىWater Level **(مستوي الماء)** وDelay End **(تأجيل التشغيل)** معًا لمدة ٣ ثواني عند التشغيل.
٣. اضغط على الزر Start/Pause **(بدء/ إيقاف)** لتنشيط "وضع المعايرة".
٤. تدور المضخة النابضة باتجاه حركة عقارب الساعة وعكس اتجاه عقارب الساعة لمدة ١ دقيقة تقريباً.
٥. عند الانتهاء من ضبط "وضع المعايرة"، تظهر الرسالة "End" ويتم إيقاف تشغيل الغسالة تلقائيًا. الغسالة جاهزة للاستخدام الآن.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 25 2015/7/27 17:04:17

تعليمات التشغيل

⚠ تحذير

لتقليل إمكانية نشوب حريق أو صعقة كهربائية أو إصابة للأشخاص أثناء استخدام الغسالة، قم باتباع احتياطات الأمان الأساسية بما في ذلك ما يلي:

وضع الملابس بالغسالة

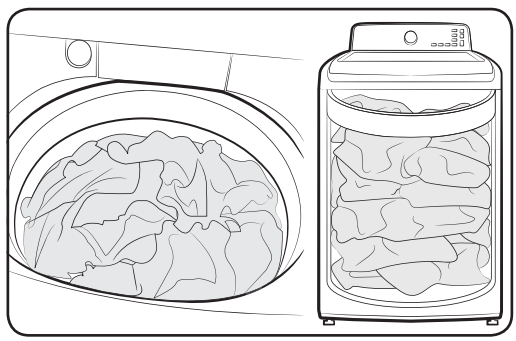

- عليك ملء حوض الغسيل بالملابس الجافة غير المثنية أو المطوية وذلك بوضعها وضعًا مُنتظمًا بغية زيادة كفاءة الغسيل والحيلولة دون زيادة البلى أو تجعد الملابس المراد غسلها.
- تأكد من بسط الغسيل بسطًا مستويًا.
- غسيل الملابس الحساسة مثل حمالات الصدر والجوارب والملابس الداخلية للسيدات في دورة Delicates (ناعم) مع الأشياء الأخرى المماثلة.
- عند غسيل كمية كبيرة من الأشياء والملابس أو بعض الأشياء الأقل التي لا تؤدي لامتلاء حوض الغسيل تماماً - على سبيل المثال السجاد، الوسائد، الألعاب المحشوة، أو سترة واحدة أو سترتين - فقم بإضافة بعض المناشف لتحسين أداء العصر بالدوران.
- لا تقم بإدخال أي أشياء كبيرة الحجم باستثناء الشراشف في هذه الدورة.

ملاحظة

أثناء دورة العصر بالدوران، قد تقوم الغسالة بإضافة كمية إضافية من الماء لإعادة توزيع الملابس وتصحيح عدم التوازن بداخل الحلة.

- عندما تكون حمولة الغسالة متسخة اتساخاً شديداً، فلا تقم بزيادة تحميل غسالتك لضمان نتائج تنظيف جيدة.

لإضافة أشياء منسية:

١. اضغط على زر Start/Pause **(بدء/ إيقاف)** لإيقاف الغسالة مؤقتاً.
٢. انتظر لحين فك قفل الباب أوتوماتيكياً، ثم افتح الباب.
٣. قم بإضافة الشيء، واغلق الباب، ثم اضغط على زر Start/Pause **(بدء/ إيقاف)**. ستواصل الدورة عملها.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 26 2015/7/27 17:04:17

بدء التشغيل

١. وضع الملابس بالغسالة.
٢. إضافة مادة منظفة سائلة (أو مسحوق) والإضافات في وحدة التوزيع (انظر قسم "**استخدام المادة المنظفة**" في صفحة ٣٩).
٣. اختر دورة الغسيل وخيارات التحميل (انظر قسم "**غسل الملابس**" في صفحة ٤٨).
٤. إغلاق الغطاء.
٥. اضغط على Start/Pause (**بدء/ إيقاف**).
٦. يضيء مصباح مؤشر Wash (**غسيل**).
٧. يظهر وقت الدورة المقدر في شاشة العرض.
قد يتفاوت الوقت ليشير إلى الوقت المتبقي في الدورة.

ملاحظة

قد يتفاوت الوقت الفعلي للدورة عن الوقت المقدر في شاشة العرض استناداً إلى ضغط الماء، ودرجة حرارة الماء والمادة المنظفة والملابس المراد غسيلها.

٨. قبل بدء الغسالة في الامتلاء، قد تقوم بإجراء سلسلة من الضوضاء على شكل طقطقة للتحقق من قفل الباب وإجراء دورة تصريف سريعة.

ملاحظة

- عند انتهاء دورة الغسيل، ينطفئ مصباح Door Lock (**قفل الباب**) وتظهر كلمة "End" (**نهاية**) على شاشة العرض.
- الضغط على زر Power (**تشغيل**) سيؤدي إلى إلغاء الدورة وإيقاف الغسالة.
- ستتم إضاءة مصابيح إشارة Wash (**غسيل**)، وRinse (**شطف**)، وSpin (**دوران**) العصر أثناء أجزاء هذه الدورة.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 27 2015/7/27 17:04:17

غسل الملابس

⚠ تحذير

سعيًا لتجنب مخاطر الحريق أو الصعق بالكهرباء أو تعرض المستخدمين للأذى أو الإصابة، يتعين قراءة تعليمات الأمان والسلامة قبل مباشرة تشغيل هذا الجهاز.

لوحة التحكم

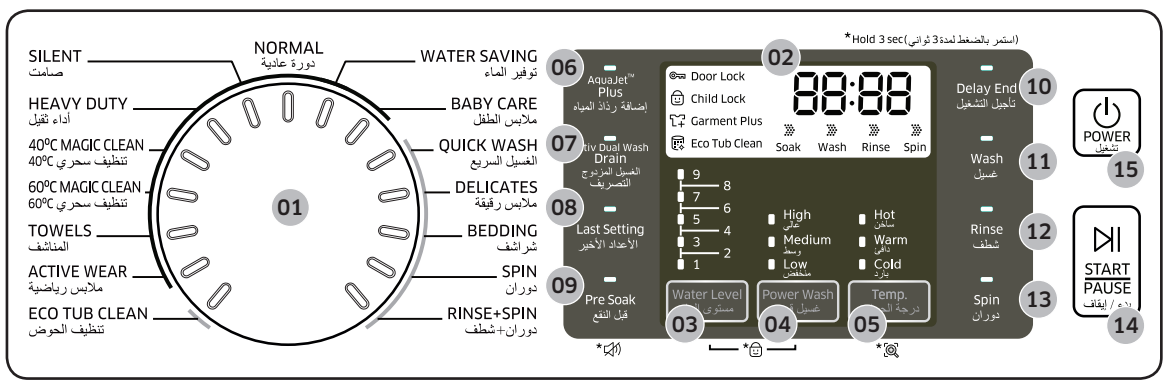

٠١ مُحدد الدورة	أدر **محدد الدورة** لاختيار دورة التجفيف المناسبة. وهنا يضيء المؤشر موضحًا اسم دورة الغسيل.
٠٢ شاشة العرض	تقديم المعلومات والعمليات التشخيصية في الوقت نفسه إطلاعك باستمرار على حالة الدورة والوقت المتبقي.
٠٣ Water Level (مستوى الماء)	يجري تعديل مستوي الماء بشكل أوتوماتيكي. ومع ذلك يمكنك انتقاء Water Level (مستوي الماء) يدوياً بالضغط علي هذا الزر. ويختلف مستوى الماء واستهلاك الماء وفق النسيج المغسول ومستوى رطوبة الملابس.
٠٤ Power Wash (غسيل قوي)	يُمكنك اختيار نمط بخار الماء. Medium (وسط)-> High (عالي)-> Low (منخفض)-> Medium (وسط) يُمكنك تغيير الإعداد وفق دورة الغسيل. لا يُمكنك تغيير الإعداد في أثناء دورة العصر (Spin).
٠٥ Temp. (درجة الحرارة)	اضغط على الزر بشكل متكرر للتبديل بين خيارات درجة حرارة الماء المختلفة. • **Hot (ساخن)** - الملابس البيضاء والمتسخة بأوساخ شديدة والملونة. • **Warm (دافئ)** - الأشياء الملونة. • **Cold (بارد)** - الملابس ذات الألوان الفاتحة والمتسخة بأوساخ بسيطة.
٠٦ AquaJet™ Plus (إضافة رذاذ المياه)	يُحسن أداء الغسيل خلال رذاذ المياه.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 28 2015/7/27 17:04:18

٠٧	Activ Dual Wash Drain (الغسيل المزدوج التصريف)	يتيح هذا الزر خيارين وهو متوفر فقط في حالة إيقاف الغسالة أو وضع الاستعداد Standby. • Water Save (توفير الماء) (الوضع الافتراضي): يتيح الخيارُ إعادة استخدام الماء المتبقي في الحوض بعد استخدام رشاش الماء. ويجري استخدام الماء في هذه الحالة للدورة الرئيسية. • Drain (تصريف): اختر تصريف الماء المتبقي بعد استخدام رشاش الماء. وبإكتمال التصريف، تتحول الغسالة أوتوماتيكيًا إلى وضع Water Save (توفير الماء). ثم عليك اختيار دورة غسيل.
٠٨	Last Setting (الأعداد الأخير)	يُفعل هذا الخيار إعدادات أخر دورة. وبهذا يجري تنفيذ دورة غسيل بناء على أخر إعدادات جرى استخدامها دون الحاجة لإعادة إدخالها يدويًا. ويجري حفظ اختياراتك تلقائيًا عند الضغط على زر Start/Pause (بدء/ إيقاف). اضغط على زر Last Setting (الأعداد الأخير) ثم اضغط على زر Start/Pause (بدء/ إيقاف) لتفعيل الدورة المحفوظة.
٠٩	Pre Soak (قبل النقع)	إزالة البقع بشكل أكبر عن طريق تخصيص وقت إضافي.
١٠	Delay End (تأجيل التشغيل)	تأخير نهاية أي دورة لمدة تصل إلى ١٩ ساعة بمقدار ساعة واحدة فاصلة. تشير الساعة المعروضة إلى الوقت الذي يجري عنده إنهاء عملية الغسيل.
١١	Wash (غسيل)	اضغط على هذا الزر لتنفيذ دورة غسيل أو إعادة ضبط وقت الغسيل.
١٢	Rinse (شطف)	اضغط على هذا الزر فقط في حال أردت تنفيذ دورة شطف أو إعادة ضبط عدد مرات الشطف.
١٣	Spin (دوران)	اضغط على هذا الزر لتنفيذ دورة دوان فقط أو لتعديل وقت الدوران. يُمكنك ضبط مدة التدوير من دقيقة واحدة (١) حتى تسع (٩) دقائق. (باستثناء دورة WATER SAVING (توفير الماء)) عند اختيار الدوران فقط، سيكون وقت الدوران مختلف عن الوقت الكلي المتبقي. وسبب ذلك أن الوقت الكلي المتبقي يشمل وقت التدوير الفعلي وكذلك وقت لصرف المياه والتوقف عن العمل.
١٤	Start/Pause (بدء/ إيقاف)	اضغط لإيقاف الدورة مؤقتاً وإعادة تشغيلها.
١٥	Power (تشغيل)	اضغط مرة واحدة لتشغيل غسالتك. اضغط مرة أخرى لإيقاف تشغيل غسالتك. في حال ترك الغسالة قيد التشغيل لفترة تزيد عن ١٠ دقائق بدون لمس أي أزرار، فسيتم إيقاف تشغيل الطاقة أوتوماتيكياً.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 29 2015/7/27 17:04:18

غسل الملابس

رؤية عامة للدورة

دورات	الوصف
NORMAL (دورة عادية)	تُناسب معظم الأقمشة بما في ذلك القطن والكتان وغير ذلك من الملابس عادية الاتساخ.
SILENT (صامت)	تقلل هذه الدورة الصوت الصادر عن الغسالة للحد الأدنى وذلك بتقليل قوة العصر بما يجعلها مناسبة للاستخدام ليلاً.
HEAVY DUTY (أداء ثقيل)	بالنسبة للملابس الملونة والثابتة والملوثة بأوساخ شديدة.
40°C MAGIC CLEAN (تنظيف سحري 40°C)	تمتاز هذه الدورة بإزالة فعالة للأوساخ بالاعتماد على درجة حرارة مخصصة.
60°C MAGIC CLEAN (تنظيف سحري 60°C)	تمتاز هذه الدورة بإزالة فعالة للأوساخ بالاعتماد على درجة حرارة مخصصة.
TOWELS (المناشف)	تُخصص هذه الدورة لمناشف الحمام وأدوات الاستحمام والممسحات.
ACTIVE WEAR (ملابس رياضية)	تُخصص هذه الدورة لغسيل ملابس التمارين مثل البدل والرياضية وسراويل التدريب وغير ذلك من ملابس الأداء الحركي. توفر هذه الدورة تنظيف فعال للأوساخ مع أداء ناعم رقيق للأقمشة ذات التركيب الخاص.
ECO TUB CLEAN (تنظيف الحوض)	يُستخدم هذا الخيار لتنظيف الحوض. ويحافظ على نظافة الحوض وملائمته الصحية.
WATER SAVING (توفير الماء)	هذه البرنامج مصمم خصيصاً بما يتيح لك غسيل الملابس بشكل فعال مع تقليل مقدار الماء.
BABY CARE (ملابس الطفل)	تُستخدم هذه الدورة مع الأغراض التي يكثر غسلها مثل ملابس الطفل والملابس الداخلية وذلك لحماية النسيج من التلف وكذلك إضافة دورات شطف إضافية لضمان النظافة.
QUICK WASH (الغسيل السريع)	لغسيل الملابس الملوثة بأوساخ بسيطة اللازم تنظيفها بسرعة.
DELICATES (ملابس رقيقة)	هذه الدورة مخصصة لغسيل الملابس الرقيقة التي يسهل تعرضها للتفسخ أو التلف وكذلك الكنزات الصوفية والسترات الصوفية المُحكمة.
BEDDING (شراشف)	للأشياء الثقيلة كالبطانيات والشراشف. عند قيامك بغسيل اللحاف، استخدم مادة منظفة سائلة.
SPIN (دوران)	تصريف الماء والعصر على سرعة عالية.
RINSE + SPIN (دوران + شطف)	تُستخدم هذه الدورة للملابس التي تحتاج إلى الشطف فقط أو لإضافة منعم الأقمشة الذي يجري إضافته في أثناء الشطف فقط.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 30 2015/7/27 17:04:18

خيارات

قفل الأطفال

قفل الأطفال يمنع الأطفال من العبث بالغسالة.

تنشيط وظيفة قفل الأطفال

اضغط مع الاستمرار على زر **Water Level (مستوي الماء)**، و **Power Wash (غسيل قوي)** في وقت واحد لمدة ٣ ثواني تقريباً.

- عند قيامك بتنشيط وظيفة قفل الأطفال، يومض مصباح **قفل الأطفال**.

استخدام وظيفة قفل الأطفال

إذا كان الغطاء مفتوحاً عندما تكون وظيفة قفل الأطفال قيد التشغيل، فسيتم عرض "**dC**" وانطلاق الإنذار.

- إذا كان مستوى الماء في الحوض أعلى من مستوى الماء الآمن، فسيتم عرض "**dC**" على شاشة العرض LED وتبدأ الغسالة الكهربائية في تصريف الماء دفعاً بعد ٣٠ ثانية. يجري تعطيل زر التشغيل في أثناء تصريف الغسالة الماء في وضع قفل الأطفال.
- إذا كان مستوى الماء في الحوض أعلى من مستوى الماء الآمن ووظيفة قفل الأطفال قيد التشغيل عندما يكون الباب مفتوحاً، فستعرض الكلمة "**CL**" على شاشة العرض LED حتى لو كانت طاقة الغسالة الكهربائية قيد إيقاف التشغيل وتصريف ماء الغسالة بقوة الدفع.
- حتى لو كانت طاقة الغسالة الكهربائية قيد إيقاف التشغيل، وإذا كان الغطاء مفتوحاً عندما يكون مستوى الماء في الحوض أعلى من مستوى الماء المضبوط، ستعرض كلمة "**CL**" على شاشة العرض LED بدون انطلاق الإنذار وبدء الغسالة في تصريف الماء. عند الانتهاء من عملية التصريف، سيتم إيقاف تشغيل الطاقة مرة أخرى.
- وحتى إذا جرى تنشيط خاصية قفل الأطفال، فإن جميع الأزرار تعمل حتى ينفتح الباب.
- بعد التصريف الإجباري، يومض الكود "**CL**" على شاشة العرض بفاصل مقداره ١ ثانية ويدخل المنتج إلى النمط "**CL**". (عندما يكون المنتج في نمط "**CL**"، يعمل الزر **Power (تشغيل)** فقط.)
- لإلغاء النمط "**CL**"، تحتاج إلى إيقاف تشغيل الطاقة ثم تعود لوضع التشغيل مرة أخرى.
- لإلغاء نمط "**dC**"، قم بإلغاء تنشيط وظيفة قفل الأطفال.

لإلغاء تنشيط وظيفة قفل الأطفال، اضغط باستمرار على **Water Level (مستوي الماء)**، و**Power Wash (غسيل قوي)** في وقت واحد لمدة ٣ ثواني على الأقل.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 31 2015/7/27 17:04:18

غسل الملابس

ملاحظة

إضافة الملابس عندما يكون قفل الأطفال قيد التشغيل

لإضافة ملابس، قم بإلغاء تنشيط وظيفة قفل الأطفال. لإلغاء تنشيط وظيفة قفل الأطفال، اضغط باستمرار على**Water Level (مستوي الماء)**، و**Power Wash (غسيل قوي)** في وقت واحد لمدة ٣ ثواني على الأقل. انظر قسم "**خيار الإيقاف**" في صفحة ٣٤ لمعرفة التفاصيل الإضافية.

إلغاء تنشيط وظيفة قفل الأطفال

اضغط مع الاستمرار على زر **Water Level (مستوي الماء)**، و **Power Wash (غسيل قوي)** في وقت واحد لمدة ٣ ثواني تقريباً.

- عند قيام بإلغاء تنشيط وظيفة قفل الأطفال، يتم إيقاف مصباح **قفل الأطفال**.
- وظيفة قفل الأطفال تقوم بمنع الأطفال أو العاجزين من التشغيل العشوائي للغسالة وتعريض أنفسهم للإصابة.

⚠ تحذير

في حالة دخول الطفل للغسالة الكهربائية، فقد يتعرض الطفل للانحشار والاختناق.

⚠ تنبيه

- بعد قيامك بتنشيط وظيفة قفل الأطفال، فإنها تستمر في العمل حتى لو كانت الطاقة قيد إيقاف التشغيل.
- استخدام القوة في فتح الغطاء قد يؤدي إلى الإصابة أو تلف المنتج.

ملاحظة

لإضافة الملابس المراد غسلها بعد قيامك بتنشيط وظيفة قفل الأطفال، يجب عليك أولاً إيقاف تشغيل أو إلغاء تنشيط وظيفة قفل الأطفال.

الصوت

يمكن تحديد وظيفة Sound Off (إيقاف تشغيل الصوت) مع كافة الدورات.

Garment Plus (الملابس+)

يمكنك إضافة أو إخراج الملابس حتى بعد الغسيل، طالما ظل مصباح Garment Plus **(الملابس+)** قيد الإضاءة. بالضغط على زر **Start/ Pause (بدء/ إيقاف)** ينفتح قفل الغطاء. إذا قمت بفتح الغطاء وترغب في مواصلة دورة الغسيل، فقم بإغلاق الغطاء، ثم اضغط على زر **Start/Pause (بدء/ إيقاف)**.

Delay End (تأجيل التشغيل)

يمكنك ضبط الغسالة الكهربائية على البدء أوتوماتيكياً في وقت لاحق عن طريق اختيار وقت متأخر.
تشير الساعة المعروضة إلى الوقت الذي يتم الانتهاء فيه من عملية الغسل.

١. قم بضبط برنامج الغسيل.
٢. اضغط على الزر **Delay End (تأجيل التشغيل)** بشكل متكرر حتى تصل إلى وقت التأجيل المطلوب.
٣. اضغط على **Start/Pause (بدء/ إيقاف)**. سيضيء مؤشر Delay End (تأجيل التشغيل) ، وتبدأ الساعة بالعد التنازلي حتى تصل إلى الوقت المحدد.
٤. لإلغاء وظيفة Delay End (تأجيل التشغيل)، اضغط على الزر Power (تشغيل) ثم قم بتشغيل الغسالة من جديد.

Pre Soak (قبل النقع)

استخدم هذه الوظيفة عندما تكون الملابس المراد غسلها متسخة بأوساخ شديدة أو بقع شديدة. تحسن هذه الوظيفة من أداء الغسيل عن طريق إضافة دورة Pre Soak (قبل النقع).

- إذا قمت باختيار هذه الوظيفة، سيجري زيادة وقت الدورة الكلي بمقدار من ١٠ أو ٢٠ دقائق.
- عندما تبدأ دورة Pre Soak (قبل النقع)، تكرر الغسالة دورة الغسيل بعد التزود بالماء، ثم تنفذ دورة نقع لمدة من ١٠ أو ٢٠دقائق.
- عند الانتهاء من دورة Pre Soak (قبل النقع)، تبدأ دورة الغسيل المكونة بدون تصريف الماء.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 32 2015/7/27 17:04:18

AquaJet™ Plus (إضافة رذاذ المياه)

فبعد إضافة الماء الإضافي، يؤدي دوران حلة الغسيل إلى إنشاء شلال من الماء يذيب المادة المنظفة بشكل أكبر للغاية. يتيح هذه للمادة المنظفة بالتغلل بشكل أكبر بالتساوي في الملابس وإزالة البقع بفعالية أكبر، حتى لو كانت حمولة الغسيل كبيرة، بما يقدم دورة غسيل أفضل. وأثناء دورة الشطف، يمر شلال الماء خلال الملابس والأقمشة بما يزيل بقايا المادة المنظفة تماماً.

دورات	AquaJet™
NORMAL (دورة عادية)، SILENT (صامت)، HEAVY DUTY (أداء ثقيل)، 40°C MAGIC CLEAN (تنظيف سحري 40°C)، 60°C MAGIC CLEAN (تنظيف سحري 60°C) TOWELS (المناشف)، ACTIVE WEAR (ملابس رياضية)، WATER SAVING (توفير الماء)، BABY CARE (ملابس الطفل)	متوفرة
BEDDING (شراشف)، ECO TUB CLEAN (تنظيف الحوض)، QUICK WASH (الغسيل السريع)، DELICATES (ملابس رقيقة)، RINSE+SPIN (دوران+شطف)، SPIN (دوران)	غير متوفرة

Mist Shower (مغسلة رذاذ)

ترش Mist Shower (مغسلة رذاذ) الماء من فوهة مستقلة عن النظام الرئيسي للإمداد بالماء. ويُشار أنها تنقع الغسيل بالماء منذ بداية دورة الشطف وتضمن غسيلاً فعالاً ومع ذلك فإنها ليست جزءًا من دورة الغسل بل إنها جزء من دورة الشطف لذا فإنها بذلك تضمن شطفًا فعالاً مميزًا.

(يُلاحظ أن خاصية Mist Shower (مغسلة رذاذ) قد لا تعمل في حالة وجود حمولة كبيرة جدًا في الغسالة.)

Smart Check (الفحص الذكي)

تتيح هذه الوظيفة لك التحقق من حالة الغسالة الكهربائية باستخدام الهاتف الذكي.

١. لتمكين وظيفة الاختيار الذكي، اضغط باستمرار على مفتاح Temp. (درجة الحرارة) لمدة ٣ ثواني بعد تشغيل الطاقة أو عند حدوث خطأ.

ملاحظة

يتم حذف تاريخ كود الخطأ بعد استخدامك لهذه الوظيفة.

٢. تتم إضاءة مؤشر Smart Check (الاختيار الذكي) على شاشة العرض.

٣. قم بتشغيل تطبيق Smart Check (الفحص الذكي) على هاتفك الذكي.

- أندرويد: فئة Galaxy S وفئة Galaxy Note. (قد تكون الأجهزة الأخرى خلاف هذه الفئات غير مناسبة).
  أنظمة التشغيل OS المدعومة: Android ٢,٢ أو أعلى
- iOS: فئات iPhone
  أنظمة التشغيل OS المرغوبة: iOS ٤,٣ أو أعلى

٤. قم بتركيز كاميرا الهاتف الذكي على لوحة العرض بالغسالة.

٥. إذا تم تركيز كاميرا الهاتف الذكي على لوحة العرض بالغسالة، فسيتم التعرف على رسائل اللوحة ورسائل الخطأ أوتوماتيكياً ونوع الخطأ وعرض الإجراءات المضادة على الهاتف الذكي.

٦. إذا فشل الهاتف الذكي في التعرف على كود الخطأ أكثر من مرتين، فالرجاء إدخال كود الخطأ المعروض على لوحة العرض بالغسالة يدوياً في تطبيق Smart Check (الفحص الذكي).

ملاحظة

تنزيل تطبيق Smart Check (الفحص الذكي)

- قم بتنزيل تطبيق Samsung Laundry (الملابس من سامسونج) في هاتفك الجوال من سوق Android أو متجر تطبيقات آبل.
  (كلمة البحث: Samsung Smart Washer/Dryer)

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 33 2015/7/27 17:04:18

غسل الملابس

ملاحظة

الاحتياطات عند استخدام Smart Check (الفحص الذكي)

- إذا كان المصباح من بصيلة المصابيح، أو بصيلة فلورسنت أو المصباح يتم عكسه على لوحة العرض بالغسالة، فقد يتعذر على الهاتف الذكي التعرف على اللوحة أو رسالة الخطأ بسهولة.
- إذا قمت بإمساك الهاتف الذكي عند زاوية كبيرة للغاية نسبياً أمام مقدمة لوحة العرض، فقد يتعذر عليه التعرف على كود الخطأ. للحصول على أفضل النتائج، قم بإمساك الهاتف الذكي بحيث يكون في مقدمة اللوحة والهاتف الذكي متوازي أو شبه متوازي.

غسل الملابس باستخدام قرص تحديد الدورة

تتيح الغسالة الجديدة غسل الملابس بسهولة، باستخدام نظام "التحكم الذكي" الأوتوماتيكي من Samsung. عند اختيار أحد برامج الغسيل، تقوم الغسالة بضبط درجة الحرارة ووقت الغسل وسرعات الغسل المناسبة.

١. اضغط على **Power (تشغيل)**.
٢. افتح الباب.
٣. قم بوضع كل الملابس مرة واحدة بشكل حر في الحلة، بدون ملئها عن آخرها.
٤. قم بإضافة مادة منظفة سائلة (أو مسحوق)، مادة منعمة، و/أو مادة تبيض (إذا كان ذلك ضرورياً) في الحجيرات المناسبة. انظر قسم **"استخدام المادة المنظفة"** في صفحة ٣٩.
٥. إغلاق الغطاء.
٦. استخدم **قرص تحديد الدورة** لتحديد الدورة المناسبة وفقاً لنوع المادة: **NORMAL (دورة عادية)**، **SILENT (صامت)**، **HEAVY DUTY (أداء ثقيل)**، **40°C MAGIC CLEAN (تنظيف سحري 40°C)**، **60°C MAGIC CLEAN (تنظيف سحري 60°C)**، **TOWELS (المناشف)**، **ACTIVE WEAR (ملابس رياضية)**، **ECO TUB CLEAN (تنظيف الحوض)**، **WATER SAVING (توفير الماء)**، **BABY CARE (ملابس الطفل)**، **QUICK WASH (الغسيل السريع)**، **DELICATES (ملابس رقيقة)**، **BEDDING (شراشف)**، **SPIN (دوران)**، **RINSE+SPIN (دوران+شطف)**. سيتم إضاءة المؤشرات المرتبطة بلوحة التحكم.
٧. في هذه المرة، يمكنك التحكم في درجة حرارة الغسيل، وعدد دورات الشطف، وسرعة الدوران، ووقت التأخير عن طريق الضغط على زر الخيار الملائم.
٨. اضغط على الزر **Start/Pause (بدء/ إيقاف)** وعندها تبدأ الغسالة في العمل. يضيء مؤشر العملية ويظهر الوقت المتبقي للدورة على الشاشة.

خيار الإيقاف

لإضافة أو إزالة قطع من الغسالة، اتبع الخطوات التالية:

١. اضغط على زر **Start/Pause (بدء/ إيقاف)** لفك قفل الغطاء.

ملاحظة

لا يمكن فتح الغطاء عندما يكون الماء ساخن للغاية.

٢. قم بإخراج الملابس أو وضعها.
٣. قم بغلق الغطاء، ثم اضغط على زر **Start/Pause (بدء/ إيقاف)** لبدء الغسيل.

ملاحظة

إذا قمت بتشغيل قفل الأطفال، فيجب عليك إلغاء تنشيطه أولاً. انظر صفحة ٣١.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 34 2015/7/27 17:04:19

عند انتهاء الدورة:

بعد انتهاء دورة الغسل بالكامل، يتم إيقاف الغسالة تلقائيًا.

١. افتح الباب.
٢. أخرج الملابس.

ATC (التحكم الأوتوماتيكي بدرجة الحرارة)

التحكم الأوتوماتيكي بدرجة الحرارة (ATC) هي خاصية تتيح للغسالة التحكم بدرجة الحرارة بواسطة حساس حراري (ترموستات).

ملاحظة

نظرًا لوجود خيارات كثيرة لدرجة الحرارة بحسب بيئات العملاء (المناطق الباردة، المناطق الحارة، تنوع درجة حرارة الماء، إعدادات ضبط درجة حرارة سخان الغسالة، إلخ)، فإن خاصية ATC في الغسالة تُحافظ على درجة حرارة ماء الغسيل في نطاق مُحدد وذلك للحصول على أفضل أداء مع كل غسلة.

ملاحظة

إذا اخترت الخيار **NORMAL (دورة عادية)**، فإن هذه الدورة تكون التنظيم ودورة UL. نظرًا لأن تقليل الطاقة هي حتمًا أولوية أساسية للغسالات الجديدة، فإن العملاء سوف يلاحظون دخول مزيدًا من الماء البارد إلى الغسالة. ولكن هذا أمرًا عاديًا لا مشكلة به.
ودرجة حرارة الماء الساخن في دورات التنظيم هذه تماثل درجة حرارة ماء استحمام البالغين ودرجة حرارة ماء حمام السباحة الدافئ.

ملاحظة

إذا كان العملاء يرغبون بغسيل الملابس وفق درجة حرارة مُحددة، يجب على العملاء اختيار دورة غسيل ذات درجة حرارة مختلفة (Hot (ساخن) / Warm (دافئ)).

الأساسيات

الغسل الأولي (رشاش الماء والحوض المضمّن)

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 35 2015/7/27 17:04:19

غسل الملابس

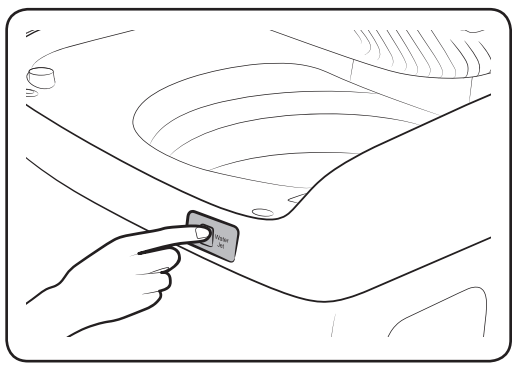

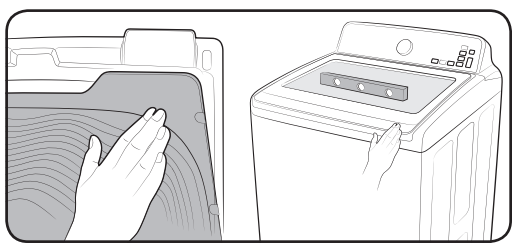

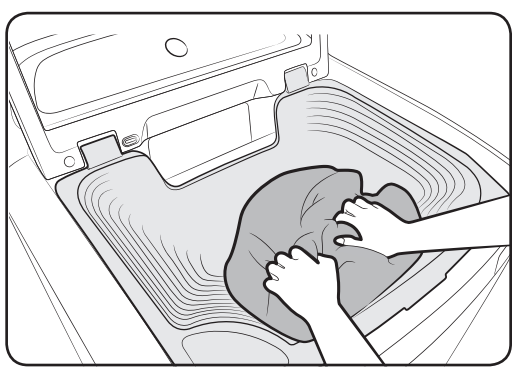

يساعدك رشاش الماء والحوض المضمّن على الغسل اليدوي قبل بدء تشغيل الغسالة. يتوفر رشاش الماء فقط عندما يكون الباب مفتوحًا مع ضبط مستوى الماء على مستوى أقل من العالي. للغسل الأولي، استخدم الحوض المضمّن المصمم لتسهيل الغسل اليدوي.

١. افتح الباب ثم أخفض الحوض المدمج. لفتح الباب فقط، اضغط على الجزء الأمامي الأيمن من الباب ثم حرره. **لغلق وتفعيل قفل الباب والحوض المدمج معًا، اضغط لأسفل على الباب حتى تسمع صوت طقطقة.**

٢. ضع الملابس يجري غسلها أوليًا فيه.

٣. اضغط على رشاش الماء لتزويد الماء في الحوض المضمّن وإجراء الغسل اليدوي.

٤. عند انتهاء هذه الخطوة، ارفع الحوض المدمج برفق لتصريف الماء في الحوض.

ملاحظة

- إذا كنت تريد إجراء الغسل اليدوي أثناء تشغيل الغسالة، فاضغط على Start/Pause (بدء/ إيقاف) لإيقاف التشغيل، ثم اتبع الخطوات ١- ٤ المذكورة أعلاه.
- إذا قمت بفتح الباب والحوض المضمّن معًا، فقم بخفض مستوى الحوض المضمّن يدويًا قبل الغسل الأولي.

[إيقاف رشاش الماء]

- يتوقف رشاش الماء عن العمل أوتوماتيكيًا عندما تستشعر الغسالة الوصول إلى أقصى مستوى للماء.
- يتوقف رشاش الماء أوتوماتيكيًا عن العمل بعد ٥ دقائق. لإضافة المزيد من الماء، اضغط على Water Jet لإعادة التزود بالماء.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 36 2015/7/27 17:04:19

[تصريف رشاش الماء]

- اختر دورة الغسيل ثم اضغط Start/Pause (بدء/ إيقاف). ثم تعمل الغسالة على تصريف الماء ليجري استخدامه في Prewash (غسيل أولى).

ملاحظة

- يدفع Water Jet (رشاش الماء) بالماء خلال فوهة Mist Shower (مغسلة رذاذ) لمدة ثانية واحدة ثم خلال فوهة رشاش الماء بعد ذلك ومتى جرى تنشيطه بعد تشغيل الغسالة.

تنبيه

- لا تسيء استخدام رشاش الماء. يؤدي الاستهلاك المفرط ل رشاش الماء إلى زيادة استهلاك الماء.
- احرص على سريان هادئ رقيق للماء في الحوض. في حالة عدم الالتزام بذلك، قد يفيض الحوض بالماء.
- تحل بالحذر والانتباه عند فك الغسالة من الحوض. عليك الحذر كيلا تصطدم رأسك بالحوض المضمّن.
- لا تسد فتحة رشاش الماء بيديك. قد يتسرب الماء من الحوض مسببًا تلف النظام.
- لا تضع في الحوض المضمّن في الغسيل الأولى إلا ملابس فقط. لذا لا يمكن وضع أغراضًا مثل الأحذية أو الطعام أو الحيوانات في الغسيل الأولى.
- لا تفتح الحوض المضمن بسرعة. فالماء المتبق في الحوض قد يندفع على الباب أو لوحة التحكم.
- نظرًا للفرق في ضغط الهواء، قد يندفع الماء من فتحة رشاش الماء (Water Jet) عند تنشيطه لأول مرة.
- يتعين **غلق هذا الباب غلقًا محكمًا** لمباشرة الغسيل.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 37 2015/7/27 17:04:19

غسل الملابس

استخدام المادة المنظفة

- يوصى باستخدام مادة منظفة ذات جودة عالية من الشركات الرائدة.
- من الهام كذلك القيام:

المعالجة المسبقة للبقع قبل الغسيل.

فرز الملابس بحسب اللون.

فرز الملابس بحسب مقدار الأوساخ.

تجنب التحميل الزائد.

ملاحظة

- عند استخدام المادة المنظفة على شكل مسحوق، من الموصى به أن تتم إذابتها في الماء الدافئ لضمان الحصول على أفضل نتائج التنظيف.
- يمكن إضافة مزيج من المادة المنظفة/ الماء إلى الحوض أو إلى درج توزيع المادة المنظفة.
- خفض كمية المادة المنظفة المستخدمة قد يؤدي إلى تقليل فعالية قوة التنظيف.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 38 2015/7/27 17:04:19

الميزات

وحدة التوزيع الأوتوماتيكية

يوجد بالغسالة الخاصة بك حجيرات مستقلة لتوزيع المادة المنظفة ومادة التبييض الآمنة على الألوان والمادة المنعمة للملابس. قم بإضافة جميع إضافات الغسالة إلى حجيراتها الخاصة قبل بدء تشغيل غسالتك.
يجب أن تكون وحدة التوزيع الأوتوماتيكية دوماً في موضعها قبل بدء تشغيل غسالتك.
لا تقم بفتح وحدة التوزيع الأوتوماتيكية أثناء تشغيل غسالتك.

ملاحظة

- لا تقم مطلقاً بتجاوز توصيات الجهة الصانعة عند إضافة المادة المنظفة.
- تستوعب هذه الحجيرة مادة منظفة سائلة لدورة الغسيل الرئيسية. وتتم إضافتها إلى الملابس المراد غسلها في بداية الدورة.
- عند استخدام المادة المنظفة على شكل مسحوق، قم بإزالة حجيرة المادة المنظفة السائلة من ساحب المادة المنظفة. لن تقوم الغسالة بتوزيع المادة المنظف على شكل مسحوق من حجيرة المادة المنظفة السائلة.

لإضافة المادة المنظفة إلى وحدة التوزيع الأوتوماتيكية:

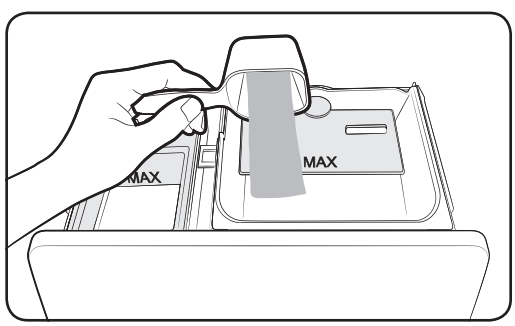

١. قم بفتح درج التوزيع.
٢. قم بوضع المقدار الموصى به من المادة المنظفة السائلة (أو المسحوق) في حجيرة المادة المنظفة قبل بدء تشغيل غسالتك.
٣. قم بغلق الدرج ببطء وبسلاسة لتفادي أي انسكاب أو رذاذ أو توزيع سابق لأوانه من المحتويات.

ملاحظة

من الطبيعي أن تظل كمية صغيرة من الماء في حجيرة التوزيع في نهاية الدورة.

ملاحظة

لا تضع مادة تبيض تحتوي على الكلور في درج التوزيع.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 39 2015/7/27 17:04:20

غسل الملابس

تحميل حجيرة المادة المنظفة السائلة (أو المسحوق)

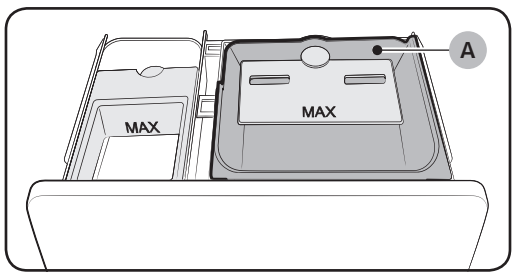

١. قم بصب المقدار الموصى به من المادة المنظفة للغسيل مباشرة في حجيرة المادة المنظفة قبل بدء تشغيل غسالتك.
٢. إذا كنت تستخدم مادة تبييض آمنة على الألوان، فقم بإضافتها مع المادة المنظفة في حجيرة المادة المنظفة.

ملاحظة

عند إضافة مادة تبيض آمنة على الألوان مع المادة المنظفة، فمن الأفضل إذا كانت منتجات الغسيل من نفس التشكيلة- سائلة.

ملاحظة

في حالة استخدام مسحوقًا منظفًا، أزل **حجيرة المواد المنظفة السائلة (A)** من درج المواد المنظفة. لن تقوم الغسالة بتوزيع المادة المنظف على شكل مسحوق من حجيرة المادة المنظفة السائلة.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 40 2015/7/27 17:04:20

تحميل حجيرة المادة المنعمة للأقمشة

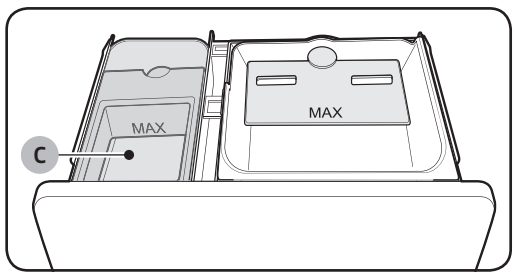

١. صب الكمية الموصى بها من المادة المنعمة للأقمشة السائلة في **حجيرة المادة المنعمة (C)**.
بالنسبة للملابس الموضوعة بالغسالة الأصغر حجماً، استخدم مقدار أقل.
٢. قم بتخفيف المادة المنعمة للأقمشة بالماء حتى تصل إلى العلامة MAX FILL (أقصى حد للملء) في الحجيرة.
٣. تحرر وحدة التوزيع المادة المنعمة للأقمشة السائلة أوتوماتيكياً في الوقت المناسب أثناء دورة الشطف.

ملاحظة

- استخدم حجيرة المادة المنعمة فقط لوضع المواد المنعمة للأقمشة السائلة فقط.
- لا تستخدم مادة Downy Ball* في حجيرة المادة المنظفة للأقمشة مع هذه الغسالة. لن يؤدي ذلك إضافة المادة المنعمة للأقمشة في الوقت المناسب.
استخدم حجيرة المادة المنظفة.
(* أسماء الأصناف هي علامات تجارية للجهات الصانعة ذات الصلة.)
- لا تستخدم المادة المنعمة للأقمشة السائلة التي تكون دبقة للغاية حيث قد لا تختلط مع الماء بشكل كافي.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 41 2015/7/27 17:04:20

صيانة الغسالة

تنظيف الأسطح الخارجية

١. قم بإيقاف حنفيات المياه بعد الانتهاء من الغسيل اليومي. سيؤدي هذا إلى إيقاف إمداد الماء إلى غسالتك ومنع إمكانية التلف المحتمل الناجم عن تسرب الماء. قم بترك الغطاء مفتوحاً بما يتيح تجفيف الجزء الداخلي من غسالتك.

٢. استخدم قطعة قماش ناعمة لمسح كل المادة المنظفة، أو مادة التبيض أو غيرها من القطرات المنسكبة عند وقوعها.

٣. قم بالتنظيف حسبما هو موصى به:
لوحة التحكم - نظف باستخدام قطعة قماش ناعمة رطبة.
لا تستخدم مساحيق حاكة أو بطانات التنيظف. لا تقم برش المنظفات مباشرة على اللوحة.

تنظيف الجزء الداخلي

قم بتنظيف الجزء الداخلي من غسالتك بشكل دوري لإزالة أي أوساخ أو أتربة أو روائح كريهة أو طين، أو عفن أو بقايا بكتيرية قد تظل بداخل غسالتك نتيجة لغسيل الملابس.

عدم الالتزام باتباع هذه التعليمات قد يؤدي إلى حدوث حالات غير سارة بما في ذلك الروائح الكريهة، و/ أو البقع الدائمة في غسالتك أو ملابسك.
يجوز إزالة رواسب الماء العسر إذا استدعت الضرورة القيام بذلك.
استخدم المنظفات التي يوجد عليها عنوان "آمن للغسالات".

تخزين الغسالة

قد تتلف الغسالة إذا لم تتم إزالة الماء من الخراطيم والمكونات الداخلية قبل التخزين.
قم بتحضير غسالتك من أجل تخزينها على النحو التالي:

١. حدد دورة Quick Wash (الغسيل السريع) وقم بإضافة مادة التبييض في وحدة التوزيع الأوتوماتيكية. قم بتشغيل غسالتك من خلال دورة لا توجد بها حمولة ملابس.

٢. قم بإيقاف حنفيات المياه وفصل الخراطيم المدخلة.

٣. قم بفصل غسالتك من مصدر التيار الكهربائي وترك غطاء غسالتك مفتوحاص بما يتيح تدوير الهواء بداخل الحلة.
إذا تم تخزين غسالتك في درجة حرارة أقل من درجة حرارة التجمد، فاترك وقت يمر لتطاير أي ماء متبقي في غسالتك قبل الاستخدام.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 42 2015/7/27 17:04:20

الحفاظ على الغطاء العلوي والإطار الأمامي

لا تقم بوضع أي أشياء ثقيلة أو حادة أو صندوق المادة المنظفة على الغسالة. فقد تؤدي إلى حدوث خدوش أو تلف الغطاء العلوي من الوحدة.

ملاحظة

ولكون الغسالة الكهربائية مزودة بطبقة طلاء مصقولة بدرجة عالية، فقد يصاب السطح بخدوش أو تلف.
تجنب الخدوش أو التلف بالسطح عند استخدام الغسالة الكهربائية.

تنظيف الحوض المدمج ومصفاة المخلفات

حافظ على الغسالة نظيفة حتى لا ينخفض مستوى الأداء والحفاظ على عمرها الافتراضي.

حوض مضمن

١. افتح الباب، واستخدم قطعة قماش أو إسفنجة لتنظيف الحوض المضمّن.
٢. اضغط على رشاش الماء لتزويد اللوحة بالماء. استخدم الماء في شطف اللوحة.

مصفاة المخلفات

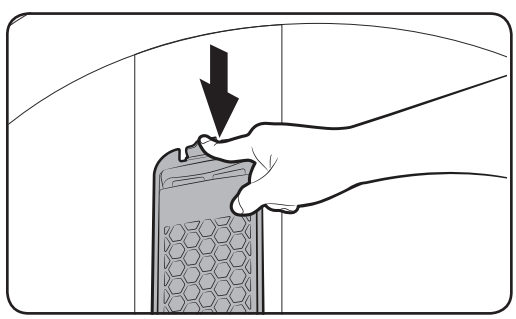

١. اضغط لأسفل على المنطقة العليا بحاوية المصفاة لإزالتها.
٢. قم بإزالة الغطاء وتنظيف المصفاة بالماء الجاري والفرشاة.

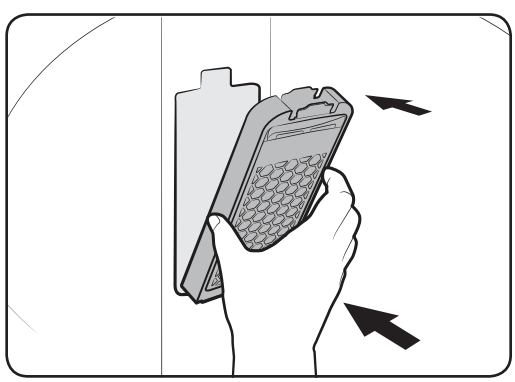

٣. عند الانتهاء من التنظيف، أغلق الغطاء وأعد إدخال حاوية المصفاة في موضعها الأصلي. ستسمع صوت طقطقة عند إدخال حاوية المصفاة بشكل صحيح.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 43 2015/7/27 17:04:20

صيانة الغسالة

تنظيف وحدات التوزيع

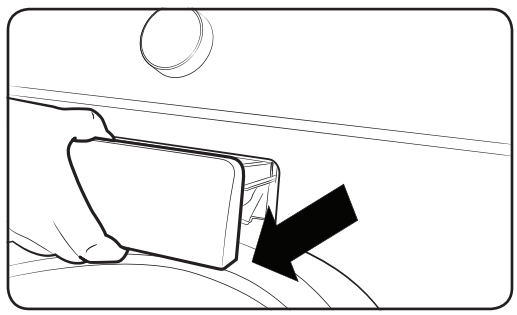

قد تحتاج وحدة التوزيع الأوتوماتيكية إلى التنظيف بشكل دوري بسبب تراكم المواد الإضافية الخاصة بالغسيل.

١. قم بسحب درج التوزيع بشكل مباشر للخلف حتى يتوقف عن الحركة.

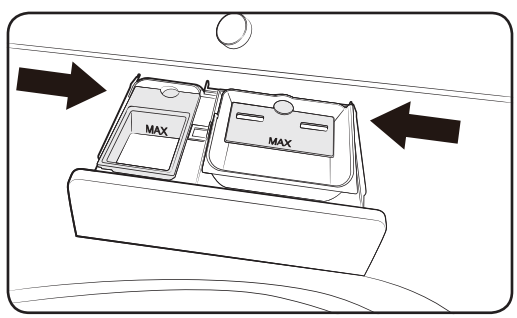

٢. اضغط على طرفي كل جانب للعلبة في وقت واحد. عندما تشعر بأن يتحركان، اسحب درج الموزع للخارج.

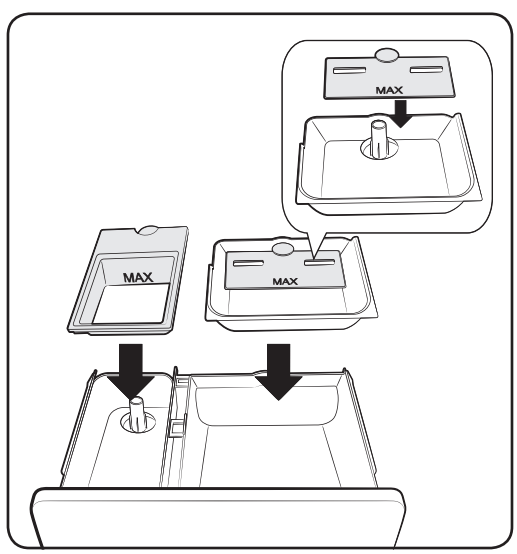

٣. قم بإخراج المدرجات من الحجيرات البالغ عددها ٣. قم بشطف المدرجات والدرج بالماء الدافي لإزالة أي بقايا وآثار من منتجات الغسيل المتراكمة.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 44 2015/7/27 17:04:21

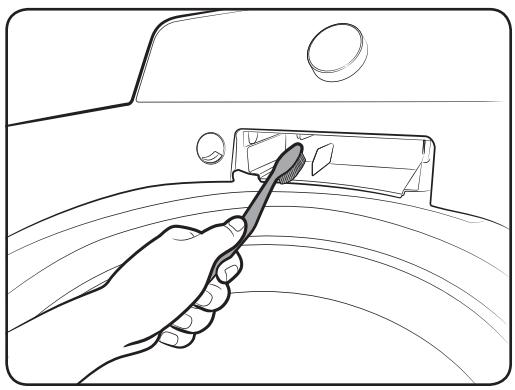

٤. لتنظيف فتحة الدرج، استخدم فرشاة صغيرة غير معدنية لتنظيف التجويف. قم بإزالة كل البقايا من الأجزاء العلوية والسفلية من التجويف.

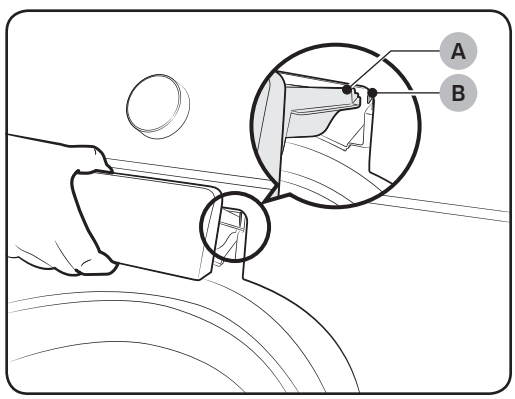

٥. أعد الأدراج إلى الحجيرات المناسبة واستبدل الدرج بوضع مجري **درج التوزيع** (B) أعلى **مجرى الحجيرة** (A) (أمل درج الموزع لأسفل وأدخله).
ثم أدفع الدرج للداخل بإحكام وببطء.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 45 2015/7/27 17:04:21

صيانة الغسالة

Eco Tub Clean (تنظيف الحوض)

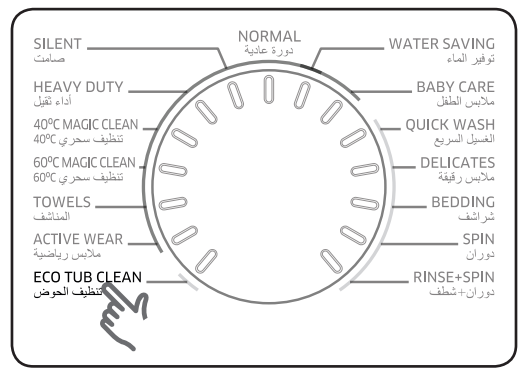

ECO TUB CLEAN (تنظيف الحوض) هي دورة تنظيف ذاتية تعمل على إزالة العفن والأتربة التي قد تتواجد بداخل الغسالة.

١. اضغط على **Power (تشغيل)**.

٢. حدد برنامج **ECO TUB CLEAN (تنظيف الحوض)**.

ما أن يجري اختيار ECO TUB CLEAN (تنظيف الحوض)، فإن الوظيفة الوحيدة التي يمكن ضبطها هي Delay End (تأجيل التشغيل).

٣. اضغط على **Start/Pause (بدء/ إيقاف)**.

تبدأ عملية ECO TUB CLEAN (تنظيف الحوض).

⚠ تنبيه

- **باستخدام خيار ECO TUB CLEAN (تنظيف الحوض)، يمكنك القيام بتنظيف الحوض باستخدام مادة منظفة.**
- **لا تستخدم مطلقاً خيار ECO TUB CLEAN (تنظيف الحوض) عند وجود الملابس المراد غسلها في الغسالة. فقد يؤدي هذا إلى حدوث تلف بالملابس أو مشكلة في الغسالة.**

وظيفة المؤشر الأوتوماتيكي لخيار ECO TUB CLEAN (تنظيف الحوض)

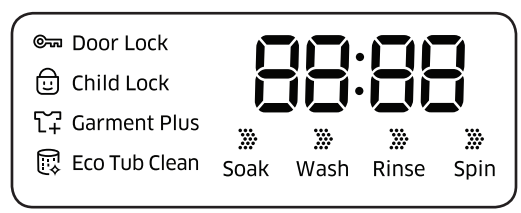

- **في حالة إضاءة مؤشر ECO TUB CLEAN (تنظيف الحوض) بعد الغسيل، فهذا يدل على أنه يلزم تنظيف الحوض (الحلة). في هذه الحالة، قم بإخراج الملابس من الغسالة، وتشغيل الطاقة، وتنظيف الحوض عن طريق تشغيل خيار تنظيف الحوض.**
- **إذا لم تقم بتشغيل خيار ECO TUB CLEAN (تنظيف الحوض)، فسيتم إيقاف مؤشر ECO TUB CLEAN (تنظيف الحوض). ومع ذلك، فقد تتم إضاءة مؤشر ECO TUB CLEAN (تنظيف الحوض) مرة أخرى بعد دورتي غسيل. عدم تشغيل خيار ECO TUB CLEAN (تنظيف الحوض) في هذه المرحلة لن يؤدي إلى حدوث مشكلة في الغسالة.**
- **على الرغم من أن مؤشر ECO TUB CLEAN (تنظيف الحوض) يظهر مرة واحدة في الشهر أو ما شابه ذلك، فقد يختلف عدد مرات الظهور بحسب عدد الأوقات التي يتم خلالها استخدام الغسالة.**

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 46 2015/7/27 17:04:21

استكشاف الأخطاء وإصلاحها

نقاط التحقق والفحص

إذا واجهت مشكلة بالغسالة، تحقق من الجدول التالي وجرب ما به من اقتراحات.

المشكلة	الإجراء المتبع
عدم التشغيل.	• تأكد وتحقق من توصيل القدرة الكهربية المناسبة. • تأكد من توصيل قابس الغسالة بمصدر التيار الكهربائي. • افحص المصهر أو إعادة ضبط قاطع الدائرة.
الغسالة لا تعمل.	• تأكد من إغلاق الباب بإحكام. • تأكد أن حنفيات مصدر المياه مفتوحة. • تأكد من الضغط على زر تشغيل/توقف لبدء عمل الغسالة. • تأكد من أن قفل الأطفال غير نشط. • قبل بدء الغسالة في الامتلاء، قد تقوم بإجراء سلسلة من الضوضاء على شكل طقطقة للتحقق من قفل الباب وإجراء دورة تصريف سريعة. • هل باب الغسالة كان مفتوح في أثناء دورة العصر؟ أغلق الباب واضغط أو انقر على زر /Start Pause (بدء/ إيقاف) للاستكمال. • هنا تنتقل الغسالة إلى وضع الاستعداد أو تكون في دورة نقع. يُرجى الانتظار. • افحص المصهر أو إعادة ضبط قاطع الدائرة
لا يجري تغذية الغسالة بالماء.	• تأكد من الضغط أو النقر على زر Start/Pause (بدء/ إيقاف) بعد اختيار التغذية بالماء. • تأكد أن حنفيات مصدر المياه مفتوحة. • هل مصفاة الشوائب في موصل خرطوم التغذية بالماء مسدودًا؟ نظف فلتر الشوائب مستخدمًا فرشاة أسنان. • هل توقف الإمداد بالماء؟ إذا توقف الإمداد بالماء، أغلق الصنبور وأوقف التشغيل. • فك ثنيات خراطيم توريد الماء. • أفتح الباب ثم أغلق الباب واضغط على الزر Start/Pause (بدء/ إيقاف). • يستغرق بدء التشغيل وقتًا أطول إذا كان ضغط الماء منخفضًا. • إذا كان مستوى الماء ليس مرتفعًا بالقدر الضروري أو دون المستوى الموقع، استخدم مُحدد المستوى لتعديل مستوى الماء.
يتبقى قدرٌ من المنظف في موزع المنظفات الأوتوماتيكي بعد اكتمال دورة الغسيل.	• تأكد من تشغيل الغسالة بضغط ماء كاف. • تأكد من وضع درج المنظف وضعًا سليمًا. • أخرج درج المنظفات ونظفه ثم حاول مرة ثانية.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 47 2015/7/27 17:04:21

استكشاف الأخطاء وإصلاحها

المشكلة	الإجراء المتبع
اهتزازات عنيفة في الغسالة أو ضوضاء عالية.	• تأكد من تركيب الغسالة على سطح مستو. إذا لم تكن الأرضية مستوية، استعن بأرجل الاستواء لضبط مستوى الغسالة. • تأكد من عدم ملامسة الغسالة لأي شيء آخر. • تأكد من توزيع وزن الملابس الموجودة في الغسالة. • تأكد من نشر الغسيل نشرًا منتظمًا في الغسالة. انشر الغسيل داخل الغسالة نشرًا منتظمًا ثم حاول مرة أخرى. • تأكد أن محيط الغسالة يخلو من الأغراض. • وعادة ما يصاحب التشغيل العادي طنين. • كذلك تُسبب الأغراض مثل العملات المعدنية أصواتًا. أزل هذه الأغراض من الغسالة بعد إتمام الغسيل.
يتوقف.	• ضع كابل الكهرباء في منفذ كهربي عامل. • افحص المصهر أو إعادة ضبط قاطع الدائرة. • أغلق الباب واضغط على زر Start/Pause (بدء/ إيقاف) لبدء عمل الغسالة. لدواعي تتعلق بالسلامة، لا تقوم غسالتك بالدوران ما لم يجري غلق الغطاء. • قبل بدء الغسالة في الامتلاء، قد تقوم بإجراء سلسلة من الضوضاء على شكل طقطقة للتحقق من قفل الباب وإجراء دورة تصريف سريعة. • قد يوجد إيقاف مؤقت أو فترة نقع في الدورة. انتظر فترةبسيطة وربما تواصل الغسالة العمل بعد قليل. • تأكد أن مصافى مدخل الخرطوم عند الحنفيات غير مسدودة. نظف المصافي تنظيفًا دوريًا. • تحدث هذه المشكلة مؤقتًا بسبب انخفاض الفولطية وتُحل المشكلة من تلقاء نفسها عند بلوغ مستويات الكهرباء المناسبة.
الملء بماء ذو درجة حرارة خاطئة.	• افتح صنبوري الماء فتحًا كاملاً. • تأكد من تحديد درجة الحرارة صحيح. • تأكد من أن الخراطيم متصلة بالحنفيات الملائمة. قم بوضع خطوط الماء. • قم بفصل الخراطيم وتنظيف الحواجز. قد تكون حواجز فلتر الخرطوم بها انسداد. • عندما يتم ملء غسالتك بالماء، فقد يحدث تغيير لدرجة حرارة الماء أثناء قيام ميزة التحكم بدرجة الحرارة أوتوماتيكياً بالتحقق من درجة حرارة الماء القادم. وهذا أمر طبيعي. • قد تلاحظ في أثناء ملء غسالتك بالماء أن الماء الساخن فقط و/ أو الماء البارد فقط ينطلق عبر وحدة التوزيع عند اختيار درجات حرارة الغسيل على الماء الساخن أو البارد. هذه هي الوظيفة الطبيعية لخاصية التحكم الأوتوماتيكي بدرجة الحرارة بينما تحدد غسالتك درجة حرارة الماء.
غطاء (الباب) مقفل أو لن يتم فتحه.	• بينما الغسالة تعمل، اضغط أو انقر على زر Start/Pause (بدء/ إيقاف) لإيقاف عمل الغسالة. • قد يستغرق الأمر ثوان قليلة حتي يتحرر قفل الباب.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 48 2015/7/27 17:04:21

المشكلة	الإجراء المتبع
عدم التصريف. و/ أو الدوران.	• افحص المصهر أو إعادة ضبط قاطع الدائرة. • تأكد أن الفولطية الكهربية طبيعية وسليمة. • تأكد من توصيل قابس الغسالة بمصدر التيار الكهربائي. • تأكد أن خرطوم التصريف موجهًا لأسفل. (يسري ذلك في موديلات التصريف العادي فقط) • تأكد أن خرطوم التصريف ليس مجمدًا أو مسدودًا. • تأكد أن خرطوم التصريف ليس مثنيًا أو ملتفًا. • فك الثنيات الموجودة في خرطوم التصريف. إذا لم توجد أي إعاقة للتصريف، فاتصل بالخدمة. • أغلق الباب واضغط على الزر Start/Pause (بدء/ إيقاف). لدواعي تتعلق بالسلامة، لا تقوم غسالتك بالدوران ما لم يجري غلق الغطاء.
الغسيل يظل رطبًا مبللاً في نهاية دورة الغسيل.	• استخدم سرعة التجفيف العالية أو الإضافية. (بالموديلات المزود بها فقط) • استخدم مادة منظفة عالية الفعالية لمنع زيادة تكون عُسالَة الصابون أو رَغْوته. • كمية الغسيل (كمية الملابس) صغيرة جداً. قد كمية الغسيل الصغيرة(غرض واحد أو غرضين) تؤدي إلى عدم التوازن وعدم التجفيف جَفيفًا كاملاً.
تسرب الماء.	• تأكد من أن كل وصلات الخرطوم محكمة الربط. • تأكد أن الحلقة المطاطية لخرطوم الإمداد في موضعها السليم. أحكم ربطها مرة ثانية إذا اقتضت الحاجة. • تأكد من إدخال طرف خرطوم التصريف بطريقة صحيحة وتثبيته في نظام التصريف. • تجنب التحميل الزائد. • استخدم مادة منظفة عالية الفعالية لمنع زيادة تكون عُسالَة الصابون أو رَغْوته. • تأكد أن خرطوم الإمداد بالماء ليس متشابكًا. • إذا كان ضغط الإمداد بالماء قويًا، قد يُحدث تسربًا. أغلق صنبور المياه للحد من قوة المياه. • تأكد أن الماء لا يتسرب من صنبور المياه. وفي حالة وجدت تسرب ماء، أصلح الصنبور.
زيادة الُغسالة وباقي المنظفات.	• استخدم مادة منظفة عالية الفعالية لمنع زيادة تكون عُسالَة الصابون أو رَغْوته. • خفض كمية المادة المنظفة للماء اليسر أو كميات الغسيل الصغيرة أو الغسيل خفيف الاتساخ بأوساخ صغيرة أو بسيطة. • لا يوصى باستخدام مادة منظفة غير HE.
قد تكون سلة التجفيف أو خرطوم الإمداد/ التصريف مجمدًا.	• يجري استخدام الماء الدافىء لفصل خرطوم إمداد الماء وخرطوم التصريف. تنقع في ماء دافئ. • املأ سلة التجفيف بالماء الدافىء ثم انتظر نحو ١٠ دقائق. • ضع منشفة ساخنة على موصل خرطوم التصريف. • أعد توصيل خرطوم الإمداد بالماء وخرطوم التصريف وتحقق من سلامة توصيل الماء.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 49 2015/7/27 17:04:21

استكشاف الأخطاء وإصلاحها

المشكلة	الإجراء المتبع
ينصرف الماء فورًا.	• تأكد أن خرطوم التصريف ليس مسدودًا ومعلق على حامل خرطوم التصريف. املأ سلة التجفيف حتى نصفها بالماء وحاول التدوير ثانية. • ارفع حافة خرطوم التصريف لمنع تصريف الماء. املأ سلة التجفيف حتى نصفها بالماء، ثم شغل التجفيف بعد تحرير خرطوم التصريف. • تأكد من تركيب خرطوم تصريف الماء بطريقة صحيحة. راجع قسم التركيب في دليل المستخدم وعدل وضع خرطوم التصريف وفق التعليمات المذكورة.
بقع على الأقمشة.	• نظف مصفاة السحرية.
ثمة روائح تصدر عن الغسالة.	• تجمع عُسالَةُ الصابون الزائدة في التجويفات وهو ما يُسبب روائح كريهة. • التشغيل الدوري الغسالة على دورات الغسيل المنظفة لتعقيمها. • نظف الأجزاء الداخلية للغسالة بعد إتمام دورة الغسيل.

في حالة استمرار المشكلة، اتصل بمركز خدمة عملاء Samsung المحلي.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 50 2015/7/27 17:04:21

أكواد المعلومات

قد تعرض الغسالة أكواد المعلومات بما يساعدك على فهم ما يحدث لغسالتك بشكل أفضل.

رقم	الكود	الإجراء المتبع
١	1C	مستشعر مستوى الماء لا يعمل بطريقة صحيحة. • تحقق من ضفيرة أسلاك مستشعر مستوى الماء. • إذا ظل كود المعلومات ظاهرًا على اللوحة، اتصل بمركز خدمة العملاء. **ملاحظة** عندما تعرض الغسالة الكود "**1C**"، فإن الغسالة تصرف الماء لمدة ٣ دقائق. ويكون زر **Power (تشغيل)** غير مفعل طوال هذه المدة.
٢	3C	تحقق من سلامة عمل الموتور. • حاول إعادة بدء دورة الغسيل. • إذا كانت المشكلة باقية دون حل، فاتصل بمركز الخدمة.
٣	4C	لا يجري تغذية الغسالة بالماء. • تأكد أن حنفيات مصدر المياه مفتوحة. • تأكد أن خراطيم الماء غير مسدودة. • تأكد أن صنابير المياه غير مجمدة. • تأكد من تشغيل الغسالة بضغط ماء كاف. • تأكد من سلامة توصيل صنبور المياه الباردة والمياه الساخنة. • نظف المصفاة الشبكية فربما تعرضت للانسداد. **ملاحظة** عندما تعرض الغسالة الكود "**4C**"، فإن الغسالة تصرف الماء لمدة ٣ دقائق. ويكون زر **Power (تشغيل)** غير مفعل طوال هذه المدة.
٤	4C2	• تأكد من سلامة توصيل خرطوم التغذية بالماء البارد بصنبور الماء البارد. إذا جرى توصيل خرطوم التغذية بالماء البارد بصنبور الماء الساخن فإن الغسيل قد يتعرض للتفسخ في بعض الدورات.
٥	5C	لا يجري تصريف الماء. • تأكد أن خرطوم التغذية بالماء ليس مجمدًا أو مسدودًا. • تأكد من سلامة موضع خرطوم التصريف بناء على نوع التوصيل. • نظف مصفاة المخلفات فربما تعرضت للانسداد. • تأكد من استقامة خرطوم الصرف على امتداد نظام الصرف. • إذا ظل كود المعلومات ظاهرًا على اللوحة، اتصل بمركز خدمة العملاء.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 51 2015/7/27 17:04:22

استكشاف الأخطاء وإصلاحها

رقم	الكود	الإجراء المتبع
٦	9C1	ثمة حاجة لفحص التحكم الالكتروني (خطأ زيادة الفولطية). • تحقق من PCB وضفيرة الأسلاك. • تحقق من سلامة التوصيل بمصدر الطاقة الكهربية. • إذا ظل كود المعلومات ظاهرًا على اللوحة، اتصل بمركز خدمة العملاء.
٧	9C2	اكتشاف انخفاض في الفولطية • تحقق من تركيب كابل الطاقة. • إذا ظل كود المعلومات ظاهرًا على اللوحة، اتصل بمركز خدمة العملاء.
٨	AC6	خطأ في اتصالات العاكس • تحقق من عاكس PCB وضفيرة الأسلاك. • إذا ظل كود المعلومات ظاهرًا على اللوحة، اتصل بمركز خدمة العملاء.
٩	dC	تشغيل المجفف بينما الباب مفتوح. • تأكد من إغلاق الباب بإحكام. • تأكد أن الملابس غير عالقة بالباب.
١٠	HC	التحقق من ارتفاع درجة الحرارة • إذا ظل كود المعلومات ظاهرًا على اللوحة، اتصل بمركز خدمة العملاء.
١١	LC	تحقق من خرطوم التصريف. • تأكد أن طرف خرطوم التصريف موضوع على الأرضية. • تأكد أن خرطوم التصريف ليس مجمدًا أو مسدودًا. • إذا ظل كود المعلومات ظاهرًا على اللوحة، اتصل بمركز خدمة العملاء. **ملاحظة** عندما تعرض الغسالة الكود "LC"، فإن الغسالة تصرف الماء لمدة ٣ دقائق. ويكون زر **Power (تشغيل)** غير مفعل طوال هذه المدة.
١٢	OC	زيادة كمية الماء. • أعد التشغيل بعد التجفيف. • إذا ظل أحد الأكواد ظاهرًا على الشاشة، اتصل بمركز خدمة Samsung المحلي.
١٣	PC	عندما لا يسعك تحديد موضع القابض. • إذا ظل كود المعلومات ظاهرًا على اللوحة، اتصل بمركز خدمة العملاء.
١٤	PC1	إذا ظلت الإشارة موضع القابض تشير إلي وقوع خطأ رغم التعرف على موضع القابض. • إذا ظل كود المعلومات ظاهرًا على اللوحة، اتصل بمركز خدمة العملاء.

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 52 2015/7/27 17:04:22

رقم	الكود	الإجراء المتبع
١٥	Ub	التجفيف لا يعمل. • تأكد من بسط الغسيل بسطًا مستويًا. • تأكد من تركيب الغسالة على سطح مستو ثابت ومستقر. • قم بإعادة توزيع الملابس. وفي حالة غسيل قطعة واحدة من الملابس، مثل بُرنس حمام أو جينز، قد لا تكون نتيجة التنشيف النهائي مرضية. وتظهر رسالة التنبيه "Ub" في على الشاشة.

في حالة ظهور أكواد غير مذكورة أعلاه، اتصل على
800-SAMSUNG (800-7267864) (الإمارات العربية المتحدة)، 183-CALL (183-2255) (الكويت).

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 53 2015/7/27 17:04:22

المواصفات

جدول العناية بالأقمشة

توضح الرموز التالية تعليمات العناية بالملابس. تتضمن ملصقات الرعاية بالملابس رموزاً خاصة يجب مراعاتها عند الغسيل، التبييض، التجفيف، الكي أو التعرض للتجفيف حسب الضرورة. يضمن استخدام هذه الرموز التناسق بين الشركات المصنعة للملابس المحلية والمستوردة. اتبع تعليمات بطاقة العناية لزيادة عمر الملابس وتقليل مشاكل الغسيل.

دورة الغسيل

	عادي
	الملابس المقاومة للتجاعيد / منع الكرمشة / التحكم في الكرمشة
	الملابس الناعمة/الرقيقة
	غسل يدوي

درجة حرارة المياه

•••	Hot (ساخن)
••	Warm (دافئ)
•	Cold (بارد)

ملاحظة

تمثل درجات حرارة ماء الغسيل الملائمة بالنسبة للأشياء المتعددة. يتراوح نطاق درجة الحرارة الخاص بإعداد Hot (ساخن) بين ٤١ - ٥٢ درجة مئوية وبالنسبة لإعداد Warm (دافئ) ٢٩ - ٤١ درجة مئوية وبالنسبة ل Cold (بارد) ١٦ - ٢٩ درجة مئوية. (يتعين أن يكون الحد الأدنى لدرجة حرارة مياه الغسيل ١٦ درجة مئوية لتنشيط المسحوق والتنظيف الفعال.)

غسالة الملابس لا يمكنها ضمان الحصول على درجات الحرارة هذه لكون درجة الحرارة الفعلية للماء الداخل إلى غسالتك يعتمد على إعدادات سخان الماء ودرجات حرارة إمداد الماء الموضعية. فعلى سبيل المثال، الماء البارد الداخل للمنزل في الولايات الشمالية أثناء الشتاء قد تكون ٤٠ درجة فهرنهايتية / ٤ درجة مئوية وهو ماء بارد للغاية لكي تحصل على تنظيف فعال. في هذه الحالة، سوف تحتاج إلى ضبط درجة حرارة الماء عن طريق تحديد إعداد ساخن، وإضافة بعض الماء الساخن إلى خط MAX FILL (الحد الأقصى للملء)، أو استخدام خيار التسخين بغسالتك، إذا كان متوافراً.

مادة تبييض

	أي مادة تبييض (عند الحاجة)
	خالي من الكلور فقط (لون آمن) مادة تبييض (عند الحاجة)
	تجفيف بالتدوير

عادي

	الملابس المقاومة للتجاعيد / منع الكرمشة / التحكم في الكرمشة
	الملابس الناعمة/الرقيقة

إرشادات خاصة

	تجفيف على الحبل/ تعليق للتجفيف
	التجفيف بالتعليق
	تجفف وهي مفرودة

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 54 2015/7/27 17:04:23

إعدادات التسخين

High (عالي)	
Medium (وسط)	
Low (منخفض)	
أي درجة من السخونة	
بدون تسخين/هواء	

تنظيف جاف

تنظيف جاف	
يحظر استخدام التنظيف الجاف	
تجفيف على الحبل/ تعليق للتجفيف	
التجفيف بالتعليق	
تجفف وهي مفرودة	

التجفيف بالكي أو درجات حرارة البخار

High (عالي)	
Medium (وسط)	
Low (منخفض)	

رموز تحذيرية في عملية الغسيل

لا تغسل	
لا تضغط	
يحظر استخدام مادة تبييض	
يحظر تجفيفها بالتدوير	
لا يوجد بخار (يُضاف للكي)	
يحظر الكي	

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 55 2015/7/27 17:04:25

المواصفات

حماية البيئة

- هذا الجهاز مصنوع من مواد قابلة لإعادة التدوير. إذا قررت التخلص من هذا الجهاز، يرجى مراعاة القوانين المحلية الخاصة بالتخلص من النفايات. اقطع سلك التيار بحيث لا يمكن توصيل الجهاز بمصدر طاقة. قم بإزالة الغطاء حتى لا تنحشر الحيوانات والأطفال الصغار بداخل الجهاز.
- لا تضع مسحوق غسيل أكثر من الكمية المبينة في إرشادات الشركة المصنعة لمسحوق الغسيل.
- استخدم مواد إزالة البقع ومواد التبييض قبل دورة الغسيل عند الحاجة فقط.
- وفر الماء والكهرباء من خلال إجراء الغسيل بأوزان كاملة (تختلف الكمية وفقاً للبرنامج المستخدم).

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 56 2015/7/27 17:04:25

قائمة المواصفات الفنية

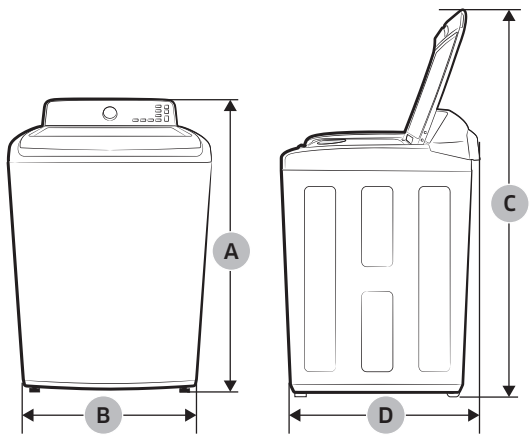

النوع		غسالة علوية التحميل	
اسم الموديل		WA22J8700G*	WA18J8700G*
الأبعاد (بوصة (سم))	A. ارتفاع	٤٦,٠ (١١٦,٨)	
	B. عرض	٢٧,٠ (٦٨,٦)	
	C.الارتفاع عندما يكون الغطاء مفتوحاً	٥٩,٨ (١٥٢,٠)	
	D. عمق	٢٩,٣ (٧٤,٤)	
السعة (كجم)		٢٢,٠	١٨,٠
ضغط الماء (كيلو باسكال)		١٣٧ - ٨٠٠	
الوزن الصافي (كجم)		٦٨	
استهلاك الطاقة		٢٢٠ فولت	١٤٠٠ واط
		٢٤٠ فولت	١٦٥٠ واط
دورات التنشيف		٨٠٠ دورة في الدقيقة	

ملاحظة

إن التصميم والمواصفات عرضة للتغيير دون إشعار وذلك بهدف تحقيق جودة أفضل.

جرى تحديد المواصفات الواردة على ملصق الطاقة باستخدام البرنامج التالي وفق UAE.S 5010 2:2013 .(يسري ذلك على موديلات الإمارات العربية المتحدة فقط)

- البرنامج هو "توفير الماء + مستوى الماء ٩".

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 57 2015/7/27 17:04:25

المواصفات

جدول الدورات

استخدم هذا الجدول لضبط أفضل الخيارات والدورة الأفضل بالنسبة للملابس المراد غسلها.

ملاحظة

الإعداد	Water Level (مستوى الماء)		Power Wash (غسيل قوي)	Temp. (درجة الحرارة)
● : إعداد المصنع	1	6	H: High (عالي)	H: Hot (ساخن)
● : يُمكن اختياره	2	7	M: Medium (وسط)	W: Warm (دافئ)
	3	8	L: Low (منخفض)	C : Cold (بارد)
	4	9		
	5			

دورات	Water Level (مستوى الماء)									Power Wash (غسيل قوي)			Temp. (درجة الحرارة)		
	1	2	3	4	5	6	7	8	9	H	M	L	H	W	C
NORMAL (دورة عادية)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
SILENT (صامت)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
HEAVY DUTY (أداء ثقيل)	●	●	●	●	●	●	●	●	●	●			●	●	●
40°C MAGIC CLEAN (تنظيف سحري 40°C)	●	●	●	●	●					●	●	●	●	●	●
60°C MAGIC CLEAN (تنظيف سحري 60°C)	●	●	●	●	●					●	●	●	●	●	●
TOWELS (المناشف)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
ACTIVE WEAR (ملابس رياضية)	●	●	●	●	●	●	●	●	●		●		●	●	●
ECO TUB CLEAN (تنظيف الحوض)							●			●			●	●	
WATER SAVING (توفير الماء)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
BABY CARE (ملابس الطفل)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
QUICK WASH (الغسيل السريع)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
DELICATES (ملابس رقيقة)	●	●	●	●	●	●	●	●	●			●	●	●	●
BEDDING (شراشف)	●	●	●	●	●	●	●	●	●	●			●	●	●
SPIN (دوران)															
RINSE+SPIN (دوران+شطف)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 58 2015/7/27 17:04:25

دورات	خيارات							
	AquaJet™ Plus (إضافة رذاذ المياه)	Activ Dual Wash Drain (الغسيل المزدوج التصريف)	Last Setting (الأعداد الأخير)	Pre Soak (قبل النقع)	Delay End (تأجيل التشغيل)	Wash (غسيل)	Rinse (شطف)	Spin (دوران)
NORMAL (دورة عادية)	●	●	●	●	●	●	●	●
SILENT (صامت)	●	●	●		●	●	●	●
HEAVY DUTY (أداء ثقيل)	●	●	●		●	●	●	●
40°C MAGIC CLEAN (تنظيف سحري 40°C)	●	●	●		●	●	●	●
60°C MAGIC CLEAN (تنظيف سحري 60°C)	●	●	●		●	●	●	●
TOWELS (المناشف)	●	●	●	●	●	●	●	●
ACTIVE WEAR (ملابس رياضية)	●	●	●	●	●	●	●	●
ECO TUB CLEAN (تنظيف الحوض)		●			●			
WATER SAVING (توفير الماء)	●	●	●	●	●	●	●	●
BABY CARE (ملابس الطفل)	●	●	●		●	●	●	●
QUICK WASH (الغسيل السريع)		●	●	●	●	●	●	●
DELICATES (ملابس رقيقة)		●	●		●			
BEDDING (شراشف)		●	●	●	●	●	●	●
SPIN (دوران)		●	●		●			●
RINSE+SPIN (دوران+شطف)		●	●		●		●	●

WA8700J_WA22J8700GP-03520L-02_SG_AR.indd 59 2015/7/27 17:04:25

SAMSUNG

هل لديك أسئلة أو تعليقات؟

البلد	اتصل بـ	أو قم بزيارة موقعنا على الإنترنت على
KUWAIT	183-CALL (183-2255)	www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)
U.A.E	800-SAMSUNG (800-7267864)	