SAMSUNG

QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
IRAN	021-8255	www.samsung.com/iran/support
SAUDI ARABIA	800 247 3457 (800 24/7 HELP)	www.samsung.com/sa/home www.samsung.com/sa_en
U.A.E	800-SAMSUNG (800 - 726 7864)	www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)
QATAR	800-CALL (800-2255)	www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)
BAHRAIN	8000-GSAM (8000-4726)	www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)
OMAN	800-SAMSUNG (800 - 726 7864)	www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)
JORDAN	0800-22273 06 5777444	www.samsung.com/levant
SYRIA	962 5777444	www.samsung.com/levant
LEBANON	961 1484 999	www.samsung.com/levant
EGYPT	08000-7267864 16580	www.samsung.com/eg/support
MOROCCO	080 100 22 55	www.samsung.com/n_africa/support
KUWAIT	183-CALL (183-2255)	www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)
NIGERIA	0800-726-7864	www.samsung.com/africa_en/support
ALGERIA	3004 (Toll Free)	www.samsung.com/n_africa/support
PAKISTAN	0800-Samsung (72678)	www.samsung.com/pk/support
TUNISIA	80 1000 12	www.samsung.com/n_africa/support
SOUTH AFRICA	0860 SAMSUNG (726 7864)	www.samsung.com/support
GHANA	0800-100077	www.samsung.com/africa_en/support
BOTSWANA	8007260000	www.samsung.com/support
NAMIBIA	08 197 267 864	www.samsung.com/support
ZAMBIA	0211 350370	www.samsung.com/support

Air conditioner

User manual/Installation manual

AR✳✳HCSD✳✳ /AR✳✳KCSD✳✳

- Thank you for purchasing this Samsung air conditioner.
- Before operating this unit, please read this user manual carefully and retain it for future reference.

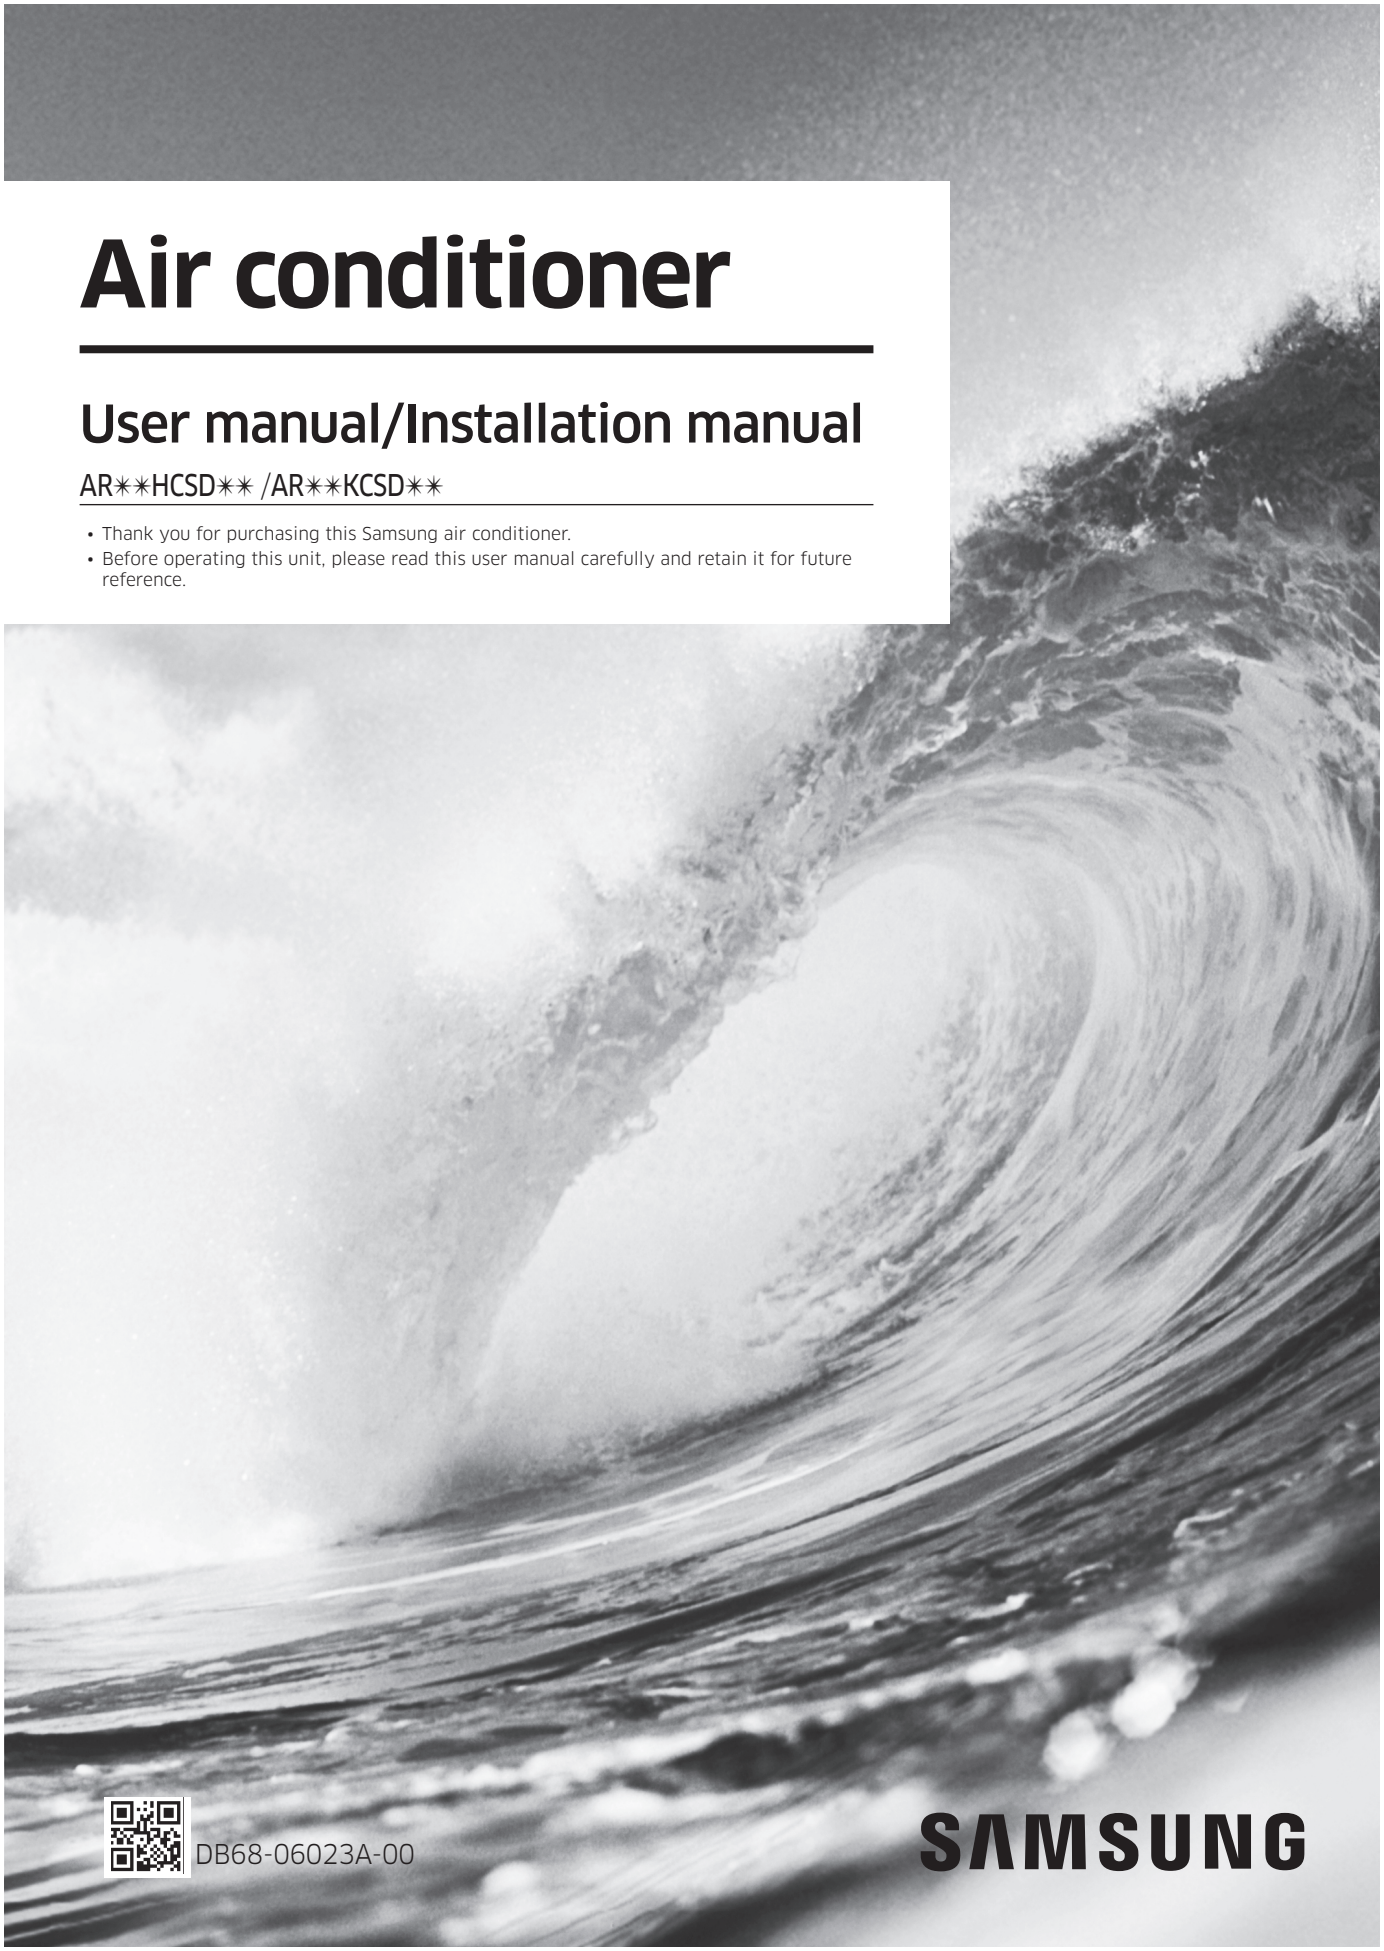

DB68-06023A-00

SAMSUNG

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 1 5/16/2016 10:30:25 AM

Contents

Safety Information **4**

Safety Information 4

At a Glance **12**

Indoor Unit Overview 12
Display

Remote Control Overview 13
Inserting batteries

Remote Control Operation 14
Operation modes • Controlling temperature •
Controlling fan speed • Controlling air flow direction

Power Smart Features **16**

Cooling Operation 16
Cool mode • 2-Step cooling function

Dehumidifying Operation 17
Dry mode

Air Purifying Operation 18
Virus doctor function

Quick Smart Features 19
Auto mode • Fan mode • Fast function • Comfort function •
Beep sound function • Display lighting function

Energy-Saving Features **23**

Energy-Saving Operation 23
Usage time check • Single user function •
Timed on/Timed off function • good'sleep function

Cleaning and Maintenance **27**

Cleaning at a Glance 27

Troubleshooting 29

Technical Specifications 31

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 2 5/16/2016 10:30:25 AM

Installation 33

Safety Information on Installation 33

Preparation 35

Step 1.1 Choosing the installation location

Step 1.2 Packing and Unpacking

Step 1.3 Checking and preparing accessories and tools

Step 1.4 Drilling a hole through the wall

Step 1.5 Taping the pipes, cables, and drain hose

Indoor Unit Installation 40

Step 2.1 Disassembling the cover panel

Step 2.2 Disassembling the installation plate

Step 2.3 Connecting the cables (assembly cable)

Step 2.4 Optional: Extending the power cable

Step 2.5 Installing and connecting the drain hose

Step 2.6 Optional: Extending the drain hose

Step 2.7 Optional: Changing the direction of the drain hose

Step 2.8 Installing and connecting the assembly pipes to the refrigerant pipes (assembly pipe)

Step 2.9 Shortening or extending the refrigerant pipes (assembly pipe)

Step 2.10 Fixing the installation plate

Step 2.11 Fixing the indoor unit to the installation plate

Step 2.12 Assembling the cover panel

Outdoor Unit Installation 48

Step 3.1 Fixing the outdoor unit in place

Step 3.2 Connecting the cables and the refrigerant pipes

Step 3.3 Evacuating the air

Step 3.4 Adding refrigerant

Installation Inspection 51

Step 4.1 Performing the gas leak tests

Step 4.2 Running the Smart Install mode

Step 4.3 Performing final check and trial operation

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 3 5/16/2016 10:30:26 AM

Safety Information

Before using your new air conditioner, please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance.

Because the following operating instructions cover various models, the characteristics of your air conditioner may differ slightly from those described in this manual. If you have any questions, call your nearest contact centre or find help and information online at www.samsung.com.

⚠ WARNING

Hazards or unsafe practices that may result in severe personal injury or death.

⚠ CAUTION

Hazards or unsafe practices that may result in minor personal injury or property damage.

- Follow directions.
- Do NOT attempt.
- Make sure the machine is grounded to prevent electric shock.
- Cut off the power supply.
- Do NOT disassemble.

FOR INSTALLATION

⚠ WARNING

Use a power cord with this product's power specifications or higher and use the power cord for this appliance only. In addition, do not use an extension cord.

- Extending the power cord may result in electric shock or fire.
- Do not use an electric transformer. This may result in electric shock or fire.
- If the voltage/frequency/rated current condition is different, it may cause fire.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 4 5/16/2016 10:30:28 AM

The installation of this appliance must be performed by a qualified technician or service company.

- Failing to do so may result in electric shock, fire, explosion, problems with the product, or injury and may also void warranty on the installed product.

Install an Isolation Switch next to the Air Conditioner (but not on the panels of the Air Conditioner) and circuit breaker dedicated to the air conditioner.

- Failing to do so may result in electric shock or fire.

Fix the outdoor unit firmly so that the electric part of the outdoor unit is not exposed.

- Failing to do so may result in electric shock, fire, explosion, or problems with the product.

Do not install this appliance near a heater, or inflammable material. Do not install this appliance in a humid, oily or dusty location, in a location exposed to direct sunlight and water (or rain). Do not install this appliance in a location where gas may leak.

- This may result in electric shock or fire.

Never install the outdoor unit in a location such as on a high external wall where it could fall.

- If the outdoor unit falls, it may result in injury, death or property damage.

This appliance must be properly grounded. Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- Failing to do so may result in electric shock, fire, and explosion.
- Make sure to use a socket-outlet with ground.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 5 5/16/2016 10:30:28 AM

⚠ CAUTION

Install your appliance on a level and hard floor that can support its weight.

- Failing to do so may result in abnormal vibrations, noise, or problems with the product.

Install the drain hose properly so that water drains correctly.

- Failing to do so may result in water overflowing and property damage. Avoid adding drain to waste pipes as odours may arise in the future.

When installing the outdoor unit, make sure to connect the drain hose so that draining is performed correctly.

- The water generated during heating by the outdoor unit may overflow and result in property damage.
  In particular, in winter, if a block of ice falls, it may result in injury, death or property damage.

FOR POWER SUPPLY

⚠ WARNING

When the circuit breaker is damaged, contact your nearest service centre.

Do not pull or excessively bend the power line. Do not twist or tie the power line. Do not hook the power line over a metal object, place a heavy object on the power line, insert the power line between objects, or push the power line into the space behind the appliance.

- This may result in electric shock or fire.

⚠ CAUTION

When not using the air conditioner for a long period of time or during a thunder/lightning storm, cut the power at the circuit breaker.

- Failing to do so may result in electric shock or fire.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 6 5/16/2016 10:30:29 AM

FOR USING

⚠ WARNING

If the appliance is flooded, please contact your nearest service centre.

- Failing to do so may result in electric shock or fire.

If the appliance generates a strange noise, a burning smell or smoke, cut off the power supply immediately and contact the nearest service centre.

- Failing to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power line. Do not touch the appliance or power line.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

To reinstall the air conditioner, please contact your nearest service centre.

- Failing to do so may result in problems with the product, water leakage, electric shock, or fire.
- Delivery service for the product is not provided. If you reinstall the product in another location, additional construction expenses and an installation fee will be charged.
- Especially, when you wish to install the product in an unusual location such as in an industrial area or near the seaside where it is exposed to salt in the air, please contact your nearest service centre.

Do not touch the circuit breaker with wet hands.

- This may result in electric shock.

Do not turn the air conditioner off with the circuit breaker while it is operating.

- Turning the air conditioner off and then on again with the circuit breaker may cause a spark and result in electric shock or fire.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 7 5/16/2016 10:30:29 AM

After unpacking the air conditioner, keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.

- If a child places a bag over its head, it may result in suffocation.

Do not touch the air flow blade with your hands or fingers during heating.

- This may result in electric shock or burns.

Do not insert your fingers or foreign substances into the air inlet/outlet of the air conditioner.

- Take special care that children do not injure themselves by inserting their fingers into the product.

Do not strike or pull the air conditioner with excessive force.

- This may result in fire, injury, or problems with the product.

Do not place an object near the outdoor unit that allows children to climb onto the machine.

- This may result in children seriously injuring themselves.

Do not use this air conditioner for long periods of time in badly ventilated locations or near infirm people.

- Since this may be dangerous due to a lack of oxygen, open a window at least once an hour.

If any foreign substance such as water has entered the appliance, cut off the power supply and contact the nearest service centre.

- Failing to do so may result in electric shock or fire.

Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use any fuse (such as cooper, steel wire, etc.) other than the standard fuse.
- Failing to do so may result in electric shock, fire, problems with the product, or injury.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 8 5/16/2016 10:30:29 AM

⚠ CAUTION

Do not place objects or devices under the indoor unit.

- Water dripping from the indoor unit may result in fire or property damage.

Check that the installation frame of the outdoor unit is not broken at least once a year.

- Failing to do so may result in injury, death or property damage.

Max current is measured according to IEC standard for safety and current is measured according to ISO standard for energy efficiency.

Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.

- This may result in electric shock, fire, problems with the product, or injury.

Do not operate the appliance with wet hands.

- This may result in electric shock.

Do not spray volatile material such as insecticide onto the surface of the appliance.

- As well as being harmful to humans, it may also result in electric shock, fire or problems with the product.

Do not drink the water from the air conditioner.

- The water may be harmful to humans.

Do not apply a strong impact to the remote control and do not disassemble the remote control.

Do not touch the pipes connected with the product.

- This may result in burns or injury.

Do not use this air conditioner to preserve precision equipment, food, animals, plants or cosmetics, or for any other unusual purposes.

- This may result in property damage.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 9 5/16/2016 10:30:30 AM

Avoid directly exposing humans, animals or plants to the air flow from the air conditioner for long periods of time.

- This may result in harm to humans, animals or plants.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, without supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

FOR CLEANING

⚠ WARNING

Do not clean the appliance by spraying water directly onto it. Do not use benzene, thinner or alcohol to clean the appliance.

- This may result in discolouration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, cut off the power supply and wait until the fan stops.

- Failing to do so may result in electric shock or fire.

⚠ CAUTION

Take care when cleaning the surface of the heat exchanger of the outdoor unit since it has sharp edges.

- This should be done by a qualified technician. Please contact your installer or service centre.

Do not clean the inside of the air conditioner by yourself.

- For cleaning inside the appliance, contact your nearest service centre.
- When cleaning the filter, refer to the descriptions in the 'Cleaning at a Glance' section.
- Failing to do so may result in damage, electric shock or fire.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 10 5/16/2016 10:30:31 AM

Correct Disposal of This Product
(Waste Electrical & Electronic Equipment)

(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

Correct disposal of batteries in this product

(Applicable in countries with separate collection systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 11 5/16/2016 10:30:32 AM

Indoor Unit Overview

The actual product may differ slightly from the image depicted below.

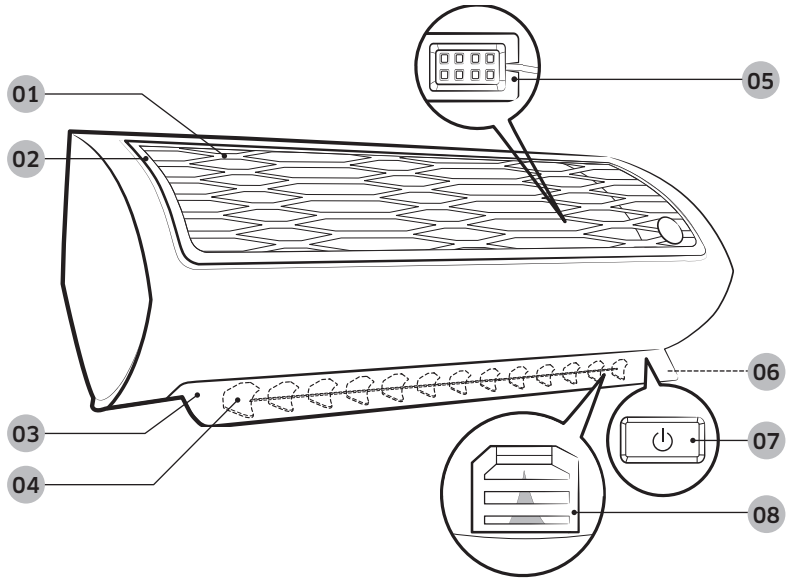

01 Air intake

02 Air filter

03 Air flow blade (up and down)

04 Air flow blade (left and right)

05 Room temperature sensor

06 Display

07 Power button /
Remote control receiver

08 (Inside) Virus doctor

Display

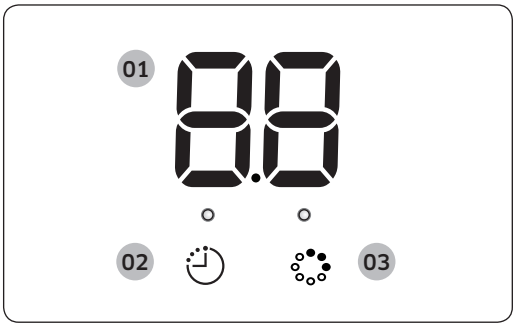

01 Temperature indicator
Filter reset indicator (CF)
Usage time indicator
Auto clean indicator (C 1)

02 Timer indicator
good'sleep indicator
Auto clean indicator

03 Virus Dotor indicator

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 12 5/16/2016 10:30:34 AM

Remote Control Overview

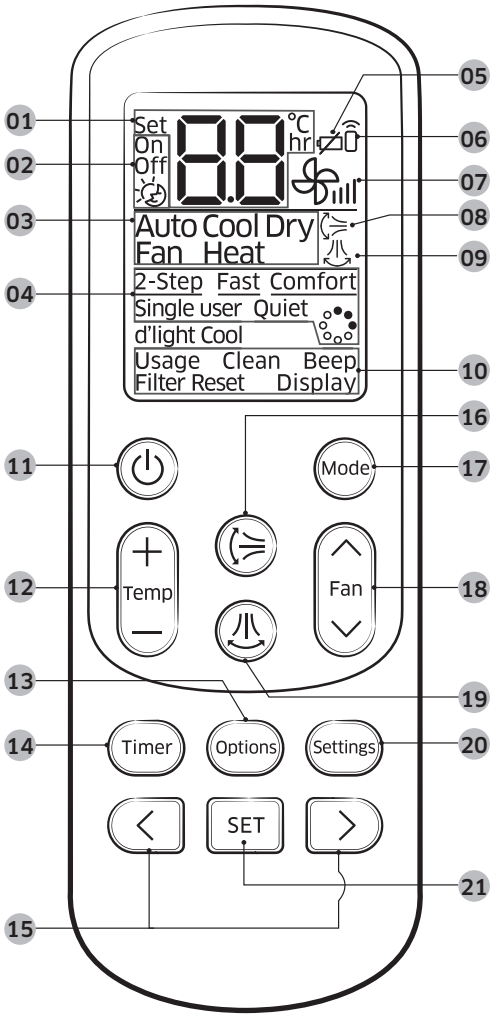

01 Set temperature indicator

02 Timer option indicator

03 Operation mode indicator

04 Options indicator

05 Low battery indicator

06 Transmit indicator

07 Fan speed indicator

08 Vertical air swing indicator

09 Horizontal air swing indicator

10 Settings indicator

11 Power button

12 Temperature button

13 Options button

14 Timer button

15 Direction button / Selection button

16 Vertical air swing button

17 Mode button

18 Fan speed button

19 Horizontal air swing button

20 Settings button

21 SET button

Inserting batteries

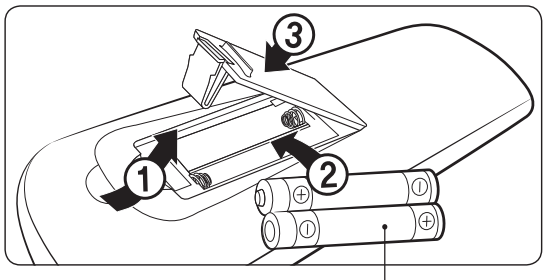

two 1.5V AAA type batteries

NOTE

- The descriptions in this manual are primarily made based on the remote control buttons.
- Although **Heat, Quiet, d'light Cool** is displayed on the remote control display, it is not available on this model.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 13 5/16/2016 10:30:35 AM

Remote Control Operation

You can use the air conditioner easily by selecting a mode and then by controlling the temperature, fan speed, and air direction.

Operation modes

You can change the current mode between Auto, Cool, Dry, and Fan by pressing the Mode button.

Controlling temperature

You can control the temperature in each mode as follows:

Mode	Temperature control
Auto/Cool	Adjust by 1 °C between 16 °C and 30 °C.
Dry	Adjust by 1 °C between 18 °C and 30 °C.
Fan	You cannot control the temperature.

NOTE

You can use the Cool and Dry modes in the following conditions:

Mode	Cool	Dry
Indoor temperature	16 °C to 32 °C	18 °C to 32 °C
Outdoor temperature	15 °C to 52 °C	15 °C to 52 °C
Indoor humidity	80% or less relative humidity	–

- If the air conditioner operates in a high humidity environment in the Cool mode for an extended period of time, condensation may occur.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 14 5/16/2016 10:30:37 AM

Controlling fan speed

You can select the following fan speeds in each mode:

Mode	Available fan speeds
Auto/Dry	(Auto)
Cool	(Auto), (Low), (Med), (High), (Turbo)
Fan	(Low), (Med), (High), (Turbo)

Controlling air flow direction

Keep the air flow in a constant direction by stopping the movements of the vertical and horizontal air flow blades.

In operation ► or

NOTE

- If you adjust the vertical air flow blade manually, it may not close completely when you turn off the air conditioner.
- If you adjust the horizontal air flow blade manually, it may not operate normally.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 15 5/16/2016 10:30:41 AM

Cooling Operation

The smart and powerful cooling functions of the Samsung air conditioner keep an enclosed space cool and comfortable.

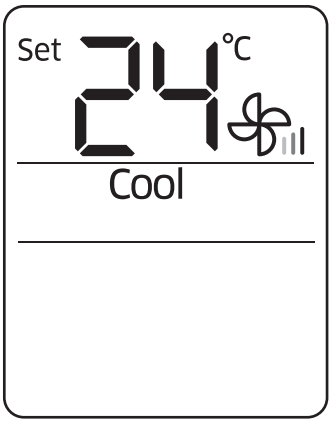

Cool mode

Use the Cool mode to stay cool in hot weather.

Power ▶ Mode ▶ Select Cool.

NOTE

- For comfort, keep the temperature difference between the indoor and outdoor air within 5 °C in the Cool mode.
- After selecting the Cool mode, select a function, temperature, and fan speed that you want to apply.
  - To cool your room quickly, select a low temperature and a strong fan speed.
  - To save energy, select a high temperature and a weak fan speed..

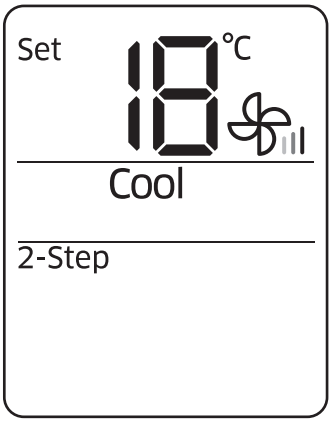

2-Step cooling function

Use the 2-Step cooling function to quickly reach the set temperature. The air conditioner automatically adjusts the fan speed and air flow direction. You can select this function only when the Cool mode is running.

In the Cool mode ▶ Options ▶ < > ▶

Select 2-Step. ▶ SET

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 16 5/16/2016 10:30:44 AM

Dehumidifying Operation

The dehumidifying function of the Samsung air conditioner keeps an enclosed space dry and comfortable.

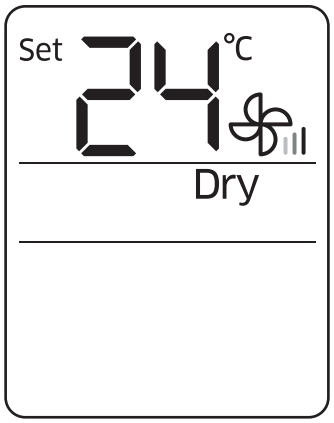

Dry mode

Use the Dry mode in rainy or humid weather.

▶ Select Dry.

NOTE

- The lower the set temperature is, the greater the dehumidifying capacity is. When the current humidity seems to be high, adjust the set temperature to a low temperature.
- You cannot use the Dry mode for heating. The Dry mode is designed to produce a cooling side-effect.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 17 5/16/2016 10:30:45 AM

Air Purifying Operation

The air purification function of the Samsung air conditioner keeps the air in an enclosed space purified.

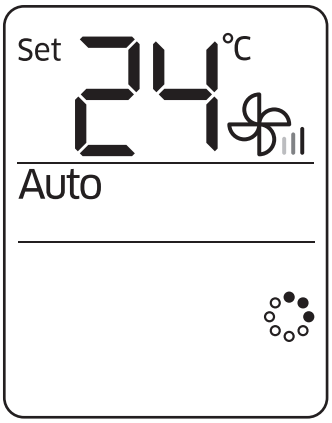

Virus doctor function

Use the Virus doctor function to purify your room with positive ions produced by the air conditioner. This function is available in the Auto, Dry, and Fan modes.

In the Auto, Cool, Dry, or Fan mode ▶ Options ▶ < > ▶

Select . ▶ SET

NOTE

- You can adjust the set temperature, except for in the Fan mode.
- When the Virus doctor function is additionally selected while a specific mode is running, there is little difference in electricity consumption and operating noise.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 18 5/16/2016 10:30:47 AM

Quick Smart Features

There is a variety of extra functionality provided by the Samsung air conditioner.

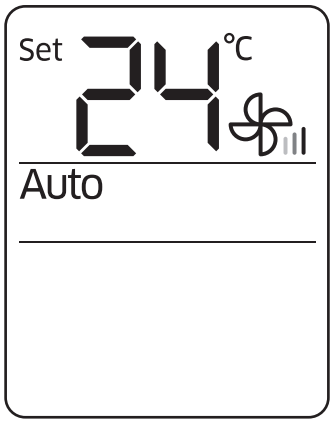

Auto mode

Use the Auto mode when you want the air conditioner to automatically control the operation. The air conditioner will provide the most comfortable atmosphere that it can.

▶ Mode ▶ Select Auto.

NOTE

- When the indoor temperature seems to be higher or lower than the set point, the air conditioner automatically produces cool air to cool down the indoor temperature.

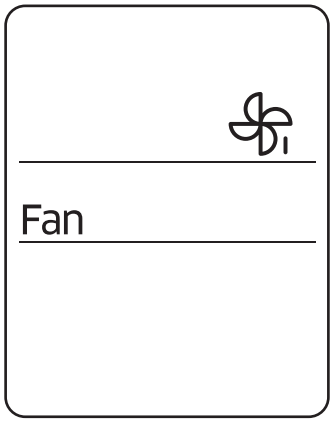

Fan mode

Use the Fan mode to run the air conditioner like a common fan. The air conditioner provides a natural breeze.

▶ Mode ▶ Select Fan.

NOTE

- If the air conditioner will not be used for an extended period of time, dry the air conditioner by running it in the Fan mode for 3 or 4 hours.
- The outdoor unit is designed not to operate in the Fan mode to prevent cold air from entering through the unit. This is a normal operation and not a fault with the air conditioner.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 19 5/16/2016 10:30:49 AM

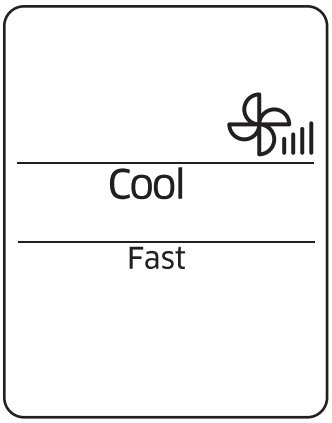

Fast function

Use the Fast function to quickly cool your room. This function is the most powerful cooling function provided by the air conditioner. You can select this function in the Cool mode.

In the Cool mode ▶ Options ▶ < > ▶

Select Fast. ▶ SET

NOTE

- If you select the Fast function while such functions as 2-Step cooling, Comfort, Single user, or good'sleep are running, these functions are cancelled.
- You can change the air flow direction.
- You cannot change the set temperature and the fan speed.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 20 5/16/2016 10:30:51 AM

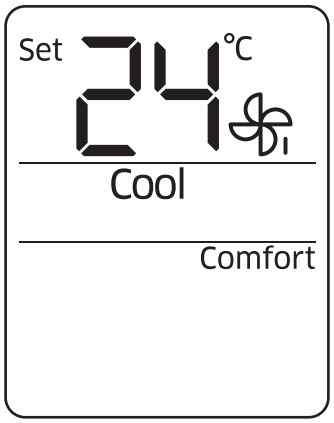

Comfort function

Use the Comfort function when you feel the current cooling effect is too strong. The air conditioner provides a mild cooling. You can select this function in the Cool mode.

In the Cool mode ▶ Options ▶ < > ▶

Select Comfort. ▶ SET

NOTE

- You can change the set temperature and the air flow direction.
- You cannot change the fan speed.
- If you select the Comfort function while such functions as 2-Step cooling, Fast, Single user, or good'sleep are running, these functions are cancelled.
- If you feel cooling effect in the Comfort function is weak, cancel the Comfort function.

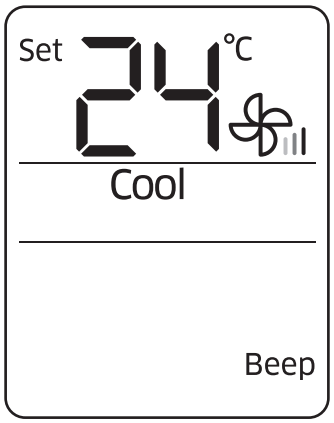

Beep sound function

Use the Beep sound function to turn on or off the beep sound that plays when you press a button on the remote control.

Settings ▶ < > ▶ Select Beep. ▶ SET

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 21 5/16/2016 10:30:53 AM

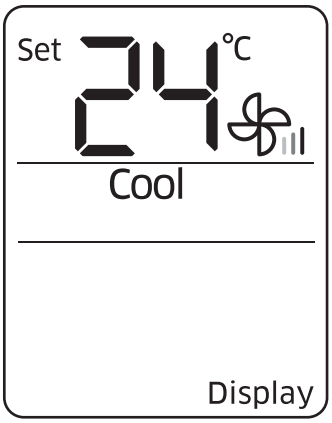

Display lighting function

Use the Display lighting function to turn on or off the lighting of the indoor unit display.

Settings ▶ < > ▶ Select Display. ▶ SET

NOTE

- The Display lighting function does not operate when the indoor unit is turned off.
- The Timer (⏲) indicator does not disappear, even if you turn off the Display lighting function.
- If you change the current mode or function when the Display lighting function is on, the Display lighting function turns off.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 22 5/16/2016 10:30:56 AM

Energy-Saving Operation

The smart energy-saving functions of the Samsung air conditioner reduce electricity consumption.

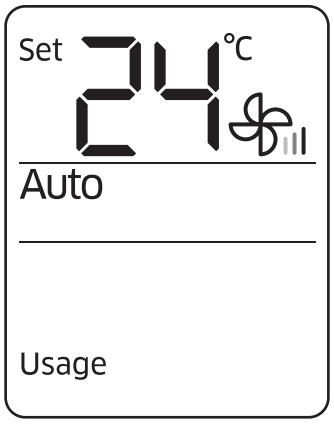

Usage time check

Use the Usage time function to check the operation duration from the moment when the air conditioner is turned on to the moment when the Usage time function is selected. The usage time is displayed on the indoor unit display for a few seconds, and the set indoor temperature appears.

In operation ▶ Settings ▶ < > ▶ Select Usage. ▶

SET ▶ Wait 3 seconds.

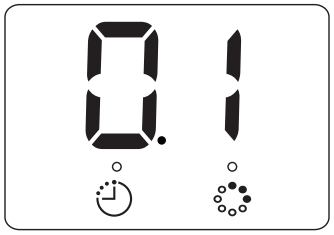

Indoor unit display

The usage time is displayed in units of hour. For example, 0.1 is equivalent to 6 minutes; 2.5, 2 hours and 30 minutes; 3.7, 3 hours and 42 minutes. The value range displayed is between 0.0 and 99. The value is reset when the air conditioner turns off.

NOTE

- The usage time shown on the indoor unit display may a little differ from the actual operation time of the air conditioner.
- You can view the usage time only when the air conditioner is operating.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 23 5/16/2016 10:31:00 AM

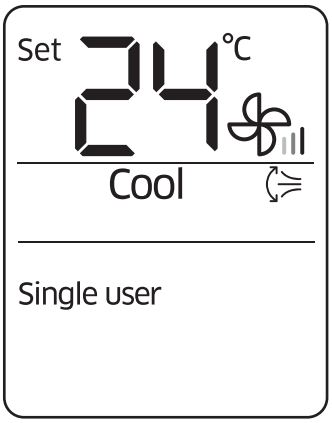

Single user function

Use the Single user function to reduce electricity consumption while staying cool. You can select this function in the Cool mode.

In the Cool mode ▶ Options ▶ < > ▶

Select Single user. ▶ SET

NOTE

- When the Single user function starts, the ⁝⁝ -- _ _ pattern appears on the remote control for a few seconds, and vertical air swing begins automatically.
- If you select the Single user while such function as 2-Step cooling, Fast, Comfort, or good'sleep are running, these modes are cancelled.
- After selecting the Single user function, you can change the set temperature (24 °C to 30 °C in the Cool mode), fan speed, and vertical air flow direction.
- When the Single user function is turned on in the Cool mode while the set temperature is set to lower than 24 °C, the set temperature is automatically raised to 24 °C. But if the set temperature is set to between 25 °C and 30 °C, it remains the same.
- Even after you turn off the Single user function, vertical air swing continues until you turn it off with the Vertical air swing ( ) button.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 24 5/16/2016 10:31:03 AM

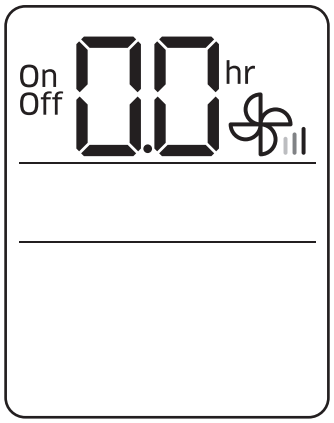

Timed on/Timed off function

Use the Timed on/Timed off to turn on or off the air conditioner after the time that you set.

Timer (Select On or Off among On, Off, and .) ▶

(Set the on/off time.) ▶ SET

- Press the Timer (Timer) button to change the current function between On, Off, and (good'sleep). (good'sleep) is displayed in the Cool mode only.

NOTE

- You can set a time between 0.5 and 24 hours. Set the time interval to 0.0 to cancel the Timed on/off function.
- Once you start the Timed on/off function, the Timer () indicator is displayed on the indoor unit display.
- After starting the Timed on function, you can change the mode and the set temperature. You cannot change the set temperature while the Fan mode is running.
- You cannot set the same time for both of the Timed on and Timed off functions.

Combining Timed on and Timed off	
When the air conditioner is off	Example) Timed on: 3 hours, Timed off: 5 hours The air conditioner turns on after 3 hours from the moment you start Timed on/off, remains on for 2 hours, then turns off automatically.
When the air conditioner is on	Example) Timed on: 3 hours, Timed off: 1 hour The air conditioner turns off after 1 hour from the moment you start Timed on/off, then turns on after 2 hours from the moment it is turned off.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 25 5/16/2016 10:31:05 AM

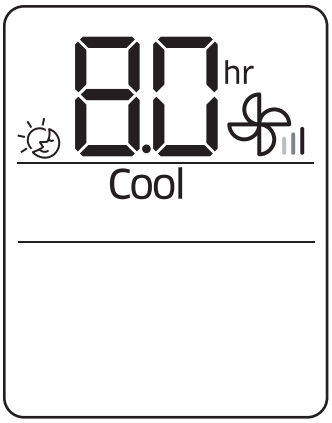

good'sleep function

Use the good'sleep function to get a good sleep at night and to save energy. You can select this function in the Cool mode.

In the Cool mode ▶ Timer (Select among On, Off, and .) ▶ < > (Set the operation time.) ▶ SET

- Press the Timer (Timer) button to change the current function between **On**, **Off**, and (good'sleep).

NOTE

- You can adjust the set temperature by 1 °C between 16 °C and 30 °C.
- The recommended and optimal set temperatures in the good'sleep function are as follows:

Mode	Recommended set temperature	Optimal set temperature
Cool	25 °C to 27 °C	26 °C

- Once you start the good'sleep function, the Timer () indicator appears on the indoor unit display.
- You can set the operation time to between 0.5 and 12 hours. Set the operation time to 0.0 to cancel the good'sleep function.
- The default operation time for the good'sleep function in the Cool mode is 8 hours. If the operation time is set to over 5 hours, the Wake up function begins 1 hour before the set time. The air conditioner stops automatically when the operation time expires.
- When the Timed on, Timed off, and good'sleep functions are overlapped, the air conditioner operates its timer with only the function that you have started most recently.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 26 5/16/2016 10:31:07 AM

Cleaning at a Glance

Running Auto clean

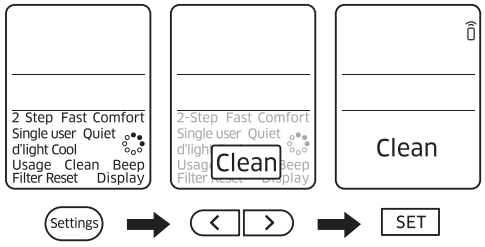

Indoor unit display

Cleaning duration (minutes)	
Auto (Cool), Cool, Dry	30
Fan	15

NOTE

- When you set the Auto clean timer, **Clean** blinks and then disappears on the remote control display. The Timer (⏲) indicator also appears on the indoor unit display.
- When the air conditioner is off, Auto clean starts immediately when it is selected. When the air conditioner is on, Auto clean starts as soon as the air conditioner stops running.
- During Auto clean, the indoor fan continues to run, and air flow blades remain open to expel ambient air.

Cleaning the indoor unit exterior and outdoor unit heat exterior

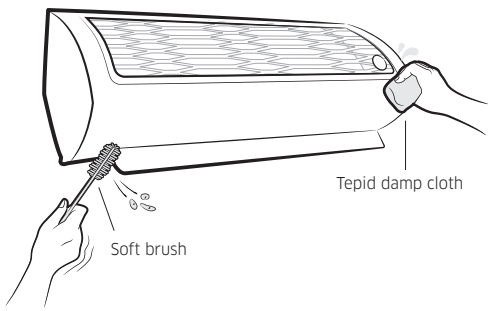

Before cleaning, be sure to turn off the equipment and disconnect the power plug.

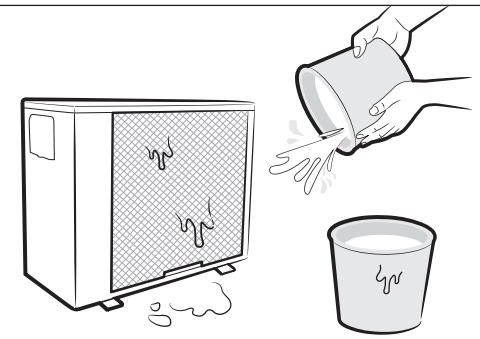

Spray water to clean the dust.

⚠ CAUTION

- Do not clean the display by using alkaline detergent.
- Do not use sulphuric acid, hydrochloric acid, or organic solvents (such as thinner, kerosene, and acetone) to clean the surfaces. Do not put any stickers on it as this can damage the surface of the air conditioner.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 27 5/16/2016 10:31:10 AM

- When you clean and inspect the heat exchanger on the outdoor unit, contact the local service centre for help.
- Make sure to prevent any injury from sharp edges of the surface when handling the heat exchanger.

Cleaning the filter

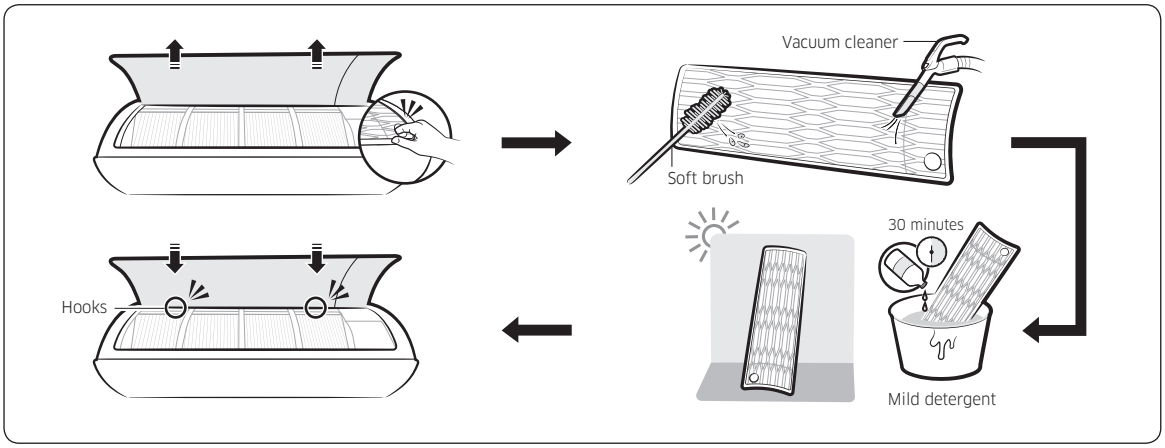

⚠ CAUTION

- Do not scrub the air filter with a brush or other cleaning utensil. This may damage the filter.
- Do not expose the air filter to direct sunlight when drying it.

NOTE

- Clean the air filter every 2 weeks. Cleaning term may vary depending on the usage and environmental conditions.
- If the air filter dries in a humid area, it may produce offensive odours. Clean it again and dry it in a well-ventilated area.

Resetting the filter-cleaning reminder

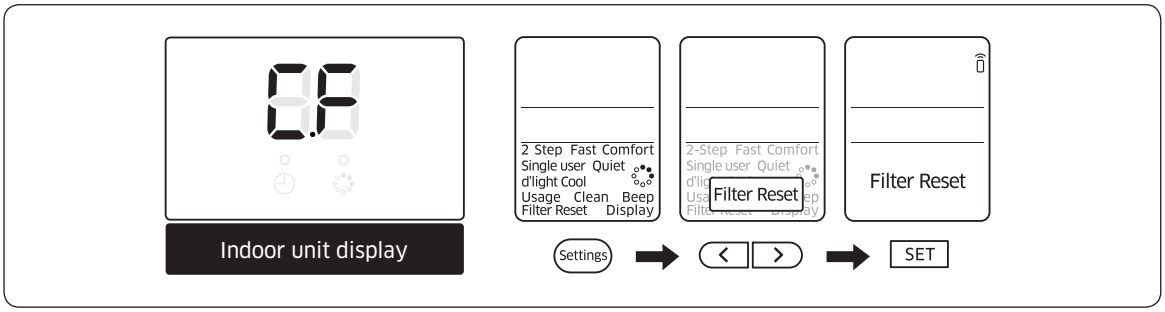

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 28 5/16/2016 10:31:11 AM

Troubleshooting

If the air conditioner operates abnormally, refer to the following chart to save time and unnecessary expenses.

Problem	Solution
The air conditioner does not work at all.	• Check the power status, then operate the air conditioner again. • Switch on the circuit breaker, plug in the power cord, then operate the air conditioner again. • Make sure that the isolator is turned on. • Check whether the Timed off function is running. Operate the air conditioner again by pressing the Power button.
I cannot change the temperature.	• Check whether the Fan or Fast mode is running. In these modes, the air conditioner controls the set temperature automatically, and you cannot change the set temperature.
Cool air does not come out of the air conditioner.	• Check whether the set temperature is higher in the Cool mode than the current temperature. Press the Temperature button on the remote control to change the set temperature. • Check whether the air filter is blocked with dirt. If the air filter is blocked, the cooling performance may decrease. Remove dirt regularly. • Check whether the outdoor unit is covered or installed near obstacles. Remove the coverings and obstacles. • Check whether doors or windows are open. This may cause poor cooling performance. Close the doors and windows. • Check whether the air conditioner is turned on immediately after the cooling operation stops. In this case, only the fan runs to protect the outdoor unit compressor. • Check whether the pipe length is too long. When the pipe length exceeds the maximum pipe length, the cooling performance may decrease.
I cannot change the air flow direction.	• Check whether the good'sleep function is running. While this function is running, you cannot control the air flow direction.
I cannot change the fan speed.	• When the Auto, Dry, or Fast mode is running or the good'sleep function is running in the Cool mode, the air conditioner controls the fan speed automatically and you cannot change the fan speed.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 29 5/16/2016 10:31:11 AM

Problem	Solution
The remote control does not work.	• Replace the batteries in the remote control with new ones. • Make sure that nothing is blocking the remote control sensor. • Check whether there are strong lighting apparatus near the air conditioner. Strong light which comes from fluorescent bulbs or neon signs may interrupt the electric waves.
The Timed on/off function does not work.	• Check whether you pressed the SET button on the remote control after setting the time.
The indicator blinks continuously.	• Press the Power button to turn off the air conditioner or disconnect the power plug. If the indicator is still blinking, contact the service centre.
Odours permeate in the room during operation.	• Check whether the air conditioner is running in a smoky area. Ventilate the room or operate the air conditioner in the Fan mode for 3 to 4 hours. (There are no components used in the air conditioner that emit a strong odour.) • Check whether the drains are clean. Clean them regularly.
An error is indicated.	• If the indoor unit indicator blinks, contact the nearest service centre. Be sure to pass the error code to the service centre.
Noise is generated.	• When refrigerant flow changes, noise may be generated, depending on the status of the air conditioner. This is a normal operation.
Water drops from the pipe connections of the outdoor unit.	• Condensation may develop when the ambient temperature changes excessively. This is a normal operation.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 30 5/16/2016 10:31:12 AM

Technical Specifications

MODEL		AR18HCSDGWK/GU		AR24KCSDGWK/GU	
CLIMATE CLASS		T1	T3	T1	T3
CAPACITY	COOLING	18000 Btu/h	15800 Btu/h	24000 Btu/h	20300 Btu/h
	HEATING (H1)	-		-	
RATED VOLTAGE & FREQUENCY		220-240 V~ 50 Hz		220-240 V~ 50 Hz	
RATED CURRENT	COOLING	9.0 A	10.0 A	11.5 A	13.0 A
	HEATING (H1)	-		-	
RATED POWER INPUT	COOLING	1880 W	2200 W	2500 W	2870 W
	HEATING (H1)	-		-	
EER / COP	COOLING	9.57 (Btu/h)/W	7.18 (Btu/h)/W	9.60 (Btu/h)/W	7.07 (Btu/h)/W
	HEATING (H1)	-		-	
REFRIGERANT	TYPE	R-22			
	CHARGE	750 g [26.46 oz]		1280 g [45.15 oz]	
ANNUAL ENERGY CONSUMPTION		1880 kWh/Year	2200 kWh/Year	2500 kWh/Year	2870 kWh/Year
TEMPERATURE	INDOOR	27 °C -	29 °C -	27 °C -	29 °C -
		19 °C -	19 °C -	19 °C -	19 °C -
	OUTDOOR	35 °C -	46 °C -	35 °C -	46 °C -
		24 °C -	24 °C -	24 °C -	24 °C -
NET WEIGHT	INDOOR	15.8 kg		16.0 kg	
	OUTDOOR	32.0 kg		53.2 kg	
DIMENSIONS OF THE UNIT	INDOOR	1065 x 301 x 294 mm		1065 x 301 x 294 mm	
	OUTDOOR	720 x 548 x 265 mm		880 x 793 x 310 mm	
COUNTRY OF ORIGIN		THAILAND			

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 31 5/16/2016 10:31:12 AM

Technical Specifications

MODEL		AR18KCSDRWK/GU		AR24KCSDRWK/GU	
CLIMATE CLASS		T1	T3	T1	T3
CAPACITY	COOLING	18000 Btu/h	15800 Btu/h	24000 Btu/h	20300 Btu/h
	HEATING (H1)	-		-	
RATED VOLTAGE & FREQUENCY		220-240 V~ 50 Hz		220-240 V~ 50 Hz	
RATED CURRENT	COOLING	9.0 A	10.0 A	11.5 A	13.0 A
	HEATING (H1)	-		-	
RATED POWER INPUT	COOLING	1880 W	2200 W	2500 W	2870 W
	HEATING (H1)	-		-	
EER / COP	COOLING	9.57 (Btu/hr)/W	7.18 (Btu/hr)/W	9.60 (Btu/hr)/W	7.07 (Btu/hr)/W
	HEATING (H1)	-		-	
REFRIGERANT	TYPE	R-22			
	CHARGE	750 g [26.46 oz]		1080 g [38.10 oz]	
ANNUAL ENERGY CONSUMPTION		1880 kWh/Year	2200 kWh/Year	2500 kWh/Year	2870 kWh/Year
TEMPERATURE	INDOOR	27 °C -	29 °C -	27 °C -	29 °C -
		19 °C -	19 °C -	19 °C -	19 °C -
	OUTDOOR	35 °C -	46 °C -	35 °C -	46 °C -
		24 °C -	24 °C -	24 °C -	24 °C -
NET WEIGHT	INDOOR	15.8 kg		16.0 kg	
	OUTDOOR	34.3 kg		56.3 kg	
DIMENSIONS OF THE UNIT	INDOOR	1065 x 301 x 294 mm		1065 x 301 x 294 mm	
	OUTDOOR	720 x 548 x 265 mm		880 x 793 x 310 mm	
COUNTRY OF ORIGIN		THAILAND			

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 32 5/16/2016 10:31:12 AM

Safety Information on Installation

Carefully follow the precautions listed below because they are essential to guarantee the safety of both the air conditioner and the workers.

- Always disconnect the air conditioner from the power supply before servicing it or accessing its internal components.
- Verify that installation and testing operations are performed by qualified personnel.
- Verify that the air conditioner is not installed in an easily accessible area.

General information

- Carefully read the content of this manual before installing the air conditioner and store the manual in a safe place in order to be able to use it as reference after installation.
- For maximum safety, installers should always carefully read the following warnings.
- Store the operation and installation manual in a safe location and remember to hand it over to the new owner if the air conditioner is sold or transferred.
- This manual explains how to install an indoor unit with a split system with two SAMSUNG units. The use of other types of units with different control systems may damage the units and invalidate the warranty. The manufacturer shall not be responsible for damages arising from the use of non compliant units.
- This product has been determined to be in compliance with the Low Voltage Directive (2006/95/EC) and the Electromagnetic Compatibility Directive (2004/108/EC) of the European Union.
- The manufacturer shall not be responsible for damage originating from unauthorised changes or the improper connection of electric and requirements set forth in the “Operating limits” table, included in the manual, shall immediately invalidate the warranty.
- The air conditioner should be used only for the applications for which it has been designed: the indoor unit is not suitable to be installed in areas used for laundry.
- Do not use the units if damaged. If problems occur, switch the unit off and disconnect it from the power supply.
- In order to help prevent electric shocks, fires or injuries, always stop the unit, disable the protection switch and contact SAMSUNG’s technical support if the unit produces smoke, if the power cable is hot or damaged or if the unit is very noisy.
- Always remember to inspect the unit, electric connections, refrigerant tubes and protections regularly. These operations should be performed by qualified personnel only.
- The unit contains moving parts, which should always be kept out of the reach of children.
- Do not attempt to repair, move, alter or reinstall the unit. If performed by unauthorised personnel, these operations may cause electric shocks or fires.
- Do not place containers with liquids or other objects on the unit.
- All the materials used for the manufacture and packaging of the air conditioner are recyclable.
- The packing material and exhaust batteries of the remote control (optional) must be disposed of in accordance with current laws.
- The air conditioner contains a refrigerant that has to be disposed of as special waste. At the end of its life cycle, the air conditioner must be disposed of in authorised centres or returned to the retailer so that it can be disposed of correctly and safely.

Installation of the unit

- IMPORTANT: When installing the unit, always remember to connect first the refrigerant tubes, then the electrical lines. Always disassemble the electric lines before the refrigerant tubes.
- Upon receipt, inspect the product to verify that it has not been damaged during transport. If the product appears damaged, DO NOT INSTALL it and immediately report the damage to the carrier or retailer (if the installer or the authorised technician has collected the material from the retailer.)
- After completing the installation, always carry out a functional test and provide the instructions on how to operate the air conditioner to the user.
- Do not use the air conditioner in environments with hazardous substances or close to equipment that release free flames to avoid the occurrence of fires, explosions or injuries.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 33 5/16/2016 10:31:12 AM

- Our units must be installed in compliance with the spaces indicated in the installation manual to ensure either accessibility from both sides or ability to perform routine maintenance and repairs. The units' components must be accessible and that can be disassembled in conditions of complete safety either for people or things. For this reason, where it is not observed as indicated into the Installation Manual, the cost necessary to reach and repair the unit (in safety, as required by current regulations in force) with slings, trucks, scaffolding or any other means of elevation won't be considered in-warranty and will be charged to end user.
- When installing the outdoor unit at the seaside, make sure that it is not directly exposed to sea breeze. If you cannot find an adequate place free from direct sea breeze, construct a protection wall or a protective fence.
  - Install the outdoor unit in a place (such as near buildings etc.) where it can be protected from sea breeze. Failure to do so may cause a damage to the outdoor unit.

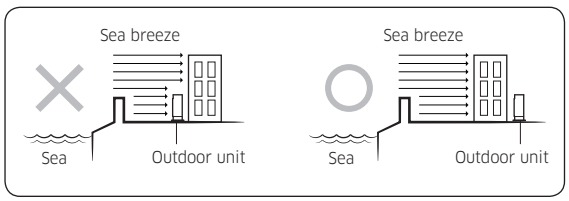

- If you cannot avoid installing the outdoor unit at the seaside, construct a protection wall around to block the sea breeze.
- Construct a protection wall with a solid material such as concrete to block the sea breeze. Make sure that the height and the width of the wall are 1.5 times larger than the size of the outdoor unit. Also, secure a space larger than 600 mm between the protection wall and the outdoor unit for exhausted air to ventilate.

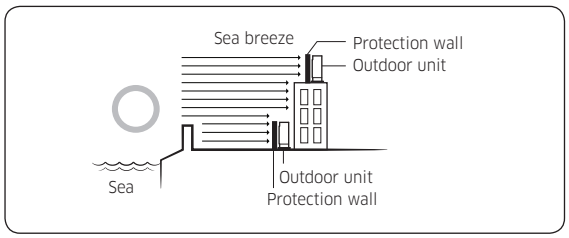

- Install the unit in a place where water can drain smoothly.
- If you have any difficulty finding installation location as prescribed above, contact your manufacturer for details.
- Be sure to clean the sea water and the dust on the heat exchanger of the outdoor unit and apply a corrosion inhibitor on it. (At least once in a year.)

Power supply line, fuse, or circuit breaker

- Always make sure that the power supply is compliant with current safety standards. Always install the air conditioner in compliance with current local safety standards.
- Always verify that a suitable grounding connection is available.
- Verify that the voltage and frequency of the power supply comply with the specifications and that the installed power is sufficient to ensure the operation of any other domestic appliance connected to the same electric lines.
- Always verify that the cut-off and protection switches are suitably dimensioned.
- Verify that the air conditioner is connected to the power supply in accordance with the instructions provided in the wiring diagram included in the manual.
- Always verify that electric connections (cable entry, section of leads, protections…) are compliant with the electric specifications and with the instructions provided in the wiring scheme. Always verify that all connections comply with the standards applicable to the installation of air conditioners.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 34 5/16/2016 10:31:13 AM

Preparation

Step 1.1 Choosing the installation location

Overview of installation location requirements

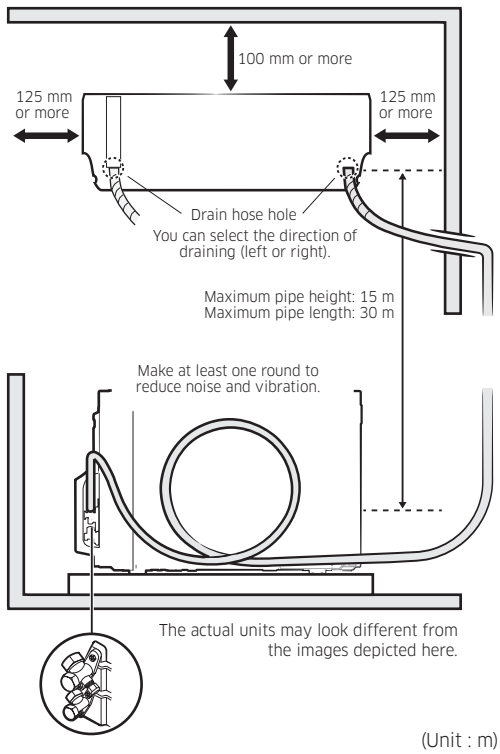

(Unit : m)

Model	Pipe length		Pipe height
	Minimum	Maximum	Maximum
✳✳18✳✳	3	15	7
✳✳24✳✳	3	20	8

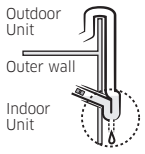

Cut insulation to have rainwater drained

CAUTION

Make a U-trap (A) on the pipe (which is connected to the indoor unit) at outer wall and cut the bottom part of the insulation (about 10 mm) to prevent rainwater from getting inside through the insulation.

⚠ CAUTION

- Comply with the length and height limits described in the figure above.

Minimum clearances for the outdoor unit

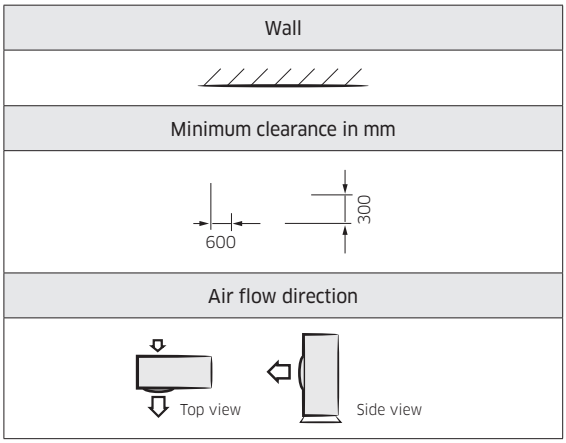

When installing 1 outdoor unit (6 cases)

(Unit: mm)

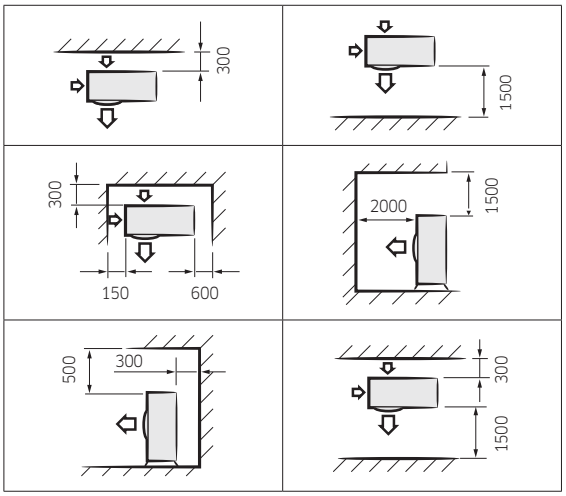

Installation

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 35 5/16/2016 10:31:17 AM

When installing more than 1 outdoor unit (5 cases)

(Unit: mm)

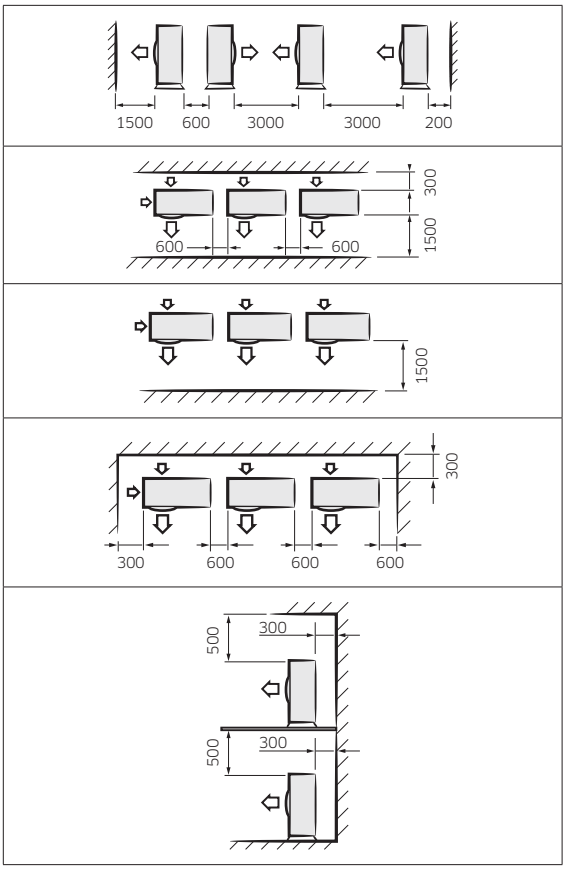

⚠ CAUTION

- If the outdoor unit is installed with any insufficient clearance, it may generate sound and affect the whole product.
- Be sure to install the outdoor unit in a level place where its vibration does not affect the whole product.

Step 1.2 Packing and Unpacking

Indoor unit

Packing the unit as below procedure

1. Put the indoor unit onto the packing case.
2. Assemble cushion-both side of indoor unit. (Left and Right)
3. Seal the packing case.

Unpacking the unit as below procedure

1. Open the packing case.
2. Take out the both side of cushion(Left and Right).
3. Move the set from the packing case.

Outdoor unit

Packing the unit as below procedure

1. Put the outdoor unit onto the cushion-bottom.
2. Put the cushion-top onto the outdoor unit
3. Put the packing case from the top of set.
4. Seal the packing case.

Unpacking the unit as below procedure

1. Take out the packing case from the set.
2. Take out the cushion-top.
3. Move the set from the cushion-bottom.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 36 5/16/2016 10:31:20 AM

Step 1.3 Checking and preparing accessories and tools

Accessories

Accessories in the indoor unit package

Installation plate (1)	Remote control (1)
	
Remote control holder (1)	Remote control battery (2)
	
User and Installation Manual (1)	M4 x 12 tapping screw (2)
Cap screw (2)	

Optional accessories

Insulated assembly pipe, Ø 6.35 mm (1)	Insulated assembly pipe, Ø 12.70 mm (1) ✳✳18✳✳
Insulated assembly pipe, Ø 15.88 mm (1) ✳✳24✳✳	Drain Hose, 2 m long (1)
Pipe clamp B (3)	Pipe clamp A (3)
Vinyl tape (2)	PE T3 foam tube insulation (1)
Putty 100 g (1)	Drain plug (1)
	
M4 x 25 tapped screw (6)	Cement nail (6)
3-wire assembly cable (1)	

Accessories in the outdoor unit package

Rubber leg (4)

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 37 5/16/2016 10:31:26 AM

NOTE

- A flare nut is attached to the end of each pipe of an evaporator or a service port. Use flare nuts when connecting the pipes.
- Wire assembly cables are optional. If they are not supplied, use standard cables.
- The drain plug and the rubber legs are included only when the air conditioner is supplied without assembly pipes.
- If these accessories are supplied, they are in the accessory package or outdoor unit package.

Tools

General tools

- Vacuum pump (Backward flowing prevention)
- Manifold gauge
- Stud finder
- Torque wrench
- Pipe cutter
- Reamer
- Pipe bender
- Spirit level
- Screwdriver
- Spanner
- Drill
- L-wrench
- Measuring tape

Tools for test operation

- Thermometer
- Resistance meter
- Electroscope

Step 1.4 Drilling a hole through the wall

Before fixing the installation plate to a wall and then fixing the indoor unit to the installation plate, a window frame, or a gypsum board, you must determine the position of a hole (with 65 mm inner diameter) through which the pipe bundle (consisting of power and communication cables, refrigerant pipes, and drain hose) will pass and then drill that hole.

1 Determine the position of a 65 mm hole in consideration of the possible directions of the pipe bundle and the minimum distances between the hole and the installation plate.

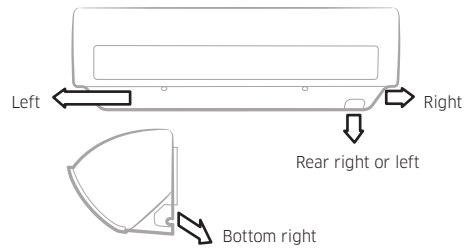

<Possible directions of the pipe bundle>

⚠ CAUTION

- If changing the pipe direction from left to right, do not drastically bent it but slowly turn it in the opposite direction as shown. Otherwise, the pipe may be damaged in the process.

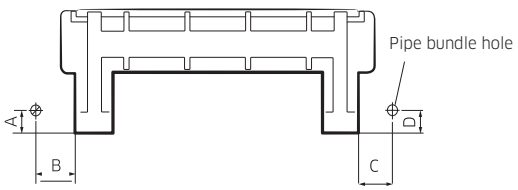

<Minimum distances between the hole and the installation plate>

(Unit : mm)

Model	A	B	C	D
✳✳18/24✳✳	33	110	110	33

Pipe bundle hole: Ø 65 mm

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 38 5/16/2016 10:31:27 AM

2 Drill the hole.

⚠ CAUTION

- Be sure to drill only one hole.
- Make sure that the hole slants downwards so that the drain hose slants downwards to drain water well.

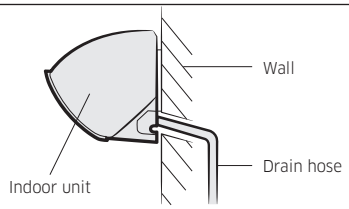

<The hole slants downwards>

Step 1.5 Taping the pipes, cables, and drain hose

1 Wrap foam insulation on parts without insulation on the ends of the refrigerant pipes, as shown in the figure. This wrapping minimises condensation problem.

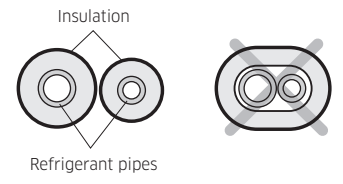

2 Wind the refrigerant pipes, power cable, communication cable and drain hose with vinyl tape to make a pipe bundle.

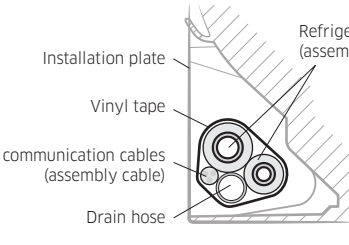

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 39 5/16/2016 10:31:28 AM

Indoor Unit Installation

Please scan this QR code for detail video of indoor unit installation.

Step 2.1 Disassembling the cover panel

1 Remove the cap screws, then the screws.

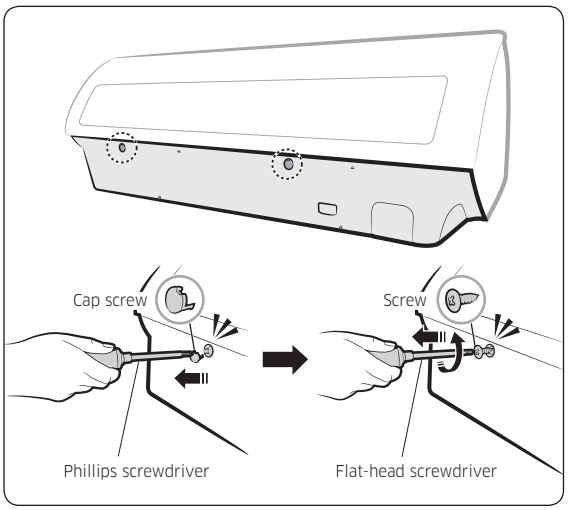

2 Unlock the side hooks (❶, ❷), then centre hooks (❸). Then unlock the bottom hooks (❹) to pull out the cover panel.

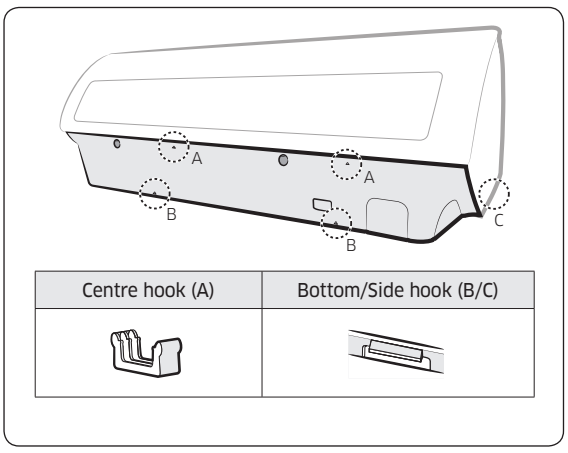

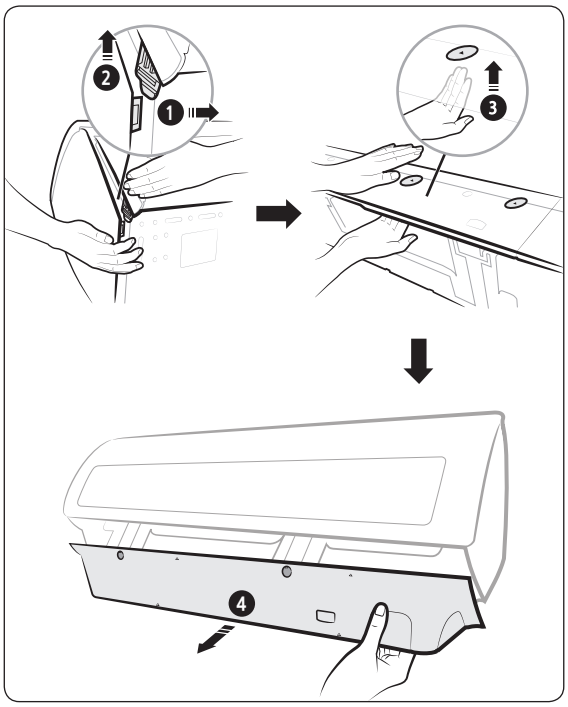

Step 2.2 Disassembling the installation plate

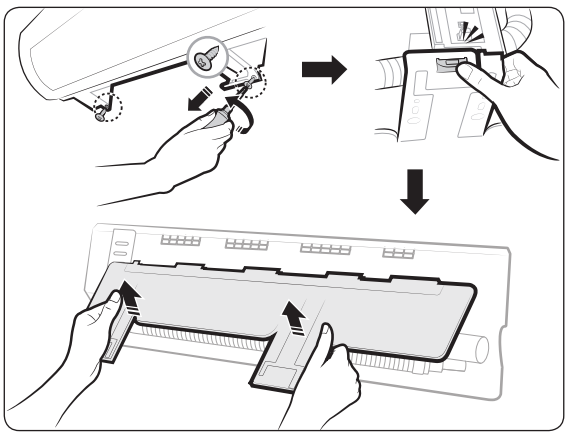

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 40 5/16/2016 10:31:33 AM

Step 2.3 Connecting the cables (assembly cable)

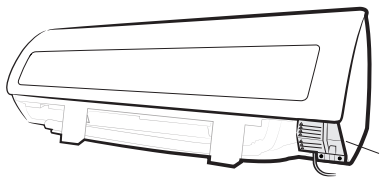

Before connecting				
	Correct	Upside down	Damaged	Non-circular
After connecting				
	Correct (Front view)	Correct (Side view)	Upside down	Non-fitted

<Circular terminal>

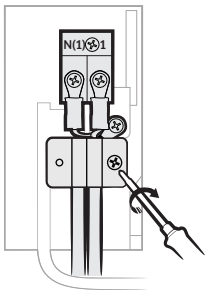

Fasten the screws for the wire holders.

Model	✳✳18/24✳✳
Power cable (Indoor unit)	3G x 2.5 mm², H05VV-F
Indoor-to-Outdoor power cable	3G x 2.5 mm², H07RN-F
Type GL	25A

- When performing electrical and earthing works, be sure to comply with the 'technical standards of electrical installations' and the 'wiring regulations' in the local regulations.
- Tighten the terminal block screw to 1.2-1.8 N•m (1.2-1.8 kgf•cm).

NOTE

- Each wire is labelled with the corresponding terminal number.
- Use shield cable (Category 5; less than 50pF/m) for noisy environmental site.
- Power supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord. (Code designation IEC: 60245 IEC66/CENELEC: H07RN-F, IEC: 60227 IEC53/CENELEC: H05VV-F)
- Power & Communication cable shall not exceed 30m.

⚠ CAUTION

- For the terminal block wiring, use a wire with a ring terminal socket only. Regular wires without a ring terminal socket may become a hazard due to overheating of the electrical contact during installation.
- If you need to extend the pipe, be sure to extend the cable, too. The maximum length of each of the cable and pipe used should not exceed 15 meters (✳✳18✳✳) and 20 meters (✳✳24✳✳).
- Do not connect two or more different cables to extend the length. This connection may cause fire.
- Each circular terminal must match the size of its corresponding screw in the terminal block.
- After connecting the cables, make sure that terminal numbers on the indoor and outdoor units match.
- Ensure that power and communication cables are separated, they must not be in the same cable.

⚠ WARNING

- Connect the wires firmly so that wires cannot be pulled out easily. (If they are loose, it could cause burn-out of the wires.)

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 41 5/16/2016 10:31:38 AM

Step 2.4 Optional: Extending the power cable

1 Prepare a compressor and the following tools.

Tools	Spec	Shape
Crimping pliers	MH-14	
Connection sleeve (mm)	20xØ7.0 (HxOD)	
Insulation tape	Width 18 mm	
Contraction tube (mm)	50xØ8.0 (LxOD)	

2 As shown in the figure, peel off the shields from the rubber or wire of the power cable.

- Peel off 20 mm of the wire shields of the tube installed already.

⚠ CAUTION

- For information about the power cable specifications for indoor and outdoor units, refer to the installation manual.
- After peeling off the tube wire, you must insert a contraction tube.

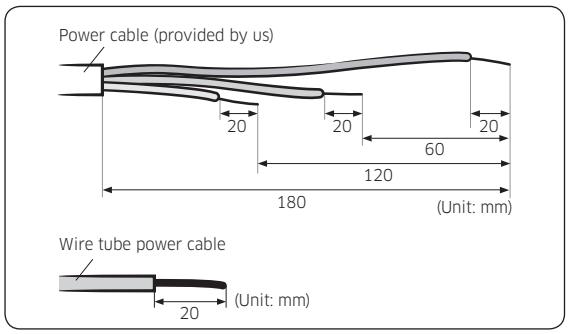

3 Insert both sides of core wire of the power cable into the connection sleeve.

- Method 1: Push the core wire into the sleeve from both sides.
- Method 2: Twist the wire cores together and push it into the sleeve.

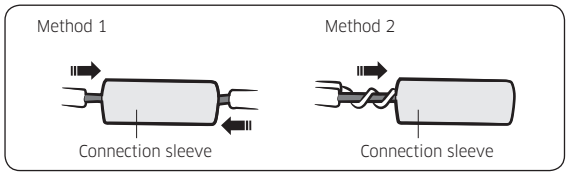

4 Using a compressor, compress the two points and flip it over and compress another two points in the same location.

- The compression dimension should be 8.0.

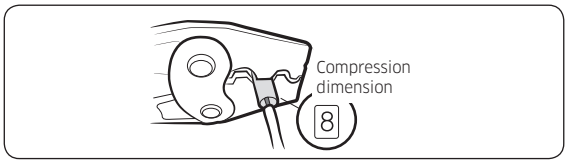

- After compressing it, pull both sides of the wire to make sure it is firmly pressed.

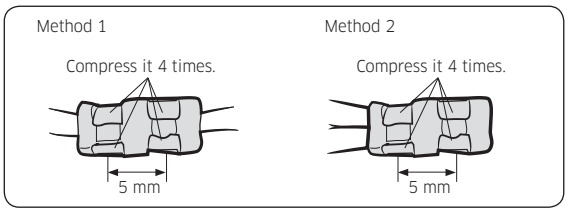

5 Wrap it with the insulation tape twice or more and position your contraction tube in the middle of the insulation tape.

A total of three or more layers of insulation is required.

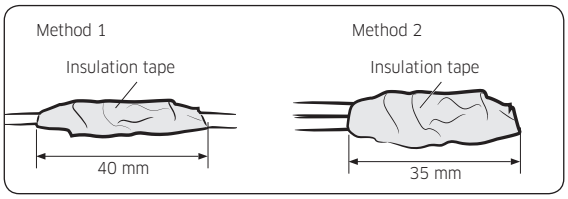

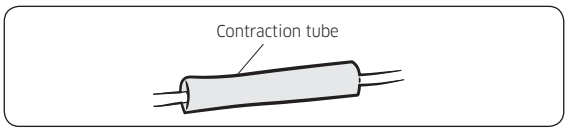

6 Apply heat to the contraction tube to contract it.

7 After tube contraction work is completed, wrap it with the insulation tape to finish..

- Make sure that the connection parts are not exposed to outside.
- Be sure to use insulation tape and a contraction tube made of approved reinforced insulating materials that have the same level of withstand voltage with the power cable. (Comply with the local regulations on extensions.)



GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 42 5/16/2016 10:31:41 AM

⚠ WARNING

- In case of extending the electric wire, please DO NOT use a round-shaped pressing socket.
  - Incomplete wire connections can cause electric shock or a fire.

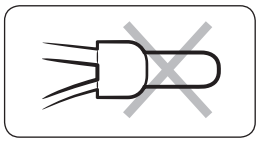

Step 2.5 Installing and connecting the drain hose

1 Install the drain hose.

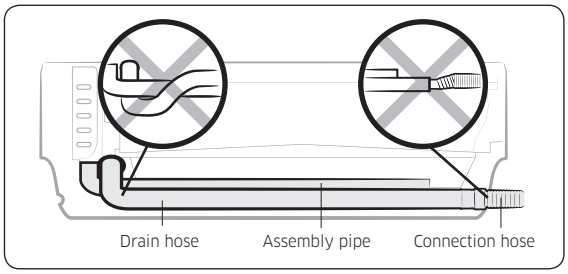

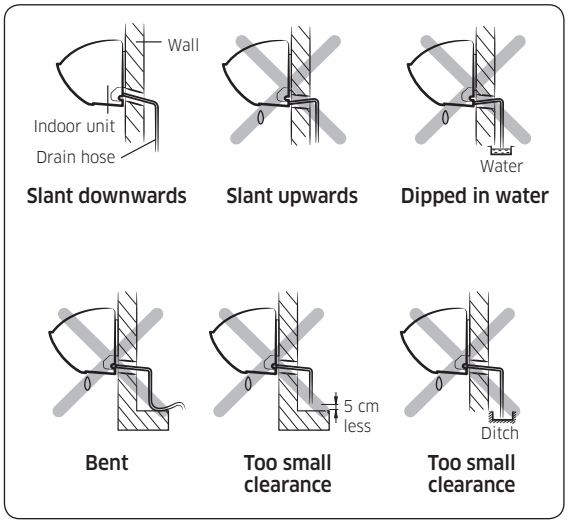

2 Pour water into the drain pan. Check whether the hose is well drained.

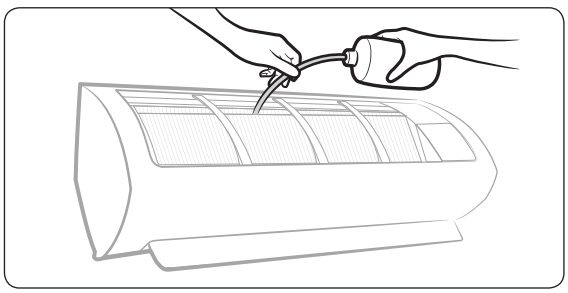

⚠ CAUTION

- Make sure that the indoor unit is in upright position when you pour water to check for leakage. Make sure that the water does not overflow onto the electrical part.
- If the diameter of the connection hose is smaller than the product's drain hose, water leakage may occur.
- Inadequate installation may cause water leakage.
- If the drain hose is routed inside the room, insulate the hose so that dripping condensation does not damage the furniture or floors.
- Do not box in or cover the drain hose connection. Drain hose connection must be easily accessible and serviceable.

Step 2.6 Optional: Extending the drain hose

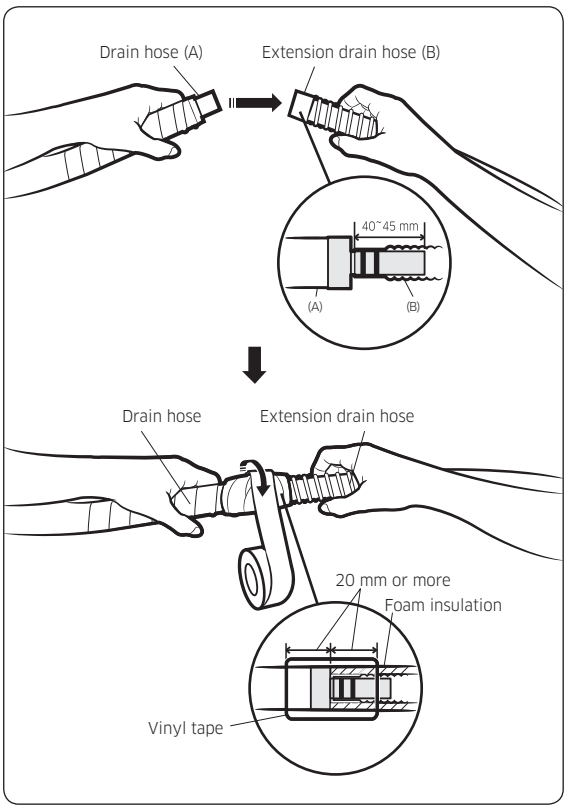

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 43 5/16/2016 10:31:43 AM

Step 2.7 Optional: Changing the direction of the drain hose

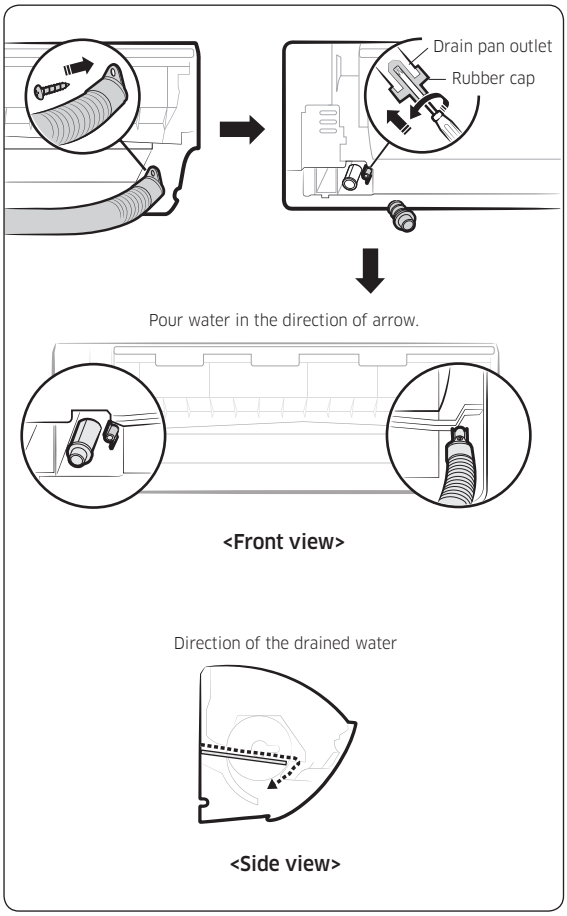

⚠ CAUTION

- Make sure that the indoor unit is in upright position when you pour water to check for leakage. Make sure that the water does not overflow onto the electrical part.

Step 2.8 Installing and connecting the assembly pipes to the refrigerant pipes (assembly pipe)

Connect indoor and outdoor units with field-supplied copper pipes by means of flare connections. Use insulated seamless refrigeration grade pipe only, (Cu DHP type according to ISO1337), degreased and deoxidized, suitable for operating pressures of at least 4200 kPa and for burst pressure of at least 20700 kPa. Under no circumstances must sanitary type copper pipe be used.

There are 2 refrigerant pipes of different diameters:

- The smaller one is for the liquid refrigerant
- The larger one is for the gas refrigerant

A short liquid refrigerant pipe and a short gas refrigerant pipe are already fitted to the air conditioner. The connection procedure for the refrigerant pipes varies according to the exit position of each pipe when facing the wall:

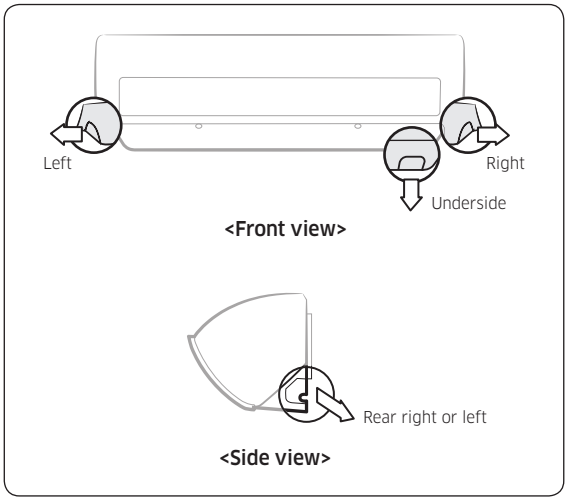

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 44 5/16/2016 10:31:44 AM

1 Cut out the appropriate knock-out piece (A, B, C) on the rear of the indoor unit unless you connect the pipe directly from the rear.

2 Smooth the cut edges.

3 Remove the protection caps of the pipes and connect the assembly pipe to each pipe. Tighten the nuts first with your hands, and then with a torque wrench, applying the following torque:

Outer diameter (mm)	Torque (N•m)	Torque (kgf•cm)
ø 6.35	14 to 18	140 to 180
ø 9.52	34 to 42	350 to 430
ø 12.70	49 to 61	500 to 620
ø 15.88	68 to 82	690 to 830

NOTE

- If you want to shorten or extend the pipes, see Step 2.9 Shortening or extending the refrigerant pipes (assembly pipe) on page 45.

4 Cut off the remaining foam insulation.

5 If necessary, bend the pipe to fit along the bottom of the indoor unit. Then pull it out through the appropriate hole.

- The pipe should not project from the rear of the indoor unit.
- The bending radius should be 100 mm or more.

6 Pass the pipe through the hole in the wall.

NOTE

- The pipe will be insulated and fixed permanently into position after finishing the installation and the gas leak test. For further details. see Step 4.1 Performing the gas leak tests on page 51.

⚠ CAUTION

- Tighten the flare nut with a torque wrench according to specified method. If the flare nut is over-tightened, the flare may break and cause refrigerant gas leakage.
- Do not box in or cover the pipe connection. All refrigerant pipe connection must be easily accessible and serviceable.

Step 2.9 Shortening or extending the refrigerant pipes (assembly pipe)

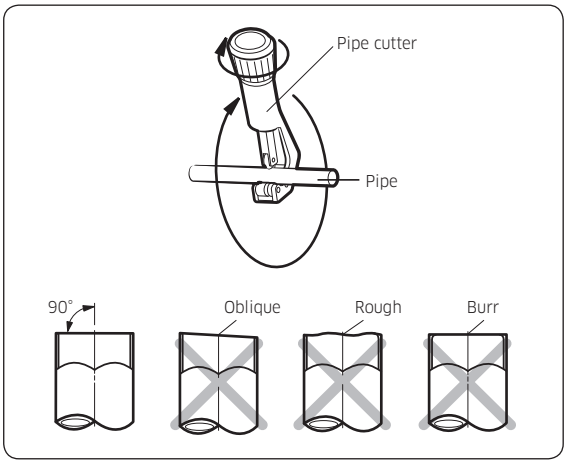

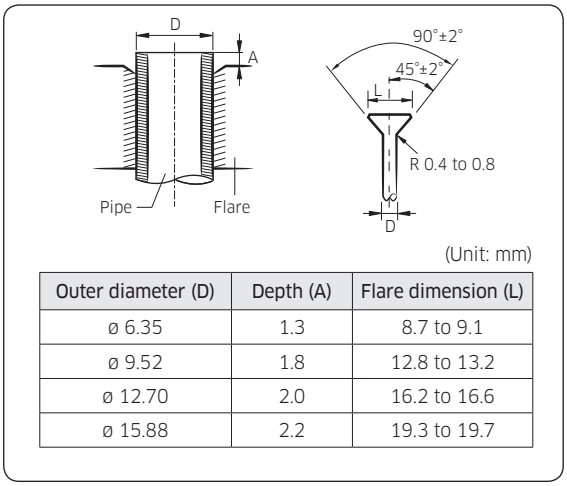

(Unit: mm)

Outer diameter (D)	Depth (A)	Flare dimension (L)
ø 6.35	1.3	8.7 to 9.1
ø 9.52	1.8	12.8 to 13.2
ø 12.70	2.0	16.2 to 16.6
ø 15.88	2.2	19.3 to 19.7

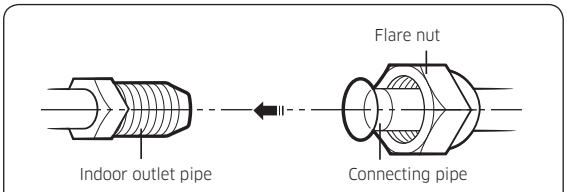

Outer diameter (mm)	Torque (N•m)	Torque (kgf•cm)
ø 6.35	14 to 18	140 to 180
ø 9.52	34 to 42	350 to 430
ø 12.70	49 to 61	500 to 620
ø 15.88	68 to 82	690 to 830

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 45 5/16/2016 10:31:46 AM

⚠ CAUTION

- If you need a pipe longer than specified in piping codes and standards, you must add refrigerant to the pipe. Otherwise, the indoor unit may freeze.
- While removing burrs, put the pipe face down to make sure that the burrs do not get in to the pipe.

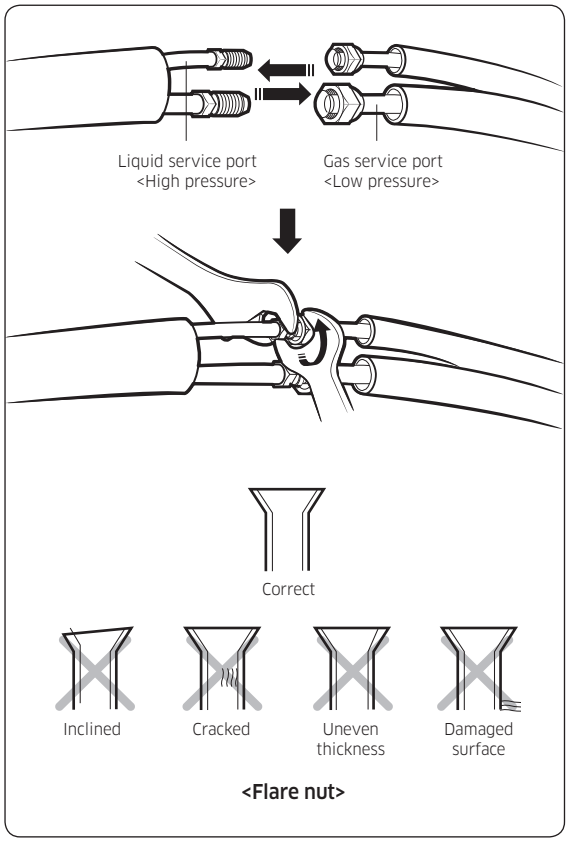

<Flare nut>

NOTE

- Excessive torque may cause gas leakage. When extending the pipe with welding or brazing, ensure that nitrogen is used during the welding or brazing process. The joint must be accessible and serviceable.

⚠ CAUTION

- Tighten the flare nut at the specified torque. If the flare nut is over-tightened, it may break to cause leakage of refrigerant gas.

Step 2.10 Fixing the installation plate

You can install the indoor unit on a wall, window frame, or gypsum board.

⚠ WARNING

- Make sure that the wall, window frame, or gypsum board can withstand the weight of the indoor unit. If you install the indoor unit in a place where it is not strong enough to withstand the unit's weight, the unit could fall and cause injury.

When fixing the indoor unit on a wall

Fix the installation plate to the wall giving attention to the weight of the indoor unit.

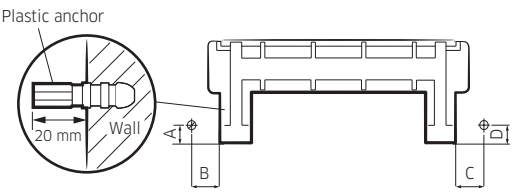

(Unit : mm)

Model	A	B	C	D
✶✶18/24✶✶	33	110	110	33

Pipe bundle hole: Ø 65 mm

NOTE

- If you mount the plate to a concrete wall using plastic anchors, make sure that gaps between the wall and the plate, created by projected anchor, is less than 20 mm.

When fixing the indoor unit on a window frame

1. Determine the positions of the wooden uprights to be attached to the window frame.
2. Attach the wooden uprights to the window frame giving attention to the weight of the indoor unit.
3. Attach the installation plate to the wooden upright using tapping screws.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 46 5/16/2016 10:31:47 AM

When fixing the indoor unit on a gypsum board

1 Use stud finder to find out locations of the studs.

2 Fix the plate hanger on two studs.

⚠ CAUTION

- If you fix the indoor unit on a gypsum board, use only specified anchor bolts on reference positions. Otherwise, the gypsum surrounding the joints may crumble over time and cause the screws to be loosened and stripped. This may lead to physical injury or equipment damage.
- Search for other spots if there are less than two studs, or the distance between the studs are different from the plate hanger.
- Fix the installation plate without inclining to one side.

Step 2.11 Fixing the indoor unit to the installation plate

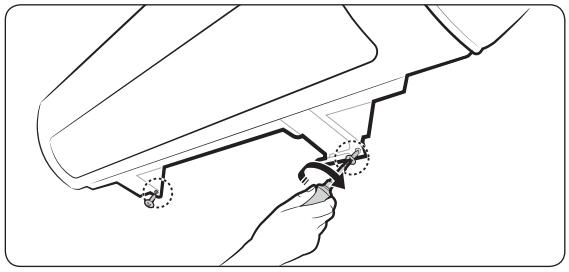

⚠ CAUTION

- Make sure that the pipe bundle does not move when you install the indoor unit onto the installation plate.

Step 2.12 Assembling the cover panel

1 Lock the side hooks (D), then centre hooks (B). Then lock the bottom hooks (C) to engage the cover panel in place.

2 Fasten the screw (A-❶), then assemble the cap screws (A-❷).

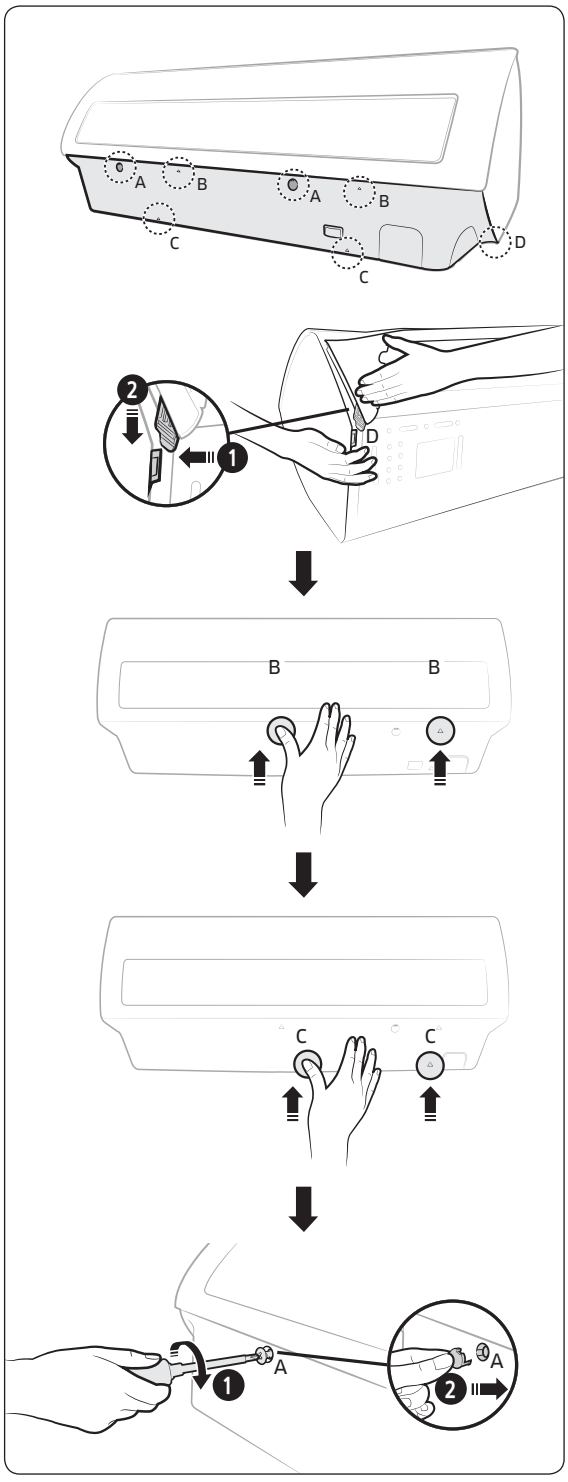

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 47 5/16/2016 10:31:48 AM

Outdoor Unit Installation

Step 3.1 Fixing the outdoor unit in place

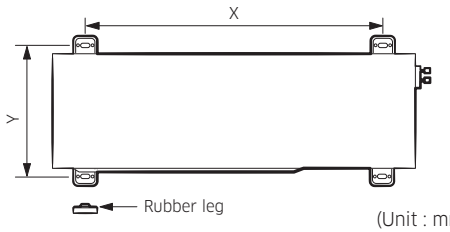

(Unit : mm)

Model	X	Y
✳✳18✳✳	507	292
✳✳24✳✳	660	340

1 Place the outdoor unit as directed on the top of the unit to let the discharged air out properly.

2 Fix the outdoor unit in level to an appropriate support using anchor bolts.

NOTE

- Secure the rubber legs to help prevent the generation of noise and vibration.
- If the outdoor unit is exposed to strong winds, install shield plates around the outdoor unit so that the fan can operate correctly.

Optional: Fixing the outdoor unit to a wall with a rack

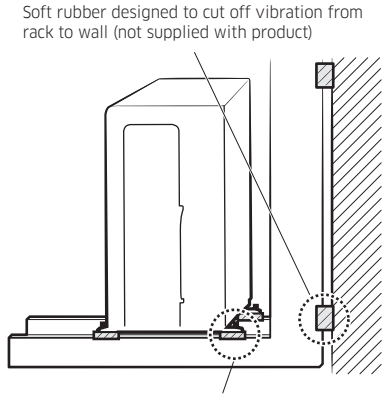

NOTE

- Make sure that the wall can support the weights of the rack and the outdoor unit.
- Install the rack close to the column as much as possible.

Step 3.2 Connecting the cables and the refrigerant pipes

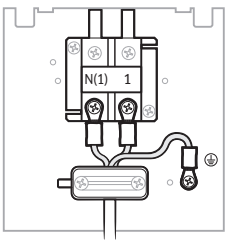

⚠ CAUTION

- Be sure to fix the power cables and communication cable with a cable clamp.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 48 5/16/2016 10:31:50 AM

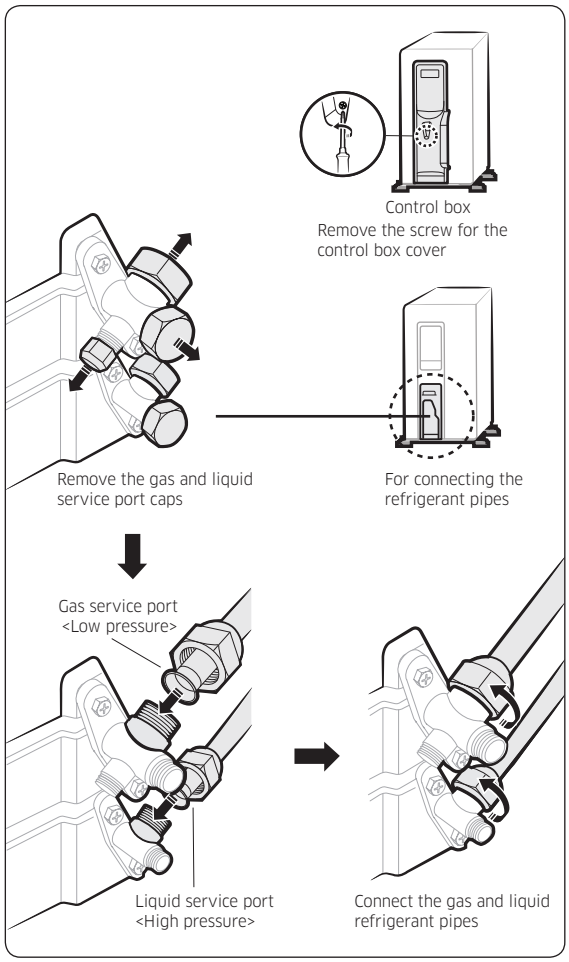

Step 3.3 Evacuating the air

The outdoor unit is loaded with sufficient R-22 refrigerant. You should evacuate the air in the indoor unit and in the pipe. If air remains in the refrigerant pipes, it affects the compressor. It may cause reduction of cooling capacity and malfunction. Use a vacuum pump.

⚠ CAUTION

- When installing, make sure there is no leakage. When recovering the refrigerant, ground the compressor first before removing the connection pipe. If the refrigerant pipe is not properly connected and the compressor works with the stop valve open, the pipe inhales the air and it makes the pressure inside of the refrigerant cycle abnormally high. It may cause explosion and injury.

1 Leave the system in the standby mode.

⚠ WARNING

- Do not turn on the system! This is necessary for better vacuum operation (full OPEN position of Electronic Expansion Valve).

2 Connect the charging hose of the low pressure side of manifold gauge to a gas service port as seen in the picture.

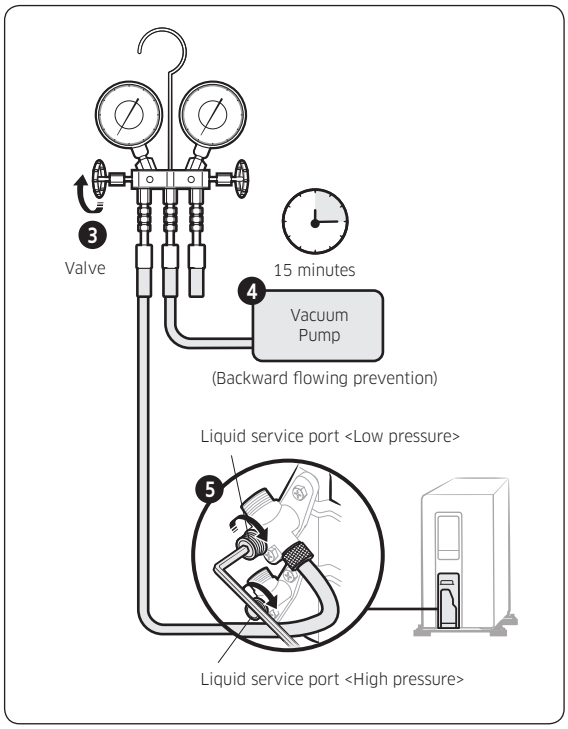

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 49 5/16/2016 10:31:51 AM

3 Open the valve of the low pressure side of manifold gauge anticlockwise.

4 Evacuate the air in the connected pipes using the vacuum pump for about 15 minutes.
   - Make sure that pressure gauge shows -0.1 MPa (-76 cmHg, 5 torr) after about 10 minutes. This procedure is very important to avoid a gas leak.
   - Close the valve of the low pressure side of manifold gauge clockwise.
   - Turn off the vacuum pump.
   - Check for 2 minutes if there is any pressure change.
   - Remove the hose of the low pressure side of manifold gauge.

5 Set a valve cork of liquid and gas service port to the open position.

Step 3.4 Adding refrigerant

If you use a pipe longer than the length specified in the piping codes and standards, you must add 20g of refrigerant R-22 for each extra meter. If you use a pipe shorter than the length specified in the piping codes and standards, the evacuating time is normal. Refer to the Service Manual for further details.

⚠ CAUTION

- The remaining air in the Refrigeration cycle, which contains moisture, may cause malfunction on the compressor.
- Always contact the service centre or a professional installation agency for product installation.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 50 5/16/2016 10:31:52 AM

Installation Inspection

Step 4.1 Performing the gas leak tests

1 Before inspecting the leakage, use a torque wrench to close the cap for the stop valve. (Comply with a tightening torque for each size of the diameter, and tighten the cap firmly to prevent any leakage.)

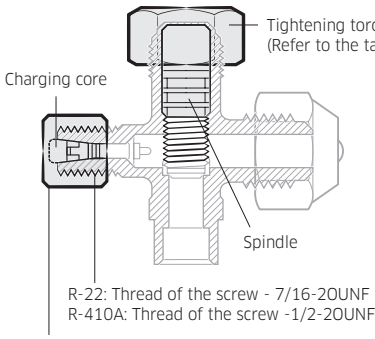

Outer diameter (mm)	Tightening torque	
	Body cap (N•m)	Charging port cap (N•m)
ø 6.35	20 to 25	10 to 12
ø 9.52	20 to 25	
ø 12.70	25 to 30	
ø 15.88	30 to 35	
Over ø 19.05	35 to 40	

(1 N•m = 10 kgf•cm)

2 Insert inert gas into the pipes connected to indoor and outdoor units.

3 Test leakage on the connection parts of the indoor and outdoor units with soap lather or liquid.

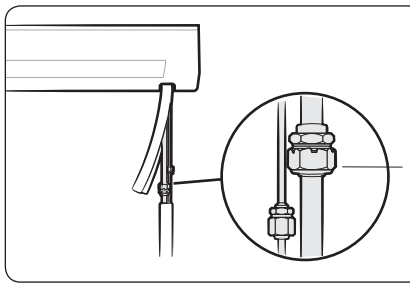

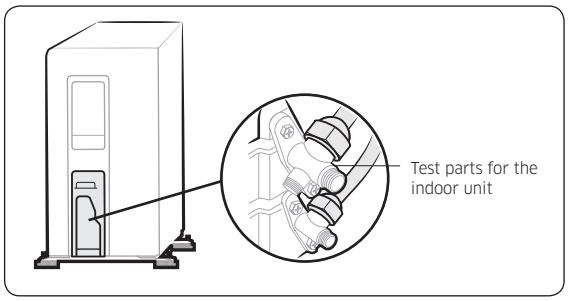

Step 4.2 Running the Smart Install mode

1 Make sure that the air conditioner is in the standby status.

2 Hold down the (Power), (Mode), and (SET) buttons on the remote control simultaneously for 4 seconds.

3 Wait until Smart Install mode succeeds or fails. It takes approximately 7 to 13 minutes.

- While Smart Install mode is proceeding:

Type	88 Display	LED Display
Indoor unit indicator		
	The progress is displayed as a number between 0 and 99 on the indoor unit display.	The LEDs on the indoor unit display blink in sequence, then all of them blink simultaneously. These operations repeat.

- When Smart Install mode succeeds: Smart Install mode ends with ringing sound, and the air conditioner is in standby status.
- When Smart Install mode fails: An error message is displayed on the indoor unit display, and Smart Install mode ends.

NOTE

- Smart Install mode can be operated only with the supplied remote control.
- During the Smart install mode procedure, remote control cannot be operated.

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 51 5/16/2016 10:31:54 AM

When error occurs, take necessary measures by referring to the following table. For more information on necessary measures for errors, refer to the service manual.

Error indicator				Error	Measures for the installer to take
88 Display	LED Display				
	LED 1	LED 2	LED 3		
	⏻	🕒	🔔 / 📶 / ⚙		
E101	○	◑	◑	Communication error between indoor and outdoor units	• Check the connection wire between the indoor and outdoor units (whether the power cable or communication cable is crossed or not).
E121	○	◑	○	Error on indoor temperature sensor	• Check the connection of the connector.
E122,E123	◑	◑	○	Error on indoor heat exchanger	• Check the connection of the connector.
E154	○	○	◑	Error on indoor fan motor	• Check the connection of the connector. • Remove foreign substance. (Check for the cause that restrains motor.)
88 display and all LEDs blink. E162,E163	◑	◑	◑	EEPROM/Option error	• Re-set options.
E422	●	○	◑	Refrigerant flow blocking error	• Check if the stop valve is completely open. • Check if there is any blockage in the refrigerant pipe which connects the indoor and outdoor units. • Check for refrigerant leak.
E554	●	○	◑	Lack of refrigerant (for inverter models only)	• Check if a sufficient amount of refrigerant is additionally charged for the pipe longer than specified in piping codes and standards. • Check for refrigerant leak between valve and pipe connection.
	✻ This LED pattern appears when an error occurs on the outdoor unit.				

✻ ○ : Off, ◑ : Blinking, ● : On

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 52 5/16/2016 10:31:57 AM

Step 4.3 Performing final check and trial operation

1 Check the following:
- Strength of the installation site
- Tightness of pipe connection to detect gas leak
- Electric wiring connection
- Heat-resistant insulation of the pipe
- Drainage
- Grounding conductor connection
- Correct operation (Take the following steps.)

2 Press the (Power) button on the remote control to check the following:
- The indicator on the indoor unit lights up.
- The airflow blade opens and the fan gears up for operation.

3 Press the (Mode) button to select Cool mode. Then take the following sub-steps:
- In Cool mode, use the Temperature button to set the set temperature to 16 °C.
- Check whether, approximately 3 to 5 minutes later, the outdoor unit starts, and a cool air blows out.
- After 12 minutes of stationary condition, check the indoor unit air treatment.

4 Press the (Air swing) button to check whether the airflow blades work properly.

5 Press the (Power) button to stop the trial operation.

Pumping down refrigerant

Pump-down is an operation intended to collect all the system refrigerant in the outdoor unit. This operation must be carried out before disconnecting the refrigerant tubing in order to avoid refrigerant loss to the atmosphere.

1 Shut off the liquid valve with the Allen wrench.

2 Turn on the air conditioner in cooling with fan operating at high velocity. (Compressor will immediately start, provided 3 minutes have elapsed since the last stop.)

3 After 2 minutes of operation, shut the suction valve with the same wrench.

4 Turn off the air conditioner and switch mains supply off.

5 Disconnect tubing. After disconnection, protect valves and tubing ends from dust.

⚠ CAUTION

- Compressor damage may occur if the compressor is run at a negative suction pressure.

Pumping down for removing the product

1 Turn on th air conditioner and select Fast Cool mode.

2 Let the compressor run for more than 5 minutes. If the compressor does not operate for more than 5 minutes due to protection control, wait about 2 minutes, and then carry out the next procedure.

3 Release the valve caps on High and Low pressure side.

4 Use L-wrench to close the valve on the high pressure side.

5 After approximately 1 minute, close the valve on the low pressure side.

6 Stop operation of the air conditioner by pressing the (Power) button on the indoor unit or remote control.

7 Disconnect the pipes.

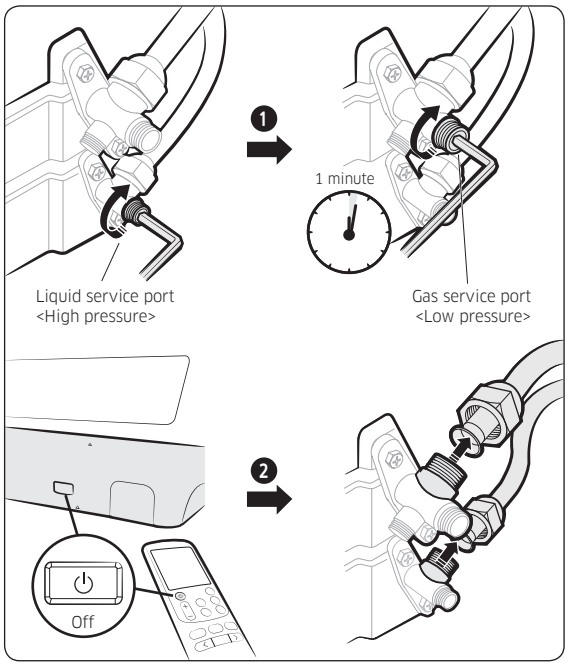

GU_BETTER_ON-OFF_R-22_IB&IM_EN_DB68-06023A-00_160203.indd 53 5/16/2016 10:31:59 AM