

LED TV

user manual

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.

Still image warning

Avoid displaying still images (like jpg picture files) or still image element (like TV programme logo, panorama or 4:3 image format, stock or news bar at screen bottom etc.) on the screen. Constant displaying of still picture can cause ghosting of LED screen, which will affect image quality. To reduce risk of this effect, please follow below recommendations:

- Avoid displaying the same TV channel for long periods.
- Always try to display any image on full screen, use TV set picture format menu for best possible match.
- Reduce brightness and contrast values to minimum required to achieve desired picture quality, exceeded values may speed up the burnout process.
- Frequently use all TV features designed to reduce image retention and screen burnout, refer to proper user manual manual for details.

For India Only

This product is RoHS compliant.

Correct Disposal of This Product
(Waste Electrical & Electronic Equipment)
This marking on the product & accessories literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. House hold users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business user should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed other commercial wastes for disposal.

For more information on safe disposal and recycling visit our website www.samsung.com/in or contact our helpline number - 18002668282, 180030008282

For personal and non-commercial use only.
Usage is subject to following the guidelines in the User Manual and may not be available in all regions.



BN68-06938D-00

Contact SAMSUNG WORLD WIDE		
If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.		
Country	Customer Care Centre	Web Site
VIETNAM	1800 588 889	www.samsung.com/vn/support
THAILAND	0-2689-3232	www.samsung.com/th/support
MYANMAR	1800-29-3232	www.samsung.com/my/support
MALAYSIA	1800-88-9999 603-77137477 (Overseas contact)	www.samsung.com/my/support
PHILIPPINES	1-800-107267864 (PLOT) 1-800-8-7267864 (Globe landline and Mobile) 02-4222111 (Other landline)	www.samsung.com/ph/support
INDIA	1800 3000 8282 - Toll Free 1800 266 8282 - Toll Free	www.samsung.com/in/support
BAKGLADESH	967230300	www.samsung.com/in/support
SRI LANKA	0094117540540	www.samsung.com/support
EGYPT	08001726786	www.samsung.com/eg/support
ALGERIA	021 36 11 00	www.samsung.com/ra/support
IRAN	021-8255	www.samsung.com/iran/support
SAUDI ARABIA	920021230	www.samsung.com/sa/support
PAKISTAN	0800-Samsung (726786)	www.samsung.com/pk/support
TUNISIA	80-1000-12	www.samsung.com/afica/support
U.A.E	800-SAMSUNG (800 - 726 7864)	www.samsung.com/ae/support
OMAN	800-SAMSUNG (800 - 726 7864)	www.samsung.com/ae/support
KUWAIT	183-CALL (183-2255)	www.samsung.com/ae/support
BAHRAIN	800-CALL (800-4726)	www.samsung.com/ae/support
QATAR	800-CALL (800-2255)	www.samsung.com/ae/support
JORDAN	0800-22273	www.samsung.com/Levant/support
SYRIA	06-577444	www.samsung.com/Levant/support
MOROCCO	080 100 22 55	www.samsung.com/afica/support
SOUTH AFRICA	0800 SAMSUNG (726 7864)	www.samsung.com/support
BOTSWANA	8007260000	www.samsung.com/support
NAMIBIA	08 197 267 864	www.samsung.com/support
ZAMBIA	0211 350790	www.samsung.com/support
MOZAMBIQUE	847267864 / 827267864	www.samsung.com/support
NIGERIA	0800-726-7864	www.samsung.com/afica_en/support
Ghana	1800-10077 0302-200077	www.samsung.com/afica_en/support
Cote D'Ivoire	8000 0077	www.samsung.com/afica_fr/support
SENEGAL	800-00-0077	www.samsung.com/afica_fr/support
CAMEROON	7095-0077	www.samsung.com/afica_fr/support
KENYA	0800 545 545	www.samsung.com/support
UGANDA	0800 300 300	www.samsung.com/support
TANZANIA	0800 755 755	www.samsung.com/support
RWANDA	9999	www.samsung.com/support
BURUNDI	200	www.samsung.com/support
DRC	459999	www.samsung.com/support
SUDAN	1969	www.samsung.com/support

Important Safety Instructions

CAUTION
RISK OF ELECTRIC SHOCK DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO QUALIFIED PERSONNEL.

This symbol indicates that high voltage is present inside. It is dangerous to make any kind of contact with any internal part of this product.

This symbol alerts you that important literature concerning operation and maintenance has been included with this product.

The slots and openings in the cabinet and in the back or bottom are provided for necessary ventilation. To ensure reliable operation of this apparatus, and to protect it from overheating, these slots and openings must never be blocked or covered.

- Do not cover the slots and openings with a cloth or other materials.
- Do not block the slots and openings by placing this apparatus on a bed, sofa, rug or other similar surface.
- Do not place this apparatus in a confined space, such as a bookcase or built-in cabinet, unless proper ventilation is provided.
- Do not place this apparatus near or over a radiator or heat register, or where it is exposed to direct sunlight.
- Do not place a vessel containing water (vases etc.) on this apparatus, as this can result in a risk of fire or electric shock.
- Do not expose this apparatus to rain or place it near water (near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool etc.). If this apparatus accidentally gets wet, unplug it and contact an authorised dealer immediately.
- Make sure to pull out the power cord from the outlet before cleaning.
- This apparatus uses batteries. In your community, there might be regulations that require you to dispose of these batteries properly to protect the environment. Please contact your local authorities for disposal or recycling information.
- Do not overload wall outlets, extension cords, or adaptors beyond their capacity, since this can result in fire or electric shock.
- Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at the plug end, where connected to adaptors, and at the point where they exit from the apparatus.
- To protect this apparatus from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the set due to lightning and power line surges.
- Before connecting the AC power cord to the DC adaptor outlet, make sure the voltage designation of the DC adaptor corresponds to the local electrical supply, (depending on the model).
- Never insert anything metallic into the open parts of this apparatus. Doing so may create a danger of electric shock.
- To avoid electric shock, never touch the inside of this apparatus. Only a qualified technician should open this apparatus.
- Make sure to plug the power cord in until it is firmly inserted. Pull on the plug, not the cord, when removing the power cord from the outlet. Do not touch the power cord with wet hands.
- If this apparatus does not operate normally - in particular, if there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorised dealer or service centre.
- Be sure to pull the power plug out of the outlet if the TV is to remain unused or if you are to leave the house for an extended period of time (especially when children, elderly or disabled people will be left alone in the house).
 - Accumulated dust can cause an electric shock, an electric leakage, or a fire by causing the power cord to generate sparks and heat, or cause the insulation to deteriorate.
- Be sure to contact an authorised service centre, when installing your set in a location with heavy dust, high or low temperatures, high humidity, chemical substances or where it will operate for 24 hours a day such as in an airport, a train station, etc. Failure to do so may cause serious damage to your set.
- Use only a properly grounded plug and receptacle.
 - An improper ground may cause electric shock or equipment damage. (Class I Equipment only.)
- To turn off the apparatus completely, you must pull the power plug out of the wall socket. Consequently, the power plug should be readily accessible at all times.
- Do not allow children to hang onto the product.
- Store the accessories (batteries, etc.) in a location safely out of the reach of children.
- Do not install the product in an unstable location such as a shaky shelf, a slanted floor, or a location exposed to vibration.
- Do not drop or impact a shock to the product. If the product is damaged, disconnect the power cord and contact a service centre.
- To clean the product, unplug the power cord from the power outlet and wipe the product using a soft, dry cloth. Do not use any chemicals such as wax, benzene, alcohol, thinners, insecticide, air freshener, lubricant or detergent. This may damage the appearance or erase the printing on the product.
- Do not expose the apparatus to dripping or splashing.
- Do not dispose of batteries in a fire.
- Do not short circuit, disassemble, or overheat the batteries.
- There is a danger of explosion if you replace the batteries with the wrong type of battery. Replace only with the same or equivalent type.
- WARNING - TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES OR OTHER OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES.

Changing the Input Source

Source List

Use to select TV or other external input sources such as DVD / Blu-ray players / cable box / STB satellite receiver connected to the TV.

1. Press the SOURCE button.
2. Select a desired external input source.

■ TV / AV / Component / HDMI1 / HDMI2/DVI

You can only choose external devices that are connected to the TV. In the Source List, connected inputs will be highlighted.

How to use Edit Name

Edit Name lets you associate a device name to an input source. To access **Edit Name**, enter **Support** menu and select **Edit Name**. Name the device connected to the input jacks to make your input source selection easier.

When connecting a PC to the HDMI IN 2 (DVI) port with HDMI cable, you should set the TV to **PC** mode under **Edit Name**.

When connecting a PC to the HDMI IN 2 (DVI) port with HDMI to DVI cable, you should set the TV to **DVI PC** mode under **Edit Name**. When connecting an AV device to the HDMI IN 2 (DVI) port with HDMI to DVI cable, you should set the TV to **DVI** mode under **Edit Name**.

Information

Press INFO, you can see detailed information about the selected external device.


Information only available for the current connected source.

Display Modes (HDMI/DVI Input)

Optimal resolution is 1920 X 1080 @ 60 Hz.

Mode	Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock Frequency (MHz)	Sync Polarity (H / V)	1600 x 1080
IBM	720 x 400	31.469	70.087	28.322	-/+	✓
	640 x 480	35.000	65.687	30.240	-/+	✓
	832 x 624	49.726	74.551	57.284	-/+	✓
	1152 x 870	68.681	75.082	100.000	-/+	✓
MAC	640 x 480	31.469	59.940	25.175	-/+	✓
	640 x 480	37.861	72.809	31.500	-/+	✓
	640 x 480	37.500	75.000	31.000	-/+	✓
	800 x 600	37.879	60.317	40.000	+/-	✓
VESA DMT	800 x 600	48.077	72.188	50.000	+/-	✓
	800 x 600	46.875	75.000	49.500	+/-	✓
	1024 x 768	48.363	60.004	65.000	-/+	✓
	1024 x 768	56.476	70.069	75.000	-/+	✓
	1024 x 768	60.023	75.029	78.750	+/-	✓
	1152 x 864	67.500	75.000	106.000	+/-	✓
	1280 x 720	45.000	60.000	74.250	+/-	✓
	1280 x 800	48.702	59.810	83.500	+/-	✓
	1280 x 1024	63.981	60.020	106.000	+/-	✓
	1280 x 1024	79.976	75.025	135.000	+/-	✓
	1366 x 768	47.712	59.790	85.500	+/-	✓
	1440 x 900	55.935	59.867	100.500	+/-	✓
	1600 x 900P60	60.000	60.000	108.000	+/-	✓
	1680 x 1050	65.250	59.954	146.250	+/-	✓
	1920 x 1080	67.500	60.000	148.500	+/-	✓

Installing batteries (Battery size: AAA)

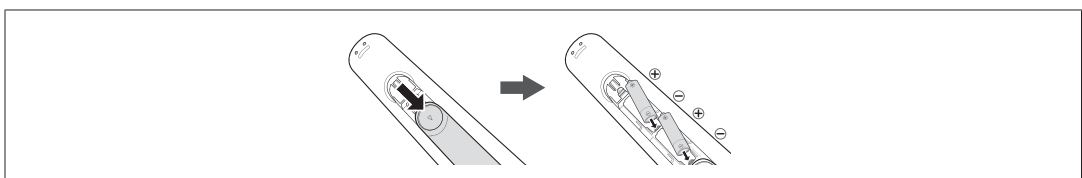


NOTE

- Use the remote control within 7 m from TV.
- Bright light may affect the performance of the remote control. Avoid using nearby special fluorescent light or neon signs.
- The Colour and shape may vary depending on the model.

Getting Started

Accessories


- Remote Control & Batteries (AAA x 2)
- Owner's Instructions
- Warranty Card / Regulatory Guide (Not available in some locations)
- Power Cord

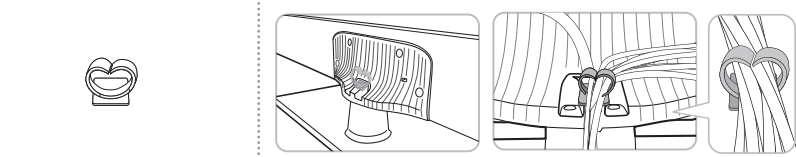

Input Cables (Sold Separately)

- Composite (AV)
- Component
- Coaxial (RF)
- HDMI
- HDMI-DVI

TV Controller (Panel Key)

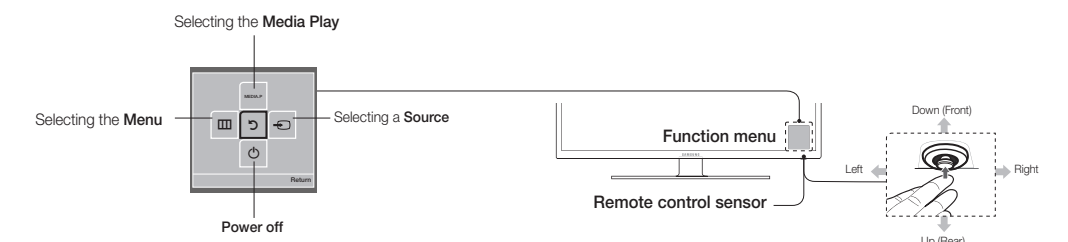

To close the **Menu**, **Media Play** List, or **Source** List, press the Controller for more than 1 second.

When selecting the function by moving the controller to the front/rear/left/right directions, be sure not to press the controller. If you press it first, you cannot operate it to move the front/rear/left/right directions.

Plug & Play (Initial Setup)


When you turn the TV on for the first time, a sequence of screens and on-screen prompts will assist you in configuring the TV's basic settings. Plug the power cord into a wall outlet, and then press the POWER button to turn on the TV. Set the initial setup following instructions that the TV guides.

If you are not using a cable box or satellite box, make you sure have connected the TV to an Aerial or cable connection before you turn on the TV.

Connecting the power cord and antenna. (refer to "Connections")

Connections

- For better picture and audio quality, connect to a digital device using an HDMI cable.
- The picture may not display normally (if at all) or the audio may not work if an external device that uses an older version of HDMI mode is connected to the TV. If such a problem occurs, ask the manufacturer of the external device about the HDMI version and, if out of date, request an upgrade.
- Be sure to purchase a certified HDMI cable. Otherwise, the picture may not display or a connection error may occur.
- PC/DVI AUDIO IN input is not supported.
- For HDMI/DVI cable connection, you must use the HDMI IN 2 (DVI) port.
- Connecting through the HDMI cable may not be supported depending on the PC.
- If an HDMI to DVI cable is connected to the HDMI IN 2 (DVI) port, the audio does not work.
- For Set-top box connection using HDMI cable, we highly recommend you to connect the HDMI IN 1 (STB) port.

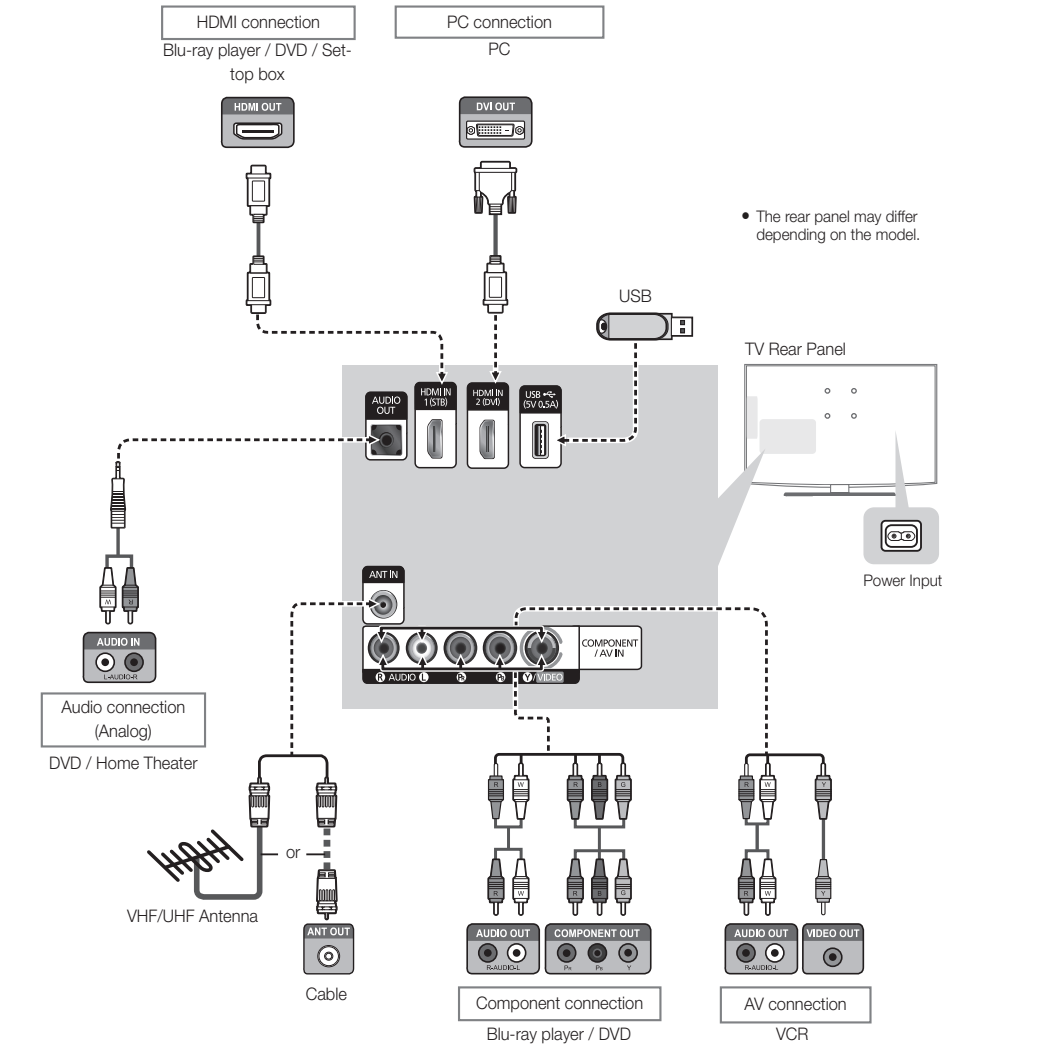

The rear panel may differ depending on the model.

Support Menu

Using the Media Play

Enjoy photos, music, movie files saved on a USB Mass Storage Class (MSC) device.



Connecting a USB Device

- Turn on your TV.
- Connect a USB device containing photo, music, movie files to the USB jack on the side of the TV.
- When USB is connected to the TV, you can select **Media Play**.

The maximum displayed number of partition is 4.

Using the Media Play Menu

- Press the MENU button. Press the ▲ or ▼ button to select **Support**, then press the ENTER button.
 - Press the ▲ or ▼ button to select **Media Play (USB)**, then press the ENTER button.
 - Press the ◀ or ▶ button to select an icon (**Videos, Music, Photos**), then press the ENTER button.
- Supported file systems are FAT and NTFS.
 - It might not work properly with unlicensed multimedia files.
 - If you want to view detailed information of the file being played, press TOOLS button in the file list, and then select **Information**.
 - Need-to-Know List before using **Media Play (USB)**
 - Supported file systems are FAT and NTFS.
 - Certain types of USB Digital camera and audio devices may not be compatible with this TV.
 - Media Play** only supports USB Mass Storage Class (MSC) devices. MSC is a Mass Storage Class Bulk-Only Transport device. Examples of MSC are Thumb drives and Flash Card Readers. Devices should be connected directly to the TV's USB port. (USB HDD is not supported.) Does not support smart devices connected in MTP or PTP protocol.
 - Before connecting your device to the TV, please back up your files to prevent them from damage or loss of data. SAMSUNG is not responsible for any data file damage or data loss.
 - A USB device that requires high power (more than 0.5A) may not be supported.
 - Do not disconnect the USB device while it is loading.
 - The higher the resolution of the image, the longer it takes to display on the screen.
 - The maximum supported JPEG resolution is 15360 x 8640 pixels.
 - If a file is corrupted or the TV does not support the file type, the "Not Supported File Format" message appears.
 - If a USB extension cable is used, the USB device may not be recognised or the file on the device may not be read.

■ Videos

- Press the ◀ or ▶ button to select **Videos**, then press the ENTER button in the **Media Play** menu.
 - Press the ◀/▶/▲/▼ buttons to select the desired video in the file list.
 - Press the ENTER button or [] (Play) button.
- The selected file is displayed on the top with its playing time.
 - If video time information is unknown, playing time and the progress bar are not displayed.
 - During video playback, you can search using the ◀ and ▶ button.
 - You can use [REW] (REW) and [FF] (FF) buttons during playback.
 - In this mode, you can play movie clips contained in a game, but you cannot play the game itself.

• Supported Subtitle Formats

- External

Name	File extension
MPEG-4 timed text	.txt
SAH	.srt
SubRip	.sub
Micro DVD	.sub or .txt
SubStation Alpha	.ssa
Advanced SubStation Alpha	.ass

- Internal

Name	Container	Format
Xsub	AVI	Picture Format
SubStation Alpha	MKV	Text Format
Advanced SubStation Alpha	MKV	Text Format
SubRip	MKV	Text Format
MPEG-4 Timed text	MP4	Text Format

• Supported Video Formats

File Extension	Container	Video Codec	Resolution	Frame rate(fps)	Bit rate(Mbps)	Audio Codec
*.mp4	MP4	DxV 3.11A,12.5 v6.0	1024x1080	6-30	20Mbps	MP3 / AAC / PCM / ADPCM / AAC
		H.264	1024x1080	6-30	20Mbps	
		VC-1	1024x1080	6-30	20Mbps	
		MPEG2	640x480	6-30	10Mbps	
*.avi *.mkv	AVI/MKV	MPEG 1/2/4	1024x1080	6-30	20Mbps	MP3 / AC3 / LPCM / ADPCM / WMA / WMA Pro / DTS
		H.264	1024x1080	6-30	20Mbps	
		MPEG2	640x480	6-30	10Mbps	
*.asf *.wmv	ASF	DxV 3.11A,12.5 v6.0	1024x1080	6-30	20Mbps	MP3 / AC3 / LPCM / ADPCM / WMA / WMA Pro
		MPEG 1/2/4	1024x1080	6-30	20Mbps	
		H.264	1024x1080	6-30	20Mbps	
*.h264 *.h265	TS	MPEG2-TS	1024x1080	6-30	20Mbps	AC3 / AAC / MP3 / DD+
		H.264	1024x1080	6-30	20Mbps	
*.h264 *.mpg *.mpeg *.vob	PS	MPEG1	1024x1080	6-30	20Mbps	AC3 / MPEG / LPCM / AAC
		MPEG2	1024x1080	6-30	20Mbps	
		H.264	1024x1080	6-30	20Mbps	
*.3gp	3GP	H.264	1024x1080	6-30	20Mbps	MP3
*.h264	h264 formats	H.264	1024x1080	6-30	20Mbps	MP3
		Swann H.263	1024x1080	6-30	20Mbps	

Other Restrictions

- Video content will not play, or not play correctly, if there is an error in the content or the container.
- Sound or video may not work if the contents have a standard bit rate/ frame rate above the compatible Frame/sec listed in the table above.
- If the Index Table is in error, the Seek (Jump) function is not supported.
- The menu may take longer to appear if the video's bit rate exceeds 10Mbps.
- Video content can not be played, if there are many contents in one file.

Video Decoder

Supports up to H.264, Level 4.1
H.264 P/MC / ASO / RS, VC1 SP / MP / AP L4 and A/CHD are not supported.
MPEG4 SP, ASP :
- Below 1280 x 720: 60 frame max
- Above 1280 x 720: 30 frame max
H.263 is not supported.
GMC is not support.

Audio Decoder

Supports up to WMA7, 8, 9 STD, 9 PRO, 10 PRO
WMA 9 PRO and WMA 10 PRO support 5.1 channel. (LBR mode of WMA Pro is not supported)
WMA Lossless is not supported.

■ Music

- Press the ◀ or ▶ button to select **Music**, then press the ENTER button in the **Media Play** menu.
 - Press the ◀/▶/▲/▼ buttons to select the desired Music in the file list.
 - Press the ENTER button or [] (Play) button.
- During music playback, you can search using the ◀ and ▶ button.
 - [REW] (REW) and [FF] (FF) buttons do not function during play.
 - Only displays the files with MP3 file extension. Other file extensions are not displayed, even if they are saved on the same USB device.
 - If the need to change **Equalizer** - when playing MP3, then exit **Media Play**, adjust the **Equalizer** in the **Sound** menu. (An over-modulated MP3 file may cause a sound problem.)

■ Photos

- Press the ◀ or ▶ button to select **Photos**, then press the ENTER button in the **Media Play** menu.
 - Press the ◀/▶/▲/▼ buttons to select the desired photo in the file list.
 - Press the ENTER button or [] (Play) button.
- NOTE**
 - While a photo list is displayed, press the [] (Play) / ENTER button on the remote control to start the slide show.
 - All files in the file list section will be displayed in the slide show.
 - During the slide show, files are displayed in order.
 - During the slide show, you can adjust the slide show speed using [REW] (REW) or [FF] (FF) button.
 - You can move to other file using ◀ or ▶ button.
 - Press TOOLS button and select **Background Music**. Music files can be automatically played during the Slide Show if the **Background Music** is set to **On**.
 - The **Mode** in **Background Music** cannot be changed until the BGM has finished loading.

• Supported Photo Formats

Image	Photo	Resolution
JPEG	Base-line	15360 x 8704
	Progressive	1024 x 768

Other Restrictions

CMYK, YCCK Colour space JPEG are not supported.

■ Playing Multiple Files

Playing selected video/music/photo files

- Press the Yellow button in the file list to select the desired file.
- Repeat the above operation to select multiple files.

■ NOTE

- The Y mark appears to the left of the selected files.
- To cancel a selection, press the Yellow button again.
- To deselect all selected files, press the TOOLS button and select **Deselect All**.

■ Playing the video/music/photo file group

While a file list is displayed, move to any file in desired group.

■ Media Play - Additional Functions

Videos/Music/Photos Play Option menus

When playing a file, press the TOOLS button.

Category	Operation	Videos	Music	Photos
Title	You can move the other file directly.	✓		
Repeat Mode	You can play movie and music files repeatedly.		✓	
Picture Size	You can adjust the picture size to your preferences.	✓		
Picture Mode	You can adjust the picture setting.	✓		✓
Sound Mode	You can play the video with Subtitles. This function only works if the subtitles are the same file name as the video.	✓	✓	
Subtitle Setting	You can change the audio language if the video has more than one language.	✓		
Audio Language		✓		
Stop Slide Show / Start Slide Show	You can start or stop a Slide Show.			✓
Slide Show Speed	You can select the slide show speed during the slide show.			✓
Background Music	You can set and select background music when watching a Slide Show.			✓
Zoom	You can zoom into images in full screen mode.		✓	✓
Rotate	You can rotate images in full screen mode.			✓
Information	You can see detailed information about the played file.	✓	✓	✓

DiW® Video On Demand

Shows the registration code authorised for the TV. If you connect to the DiW web site and register with 10-digit registration code, you can download the VOD activation file. Once you play it using **Media Play**, the registration is completed.

For more information on DiW® VOD, visit <http://vod.dvix.com>.

■ Software Upgrade

Software Upgrade can be performed by downloading the latest firmware from "www.samsung.com" to a USB memory device.

HD Connection Guide

You can read a guide to connect external devices for HD sources.

Contact Samsung

View this information when your TV does not work properly or when you want to upgrade the software. You can find information regarding our call centres, and how to download products and software.

Other Information

Installing the Wall Mount

The wall mount kit (sold separately) allows you to mount the TV on the wall. For detailed information on installing the wall mount, see the instructions provided with the wall mount. Contact a technician for assistance when installing the wall mount on bracket.

Samsung Electronics is not responsible for any damage to the product or injury to yourself or others if you select to install the TV on your own.


Wall Mount Kit Specifications (VESA)

The wall mount kit is not supplied, but sold separately. Install your wall mount on a solid wall perpendicular to the floor. When attaching to other building materials, please contact your nearest dealer. If you install the TV on a ceiling or slanted wall, it may fall and result in severe personal injury.

■ NOTE

- Standard dimensions for wall mount kits are shown in the table below.
- When purchasing our wall mount kit, a detailed installation manual and all parts necessary for assembly are provided.
- Do not use screws that do not comply with the VESA standard screw specifications.
- Do not use screws longer than the standard dimension, as they may cause damage to the inside of the TV set.
- For wall mounts that do not comply with the VESA standard screw specifications, the length of the screws may differ depending on the wall mount specifications.
- Do not fasten the screws too firmly. This may damage the product or cause the product to fall, leading to personal injury. Samsung is not liable for these kinds of accidents.
- Samsung is not liable for product damage or personal injury when a non-VESA or non-specified wall mount is used or the consumer fails to follow the product installation instructions.
- Do not mount the TV at more than a 15 degree tilt.
- Always have two people mount the TV on a wall.

Product Family	Models	VESA screw hole specs (A * B) in millimeters	Standard Screw	Quantity
LED-TV	UA40FH5000	200 X 200	M6	4

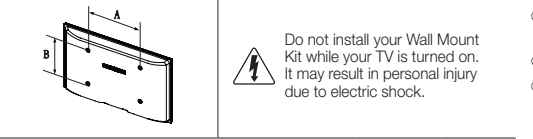

Securing the TV to the Wall

Caution: Pulling, pushing, or climbing onto the TV may cause the TV to fall. In particular, ensure that your children do not hang over or destabilize the TV, doing so may cause the TV to tip over, resulting in serious injuries or death. Follow all safety precautions provided on the included Safety Flyer. For added stability, install the anti-fall device for safety purposes, as follows.

To prevent the TV from falling

- Since the necessary clamps, screws, and string are not supplied, please purchase these additionally.
- Put the screws into the clamps and firmly fasten them onto the wall. Confirm that the screws have been firmly installed onto the wall.
- You may need additional material such as an anchor depending on the type of wall.
- Since the necessary clamps, screws, and string are not supplied, please purchase these additionally.
- Remove the screws from the back Centre of the TV, put the screws into the clamps, and then fasten the screws onto the TV again.
- Screws may not be supplied with the product. In this case, please purchase the screws of the following specifications.
- Connect the clamps fixed onto the TV and the clamps fixed onto the wall with a strong cable and then tie the string tightly.
- Note**
 - Install the TV near to the wall so that it does not fall backwards.
 - It is safe to connect the string so that the clamps fixed on the wall are equal to or lower than the clamps fixed on the TV.
 - Untie the string before moving the TV.
- Verify all connections are properly secured. Periodically check connections for a sign of slippage or failure. If you have any doubt about the security of your connections, contact a professional installer.

Kensington Lock

The Kensington Lock is not supplied by Samsung. It is a device used to physically fix the system when using it in a public place. Refer to the manual provided with the Kensington Lock for additional information on proper use.

- Please find a "K" icon on the rear of the TV. The Kensington slot is beside the "K" icon.
- The position and colour may differ depending on the model.
- To lock the product, follow these steps:
 - Wrap the Kensington lock cable around a large, stationary object such as desk or chair.
 - Slide the end of the cable with the lock attached through the looped end of the Kensington lock cable.
 - Insert the locking device into the Kensington slot on the product.
 - Lock the lock.

- These are general instructions. For exact instructions, see the User manual supplied with the locking device.
- The locking device has to be purchased separately.
- The location of the Kensington slot may be different depending on the TV model.

Troubleshooting

If you have any questions about the TV, first refer to this list. If none of these troubleshooting tips apply, please visit "www.samsung.com," then click on Support, or contact the call centre listed on the back-cover of this manual.

Problem	Possible Solution
Picture Quality	
The TV image does not look as good as it did in the store.	<ul style="list-style-type: none">If you have an analogue cable/set top box, upgrade to a digital set top box. Use HDMI or Component cables to deliver HD (high definition) picture quality.Antenna connection: Try HD stations after performing Auto tuning.Many HD channels are up scaled from SD(Standard Definition) contents.Adjust the Cable/Set top box video output resolution to 1080i or 720p.Make sure you are watching the TV at the minimum recommended distance based on the size and definition of the signal.
The picture is distorted: macroblock error, small block, dots, pixelization	<ul style="list-style-type: none">Compression of video contents may cause picture distortion especially in fast moving pictures such as sports and action movies.Low signal level or bad quality can cause picture distortion. This is not a TV issue.Mobile phones used close to the TV (cca up to 1m) may cause noise in picture on analogue and digital TV.
Colour is wrong or missing.	<ul style="list-style-type: none">If you're using a component connection, make sure the component cables are connected to the correct jacks. Incorrect or loose connections may cause colour problems or a blank screen.
There is poor colour or brightness.	<ul style="list-style-type: none">Adjust the Picture options in the TV menu. (go to Picture mode / Colour / Brightness / Sharpness)Try resetting the picture to view the default picture settings. (go to MENU - Picture - Picture Reset)
There is a dotted line on the edge of the screen.	<ul style="list-style-type: none">If the picture size is set to Screen Fit, change it to 16:9.Change cable/satellite box resolution.
The picture is black and white.	<ul style="list-style-type: none">If you are using an AV composite input, connect the video cable (yellow) to the Green jack of component input 1 on the TV.
When changing channels, the picture freezes or is distorted or delayed.	<ul style="list-style-type: none">If connected with a cable box, please try to reset the cable box. Reconnect the AC cord and wait until the cable box reboots. It may take up to 20 minutes.Set the output resolution of the cable box to 1080i or 720p.
Sound Quality	
There is no sound or the sound is too low at maximum volume.	<ul style="list-style-type: none">Please check the volume of external device connected to your TV.
The picture is good but there is no sound.	<ul style="list-style-type: none">Set the Speaker Select option to TV Speaker in the sound menu.If you are using an external device, make sure the audio cables are connected to the correct audio input jacks on the TV.If you are using an external device, check the device's audio output option (ex. you may need to change your cable box's audio option to HDMI when you have a HDMI connected to your TV).If you are using a HDMI cable, a separate audio cable is required.If your TV has a headphone jack, make sure there is nothing plugged into it.
The speakers are making an inappropriate noise.	<ul style="list-style-type: none">Check the cable connections. Make sure a video cable is not connected to an audio input.For antenna or cable connections, check the signal strength. Low signal level may cause sound distortion.
No Picture, No Video	
The TV will not turn on.	<ul style="list-style-type: none">Make sure the AC power cord is securely plugged in to the wall outlet and the TV.Make sure the wall outlet is working.Try pressing the POWER button on the TV to make sure the problem is not the remote. If the TV turns on, refer to "The remote control does not work" below.
The TV turns off automatically.	<ul style="list-style-type: none">Ensure the Sleep Timer is set to Off in the Time menu.If your PC is connected to the TV, check your PC power settings.Make sure the AC power cord is plugged in securely to the wall outlet and the TV.When watching TV from an antenna or cable connection, the TV will turn off after 10 ~ 15 minutes if there is no signal.
There is no picture/video.	<ul style="list-style-type: none">Check cable connections (remove and reconnect all cables connected to the TV and external devices).Set your external devices' (Cable/Set top Box, DVD, Blu-ray etc) video outputs to match the connections to the TV input. For example, if an external device's output is HDMI, it should be connected to an HDMI input on the TV.Make sure your connected devices are powered on.Be sure to select the TV's correct source by pressing the SOURCE button on the TV remote.

Problem	Possible Solution
RF(Cable/Antenna) Connection	
The TV is not receiving all channels.	<ul style="list-style-type: none">Make sure the Antenna cable is connected securely.Please try Setup (Plug & Play) to add available channels to the channel list. Go to MENU - System - Setup (Plug & Play) and wait for all available channels to be stored.Verify the Antenna is positioned correctly.
The picture is distorted: macroblock error, small block, dots, pixelization	<ul style="list-style-type: none">Compression of video contents may cause picture distortion, especially on fast moving pictures such as sports and action movies.A low signal can cause picture distortion. This is not a TV issue.
PC Connection	
A "Mode Not Supported" message appears.	<ul style="list-style-type: none">Set your PC's output resolution so it matches the resolutions supported by the TV.
The video is OK but there is no audio.	<ul style="list-style-type: none">If you are using a HDMI connection, check the audio output setting on your PC.
Others	
The picture will not display in full screen.	<ul style="list-style-type: none">HD channels will have black bars on either side of the screen when displaying up scaled SD (4:3) contents.Black bars on the top and bottom will appear during movies that have aspect ratios different from your TV.Adjust the picture size options on your external device or TV to full screen.
The remote control does not work.	<ul style="list-style-type: none">Replace the remote control batteries with the poles (+/-) in the right direction.Clean the transmission window located on the top of the remote control.Try pointing the remote directly at the TV from 5-6 feet away.
The cable/set top box remote control does not turn the TV on or off, or adjust the volume.	<ul style="list-style-type: none">Programme the Cable/Set top box remote control to operate the TV. Refer to the Cable/Set top box user manual for the SAMSUNG TV code.
A "Mode Not Supported" message appears.	<ul style="list-style-type: none">Check the supported resolution of the TV, and adjust the external device's output resolution accordingly. Refer to resolution settings in this manual.
There is a plastic smell from the TV.	<ul style="list-style-type: none">This smell is normal and will dissipate over time.
TV is tilted to the right or left side.	<ul style="list-style-type: none">Remove the stand base from the TV and reassemble it.
There are difficulties assembling the stand base.	<ul style="list-style-type: none">Make sure the TV is placed on a flat surface. It is necessary to use magnetized screw driver if you cannot remove the screws from the TV.
The Broadcasting menu is grey out (unavailable).	<ul style="list-style-type: none">The Broadcasting menu is only available when the TV source is selected.
Your settings are lost after 5 minutes or every time the TV is turned off.	<ul style="list-style-type: none">If the TV is in the Store Demo mode, it will reset audio and picture settings every 5 minutes. If you want to change the settings from Store Demo mode to Home Use.
You have intermittent loss of audio or video.	<ul style="list-style-type: none">Check the cable connections and reconnect them.Loss of audio or video can be caused by using overly rigid or thick cables. Make sure the cables are flexible enough for long term use. If mounting the TV to the wall, we recommend using cables with 90 degree connectors.
You see small particles when you look closely at the edge of the frame of the TV.	<ul style="list-style-type: none">This is part of the product's design and is not a defect.
There are recurrent picture/sound issues.	<ul style="list-style-type: none">Check and change the signal/source.
A reaction may occur between the rubber cushion pads on the base stand and the top finish of some furniture.	<ul style="list-style-type: none">To prevent this, use felt pads on any surface of the TV that comes in direct contact with furniture.

This TFT LED panel uses a panel consisting of sub pixels which require sophisticated technology to produce. However, there may be a few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.

You can keep your TV as optimum condition upgrading the latest firmware on web site (www.samsung.com → Support) by USB.

Storage and Maintenance

If you remove the attached sticker on the TV screen, clean the residues and then watch TV.

Do not spray water directly onto the product. Any liquid that goes into the product may cause a failure, fire, or electric shock.	Clean the product with a soft cloth dampened with in a small amount of water. Do not use a flammable liquid (e.g., benzene, thinners) or a cleaning agent.

Securing the Installation Space

Keep the required distances between the product and other objects (e.g. walls) to ensure proper ventilation. Failing to do so may result in fire or a problem with the product due to an increase in the internal temperature of the product.

- When using a stand or wall-mount, use parts provided by Samsung Electronics only.
- If you use parts provided by another manufacturer, it may result in a problem with the product or an injury due to the product falling.
- The appearance may differ depending on the product.
- Be careful when you contact the TV because some parts can be somewhat hot.

Installation with a stand.	Installation with a wall-mount.

Licence

	DViX Certified® to play DViX® video up to HD 1080p, including premium content.
ABOUT DViX VIDEO: DViX® is a digital video format created by DViX, LLC, a subsidiary of Rovi Corporation. This is an official DViX Certified® device that has passed rigorous testing to verify that it plays DViX video. Visit vod.dvix.com for more information and software tools to convert your files into DViX videos. ABOUT DViX VIDEO-ON-DEMAND: This DViX Certified® device must be registered in order to play purchased DViX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DViX VOD section in your device setup menu. Go to vod.dvix.com for more information on how to complete your registration. DViX®, DViX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license. Covered by one or more of the following U.S. patents: 7,295,673; 7,460,668; 7,515,710; 7,519,274	

	Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
	Manufactured under a license from U.S. Patent No's: 5,056,674; 5,974,380; 5,978,762; 6,487,535; 6,226,616; 7,212,872; 7,003,467; 7,272,567; 7,668,723; 7,392,195; 7,930,184; 7,333,929 and 7,548,853. DTS, the Symbol, and DTS and the Symbol together are registered trademarks & DTS Premium Sound is a trademark of DTS, Inc. ©2012 DTS, Inc. All Rights Reserved.
	Manufactured under a license from U.S. Patent No's: 6,285,767; 6,027,477; 5,319,713; 5,333,201; 5,638,452; 5,771,295; 5,970,152; 5,912,976; 7,200,236; 7,492,807; 6,950,434; 7,202,440; 7,031,474; 7,897,735 and 7,194,802. DTS, the Symbol, and DTS and the Symbol together are registered trademarks & DTS Studio Sound is a trademark of DTS, Inc. ©2012 DTS, Inc. All Rights Reserved.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Open Source Licence Notice

Open Source used in this product can be found on the following webpage. (<http://opensource.samsung.com>)

Open Source Licence Notice is written only English.

Recommendation - Jordan Only