



MIM-E03*N

SAMSUNG CONTROL KIT

installation manual

imagine the possibilities

Thank you for purchasing this Samsung product.

EN ES FR IT PT DE DB68-05388A-04

SAMSUNG





Contents

| | |
|--|----|
| Safety precautions | 3 |
| Product specifications | 4 |
| Main components | 5 |
| Installing the unit | 6 |
| Wiring works | 9 |
| Wiring schematics | 33 |
| Self-test mode of wired remote controller | 34 |
| Troubleshooting | 36 |
| Error codes | 39 |
| Mixing Valve | 41 |
| Concrete curing function | 44 |
| Installation option setting | 45 |
| COMMISSION REGULATION (EU) No 813/2013 ¹⁾ | 47 |
| COMMISSION DELEGATED REGULATION (EU) No 811/2013 ¹⁾ | 68 |





Safety precautions

Carefully follow the precautions listed as below because they are essential to guarantee the safety of SAMSUNG product.



WARNING

- Always disconnect a power supply of Air-Water Heat Pump before servicing it or accessing components inside the unit.
- Verify that installation and testing operations shall be performed by qualified personnel.
- To prevent serious damage on the system and injuries to users, precautions and other notices shall be observed.











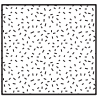



Warning

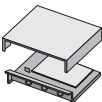- ▶ Carefully read the contents of this manual before installing the control kit and store the manual in a safe place in order to be able to use it as reference after installation.
- ▶ For maximum safety, installers should always carefully read the following warnings.
- ▶ Store the manual in a safe location and remember to hand it over to the new owner if the kit is sold or transferred.
- ▶ The kit is compliant with the requirements of the Low Voltage Directive (72/23/EEC), the EMC Directive (89/336/EEC) and the Directive on pressurized equipment (97/23/EEC).
- ▶ The manufacturer shall not be responsible for damage originating from unauthorized changes or the improper connection of electric and hydraulic lines. Failure to comply with these instructions or to comply with the requirements set forth in the "Operating limits" table, included in the manual, shall immediately invalidate the warranty.
- ▶ Do not use the units if you see some damages on the units and recognize something bad such as loud noisy, smell of burning.
- ▶ In order to prevent electric shocks, fires or injuries, always stop the unit, disable the protection switch and contact SAMSUNG's technical support if the unit produces smoke, if the power cable is hot or damaged or if the unit is very noisy.
- ▶ Always remember to inspect the unit, electric connections, and protections regularly. These operations shall be performed by qualified personnel only.
- ▶ The unit contains various electric parts, which should be kept out of the reach of children.
- ▶ Do not attempt to repair, move, alter or reinstall the unit by unauthorized personnel, these operations may cause product damage, electric shocks and fires.
- ▶ Do not place containers with liquids or other objects on the unit.
- ▶ All the materials used for the manufacture and packaging of the air to water heat pump are recyclable.
- ▶ The packing materials must be disposed of in accordance with local regulations.
- ▶ Wear protective gloves to unpack, move, install, and service the unit to avoid your hands being injured by the edge of the parts.
- ▶ Do not touch the internal parts while running the units.
- ▶ Inspect the product shipped and check if damaged during transport. If the product has some damages, DO NOT INSTALL and immediately discuss about the damages with the carrier or retailer (if the installer or the authorized technician has collected the material from the retailer.)
- ▶ Our units shall be installed in compliance with the spaces described in the installation manual, to ensure accessibility from both sides and allow repairs or maintenance operations to be carried out. If the units installed without complying with procedures described in manual, additional expenses can be asked because special harnesses, ladders, scaffolding or any other elevation system for repair service will NOT be considered part of the warranty and will be charged to the end customer.
- ▶ When service works required, make sure to disconnect the power supply at least 1 minute to prevent electric shocks.
 - Always check the voltage at the terminals of main PCB before trying to touch.
- ▶ Use electric wires which manual designated. Connections between wires and terminals shall be assembled without any tension. If the assembly works is not implemented well, it can lead to have product damages and fires.
- ▶ After wiring works, terminal block cover shall be fixed firmly. Without cover, it can cause to have product damage and fire.
- ▶ Be sure not to perform power cable modification, midway wiring, and multiple wire connection.
 - It may cause electric shock or fire due to poor connection or insulation and current limit override.
 - When midway wiring is required due to power line damage, refer to "How to connect your extended power cables" in the installation manual.

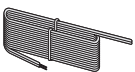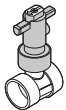



Product specifications

| Item | Description | |
|---|----------------------------------|--|
|  | MIM-E03*N | |
|  | Wired remote controller | |
|  | Temp. Sensor | Temp. Sensor for DHW Tank (15m, YEL) (1EA) Temp. Sensor for Mixing Valve (15m, BLU) (1EA) Temp. Sensor for Heater (15m, BLK) (1EA) |
|  | Smart Grid cable (Red, 2 m, 1EA) | |
|  | Flow Switch (1EA, 2m) | |
|  | Sensor holder (2EA, OD 7.8mm) | |
|  | Sensor clip (2EA) | |
|  | Cable tie (4EA) | |
|  | Aluminum tape (2EA) | |
|  | Rubber tape (2EA) | |
|  | Insulator (2EA) | |
|  | LEAD CONNECTOR | Back-up heater connector (Red) Back-up heater connector (Brown) Back-up heater connector (White) |
|  | Installation manual | |
|  | User manual | |

* Temp. sensor = Temperature sensor


MIM-E03AN : 9/12/14/16 kW outdoor unit

MIM-E03BN : 5 kW outdoor unit





Main components



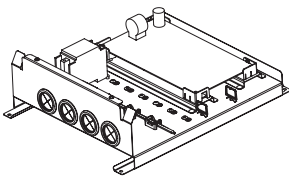
| Model name | MIM-E03*N | |
|---|---|------|
| Detail components  | Parts | Qty. |
| | Main PBA | 1 |
| | ELCB | 1 |
| | - Rated current : 30A - Leakage current : 30mA | |
| | Grounding screw | 8 |
| | Rubber | 4 |
| | Base plate | 1 |
| | Top cover plate | 1 |
| | Case screw | 2 |
| Weight (Net) | 3.5 kg | |
| Packing size (W x H x D) | 329 mm x 439 mm x 168 mm | |

※ Flow Switch Set Point

MIM-E03AN (9/12/14/16 kW outdoor unit) : 16LPM

MIM-E03BN (5 kW outdoor unit) : 7LPM

Mounting the unit
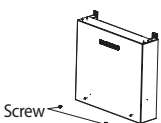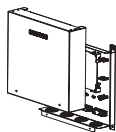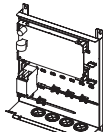
| Procedure | Remark |
|---|---|
| 1. Remove 2 screw from the unit. |  Screw |
| 2. Open the top cover and install 4 screws on the wall. |  |
| 3. Close the top cover and install 2 screw again into the unit. |  |




Installing the unit

Installing the remote controller

Dimension



(Unit : mm)

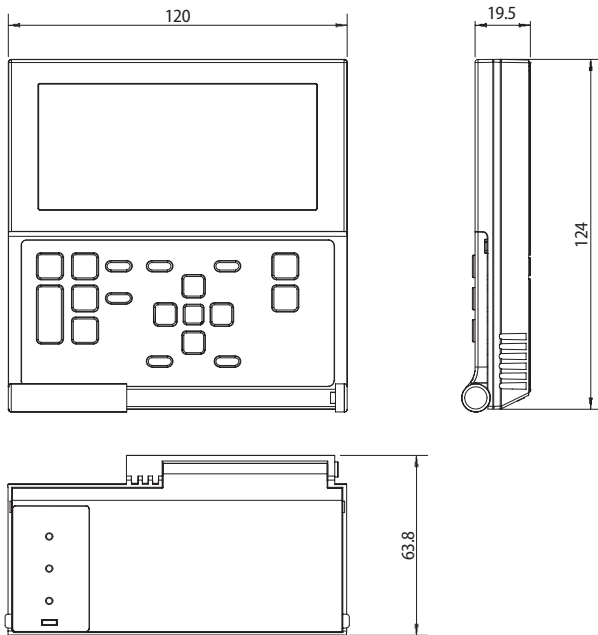



Installation

1. Push the two hooks at the bottom of your Wired Remote Controller at the same time, and then pull up the front cover to separate it from the rear cover.

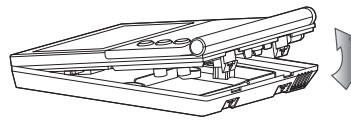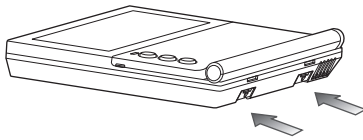


* Push the two hooks at the same time.




NOTE


- Insert a flat head screwdriver into the square groove in the upper area of the hook to disassemble it easily.




2. Arrange the communication cable so that they fit in the housing along the edges of the rear cover.

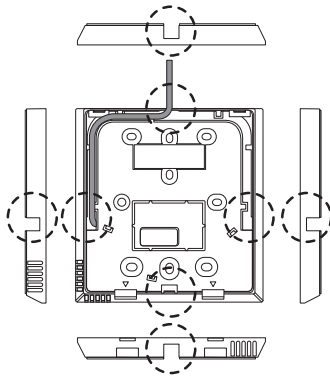

<When the cable is not concealed>

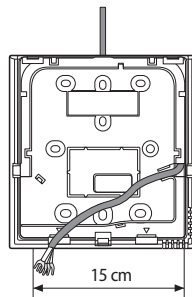

If you need more space for the wiring work, you can take it off.

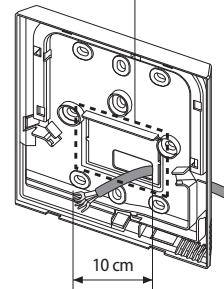


<When the cable is concealed>



Installing the unit

- Using more than two screws, firmly affix the rear cover of the remote controller to the wall, and then connect communication cables(F3, F4), making sure these cables have reasonable length, to the terminal at the back of the cover.

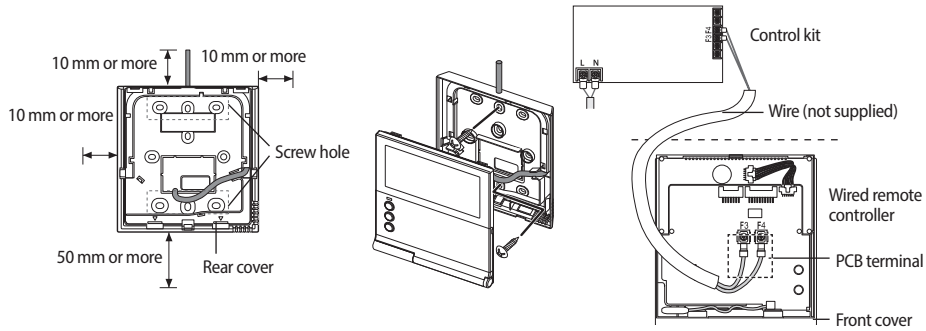

- * Before fixing the rear cover, allow at least 10 mm space of upper side, left side, right side, and 50 mm space of bottom side.
- * You must fit the screws into the screw holes.
- * Do not tighten the screws on the PCB terminal with excessive force.

- Reassemble your wired remote controller.




NOTE

- Align the controller with the upper groove first, and insert it by turning it downward as shown in the figure. After assembly, check and confirm that no wires are stuck in the gap between the rear and front cover.



CAUTION

- When installing your wired remote controller on the wall, consider the size of the wire hole, and select a wire with a proper thickness.
- Wire that is connectable to wired remote controller PCB.
 - If you install the wired remote controller by reclaiming, install it according to ring terminal cable specification.
 - If you install the wired remote controller by using four pieces of PVC wire, remove the 30 cm of the sheath of the cable and install it only with the four pieces of wires. (Recommended specification: AWG21)
 - The followings are the specs of the compressed ring terminal connectable to your wired remote controller PCB

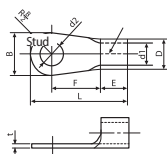

| Range of Permitted Wires | | Rated Size | Stud Size | Basic Size (mm) | | | | | | |
|--------------------------|-----------------|-----------------|-----------|-----------------|-----|------|-----|-----|-----|------|
| AWG | mm ² | mm ² | mm | t | øD | G | E | F | W | L |
| 22 ~ 16 | 0.25 ~ 1.65 | 1.5 | 3 | 0.7 | 3.8 | 10.0 | 4.5 | 6.5 | 6.0 | 21.2 |

- * Maximum distance of communication cable : 100 m

- Screws on the PCB terminal must be tightened with less than 0.75 N·m tightening torque. If the tightening torque is greater, it may damage the screw thread.




Wiring works



- Field-supplied electrical components such as power switch, circuit breakers, wires, terminal blocks, etc must be properly chosen with compliance with national legislation or regulation.
- Switch off the power supply before making any connections.
- All field wiring and components must be installed by a licensed electrician.
- Use a dedicated power supply.
- All power connections must be protected from dew condensation by thermal insulation.
- The system shall be earthed. Do not earth the unit to a utility pipe, surge absorber or telephone earth. Incomplete earth may cause electrical problems.

ENGLISH

Layout of PCB

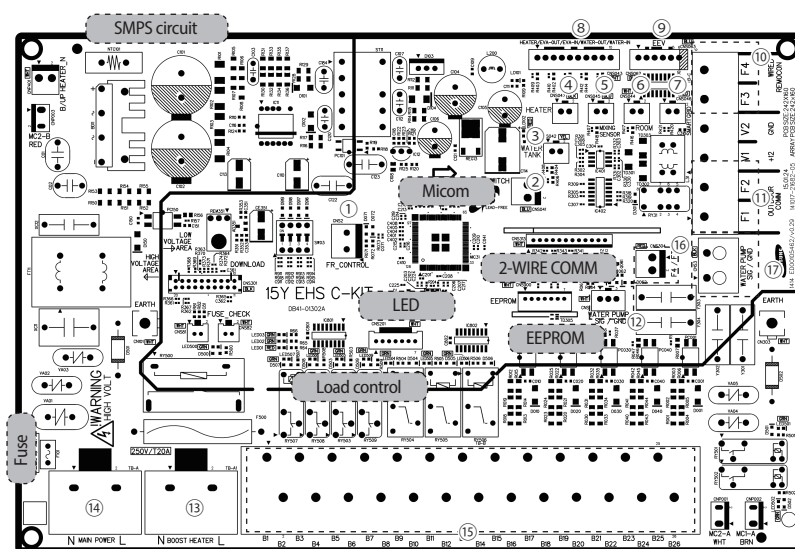

| No. | Note |
|-----|-----------------------------------|
| ① | FR Control CNS2(Green) |
| ② | Flow Switch CNS041(Blue) |
| ③ | Water Tank CNS042(Yellow) |
| ④ | Heater Out(Mono) CNS047(Black) |
| ⑤ | Mixing Sensor CNS045(Blue) |
| ⑥ | Room Sensor CNS044(White) |
| ⑦ | Smart Grid CNS046(Red) |



Wiring works


| No. | Note | |
|-----|--|---|
| ⑧ | CNS043(White) 1-2:Heater Out 3-4:Eva Out 5-6:Eva in 7-8:Water Out 9-10:Water In | |
| ⑨ | EEV CNS062(Blue) | |
| ⑩ | TB-C (Black) F3-F4:COMM2 (Wired Remocon) INPUT/OUTPUT, DC, 210 mA(per each controller) | |
| ⑪ | TB-C (Black) F1-F2:COMM1 (IN-OUT COMM) INPUT/OUTPUT, DC, 10 mA | |
| ⑫ | CNS1(White) 1:Signal 3:Gnd | |
| ⑬ | Boost Heater TB-A1 (Black) L-N, OUTPUT AC | |
| ⑭ | Main Power TB-A(Black) L-N, INPUT, AC | |
| ⑮ | TB-B(Black) | |
| | B1: Neutral_INV PUMP, OUTPUT, AC B2: Mixing Valve_CW, OUTPUT, AC B3: Mixing Valve_CCW, OUTPUT, AC B4: Boiler, OUTPUT, AC B5: Neutral, OUTPUT, AC B6: Lived_INV PUMP, OUTPUT, AC B7: Neutral, OUTPUT, AC B8: Lived, OUTPUT, AC B9: 2WAY1_NO, OUTPUT, AC B10: 2WAY1_NC, OUTPUT, AC B11: Neutral, OUTPUT, AC B12: Lived, OUTPUT, AC B13: 2WAY2_NO, OUTPUT, AC | B14: 2WAY2_NC, OUTPUT, AC B15: Neutral, OUTPUT, AC B16: Lived, OUTPUT, AC B17: 3WAY_NO, OUTPUT, AC B18: 3WAY_NC, OUTPUT, AC B19: Neutral, OUTPUT, AC B20: Lived, OUTPUT, AC B21: THERM01_C, INPUT, AC B22: THERM01_H, INPUT, AC B23: THERM02_C, INPUT, AC B24: THERM02_H, INPUT, AC B25: Solar/Thermostat_N, INPUT, AC B26: Solar/Thermostat_L, INPUT, AC |
| ⑯ | CNS304(RED) F3-F4:COMM2 (Wired Remote controller) | |
| ⑰ | CNS3(Black) 1:Signal 2:Gnd | |





Selecting solderless ring terminal

- ▶ Select a solderless ring terminal of a connecting power cable based on a nominal dimensions for cable.
- ▶ Cover a solderless ring terminal and a connector part of the power cable and then connect it.

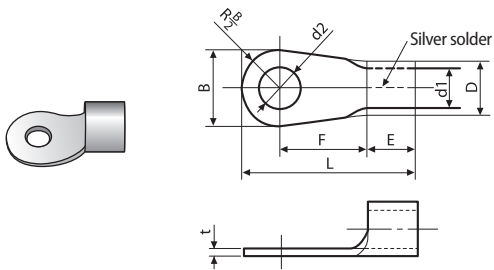





| Nominal dimensions for cable (mm ²) | | 1.5 | 2.5 | 4/6 | | 10 |
|---|-------------------------|--------------|--------------|--------------|-----------|--------------|
| Nominal dimensions for screw (mm) | | 4 | 4 | 4 | 8 | 8 |
| B | Standard dimension (mm) | 8 | 9.5 | 9.5 | 12 | 12 |
| | Allowance (mm) | ±0.2 | ±0.2 | ±0.2 | | ±0.2 |
| D | Standard dimension (mm) | 3.4 | 4.2 | 5.6 | | 7.1 |
| | Allowance (mm) | +0.3 -0.2 | +0.3 -0.2 | +0.3 -0.2 | | +0.3 -0.2 |
| d1 | Standard dimension (mm) | 1.7 | 2.3 | 3.4 | | 4.5 |
| | Allowance (mm) | ±0.2 | ±0.2 | ±0.2 | | ±0.2 |
| E | Min. | 4.1 | 4.1 | 6 | | 7.9 |
| F | Min. | 6 | 7 | 5 | 9 | 9 |
| L | Max. | 16 | 17.5 | 20 | 28.5 | 30 |
| d2 | Standard dimension (mm) | 4.3 | 5.3 | 4.3 | 8.4 | 8.4 |
| | Allowance (mm) | + 0.2 0 | + 0.2 0 | + 0.2 0 | +0.4 0 | +0.4 0 |
| t | Min. | 0.7 | 0.8 | 0.9 | | 1.15 |



Wiring works

How to connect your extended power cables

1. Prepare the following tools.


| Tools | Crimping pliers | Connection sleeve (mm) | Insulation tape | Contraction tube (mm) |
|-------|---|---|---|--|
| Spec | MH-14 | 20xØ6.5(HxOD) | Width 19mm | 70xØ8.0(LxOD) |
| Shape |  |  |  |  |

2. As shown in the figure, peel off the shields from the rubber and wire of the power cable.

- Peel off 20 mm of cable shields from the pre-installed tube.




- For information about the power cable specifications for indoor and outdoor units, refer to the installation manual.
- After peeling off cable wires from the pre-installed tube, insert a contraction tube.

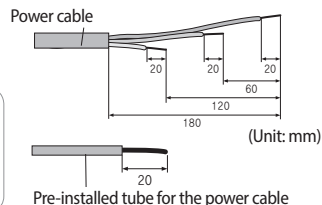

3. Insert both sides of core wire of the power cable into the connection sleeve.


► **Method 1**

Push the core wire into the sleeve from both sides.

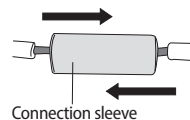


► **Method 2**

Twist the wire cores together and push it into the sleeve.




4. Using a crimping tool, compress the two points and flip it over and compress another two points in the same location.

- The compression dimension should be 8.0.
- After compressing it, pull both sides of the wire to make sure it is firmly pressed.

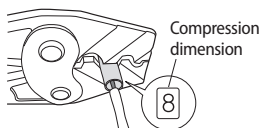


► **Method 1**

Compress it 4 times.



► **Method 2**


Compress it 4 times.






5. Wrap it with the insulation tape twice or more and position your contraction tube in the middle of the insulation tape. Three or more layers of insulation are required.


► Method 1




► Method 2



6. Apply heat to the contraction tube to contract it.




7. After tube contraction work is completed, wrap it with the insulation tape to finish.



- Make sure that the connection parts are not exposed to outside.
- Be sure to use insulation tape and a contraction tube made of approved reinforced insulating materials that have the same level of withstand voltage with the power cable. (Comply with the local regulations on extensions.)



- In case of extending the electric wire, please DO NOT use a round-shaped Pressing socket.
- Incomplete wire connections can cause electric shock or a fire.






Wiring works

Selection for the power and booster heater wire terminal


- ▶ Connect the cables to the terminal board using the solderless ring terminal.
- ▶ Use certified and verified cables.
- ▶ Connect using a driver which is able to apply the rated torque to the screws.
- ▶ If the terminal is loose, fire may occur caused by arc.
If the terminal is connected too firmly, the terminal may be damaged.
- ▶ External force should not be applied to the terminal block and wires.
- ▶ The cable ties to fasten the wire should be an incombustible material, V0 or above.
(The cable ties should be used to fasten the power wire and they are supplied with the unit.)

| Tightening Torque (kgf • cm) | |
|------------------------------|------------|
| M3 | 0.5 ~ 0.75 |
| M3.5 | 8 ~ 12 |
| M4 | 12 ~ 18 |
| M5 | 20 ~ 30 |

▶ Main PCB

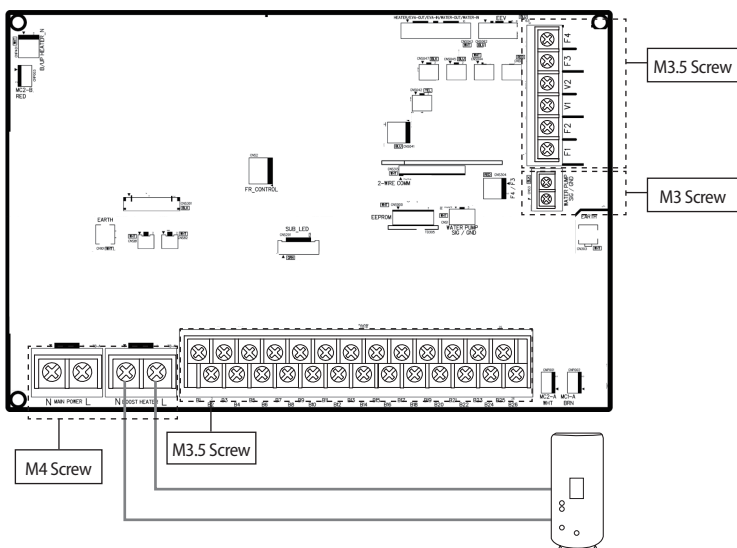

▶ ELCB

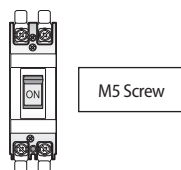



Grounding work

- ▶ Grounding must be done by a qualified installer for your safety.

Grounding the power cable

- ▶ The standard of grounding may vary according to the rated voltage and installation place of a heating pump.
- ▶ Ground the power cable according to the following.


| Installation place Power condition | High humidity | Average humidity | Low humidity |
|--|---------------|--|--|
| Electrical potential of lower than 150V | | Perform the grounding work 3. ^{Note 1)} | Perform the grounding work 3 if possible for your safety. ^{Note 1)} |
| Electrical potential of higher than 150V | | Must perform the grounding work 3. ^{Note 1)} (In case of installing circuit breaker) | |

* Note 1) Grounding work 3

- Grounding must be done by your installation specialist.
- Check if the grounding resistance is lower than 100 Ω .





When installing a circuit breaker that can cut the electric circuit in case of a short circuit, the allowable grounding resistance can be 30~500 Ω .

* Examples to use cable stripper



<Cable stripper>


1. Adjust the blade position by coin(the controller is at the bottom side of the tool). Fix the blade position according to the outer sheath thickness of the power cable.
2. Fix the power cable and tool by using the hook at the top side of the tool.
3. Cut out the outer sheath of the power cable by revolving the tool in the direction of the arrow, two or three times.
4. At this situation, cut out the outer sheath of the power cable by moving the tool toward the arrow direction expressed.
5. Slightly bend the wire and pull out the cut part of the outer sheath.





Wiring works

Power and communication with outdoor unit

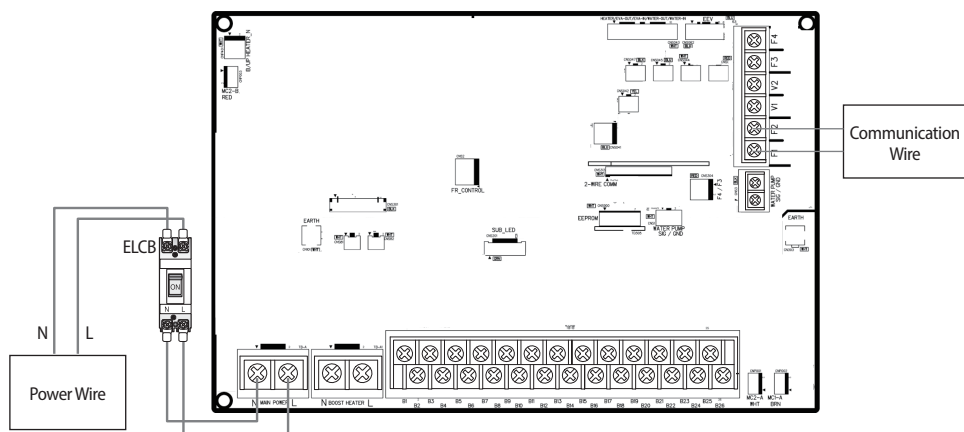

- Be careful when connecting L, N.

Connecting the power wire

1. Connect 'Live' and 'Neutral' power line with 'L, N' of a ELCB.
2. Connect 'L,N' of a ELCB with 'A1 and A2' in TB-A.
3. Connect 'Protective Earth' line with 'Earth screw' in case.

Recommended wire specification

| Load | Power Supply | Power Cable | Max. Length |
|--|--------------------|-------------|-------------|
| | | mm², wires | m |
| Do NOT use Heater (Water Pump, Valve, Wired RMC) | 1Ø, 220-240V, 50Hz | 1.5 / 3 | L < 10m |
| | | 2.5 / 3 | 10m < L |
| Use Booster Heater (Max. 3kW) | | 4.0 / 3 | L < 10m |
| | | 6.0 / 3 | 10m < L |


- ▶ The power cable is not supplied with Air to water heat pump.
- ▶ This equipment with "IEC 61000-3-12".
- ▶ Supply cords of parts of appliances for control kit use shall not be lighter than polychloroprene sheathed flexible cord (Code designation IEC:60245 IEC 57 / CENELEC:H05RN-F)






Connecting the communication wire


- ▶ Connect outdoor unit's F1&F2' with control kit's F1&F2 in TB-C' by 2 core cable.

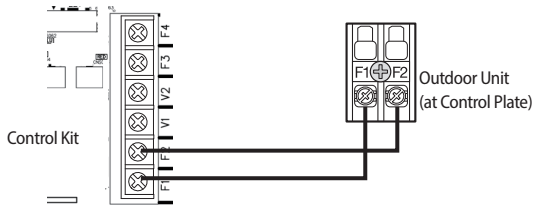

Communication with a wired remote controller (1 unit)

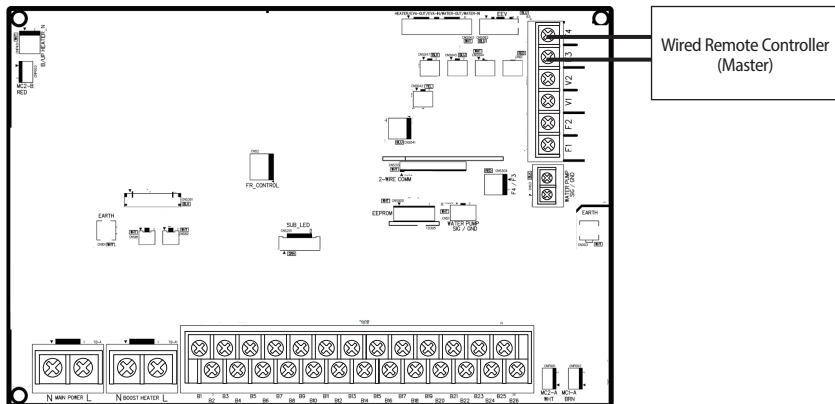

Communication with a wired remote controller (2 units)

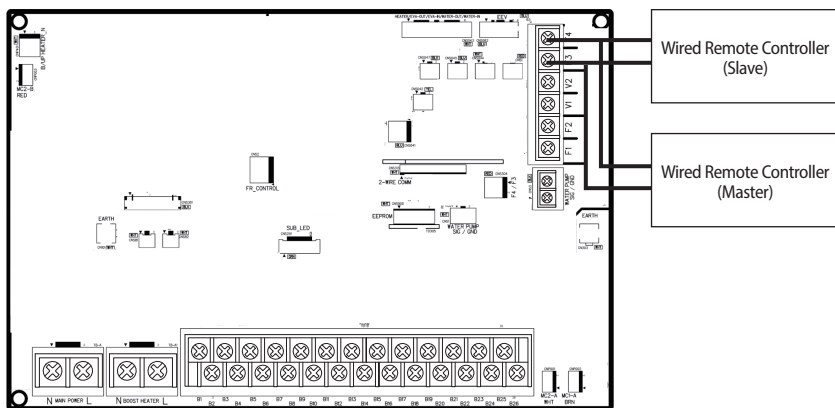

Connecting a wired remote controller

1. Connect 'F3, F4' of TB-C kit with 'F3, F4' of a wired remote controller.
- ▶ 2 units (wired remote controllers) are able to be installed on TB-C.
 - ▶ When 2 units are installed, either one shall have "Master" setting and another one shall have "Slave" settings on a wired remote controller.






Wiring works

Temp. Sensor for DHW, Backup heater and a water Flow S/W

External wiring to control a switch of relay by a installer

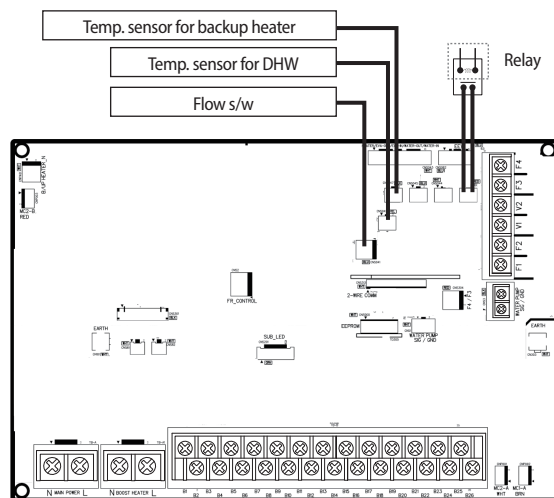

Connecting a temp. sensor wire into DHW

1. Put the sensor side of a temp. sensor wire into the designated location in a DHW.
2. Connect the other side of the line at CNS042.

Connecting a temp. sensor wire to outlet of backup heater

1. Put the sensor side of a temp. sensor wire into the designated location in a backup heater.
2. Connect the other side of the line at CNS047.

Connecting a flow switch

1. Install a flow switch in water line.
2. Connect a wire of a flow switch into 'CNS041' connector.


Connecting a S/G(Smart grid)

1. Install as above diagram.





DHW tank Switch box layout

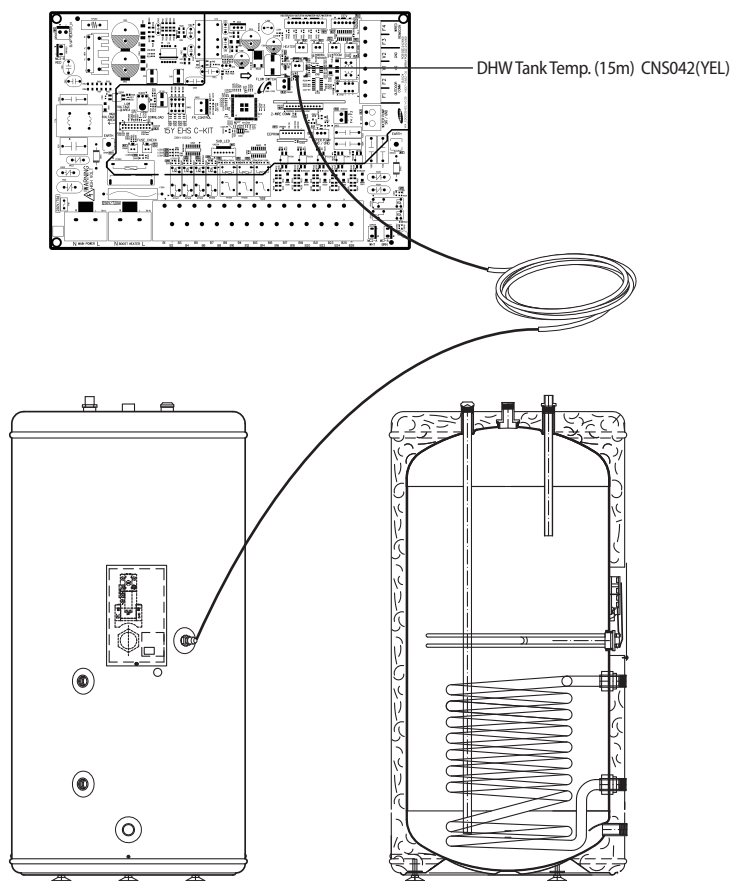

- * Use a correct sensor pocket which is fit for the DHW tank sensor(OD Ø6).
If the gap between the supplied sensor and DHW tank sensor pocket is big, use thermal grease.





DHW tank

Electrical connections

Procedure



WARNING

- Switch off the power supply before making any connections.
- Use a thermal grease in thermistor pocket after installing electric connections.

Connections to be made in the electrical box of DHW tank

1. Connect the booster heater power supply and thermal protection cable.
2. Make sure to ensure strain relief of the cable.

Connections to be made in the electrical box of indoor units

3. Plug the thermistor cable connector in the connector CNS042 on the pcb.
4. Connect the booster heater power supply and thermal protection cable(field supply) to terminal TB-A1 and earth on the terminal block.
5. Connector the loose ends of the TB-A1 on the terminal block and the connector CNS042 on the PCB.
6. Plug the thermistor cable connector in the socket X9A on the PCB.
7. Connect the booster heater power supply and thermal protection cable (field supply) to terminal 7, 8, 21, 22 and earth on the terminal block.
8. Connect the booster heater power supply cable to the circuit breaker and earthing screw.
9. Fix the cables to the cable tie mountings with cable ties to ensure strain relief.




CAUTION

- It is of great importance that the heater is filled with water before the electricity is hooked up, or else- the warranty is not valid. If the heater is installed and not used, it must be flushed with water once a week.

Connection of the solar circulation pump for DHW tank

| Description | No. of wires | Max. A | Thickness | Supply Scope |
|-------------|--------------|--------|--|------------------------------|
| Solar pump | 2+ground | 10 mA | 0.75mm ² H05RN-F or H07RN-F | Field supply (230 V~, Input) |

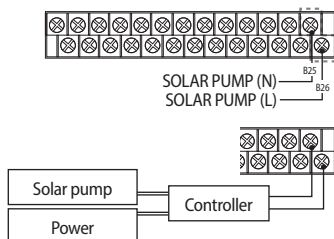

1. Before the installation, control kit should be turned off.
2. Using the appropriate equipment to correct position of terminal block as shown on the diagram.
3. It is for control kit to inform that the pump is operating.
4. Solar pump is controlled by installer's handling. And it send the signal to control kit depending on solar pump conditions. In operating mode, signal shall be around 230Vac B/W N&L. In non-operating mode, signal shall be around 0Vac B/W N&L.



CAUTION


- Maximum allowable current of each terminal is below 10 mA.
- Ports number B25, B26 are for input port for detection and they do not supply power to a solar pump.





Connection of the solar circulation pump / DHW Thermostat for DHW tank

| Description | No. of wires | Max. A | Thickness | Supply Scope |
|-----------------------------|--------------|--------|--|------------------------------|
| Solar pump / DHW Thermostat | 2+ground | 10 mA | 0.75mm ² H05RN-F or H07RN-F | Field supply (230 V~, Input) |

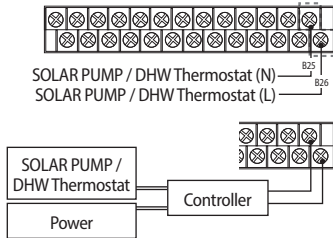


1. Before the installation, control kit should be turned off.
2. Using the appropriate equipment to correct position of terminal block as shown on the diagram.
3. It is for control kit to inform that the Solar pump / DHW Thermostat is operating.
4. Solar pump / DHW Thermostat is controlled by installer's handling. And it send the signal to control kit depending on Solar pump / DHW Thermostat conditions. In operating mode, signal shall be around 230Vac B/W N&L. In non-operating mode, signal shall be around 0Vac B/W N&L.



- Maximum allowable current of each terminal is below 10 mA.
- Ports number B25, B26 are for input port for detection and they do not supply power to a Solar pump / DHW Thermostat.

Power connection

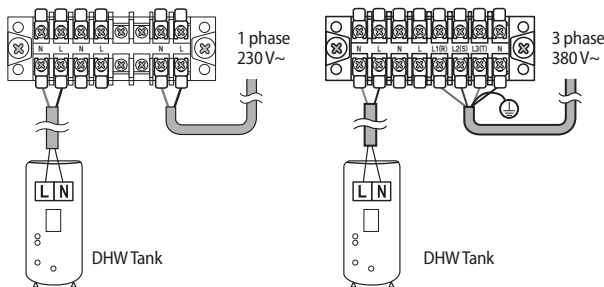

- It is important that the 3-way valve is fitted correctly: When the 3-way valve is idle (not activated) the space heating circuit should be selected, when the 3-way valve is activated the sanitary heating circuit should be selected.
- The booster heater that will be connected should be 3 kW or lower.

Troubleshooting

IMPORTANT: All maintenance or repair work must be executed by an approved installer.

| Problem | Possible cause | Solution |
|------------------------------|---|---|
| Hot water is not coming out. | No power supply to the water heater | Check if there is any power on the power supply terminal on the thermostat. |
| | The thermostat may be set too high and cause the fuse or safety cut-off to operate. | Reduce thermostat setting by 5 °C and press the reset button. |





DHW tank

| Problem | Possible cause | Solution |
|---|--|---|
| Heating is not working | Heating element or internal electrical wiring is out of order. | Check if there is any power on the power supply on the connector of the heating element between black and yellow/green wires. If this is OK, press the reset button on the fuse/safety cut-off. |
| Water is not warm enough | Thermostat is set too low. | Adjust the thermostat up using a standard screwdriver. |
| | Heating element or the internal electrical wiring is partially out of order. | Check the resistance of the heating element on the connector of the heater bundle, and the condition of the internal wiring. |
| | UX mixing valve(fitted on top) is incorrectly adjusted. | Adjust the UX mixing valve correctly to the preferred temperature. |
| Safety valve(SV) is dripping. | Water expands when heated. If there is no consumption of hot water over a period of time pressure builds up, causing the safety valve to open. | If drip from the SV is severe, it might need to be replaced. Some dripping is normal. Alternatively an expansion vessel can be fitted. |
| Leak warning outlet is dripping. | The heating element may not be properly tightened. | Check the heating element o-ring seal and all connections. |
| | There may be a leak. | |
| Other problems, or if none of the above solves the problem. | - | Contact the installer/supplier regarding any other failure. |



Incorrect handling of thermostat, safety valve or other valves may lead to tank rupture. When servicing the unit follow instructions carefully:

- Always turn off main power supply when water supply is being shut off.
- Test the free operation of the safety valve regularly by opening the valve ensuring the water flows freely.
- Electrical connection and all servicing of the electrical components should only be carried out by an authorized electrician.
- Fitting and all servicing of plumbing fixtures should only be carried out by an authorized installer.
- When replacing the thermostat, safety valve or any other valve or part supplied with this unit, use only approved parts of the same specification.




- Before resetting the safety cut-off or altering the thermostat setting, always remember to isolate the electrical supply to the unit. This must be done prior to removing the electrical box lid.
- If the electric element or thermostat is defective, contact authorized electrician.
- After adjustments are completed, ensure the lid to the electrical box is refitted correctly and that the retaining screw is properly fitted.





Booster heater

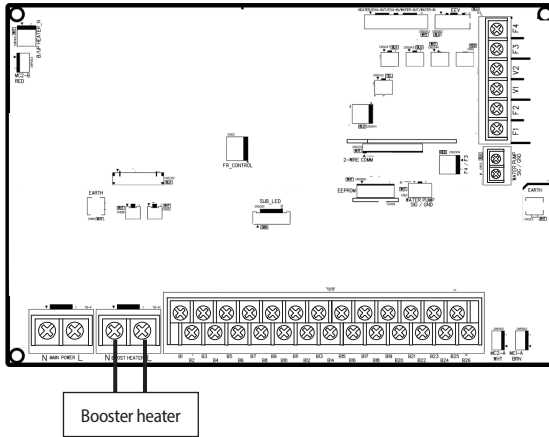

Recommended wire specification

| Load | Power Supply | Power Cable | Max. Length |
|-------------------------------|--------------------|-------------------------|-------------|
| | | mm ² , wires | m |
| Use Booster Heater (Max. 3kW) | 1Ø, 220-240V, 50Hz | 4.0 / 3 | L < 10m |
| | | 6.0 / 3 | 10m < L |

※ Code designation IEC: 60245 IEC 57/ CENELEC: H05RN-F

Connecting a booster heater (PTC heater – allowed limit : Max. 3kW)

1. Directly connect a 'Booster heater' with 'A3 and A4' in TB-A.



NOTE

- Wire spec : 6.0 mm² (regardless of distance)
- Code designation IEC : 60245 IEC 57 / CENELEC : H05RN-F

Specification table


| Part | Specification |
|-------------------------|------------------------------------|
| Terminal Block (output) | N, L of TB-A1 |
| Connection load | Direct connection a booster heater |
| Output (N, L) | AC 230V (MAX 20A) |





Wiring works


Backup heater

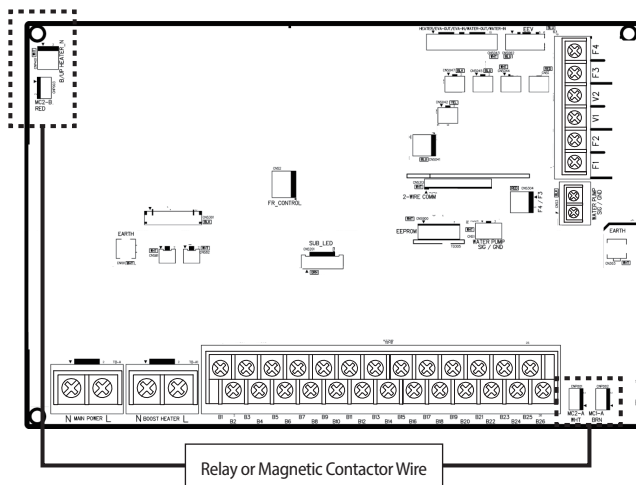


Connecting a relay or a magnetic contactor for a backup heater (Not Directly connect a backup heater)

1. Connect a "relay or a magnetic contactor" with "CNP003,CNP001,CNP002".
 - ▶ When a backup heater mode is "ON" at 1st step, a control signal of AC 230V goes through CNP003 and CNP001.
 - ▶ When a backup heater mode is "ON" at 2nd step, a control signal of AC 230V goes through CNP003 and CNP002..

1st step

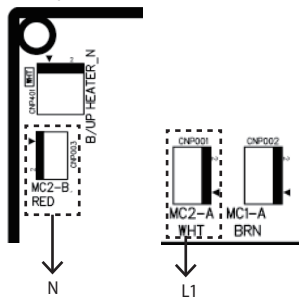

2nd step

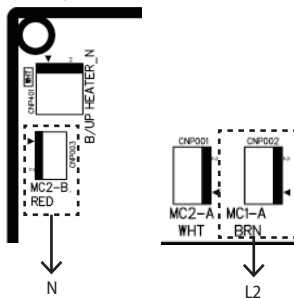

NOTE


This port can NOT supply enough power for driving a backup heater.
It's just for providing a ON/OFF control signal.
Maximum current is 0.5A.






| Part | Specification |
|--|--|
| Tab-Terminal (output) | Step1 : CNP003, CNP001 Step2 : CNP003, CNP002 |
| Connection load | Relay or Magnetic contactor for a control signal |
| Output(CNP003,CNP001 or (CNP003,CNP001)+(CNP003,CNP002) | AC 230V (MAX 0.5A) |

Backup boiler

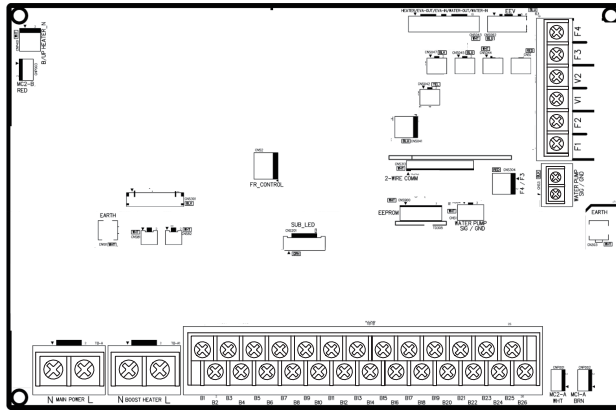



Connection of the back-up boiler

| Description | No. of wires | Max. A | Thickness | Supply Scope |
|----------------|--------------|--------|--|------------------------------|
| Back-up Boiler | 2+ground | 10 mA | 0.75mm ² H05RN-F or H07RN-F | Field supply (230 V~, Input) |



When it set back up
boiler on the control kit
(relay off)

When it order to back up
boiler operates (relay on)



1. Before the installation, control kit should be turned off.
 2. Using the appropriate equipment to correct position of terminal block as shown on the diagram.
 3. Make sure EXT-CTRL signal of back up boiler must be 230Vac.
 - Do not connect supply power of back up boiler directly.
- * Heat pump does not work when the Back-up boiler operates.



Wiring works


Connection guide of additional pump

Case 1) INV. pump


Connect the PWM control external type pump to PWM terminal block and power cable to the external contact terminal.

The maximum number of additional pump installation is one inverter pumps (Input power 100W).

1. Power supply (INV. Pump)

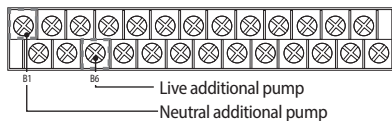

2. PWM control (for INV. Pump only)



• If there is wrong wiring between PWM and reference, INV. Water Pump may not work or wrong operation.






Case 2) AC pump


The maximum number of additional pump installation is one AC pumps (Input power 100W).

1. Power supply (AC Pump)

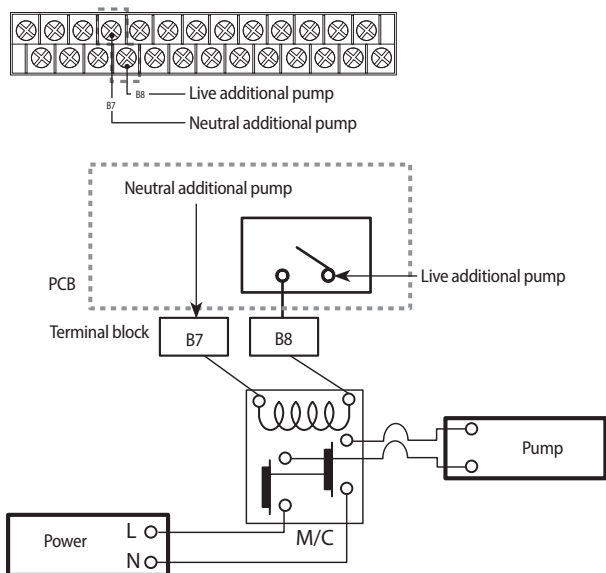

- Terminal of this product is for additional water pump and the maximum allowable current is 0.5 A.

PWM characteristic curve

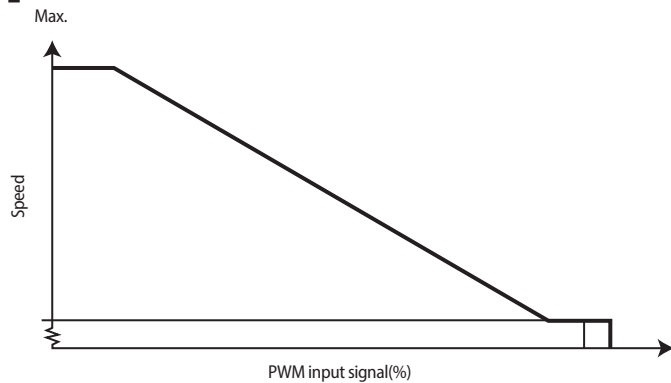

The additional pump should be the same type of product as the above graph.

Recommendation

5~9 kW : GRUNDFOS UPM3 25-75 (Heating Type)

12~16 kW : WILO STRATOS PARA 25/1-9 (Heating Type)







Wiring works

Connection of the 2-way valve


| Description | No. of wires | Max. A | Thickness | Supply Scope |
|---|--------------|--------|---|-------------------------------|
| Motorized 2-way valve to shut off UFH loops during cooling. | 2+ground | 22 mA | > 0.75 mm ² , H05RN-F or H07RH-F | Field supply (230 V~, Output) |




* Connection of 2 wires 2-way valve



In case of normal closed type

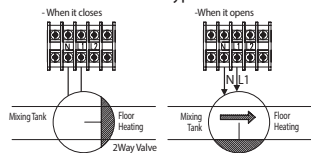

In case of normal open type

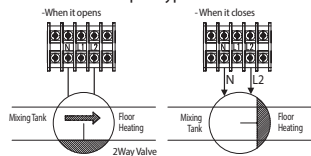

2-way motorized valve

- ▶ When outlet water temperature reach to lower than 16 °C in cooling mode, UFH loops will be closed.
 - ▶ 230V AC
 - ▶ 2 wires(Normal Open or Normal Close)
1. Before the installation, control kit should be turned off.
 2. Using the appropriate equipment to correct position of terminal block as shown on the diagram.
 3. Make sure what type is you use.
 - Normal OPEN or Normal CLOSED.



• There are 2 types of 2-way valve, normal open type and normal closed type. Make sure to connect terminals to right positions of terminal block. As detailed on the wiring diagram and illustrations above.





Connection of the 3-way valve

| Description | No. of wires | Max. A | Thickness | Supply Scope |
|---------------------------|--------------|--------|---|------------------------------|
| Diverting type 3way valve | 4 | 22 mA | > 0.75 mm ² , H05RN-F or H07RN-F | Field supply (230 V~, Input) |




Neutral (N) ~B15, B18 3WAY (L2)
Live (L) ~B16 3WAY (L1)

| Status | L1 | L2 |
|-------------|-----|-----|
| A (Initial) | OFF | ON |
| B | ON | OFF |

3-way diverting valve for water tank

- ▶ Diverting type cooling mode, UFH loops will be closed.
- ▶ 230V AC

1. Before the installation, control kit should be turned off.
2. Using the appropriate equipment to correct position of terminal block as shown on the diagram.
3. Make sure what type of 3 way V/V you use.


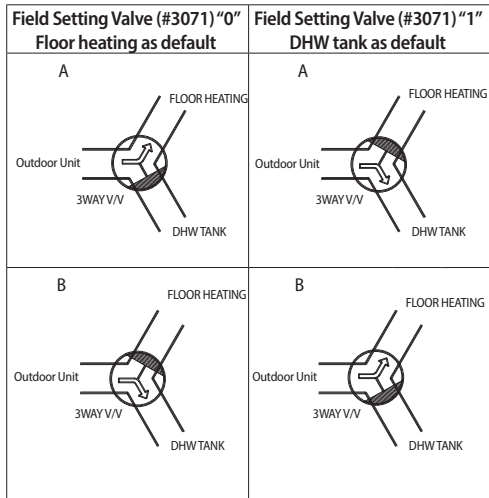


Connection of the thermostat

| Description | No. of wires | Max. A | Thickness | Supply Scope |
|-------------------------------------|--------------|--------|---|------------------------------|
| Room Thermostat for weather control | 4 | 22 mA | > 0.75 mm ² , H05RN-F or H07RH-F | Field supply (230 V~, Input) |



Neutral (N) ~B19
Live (L) ~B20, B21, B22
THERMOSTAT01_COOLING (C1) ~B23
THERMOSTAT01_HEATING (H1) ~B24
THERMOSTAT02_COOLING (C2) ~B23
THERMOSTAT02_HEATING (H2) ~B24



1. Before the installation, control kit should be turned off.
2. Using the appropriate equipment to correct position of terminal block as shown in the diagram.
3. Make sure what type is you use.
 - Contact signal must be "L". When you install two thermostats, thermostat2 is prior to thermostat1.






Wiring works


Example

zone#1 only : cooling mode

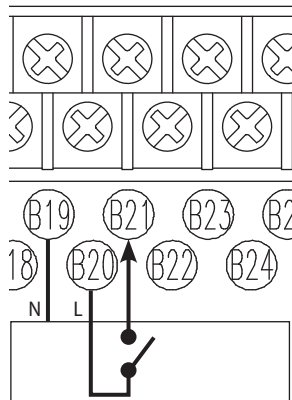


Room thermostat

zone#2 only : cooling mode

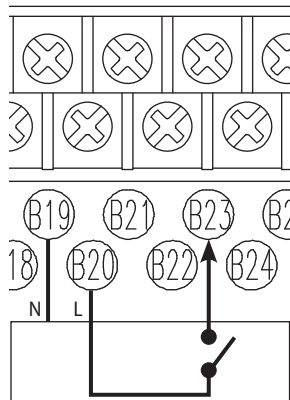


Room thermostat

zone#1, zone#2 : cooling mode

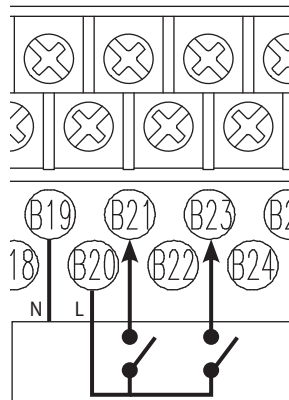


Room thermostat

zone#1 only : heating mode

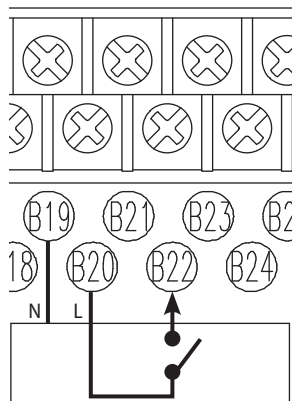


Room thermostat

zone#2 only : heating mode

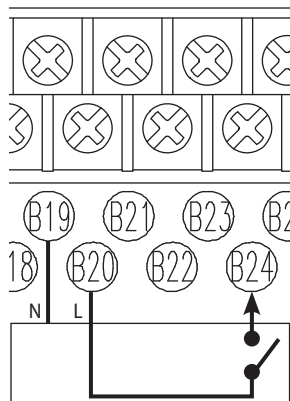

Room thermostat

zone#1, zone#2 : heating mode

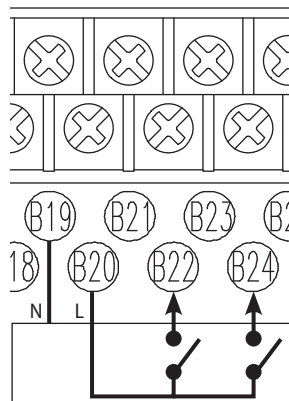

Room thermostat



- Before completing installation of Room thermostat, check the wiring method in a manual of Room thermostat to output L line.

| Target zone | Zone 1 |
|--|-----------|
| Thermostat on/off controller's output signal | Only Heat |

- Connect a thermostat on/off controller's power to B19, B20 and connect output of a thermostat on/off controller to B22.







Example of RX1 (Danfoss)

- In manual of a RF receiver

RX1 and RX2

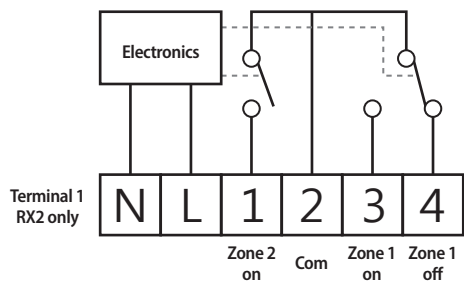

- Example of wiring works

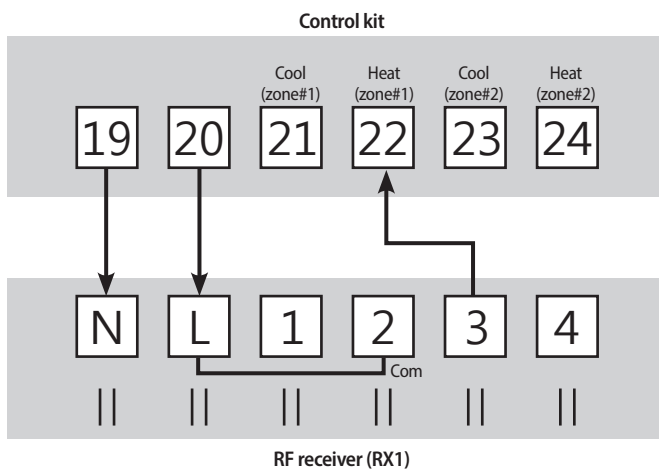




Wiring works

Connection of the solar circulation pump / DHW Thermostat for DHW tank

| Description | No. of wires | Max. A | Thickness | Supply Scope |
|-----------------------------|--------------|--------|--|------------------------------|
| Solar pump / DHW Thermostat | 2+ground | 10 mA | 0.75mm ² H05RN-F or H07RN-F | Field supply (230 V~, Input) |

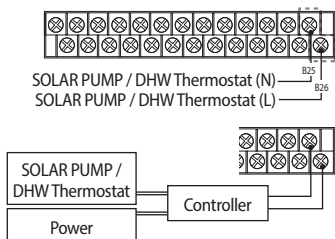

1. Before the installation, control kit should be turned off.
2. Using the appropriate equipment to correct position of terminal block as shown on the diagram.
3. It is for control kit to inform that the Solar pump / DHW Thermostat is operating.
4. Solar pump / DHW Thermostat is controlled by installer's handling. And it send the signal to control kit depending on Solar pump / DHW Thermostat conditions. In operating mode, signal shall be around 230Vac B/W N&L. In non-operating mode, signal shall be around 0Vac B/W N&L.




- Maximum allowable current of each terminal is below 10 mA.
- Ports number B25, B26 are for input port for detection and they do not supply power to a Solar pump / DHW Thermostat.









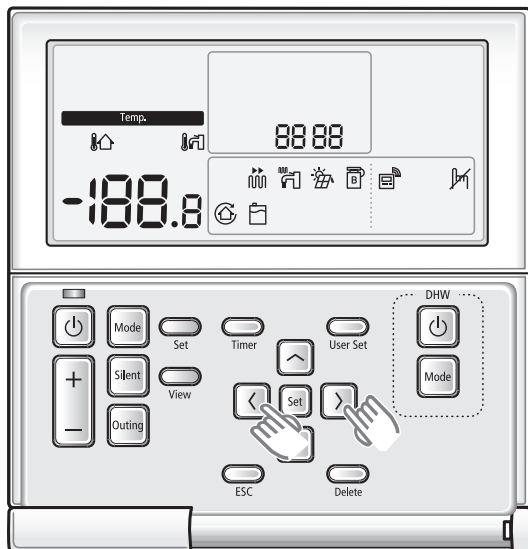










Self-test mode of wired remote controller

Use of self-test mode



1. When using the self-test mode of the wired remote controller, press the [\leftarrow] and [\rightarrow] buttons for more than 3 seconds.
2. You can operate the self-test mode as follows.

► Load list: When pressing the corresponding button, you can set the load On or Off.

| Enter button | Operating part | LCD display |
|--|------------------|---|
|  (Red) | Water pump |  |
|  | Booster heater |  |
|  | DHW valve |  |
|  | Zone #1 Valve | 2- 1 |
|  | Back Up Heater 1 |  |
|  | Back Up Heater 2 |  |
|  | Back Up Boiler |  |
|  | Zone #2 Valve | 2- 2 |
|  | Mixing Valve | 3- 1 |

- When the water pump is turned off, the back up heater cannot be turned on.
- DHW valve, Zone #1 Valve, Zone #2 Valve and Mixing Valve cannot be turned on at the same time.






- ▶ Thermostat 1, 2, and solar heat panel are displayed as below when you set them with an control kit.



Thermostat 1 (Zone 1), Thermostat 2 (Zone 2), Solar heat panel (ON/OFF)

- ▶ Timer button: Whenever you press the button, the sensor value will be displayed in order.

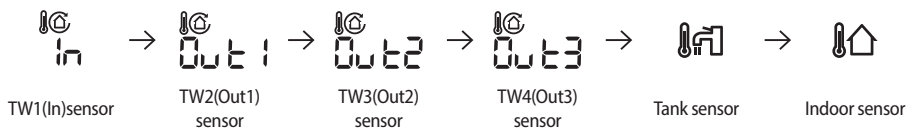

- ▶ While the sensor value is being displayed but you don't press the 'Timer' button for 5 seconds, the previous status will be shown.
- ▶ For the sensor fault or absence of sensor installation, corresponding sensor temperature will be displayed as "Er".
- ▶ When you press the button that does not have a function, will blink for 3 seconds.
- ▶ When pressing the **Delete** button one time, all the loads will be Off.
- ▶ When all the loads are OFF status, "Cancel" Key input will be ignored and will blink for 3 seconds.
- ▶ When pressing the **ESC** button, you will exit to the general mode.
- ▶ Mixing valve related operation will work depending on the use of mixing valve (FSV Code : 4041).




Troubleshooting

If the unit has some problem to work properly, some error codes will be displayed on the controller.
The following table described the explanation of error codes on the LCD display.

Thermistor

- ▶ Check its resistance. 10kohm@25 °C (Control kit), 200kohm@25 °C (DHW Tank, Solar)
- ▶ Check its location as shown at the diagram.
- ▶ Check its contact status with pipe.
- ▶ Final solution is to change parts

| Display | Explanation |
|---------|---|
| 653 | Wired remote controller thermistor SHORT or OPEN |
| 901 | Water Inlet thermistor SHORT or OPEN |
| 902 | PHE Outlet thermistor SHORT or OPEN |
| 903 | Water outlet (Back up Heater) temp sensor SHORT or OPEN (The Backup heater for using) |
| 904 | Water TANK thermistor SHORT or OPEN |
| 906 | Outdoor Eva Inlet Temp Sensor SHORT or OPEN |
| 916 | Mixing Valve thermistor SHORT or OPEN |

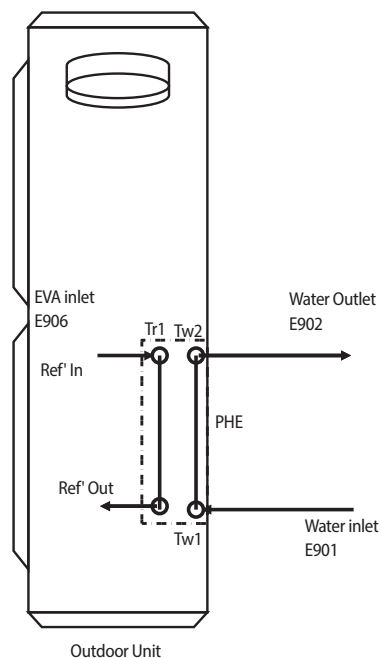

Wired remote controller temp sensor
E653



Water tank temp sensor
E904






Communication


| Display | Explanation |
|---------|---|
| 601 | Communication error between remote controller and the Control kit |
| 604 | Tracking error between remote controller and the Control kit |
| 654 | Memory(EEPROM) Read/Write Error(Wired remote Controller data error) |

E601, E604

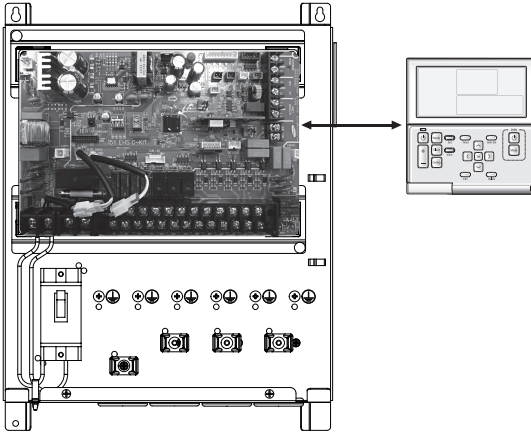

E654

MEMORY(EEPROM) Read/Write Error (Wired controller data error)

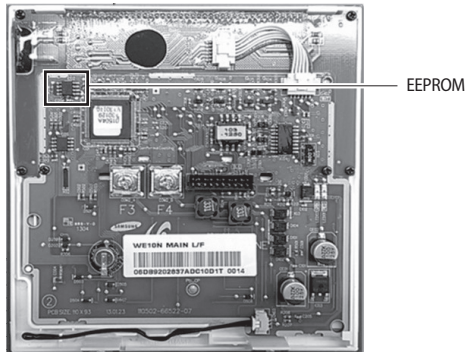




Troubleshooting

Water pump &flow S/W

| Display | Explanation |
|---------|---|
| 9 11 | Flow S/W OFF error • In case of flow S/W OFF in 30 sec during water pump signal is ON(Starting) • In case of flow S/W OFF in 15 sec during water pump signal is ON (After starting) |
| 9 12 | Flow S/W ON error • In case of flow S/W ON in 10min during water pump signal is OFF |


E911

- ▶ Water pump ON (Flow S/W off)
- ▶ Water pump ON (Flow S/W off) : NOT enough water flow

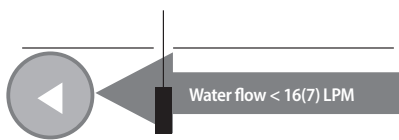

E912

- ▶ Water pump OFF (Flow S/W on)

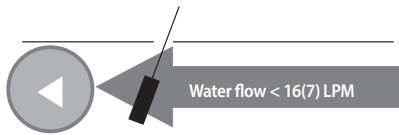



Error codes

If the unit has some problems and does not work normally, error code is shown on the OUTDOOR UNIT main PBA or LCD of the wired remote controller.

| Display | Explanation | Error Source |
|---------|--|------------------------------|
| 101 | CONTROL KIT / OUTDOOR UNIT wire connection error | CONTROL KIT, OUTDOOR UNIT |
| 162 | EEPROM Error | CONTROL KIT |
| 198 | Error of Terminal Block's Thermal Fuse(Open) | CONTROL KIT |
| 201 | CONTROL KIT/OUTDOOR UNIT communication error (Matching error) | CONTROL KIT, OUTDOOR UNIT |
| 202 | CONTROL KIT/OUTDOOR UNIT communication error (3 min) | CONTROL KIT, OUTDOOR UNIT |
| 203 | Communication error between INVERTER and MAIN MICOM (6 min) | OUTDOOR UNIT |
| 221 | OUTDOOR UNIT temperature sensor error | OUTDOOR UNIT |
| 231 | Condenser temperature sensor error | OUTDOOR UNIT |
| 251 | Discharge temperature sensor error | OUTDOOR UNIT |
| 320 | OLP sensor error | OUTDOOR UNIT |
| 403 | Detection of OUTDOOR UNIT compressor freezing (During cooling operation) | OUTDOOR UNIT |
| 404 | Protection of OUTDOOR UNIT when it is overload (during Safety Start, Normal operation state) | OUTDOOR UNIT |
| 407 | Comp down due to high pressure | OUTDOOR UNIT |
| 416 | Discharge of a compressor is overheated | OUTDOOR UNIT |
| 425 | Power source line missing error (only for 3-phase model) | OUTDOOR UNIT |
| 440 | Heating operation blocked (outdoor temperature over 35°C) | OUTDOOR UNIT |
| 441 | Cooling operation blocked (outdoor temperature under 9°C) | OUTDOOR UNIT |
| 458 | OUTDOOR UNIT fan1 error | OUTDOOR UNIT |
| 461 | [Inverter] Compressor startup error | OUTDOOR UNIT |
| 462 | [Inverter] Total current error/PFC over current error | OUTDOOR UNIT |
| 463 | OLP is overheated | OUTDOOR UNIT |
| 464 | [Inverter] IPM over current error | OUTDOOR UNIT |
| 465 | Compressor V limit error | OUTDOOR UNIT |
| 466 | DC LINK over/low voltage error | OUTDOOR UNIT |
| 467 | [Inverter] Compressor rotation error | OUTDOOR UNIT |
| 468 | [Inverter] Current sensor error | OUTDOOR UNIT |
| 469 | [Inverter] DC LINK voltage sensor error | OUTDOOR UNIT |
| 470 | Outdoor unit EEPROM Read/Write Error | OUTDOOR UNIT |
| 471 | Outdoor unit EEPROM Read/Write Error(OTP error) | OUTDOOR UNIT |



Error codes


| Display | Explanation | Error Source |
|---------|---|---|
| 474 | IPM(IGBT Module) or PFCM temperature sensor Error | OUTDOOR UNIT |
| 475 | OUTDOOR UNIT fan2 error | OUTDOOR UNIT |
| 484 | PFC Overload Error | OUTDOOR UNIT |
| 485 | Input current sensor error | OUTDOOR UNIT |
| 500 | IPM is overheated | OUTDOOR UNIT |
| 554 | Gas leak error | OUTDOOR UNIT |
| 601 | Communication error between the CONTROL KIT and wired remote controller | Wired Remote Controller |
| 602 | Wired remote controller Master/Slave setting error | Wired Remote Controller |
| 604 | Communication tracking error between the CONTROL KIT and wired remote controller | CONTROL KIT, Wired Remote Controller |
| 607 | Communication error between the Master and Slave wired remote controllers | Wired Remote Controller |
| 901 | Water inlet (PHE) temperature sensor error(open/short) | OUTDOOR UNIT |
| 902 | Water outlet (PHE) temperature sensor error(open/short) | OUTDOOR UNIT |
| 903 | Water outlet (backup heater) temperature sensor error. | CONTROL KIT |
| 904 | DHW tank temperature sensor error | CONTROL KIT |
| 906 | Outdoor evaporator inlet temperature sensor (open/short) | OUTDOOR UNIT |
| 911 | Flow switch and water pump error (F/S signal is OFF for 10 sec. during the water pump signal is ON) | CONTROL KIT |
| 912 | Flow switch and water pump error (Water pump signal is OFF for 60sec during the F/S signal is ON) | CONTROL KIT |
| 916 | Mixing valve temperature sensor (open/short) | CONTROL KIT |





Mixing Valve

Installation of mixing valve

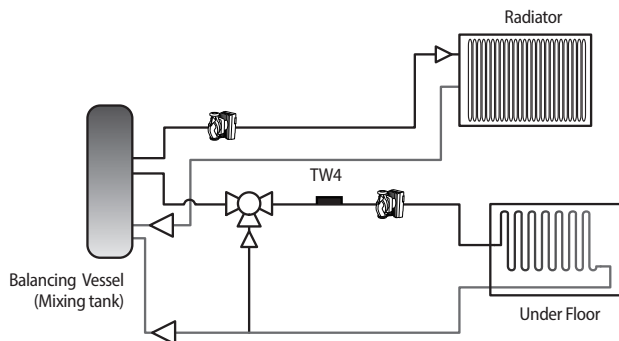

When two different zones are used with different temperature, adjust the temperature of discharge water to high temperature water and control the amount of bypass to provide low temperature water by applying the mixing valve and temperature sensor of the mixing valve (TW4).

1. Select a mixing valve from the manufacturers as below (recommended) and install it at the entrance of the zone.
2. Install the supplied temperature sensor (TW4) on the rear part of the mixing valve. Install TW4 Sensor within 1m of Mixing Valve.
3. Since running time varies depending on the manufacturer, set the FSV (default 90 sec.) by referring to the FSV value below.

| Maker | | BELIMO | SIEMENS | HONEYWELL |
|--------------------|-------------|--------------|--------------------|-------------|
| Model code | 3 Way Valve | R3020-6P3-S2 | VXP45.20-4 (kvs 4) | V5011E1213 |
| | Actuator | LR230A(-S) | SSB31 | ML6420A3015 |
| Running time | | 90 sec. | 150 sec. | 60 sec. |
| FSV(#4046) setting | | 9 | 15 | 6 |

* The table above is for your reference. It can be changed without advanced notice.

4. Set the FSV value by referring to the table below depending on installation environment.

| Function | Details | Code | Unit | Default | Min. | Max. |
|--------------|---|------|-----------|---------|------|------|
| Mixing valve | Use or not | 4041 | - | 0(No) | 0 | 2 |
| | Target temperature difference (Heating) (TW2-TW4) | 4042 | °C | 10 | 5 | 15 |
| | Target temperature difference (Cooling) (TW4-TW2) | 4043 | °C | 10 | 5 | 15 |
| | Control factor | 4044 | - | 2 | 1 | 5 |
| | Interval of valve control | 4045 | Min. | 2 | 1 | 30 |
| | Running time (10 second unit) | 4046 | (x10) sec | 9 | 6 | 24 |


* 4041 = 1 : Controlled based on the temperature difference (4042, 4043)

* 4041 = 2 : Controlled based on the temperature difference of the WL value



Mixing Valve

ex) Heating

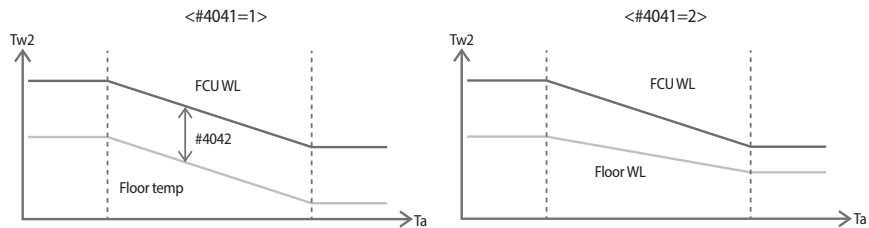


- * The mixing valve is controlled based on the FCU WL value.
- * As the #4044 value increases and the #4045 value decreases, the control speed increases. (Temperature hunting may occur if the control speed increases depending on the load.)
- * The additional pump and mixing valve should be purchased separately. TW4 sensor is included in the product accessories.
- * TW2 : Water temp. sensor 2




• When the thermostat control is set as 'Use', the mixing valve can be used for Zone 1 and Zone 2. (When both FSV #2091 and #2092 are set as 1)

Connection of the mixing valve

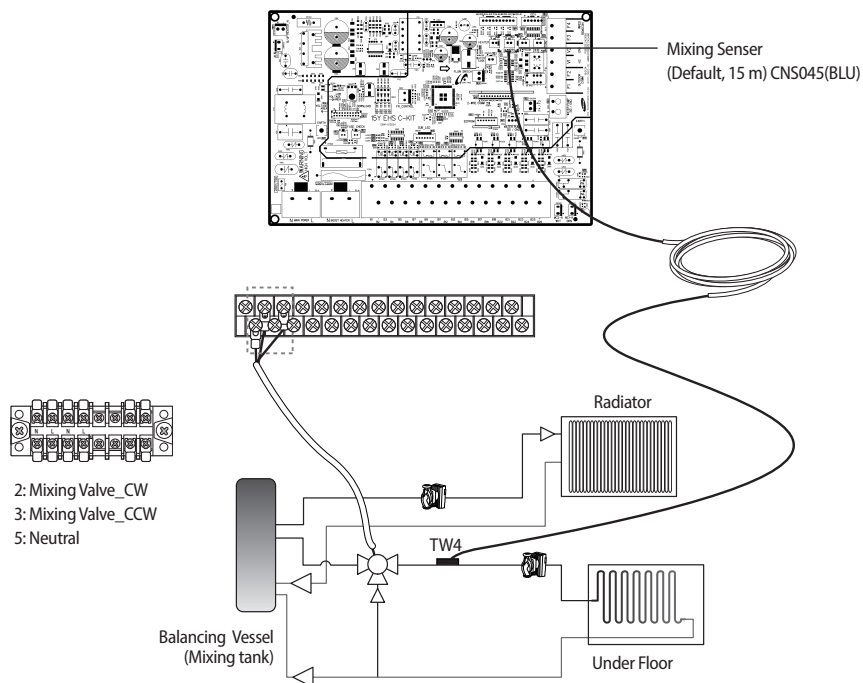



| Description | No. of wires | Max. A | Thickness | Supply Scope |
|--------------|--------------|--------|---|------------------------------|
| Mixing valve | 4 | 22 mA | > 0.75 mm ² , H05RN-F or H07RH-F | Field supply (230 V~, Input) |




1. Before the installation, control kit should be turned off.
2. Using the appropriate equipment to correct position of terminal block as shown on the diagram.


Example of sensor installation (TW3 / TW4)

Weld the sensor holder on the selected location of the pipe and then insulate it.

When the pipe is a copper pipe

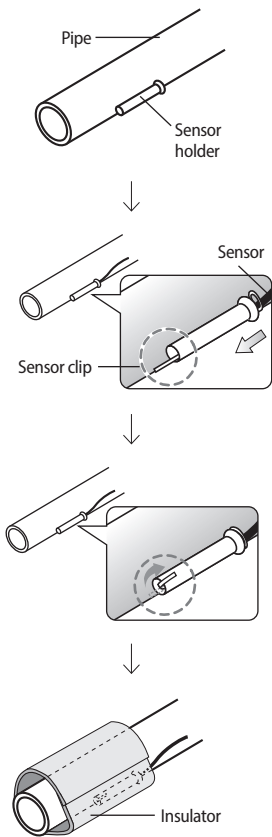

When the pipe is not a copper pipe

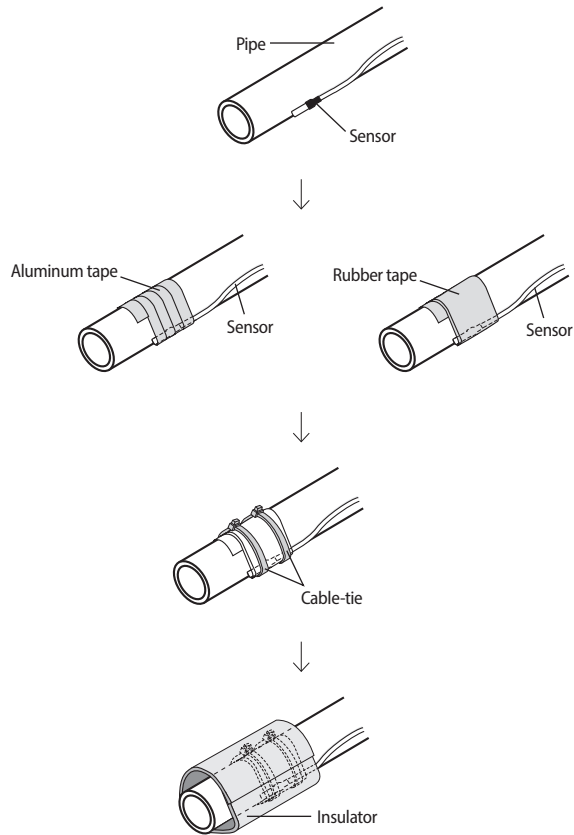

NOTE

- When the holder sensor cannot be welded on the pipe, fix the sensor with aluminum tape and insulate it.






Concrete curing function

When pipes of floor heating are installed, operation for reinforcing concrete curing is applied. (Period of operation: 23 days)

Entering procedure


1. After turning off the DIP switch K3 (3rd switch of SW03) of control kit (Default ON), turn off and turn on the control kit. The operation for concrete curing starts automatically. (If blackout occurs and communication restarts later, operation will continue.)
2. Temperature of discharge water is controlled as time goes on like below.

[Temp.]

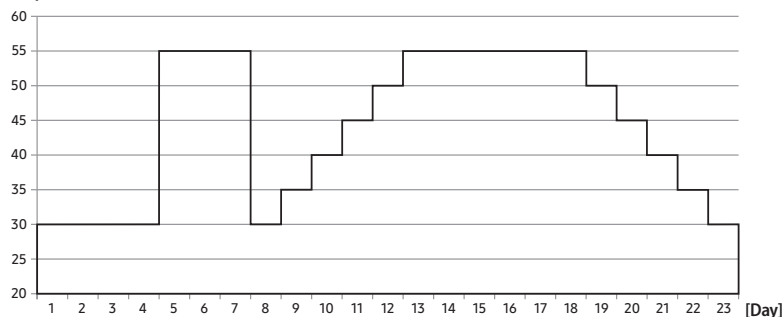

| Classification | Initial Heating | | Step raise | | | | | Heating | Step down | | | | | Total (Hour) |
|----------------|-----------------|----|------------|----|----|----|----|---------|-----------|----|----|----|----|--------------|
| Time | 96 | 72 | 24 | 24 | 24 | 24 | 24 | 144 | 24 | 24 | 24 | 24 | 24 | 552 |
| Temperature | 30 | 55 | 30 | 35 | 40 | 45 | 50 | 55 | 50 | 45 | 40 | 35 | 30 | - |

3. Remaining days are displayed on the wired remote controller during operation but key operation is unavailable.

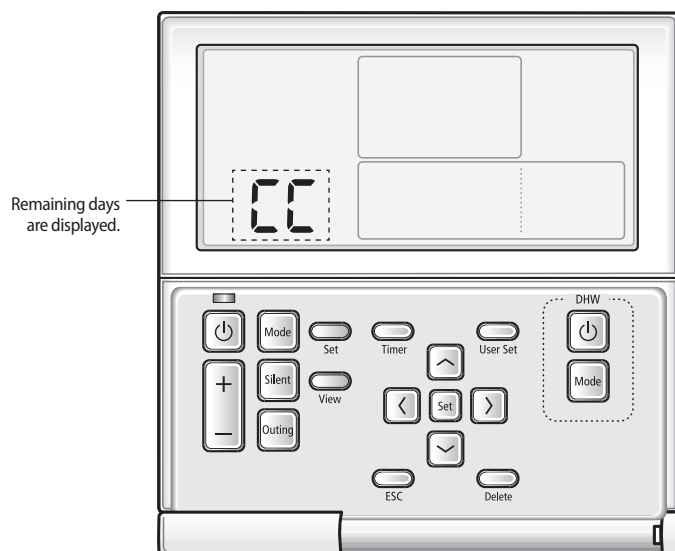

* If an error is displayed, concrete curing function does not work.






Installation option setting

- ▶ Set the control kit installation option with remote controller option.

The procedure of option setting

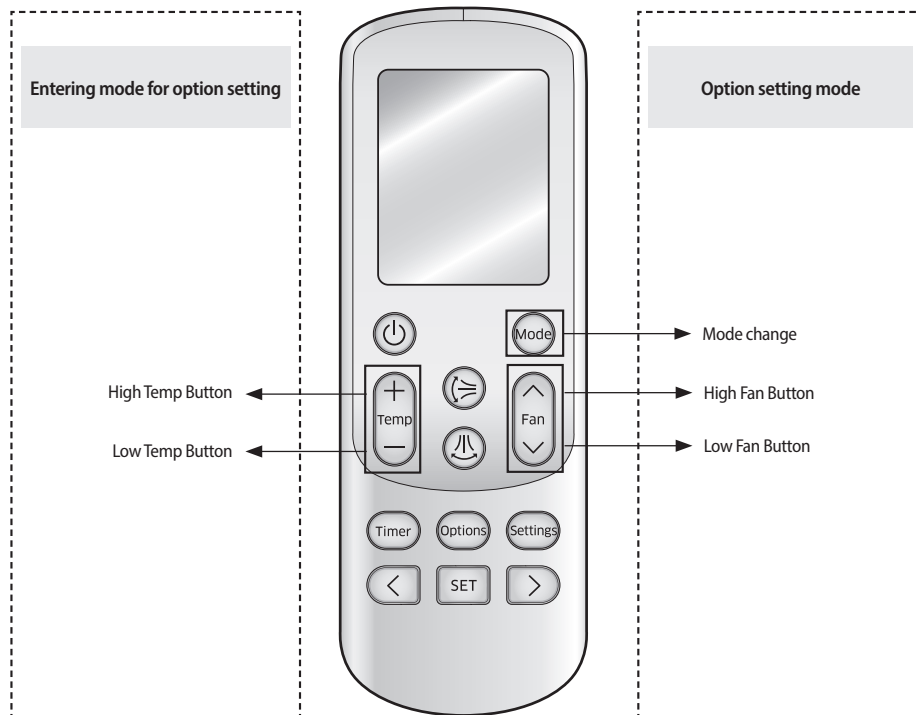



Installation option setting

Entering mode to set option

1. Remove batteries from the remote controller.

2. Insert batteries and enter the option setting mode while pressing High Temp button and Low Temp button.



3. Check if you have entered the option setting status.



Changing a particular option

You can change each digit of set option.

| Option | SEG1 | | SEG2 | | SEG3 | | SEG4 | | SEG5 | | SEG6 | |
|---------------------------|------------|---------|------------|---------|------------------------------------|---------|--|---------|---|---------|-------------------|---------|
| Explanation | PAGE | | MODE | | The option mode you want to change | | The tens' digit of an option SEG you will change | | The unit digit of an option SEG you will change | | The changed value | |
| Remote Controller Display | | | | | | | | | | | | |
| Indication and Details | Indication | Details | Indication | Details | Indication | Details | Indication | Details | Indication | Details | Indication | Details |
| | 0 | | D | | Option mode | 1~6 | Tens' digit of SEG | 0~9 | Unit digit of SEG | 0~9 | The changed value | 0~F |



NOTE

- When changing a digit of an control kit address setting option, set the SEG3 as 'A'.

- When changing a digit of control kit installation option, set the SEG3 as '2'.

Ex) When setting the 'central controller' into disuse status.

| Option | SEG1 | SEG2 | SEG3 | SEG4 | SEG5 | SEG6 |
|-------------|------|------|------------------------------------|--|---|-------------------|
| Explanation | PAGE | MODE | The option mode you want to change | The tens' digit of an option SEG you will change | The unit digit of an option SEG you will change | The changed value |
| Indication | 0 | D | 2 | 0 | 5 | 0 |

* 02 Series installation option

| Classification | SEG1~24 |
|----------------------------------|-----------------------------|
| Use central controller (Default) | 020010 100000 200000 300000 |
| Disuse central controller | 020000 100000 200000 300000 |





COMMISSION REGULATION (EU) No 813/2013¹⁾

ECODESIGN REQUIREMENTS FOR SPACE HEATER¹⁾

| | |
|---|--|
| A | Model(s) : AE050JXYDEH |
| B | Air-to-water heat pump : yes |
| C | Water-to-water heat pump : no |
| D | Brine-to-water heat pump : no |
| E | Low-temperature heat pump : no |
| F | Equipped with a supplementary heater : no |
| G | Heat pump combination heater : no |
| H | Parameters shall be declared for medium-temperature application, except for low-temperature heat pumps. For low-temperature heat pump, parameters shall be declared for low-temperature application. |
| I | Parameters shall be declared for average climate conditions. |

| Item ⁽²⁾ | Symbol ⁽³⁾ | Value ⁽²⁾ | Unit ⁽³⁾ |
|---------------------|--|--------------------------|---------------------|
| N | Rated heat output ⁽⁷⁾ | Prated ⁽⁴⁾ | 5 kW |
| Q | Declared capacity for heating for part load at indoor temperature 20 °C and outdoor temperature T _j | | |
| - | T _j = -7 °C | P _{dh} | 4.2 kW |
| - | T _j = +2 °C | P _{dh} | 2.5 kW |
| - | T _j = +7 °C | P _{dh} | 1.6 kW |
| - | T _j = +12 °C | P _{dh} | 0.7 kW |
| T | T _j = bivalent temperature | P _{dh} | 4.7 kW |
| U | T _j = operation limit temperature | P _{dh} | 4.7 kW |
| V | For air-to-water heat pumps T _j = -15 °C (if TOL < -20 °C) | P _{dh} | - kW |
| W | Bivalent temperature | T _{biv} | -10 °C |
| Y | Cycling interval capacity for heating | P _{cyh} | - kW |
| AB | Degradation co-efficient ⁽⁷⁾ | C _{dh} | 0.9 - |
| AD | Power consumption in modes other than active mode | | |
| AF | Off mode | P _{off} | 0.080 kW |
| AG | Thermostat-off mode | P _{to} | 0.011 kW |
| AH | Standby mode | P _{sa} | 0.011 kW |
| AI | Crankcase heater mode | P _{cx} | 0.000 kW |
| AK | Other items | | |
| AL | Capacity control | variable ⁽¹⁰⁾ | |
| AP | Sound power level, indoors/ outdoors | L _{wa} | -/61 dB |
| AQ | Emissions of nitrogen oxides | NO _x | - mg/kWh |
| AS | For heat pump combination heater | | |
| AT | Declared load profile | - | - |
| AV | Daily electricity consumption | Q _{elec} | - kWh |
| AX | Contact details | http://www.samsung.com | |

| Item ⁽²⁾ | Symbol ⁽³⁾ | Value ⁽²⁾ | Unit ⁽³⁾ |
|---------------------|--|------------------------------------|--------------------------------------|
| P | Seasonal space heating energy efficiency | η _p | 125 % |
| R | Declared coefficient of performance or primary energy ratio for part load at indoor temperature 20 °C and outdoor temperature T _j | | |
| - | T _j = -7 °C | COP _d ⁽⁵⁾ | 2.24 - |
| - | T _j = +2 °C | COP _d ⁽⁵⁾ | 2.90 - |
| - | T _j = +7 °C | COP _d ⁽⁵⁾ | 4.02 - |
| - | T _j = +12 °C | COP _d ⁽⁵⁾ | 7.25 - |
| T | T _j = bivalent temperature | COP _d ⁽⁵⁾ | 1.90 - |
| U | T _j = operation limit temperature | COP _d ⁽⁵⁾ | 1.90 - |
| V | For air-to-water heat pumps T _j = -15 °C (if TOL < -20 °C) | COP _d ⁽⁵⁾ | - - |
| X | For air-to-water heat pumps: Operation limit temperature | TOL | -10 °C |
| Z | Cycling interval efficiency | COP _{cyh} ⁽¹⁰⁾ | - - |
| AC | Heating water operating limit temperature | WTOL | - °C |
| AE | Supplementary heater | | |
| N | Rated heat output ⁽⁷⁾ | P _{sup} | - kW |
| AJ | Type of energy input | | |
| AK | Other items | | |
| AN | For air-to-water heat pumps : Rated air flow rate, outdoors | - | 51 m ³ /h ⁽¹⁰⁾ |
| AR | For water-/brine-to-water heat pumps: Rated brine or water flow rate, outdoor heat exchanger | - | - m ³ /h ⁽¹⁰⁾ |
| AS | For heat pump combination heater | | |
| AU | Water heating energy efficiency | η _{wh} | - % |
| AW | Daily fuel consumption | Q _{fuel} | - kWh |

AY ⁽⁷⁾ For heat pump space heaters and heat pump combination heaters, the rated that output Prated is equal to the design load for heating Pdesignh, and the rated heat output of a supplementary heater Psup is equal to the supplementary capacity for heating sup(T_j).

AZ ⁽⁷⁾ If C_{dh} is not determined by measurement then the default degradation coefficient is C_{dh} = 0.9.

BA ⁽¹⁾ Precautions as described in the installation/user manual must be taken when assembling, installing and maintaining this product.

BB ⁽²⁾ If you are a professional looking for information on non-destructive disassembly and dismantling, please send an email to: erims.sec@samsung.com

COMMISSION REGULATION (EU) No 813/2013¹⁾

| | |
|---|--|
| A | Model(s) : AE090JXYDEH |
| B | Air-to-water heat pump : yes |
| C | Water-to-water heat pump : no |
| D | Brine-to-water heat pump : no |
| E | Low-temperature heat pump : no |
| F | Equipped with a supplementary heater : no |
| G | Heat pump combination heater : no |
| H | Parameters shall be declared for medium-temperature application, except for low-temperature heat pumps. For low-temperature heat pump, parameters shall be declared for low-temperature application. |
| I | Parameters shall be declared for average climate conditions. |

| Item ⁽¹⁾ | Symbol ⁽²⁾ | Value ⁽³⁾ | Unit ⁽³⁾ |
|---------------------|--|--------------------------|---------------------|
| N | Rated heat output ⁽¹⁾ | Prated ⁽⁴⁾ | 6 kW |
| Q | Declared capacity for heating for part load at indoor temperature 20 °C and outdoor temperature T _j | | |
| | T _j = -7 °C | P _{dh} | 5.5 kW |
| | T _j = +2 °C | P _{dh} | 3.3 kW |
| | T _j = +7 °C | P _{dh} | 2.1 kW |
| | T _j = +12 °C | P _{dh} | 1.0 kW |
| T | T _j = bivalent temperature | P _{dh} | 6.2 kW |
| U | T _j = operation limit temperature | P _{dh} | 6.2 kW |
| V | For air-to-water heat pumps T _j = -15 °C (if TOL < -20 °C) | P _{dh} | - kW |
| W | Bivalent temperature | T _{biv} | -10 °C |
| Y | Cycling interval capacity for heating | P _{psych} | - kW |
| AB | Degradation co-efficient ⁽¹⁾ | C _{dh} | 0.9 |
| AD | Power consumption in modes other than active mode | | |
| AF | Off mode | P _{off} | 0.080 kW |
| AG | Thermostat-off mode | P _{ro} | 0.011 kW |
| AH | Standby mode | P _{sb} | 0.011 kW |
| AI | Crankcase heater mode | P _{cx} | 0.000 kW |
| AK | Other items | | |
| AL | Capacity control | variable ^(3A) | |
| AP | Sound power level, indoors/ outdoors | L _{WA} | -/63 dB |
| AQ | Emissions of nitrogen oxides | NO _x | - mg/kWh |
| AS | For heat pump combination heater | | |
| AT | Declared load profile | - | |
| AV | Daily electricity consumption | Q _{elec} | - kWh |
| AX | Contact details | http://www.samsung.com | |

| Item ⁽¹⁾ | Symbol ⁽²⁾ | Value ⁽³⁾ | Unit ⁽³⁾ |
|---------------------|--|------------------------------------|--------------------------------------|
| P | Seasonal space heating energy efficiency | η _p | 126 % |
| R | Declared coefficient of performance or primary energy ratio for part load at indoor temperature 20 °C and outdoor temperature T _j | | |
| | T _j = -7 °C | COP _d ⁽⁵⁾ | 1.89 - |
| | T _j = +2 °C | COP _d ⁽⁵⁾ | 3.01 - |
| | T _j = +7 °C | COP _d ⁽⁵⁾ | 4.25 - |
| | T _j = +12 °C | COP _d ⁽⁵⁾ | 6.78 - |
| T | T _j = bivalent temperature | COP _d ⁽⁵⁾ | 1.77 - |
| U | T _j = operation limit temperature | COP _d ⁽⁵⁾ | 1.77 - |
| V | For air-to-water heat pumps T _j = -15 °C (if TOL < -20 °C) | COP _d ⁽⁵⁾ | - - |
| X | For air-to-water heat pumps: Operation limit temperature | TOL | -10 °C |
| Z | Cycling interval efficiency | COP _{cyc} ^(3A) | - - |
| AC | Heating water operating limit temperature | WTOL | - °C |
| AE | Supplementary heater | | |
| N | Rated heat output ⁽¹⁾ | P _{sup} | - kW |
| AJ | Type of energy input | | |
| AK | Other items | | |
| AN | For air-to-water heat pumps : Rated air flow rate, outdoors | - | 53 m ³ /h ^(3A) |
| AR | For water-/brine-to-water heat pumps: Rated brine or water flow rate, outdoor heat exchanger | - | - m ³ /h ^(3A) |
| AS | For heat pump combination heater | | |
| AU | Water heating energy efficiency | η _{wh} | - % |
| AW | Daily fuel consumption | Q _{fuel} | - kWh |

AY ⁽¹⁾ For heat pump space heaters and heat pump combination heaters, the rated that output Prated is equal to the design load for heating Pdesignh, and the rated heat output of a supplementary heater Psup is equal to the supplementary capacity for heating sup(T_j).

AZ ⁽¹⁾ If C_{dh} is not determined by measurement then the default degradation coefficient is C_{dh} = 0.9.

BA ⁽¹⁾ Precautions as described in the installation/user manual must be taken when assembling, installing and maintaining this product.

BB ⁽²⁾ If you are a professional looking for information on non-destructive disassembly and dismantling, please send an email to: erims.sec@samsung.com



| | |
|---|--|
| A | Model(s) : AE090JYDGH |
| B | Air-to-water heat pump : yes |
| C | Water-to-water heat pump : no |
| D | Brine-to-water heat pump : no |
| E | Low-temperature heat pump : no |
| F | Equipped with a supplementary heater : no |
| G | Heat pump combination heater : no |
| H | Parameters shall be declared for medium-temperature application, except for low-temperature heat pumps. For low-temperature heat pump, parameters shall be declared for low-temperature application. |
| I | Parameters shall be declared for average climate conditions. |

| Item ⁽¹⁾ | Symbol ⁽⁶⁾ | Value ⁽²⁾ | Unit ⁽⁶⁾ |
|---|-----------------------|--------------------------|---------------------|
| N Rated heat output ⁽¹⁾ | Prated ⁽⁶⁾ | 5 | kW |
| Q Declared capacity for heating for part load at indoor temperature 20 °C and outdoor temperature T j | | | |
| - T j = -7 °C | Pdh | 4.4 | kW |
| - T j = +2 °C | Pdh | 2.7 | kW |
| - T j = +7 °C | Pdh | 1.7 | kW |
| - T j = +12 °C | Pdh | 0.8 | kW |
| T T j = bivalent temperature | Pdh | 5.0 | kW |
| U T j = operation limit temperature | Pdh | 5.0 | kW |
| V For air-to-water heat pumps T j = -15 °C (if TOL < -20 °C) | Pdh | - | kW |
| W Bivalent temperature | Tbiv | -10 | °C |
| Y Cycling interval capacity for heating | Pcyc | - | kW |
| AB Degradation co-efficient ⁽⁷⁾ | Cdh | 0.9 | - |
| AD Power consumption in modes other than active mode | | | |
| AF Off mode | Poff | 0.080 | kW |
| AG Thermostat-off mode | Pto | 0.011 | kW |
| AH Standby mode | Psb | 0.011 | kW |
| AI Crankcase heater mode | Pcx | 0.000 | kW |
| AK Other items | | | |
| AL Capacity control | | variable ^(8A) | |
| AP Sound power level, indoors/ outdoors | Lwa | - /63 | dB |
| AQ Emissions of nitrogen oxides | NOx | - | mg/kWh |
| AS For heat pump combination heater | | | |
| AT Declared load profile | | - | |
| AV Daily electricity consumption | Qelec | - | kWh |
| AX Contact details | | http://www.samsung.com | |

| Item ⁽¹⁾ | Symbol ⁽⁶⁾ | Value ⁽²⁾ | Unit ⁽⁶⁾ |
|---|------------------------|----------------------|-----------------------------------|
| P Seasonal space heating energy efficiency | η _s | 125 | % |
| R Declared coefficient of performance or primary energy ratio for part load at indoor temperature 20 °C and outdoor temperature T j | | | |
| - T j = -7 °C | COPd ⁽³⁾ | 1.88 | - |
| - T j = +2 °C | COPd ⁽³⁾ | 3.14 | - |
| - T j = +7 °C | COPd ⁽³⁾ | 4.60 | - |
| - T j = +12 °C | COPd ⁽³⁾ | 6.69 | - |
| T T j = bivalent temperature | COPd ⁽³⁾ | 1.65 | - |
| U T j = operation limit temperature | COPd ⁽³⁾ | 1.65 | - |
| V For air-to-water heat pumps T j = -15 °C (if TOL < -20 °C) | COPd ⁽³⁾ | - | - |
| X For air-to-water heat pumps: Operation limit temperature | TOL | -10 | °C |
| Z Cycling interval efficiency | COPcyc ^(8A) | - | - |
| AC Heating water operating limit temperature | WTOL | - | °C |
| AE Supplementary heater | | | |
| N Rated heat output ⁽¹⁾ | Psup | - | kW |
| AJ Type of energy input | | | |
| AK Other items | | | |
| AN For air-to-water heat pumps : Rated air flow rate, outdoors | - | 53 | m ³ /h ^(8A) |
| AR For water-/brine-to-water heat pumps: Rated brine or water flow rate, outdoor heat exchanger | - | - | m ³ /h ^(8A) |
| AS For heat pump combination heater | | | |
| AU Water heating energy efficiency | η _{wh} | - | % |
| AW Daily fuel consumption | Q _{fuel} | - | kWh |

AY ⁽¹⁾ For heat pump space heaters and heat pump combination heaters, the rated that output Prated is equal to the design load for heating Pdesignh, and the rated heat output of a supplementary heater Psup is equal to the supplementary capacity for heating sup(Tj).

AZ ⁽⁷⁾ If Cdh is not determined by measurement then the default degradation coefficient is Cdh = 0.9.

BA ⁽¹⁾ Precautions as described in the installation/user manual must be taken when assembling, installing and maintaining this product.

BB ⁽²⁾ If you are a professional looking for information on non-destructive disassembly and dismantling, please send an email to: erims.sec@samsung.com



COMMISSION REGULATION (EU) No 813/2013¹⁾

| | |
|---|--|
| A | Model(s) : AE120JXYDEH |
| B | Air-to-water heat pump : yes |
| C | Water-to-water heat pump : no |
| D | Brine-to-water heat pump : no |
| E | Low-temperature heat pump : no |
| F | Equipped with a supplementary heater : no |
| G | Heat pump combination heater : no |
| H | Parameters shall be declared for medium-temperature application, except for low-temperature heat pumps. For low-temperature heat pump, parameters shall be declared for low-temperature application. |
| I | Parameters shall be declared for average climate conditions. |

| Item ⁽¹⁾ | Symbol ⁽²⁾ | Value ⁽³⁾ | Unit ⁽³⁾ |
|---------------------|--|--------------------------|---------------------|
| N | Rated heat output ⁽¹⁾ | Prated ⁽⁴⁾ | 8 kW |
| Q | Declared capacity for heating for part load at indoor temperature 20 °C and outdoor temperature T _j | | |
| | T _j = -7 °C | P _{dh} | 7.1 kW |
| | T _j = +2 °C | P _{dh} | 4.3 kW |
| | T _j = +7 °C | P _{dh} | 2.8 kW |
| | T _j = +12 °C | P _{dh} | 1.2 kW |
| T | T _j = bivalent temperature | P _{dh} | 8.0 kW |
| U | T _j = operation limit temperature | P _{dh} | 8.0 kW |
| V | For air-to-water heat pumps T _j = -15 °C (if TOL < -20 °C) | P _{dh} | - kW |
| W | Bivalent temperature | T _{biv} | -10 °C |
| Y | Cycling interval capacity for heating | P _{psych} | - kW |
| AB | Degradation co-efficient ⁽¹⁾ | C _{dh} | 0.9 - |
| AD | Power consumption in modes other than active mode | | |
| AF | Off mode | P _{off} | 0.080 kW |
| AG | Thermostat-off mode | P _{ro} | 0.011 kW |
| AH | Standby mode | P _{sb} | 0.011 kW |
| AI | Crankcase heater mode | P _{cx} | 0.000 kW |
| AK | Other items | | |
| AL | Capacity control | variable ^(3A) | |
| AP | Sound power level, indoors/ outdoors | L _{WA} | - /64 dB |
| AQ | Emissions of nitrogen oxides | NO _x | - mg/kWh |
| AS | For heat pump combination heater | | |
| AT | Declared load profile | - | |
| AV | Daily electricity consumption | Q _{elec} | - kWh |
| AX | Contact details | http://www.samsung.com | |

| Item ⁽¹⁾ | Symbol ⁽²⁾ | Value ⁽³⁾ | Unit ⁽³⁾ |
|---------------------|--|------------------------------------|---------------------------------------|
| P | Seasonal space heating energy efficiency | η _s | 115 % |
| R | Declared coefficient of performance or primary energy ratio for part load at indoor temperature 20 °C and outdoor temperature T _j | | |
| | T _j = -7 °C | COP _d ⁽⁵⁾ | 1.76 - |
| | T _j = +2 °C | COP _d ⁽⁵⁾ | 2.79 - |
| | T _j = +7 °C | COP _d ⁽⁵⁾ | 3.73 - |
| | T _j = +12 °C | COP _d ⁽⁵⁾ | 6.71 - |
| T | T _j = bivalent temperature | COP _d ⁽⁵⁾ | 1.51 - |
| U | T _j = operation limit temperature | COP _d ⁽⁵⁾ | 1.51 - |
| V | For air-to-water heat pumps T _j = -15 °C (if TOL < -20 °C) | COP _d ⁽⁵⁾ | - - |
| X | For air-to-water heat pumps: Operation limit temperature | TOL | -10 °C |
| Z | Cycling interval efficiency | COP _{cyc} ^(3A) | - - |
| AC | Heating water operating limit temperature | WTOL | - °C |
| AE | Supplementary heater | | |
| N | Rated heat output ⁽¹⁾ | P _{sup} | - kW |
| AJ | Type of energy input | | |
| AK | Other items | | |
| AN | For air-to-water heat pumps : Rated air flow rate, outdoors | - | 108 m ³ /h ^(3A) |
| AR | For water-/brine-to-water heat pumps: Rated brine or water flow rate, outdoor heat exchanger | - | - m ³ /h ^(3A) |
| AS | For heat pump combination heater | | |
| AU | Water heating energy efficiency | η _{wh} | - % |
| AW | Daily fuel consumption | Q _{fuel} | - kWh |

AY ⁽¹⁾ For heat pump space heaters and heat pump combination heaters, the rated that output Prated is equal to the design load for heating Pdesignh, and the rated heat output of a supplementary heater Psup is equal to the supplementary capacity for heating sup(T_j).

AZ ⁽¹⁾ If C_{dh} is not determined by measurement then the default degradation coefficient is C_{dh} = 0.9.

BA ⁽¹⁾ Precautions as described in the installation/user manual must be taken when assembling, installing and maintaining this product.

BB ⁽²⁾ If you are a professional looking for information on non-destructive disassembly and dismantling, please send an email to: erims.sec@samsung.com



| | |
|---|--|
| A | Model(s) : AE120JYDGH |
| B | Air-to-water heat pump : yes |
| C | Water-to-water heat pump : no |
| D | Brine-to-water heat pump : no |
| E | Low-temperature heat pump : no |
| F | Equipped with a supplementary heater : no |
| G | Heat pump combination heater : no |
| H | Parameters shall be declared for medium-temperature application, except for low-temperature heat pumps. For low-temperature heat pump, parameters shall be declared for low-temperature application. |
| I | Parameters shall be declared for average climate conditions. |

| Item ⁽¹⁾ | Symbol ⁽⁶⁾ | Value ⁽²⁾ | Unit ⁽⁶⁾ |
|---|-----------------------|--------------------------|---------------------|
| N Rated heat output ⁽¹⁾ | Prated ⁽⁶⁾ | 8 | kW |
| Q Declared capacity for heating for part load at indoor temperature 20 °C and outdoor temperature T j | | | |
| - T j = -7 °C | Pdh | 7.1 | kW |
| - T j = +2 °C | Pdh | 4.3 | kW |
| - T j = +7 °C | Pdh | 2.8 | kW |
| - T j = +12 °C | Pdh | 1.2 | kW |
| T T j = bivalent temperature | Pdh | 8.0 | kW |
| U T j = operation limit temperature | Pdh | 8.0 | kW |
| V For air-to-water heat pumps T j = -15 °C (if TOL < -20 °C) | Pdh | - | kW |
| W Bivalent temperature | Tbiv | -10 | °C |
| Y Cycling interval capacity for heating | Pcyc | - | kW |
| AB Degradation co-efficient ⁽⁷⁾ | Cdh | 0.9 | - |
| AD Power consumption in modes other than active mode | | | |
| AF Off mode | Poff | 0.080 | kW |
| AG Thermostat-off mode | Pto | 0.011 | kW |
| AH Standby mode | Psb | 0.011 | kW |
| AI Crankcase heater mode | Pcx | 0.000 | kW |
| AK Other items | | | |
| AL Capacity control | | variable ^(8A) | |
| AP Sound power level, indoors/ outdoors | Lwa | - /64 | dB |
| AQ Emissions of nitrogen oxides | NOx | - | mg/kWh |
| AS For heat pump combination heater | | | |
| AT Declared load profile | | - | |
| AV Daily electricity consumption | Qelec | - | kWh |
| AX Contact details | | http://www.samsung.com | |

| Item ⁽¹⁾ | Symbol ⁽⁶⁾ | Value ⁽²⁾ | Unit ⁽⁶⁾ |
|---|------------------------|----------------------|-----------------------------------|
| P Seasonal space heating energy efficiency | η_s | 115 | % |
| R Declared coefficient of performance or primary energy ratio for part load at indoor temperature 20 °C and outdoor temperature T j | | | |
| - T j = -7 °C | COPd ⁽⁵⁾ | 1.76 | - |
| - T j = +2 °C | COPd ⁽⁵⁾ | 2.79 | - |
| - T j = +7 °C | COPd ⁽⁵⁾ | 3.73 | - |
| - T j = +12 °C | COPd ⁽⁵⁾ | 6.71 | - |
| T T j = bivalent temperature | COPd ⁽⁵⁾ | 1.51 | - |
| U T j = operation limit temperature | COPd ⁽⁵⁾ | 1.51 | - |
| V For air-to-water heat pumps T j = -15 °C (if TOL < -20 °C) | COPd ⁽⁵⁾ | - | - |
| X For air-to-water heat pumps: Operation limit temperature | TOL | -10 | °C |
| Z Cycling interval efficiency | COPcyc ^(8A) | - | - |
| AC Heating water operating limit temperature | WTOL | - | °C |
| AE Supplementary heater | | | |
| N Rated heat output ⁽¹⁾ | Psup | - | kW |
| AJ Type of energy input | | | |
| AK Other items | | | |
| AN For air-to-water heat pumps : Rated air flow rate, outdoors | - | 108 | m ³ /h ^(8A) |
| AR For water-/brine-to-water heat pumps: Rated brine or water flow rate, outdoor heat exchanger | - | - | m ³ /h ^(8A) |
| AS For heat pump combination heater | | | |
| AU Water heating energy efficiency | η_{wh} | - | % |
| AW Daily fuel consumption | Qfuel | - | kWh |

AY ⁽¹⁾ For heat pump space heaters and heat pump combination heaters, the rated that output Prated is equal to the design load for heating Pdesignh, and the rated heat output of a supplementary heater Psup is equal to the supplementary capacity for heating sup(Tj).

AZ ⁽⁷⁾ If Cdh is not determined by measurement then the default degradation coefficient is Cdh = 0.9.

BA ⁽¹⁾ Precautions as described in the installation/user manual must be taken when assembling, installing and maintaining this product.

BB ⁽²⁾ If you are a professional looking for information on non-destructive disassembly and dismantling, please send an email to: erims.sec@samsung.com



COMMISSION REGULATION (EU) No 813/2013¹⁾

| | |
|---|--|
| A | Model(s) : AE140JXYDEH |
| B | Air-to-water heat pump : yes |
| C | Water-to-water heat pump : no |
| D | Brine-to-water heat pump : no |
| E | Low-temperature heat pump : no |
| F | Equipped with a supplementary heater : no |
| G | Heat pump combination heater : no |
| H | Parameters shall be declared for medium-temperature application, except for low-temperature heat pumps. For low-temperature heat pump, parameters shall be declared for low-temperature application. |
| I | Parameters shall be declared for average climate conditions. |

| Item ⁽¹⁾ | Symbol ⁽²⁾ | Value ⁽³⁾ | Unit ⁽³⁾ |
|---------------------|--|--------------------------|---------------------|
| N | Rated heat output ⁽⁷⁾ | Prated ⁽⁴⁾ | 9 kW |
| Q | Declared capacity for heating for part load at indoor temperature 20 °C and outdoor temperature T _j | | |
| | T _j = -7 °C | P _{dh} | 7.5 kW |
| | T _j = +2 °C | P _{dh} | 4.6 kW |
| | T _j = +7 °C | P _{dh} | 2.9 kW |
| | T _j = +12 °C | P _{dh} | 1.3 kW |
| T | T _j = bivalent temperature | P _{dh} | 8.5 kW |
| U | T _j = operation limit temperature | P _{dh} | 8.5 kW |
| V | For air-to-water heat pumps T _j = -15 °C (if TOL < -20 °C) | P _{dh} | - kW |
| W | Bivalent temperature | T _{biv} | -10 °C |
| Y | Cycling interval capacity for heating | P _{psych} | - kW |
| AB | Degradation co-efficient ⁽⁷⁾ | C _{dh} | 0.9 - |
| AD | Power consumption in modes other than active mode | | |
| AF | Off mode | P _{off} | 0.080 kW |
| AG | Thermostat-off mode | P _{ro} | 0.011 kW |
| AH | Standby mode | P _{sb} | 0.011 kW |
| AI | Crankcase heater mode | P _{cx} | 0.000 kW |
| AK | Other items | | |
| AL | Capacity control | variable ^(3A) | |
| AP | Sound power level, indoors/ outdoors | L _{WA} | -/65 dB |
| AQ | Emissions of nitrogen oxides | NO _x | - mg/kWh |
| AS | For heat pump combination heater | | |
| AT | Declared load profile | - | |
| AV | Daily electricity consumption | Q _{elec} | - kWh |
| AX | Contact details | http://www.samsung.com | |

| Item ⁽¹⁾ | Symbol ⁽²⁾ | Value ⁽³⁾ | Unit ⁽³⁾ |
|---------------------|--|------------------------------------|---------------------------------------|
| P | Seasonal space heating energy efficiency | η _s | 114 % |
| R | Declared coefficient of performance or primary energy ratio for part load at indoor temperature 20 °C and outdoor temperature T _j | | |
| | T _j = -7 °C | COP _d ⁽⁵⁾ | 1.77 - |
| | T _j = +2 °C | COP _d ⁽⁵⁾ | 2.79 - |
| | T _j = +7 °C | COP _d ⁽⁵⁾ | 3.55 - |
| | T _j = +12 °C | COP _d ⁽⁵⁾ | 6.54 - |
| T | T _j = bivalent temperature | COP _d ⁽⁵⁾ | 1.53 - |
| U | T _j = operation limit temperature | COP _d ⁽⁵⁾ | 1.53 - |
| V | For air-to-water heat pumps T _j = -15 °C (if TOL < -20 °C) | COP _d ⁽⁵⁾ | - - |
| X | For air-to-water heat pumps: Operation limit temperature | TOL | -10 °C |
| Z | Cycling interval efficiency | COP _{cyc} ^(3A) | - - |
| AC | Heating water operating limit temperature | WTOL | - °C |
| AE | Supplementary heater | | |
| N | Rated heat output ⁽⁷⁾ | P _{sup} | - kW |
| AJ | Type of energy input | | |
| AK | Other items | | |
| AN | For air-to-water heat pumps : Rated air flow rate, outdoors | - | 108 m ³ /h ^(3A) |
| AR | For water-/brine-to-water heat pumps: Rated brine or water flow rate, outdoor heat exchanger | - | - m ³ /h ^(3A) |
| AS | For heat pump combination heater | | |
| AU | Water heating energy efficiency | η _{wh} | - % |
| AW | Daily fuel consumption | Q _{fuel} | - kWh |

AY ⁽⁷⁾ For heat pump space heaters and heat pump combination heaters, the rated that output Prated is equal to the design load for heating Pdesignh, and the rated heat output of a supplementary heater Psup is equal to the supplementary capacity for heating sup(T_j).

AZ ⁽⁷⁾ If C_{dh} is not determined by measurement then the default degradation coefficient is C_{dh} = 0.9.

BA ⁽¹⁾ Precautions as described in the installation/user manual must be taken when assembling, installing and maintaining this product.

BB ⁽²⁾ If you are a professional looking for information on non-destructive disassembly and dismantling, please send an email to: erims.sec@samsung.com



| | |
|---|--|
| A | Model(s) : AE140JYDGH |
| B | Air-to-water heat pump : yes |
| C | Water-to-water heat pump : no |
| D | Brine-to-water heat pump : no |
| E | Low-temperature heat pump : no |
| F | Equipped with a supplementary heater : no |
| G | Heat pump combination heater : no |
| H | Parameters shall be declared for medium-temperature application, except for low-temperature heat pumps. For low-temperature heat pump, parameters shall be declared for low-temperature application. |
| I | Parameters shall be declared for average climate conditions. |

| Item ⁽¹⁾ | Symbol ⁽⁶⁾ | Value ⁽²⁾ | Unit ⁽⁶⁾ |
|---|-----------------------|--------------------------|---------------------|
| N Rated heat output ⁽¹⁾ | Prated ⁽⁶⁾ | 9 | kW |
| Q Declared capacity for heating for part load at indoor temperature 20 °C and outdoor temperature T j | | | |
| - T j = -7 °C | Pdh | 7.5 | kW |
| - T j = +2 °C | Pdh | 4.6 | kW |
| - T j = +7 °C | Pdh | 2.9 | kW |
| - T j = +12 °C | Pdh | 1.3 | kW |
| T T j = bivalent temperature | Pdh | 8.5 | kW |
| U T j = operation limit temperature | Pdh | 8.5 | kW |
| V For air-to-water heat pumps T j = -15 °C (if TOL < -20 °C) | Pdh | - | kW |
| W Bivalent temperature | Tbiv | -10 | °C |
| Y Cycling interval capacity for heating | Pcyc | - | kW |
| AB Degradation co-efficient ⁽⁷⁾ | Cdh | 0.9 | - |
| AD Power consumption in modes other than active mode | | | |
| AF Off mode | Poff | 0.080 | kW |
| AG Thermostat-off mode | Pto | 0.011 | kW |
| AH Standby mode | Psb | 0.011 | kW |
| AI Crankcase heater mode | Pcx | 0.000 | kW |
| AK Other items | | | |
| AL Capacity control | | variable ^(8A) | |
| AP Sound power level, indoors/ outdoors | Lwa | - /65 | dB |
| AQ Emissions of nitrogen oxides | NOx | - | mg/kWh |
| AS For heat pump combination heater | | | |
| AT Declared load profile | | - | |
| AV Daily electricity consumption | Qelec | - | kWh |
| AX Contact details | | http://www.samsung.com | |

| Item ⁽¹⁾ | Symbol ⁽⁶⁾ | Value ⁽²⁾ | Unit ⁽⁶⁾ |
|---|------------------------|----------------------|-----------------------------------|
| P Seasonal space heating energy efficiency | η _s | 114 | % |
| R Declared coefficient of performance or primary energy ratio for part load at indoor temperature 20 °C and outdoor temperature T j | | | |
| - T j = -7 °C | COPd ⁽³⁾ | 1.77 | - |
| - T j = +2 °C | COPd ⁽³⁾ | 2.79 | - |
| - T j = +7 °C | COPd ⁽³⁾ | 3.55 | - |
| - T j = +12 °C | COPd ⁽³⁾ | 6.54 | - |
| T T j = bivalent temperature | COPd ⁽³⁾ | 1.53 | - |
| U T j = operation limit temperature | COPd ⁽³⁾ | 1.53 | - |
| V For air-to-water heat pumps T j = -15 °C (if TOL < -20 °C) | COPd ⁽³⁾ | - | - |
| X For air-to-water heat pumps: Operation limit temperature | TOL | -10 | °C |
| Z Cycling interval efficiency | COPcyc ^(8A) | - | - |
| AC Heating water operating limit temperature | WTOL | - | °C |
| AE Supplementary heater | | | |
| N Rated heat output ⁽¹⁾ | Psup | - | kW |
| AJ Type of energy input | | | |
| AK Other items | | | |
| AN For air-to-water heat pumps : Rated air flow rate, outdoors | - | 108 | m ³ /h ^(8A) |
| AR For water-/brine-to-water heat pumps: Rated brine or water flow rate, outdoor heat exchanger | - | - | m ³ /h ^(8A) |
| AS For heat pump combination heater | | | |
| AU Water heating energy efficiency | η _{wh} | - | % |
| AW Daily fuel consumption | Q _{fuel} | - | kWh |

AY ⁽¹⁾ For heat pump space heaters and heat pump combination heaters, the rated that output Prated is equal to the design load for heating Pdesignh, and the rated heat output of a supplementary heater Psup is equal to the supplementary capacity for heating sup(Tj).

AZ ⁽⁷⁾ If Cdh is not determined by measurement then the default degradation coefficient is Cdh = 0.9.

BA ⁽¹⁾ Precautions as described in the installation/user manual must be taken when assembling, installing and maintaining this product.

BB ⁽²⁾ If you are a professional looking for information on non-destructive disassembly and dismantling, please send an email to: erims.sec@samsung.com



COMMISSION REGULATION (EU) No 813/2013¹⁾

| | |
|---|--|
| A | Model(s) : AE160JXYDEH |
| B | Air-to-water heat pump : yes |
| C | Water-to-water heat pump : no |
| D | Brine-to-water heat pump : no |
| E | Low-temperature heat pump : no |
| F | Equipped with a supplementary heater : no |
| G | Heat pump combination heater : no |
| H | Parameters shall be declared for medium-temperature application, except for low-temperature heat pumps. For low-temperature heat pump, parameters shall be declared for low-temperature application. |
| I | Parameters shall be declared for average climate conditions. |

| Item ⁽¹⁾ | Symbol ⁽²⁾ | Value ⁽³⁾ | Unit ⁽³⁾ |
|---------------------|--|--------------------------|---------------------|
| N | Rated heat output ⁽¹⁾ | Prated ⁽⁴⁾ | 10 kW |
| Q | Declared capacity for heating for part load at indoor temperature 20 °C and outdoor temperature T _j | | |
| | T _j = -7 °C | P _{dh} | 8.4 kW |
| | T _j = +2 °C | P _{dh} | 5.1 kW |
| | T _j = +7 °C | P _{dh} | 3.3 kW |
| | T _j = +12 °C | P _{dh} | 1.5 kW |
| T | T _j = bivalent temperature | P _{dh} | 9.5 kW |
| U | T _j = operation limit temperature | P _{dh} | 9.5 kW |
| V | For air-to-water heat pumps T _j = -15 °C (if TOL < -20 °C) | P _{dh} | - kW |
| W | Bivalent temperature | T _{biv} | -10 °C |
| Y | Cycling interval capacity for heating | P _{psych} | - kW |
| AB | Degradation co-efficient ⁽¹⁾ | C _{dh} | 0.9 - |
| AD | Power consumption in modes other than active mode | | |
| AF | Off mode | P _{off} | 0.080 kW |
| AG | Thermostat-off mode | P _{ro} | 0.011 kW |
| AH | Standby mode | P _{sb} | 0.011 kW |
| AI | Crankcase heater mode | P _{cx} | 0.000 kW |
| AK | Other items | | |
| AL | Capacity control | variable ^(3A) | |
| AP | Sound power level, indoors/ outdoors | L _{WA} | -/66 dB |
| AQ | Emissions of nitrogen oxides | NO _x | - mg/kWh |
| AS | For heat pump combination heater | | |
| AT | Declared load profile | - | |
| AV | Daily electricity consumption | Q _{elec} | - kWh |
| AX | Contact details | http://www.samsung.com | |

| Item ⁽¹⁾ | Symbol ⁽²⁾ | Value ⁽³⁾ | Unit ⁽³⁾ |
|---------------------|--|------------------------------------|---------------------------------------|
| P | Seasonal space heating energy efficiency | η _s | 112 % |
| R | Declared coefficient of performance or primary energy ratio for part load at indoor temperature 20 °C and outdoor temperature T _j | | |
| | T _j = -7 °C | COP _d ⁽⁵⁾ | 1.75 - |
| | T _j = +2 °C | COP _d ⁽⁵⁾ | 2.62 - |
| | T _j = +7 °C | COP _d ⁽⁵⁾ | 3.73 - |
| | T _j = +12 °C | COP _d ⁽⁵⁾ | 6.80 - |
| T | T _j = bivalent temperature | COP _d ⁽⁵⁾ | 1.57 - |
| U | T _j = operation limit temperature | COP _d ⁽⁵⁾ | 1.57 - |
| V | For air-to-water heat pumps T _j = -15 °C (if TOL < -20 °C) | COP _d ⁽⁵⁾ | - - |
| X | For air-to-water heat pumps: Operation limit temperature | TOL | -10 °C |
| Z | Cycling interval efficiency | COP _{cyc} ^(3A) | - - |
| AC | Heating water operating limit temperature | WTOL | - °C |
| AE | Supplementary heater | | |
| N | Rated heat output ⁽¹⁾ | P _{sup} | - kW |
| AJ | Type of energy input | | |
| AK | Other items | | |
| AN | For air-to-water heat pumps : Rated air flow rate, outdoors | - | 108 m ³ /h ^(3A) |
| AR | For water-/brine-to-water heat pumps: Rated brine or water flow rate, outdoor heat exchanger | - | - m ³ /h ^(3A) |
| AS | For heat pump combination heater | | |
| AU | Water heating energy efficiency | η _{wh} | - % |
| AW | Daily fuel consumption | Q _{fuel} | - kWh |

AY ⁽¹⁾ For heat pump space heaters and heat pump combination heaters, the rated that output Prated is equal to the design load for heating Pdesignh, and the rated heat output of a supplementary heater Psup is equal to the supplementary capacity for heating sup(T_j).

AZ ⁽¹⁾ If C_{dh} is not determined by measurement then the default degradation coefficient is C_{dh} = 0.9.

BA ⁽¹⁾ Precautions as described in the installation/user manual must be taken when assembling, installing and maintaining this product.

BB ⁽²⁾ If you are a professional looking for information on non-destructive disassembly and dismantling, please send an email to: erims.sec@samsung.com



| | |
|---|--|
| A | Model(s) : AE160JYDGH |
| B | Air-to-water heat pump : yes |
| C | Water-to-water heat pump : no |
| D | Brine-to-water heat pump : no |
| E | Low-temperature heat pump : no |
| F | Equipped with a supplementary heater : no |
| G | Heat pump combination heater : no |
| H | Parameters shall be declared for medium-temperature application, except for low-temperature heat pumps. For low-temperature heat pump, parameters shall be declared for low-temperature application. |
| I | Parameters shall be declared for average climate conditions. |

| Item ⁽¹⁾ | Symbol ⁽⁶⁾ | Value ⁽²⁾ | Unit ⁽⁶⁾ |
|---|-----------------------|--------------------------|---------------------|
| N Rated heat output ⁽¹⁾ | Prated ⁽⁶⁾ | 10 | kW |
| Q Declared capacity for heating for part load at indoor temperature 20 °C and outdoor temperature T j | | | |
| - T j = -7 °C | Pdh | 8.4 | kW |
| - T j = +2 °C | Pdh | 5.1 | kW |
| - T j = +7 °C | Pdh | 3.3 | kW |
| - T j = +12 °C | Pdh | 1.5 | kW |
| T T j = bivalent temperature | Pdh | 9.5 | kW |
| U T j = operation limit temperature | Pdh | 9.5 | kW |
| V For air-to-water heat pumps T j = -15 °C (if TOL < -20 °C) | Pdh | - | kW |
| W Bivalent temperature | Tbiv | -10 | °C |
| Y Cycling interval capacity for heating | Pcyc | - | kW |
| AB Degradation co-efficient ⁽⁷⁾ | Cdh | 0.9 | - |
| AD Power consumption in modes other than active mode | | | |
| AF Off mode | Poff | 0.080 | kW |
| AG Thermostat-off mode | Pto | 0.011 | kW |
| AH Standby mode | Psb | 0.011 | kW |
| AI Crankcase heater mode | Pcx | 0.000 | kW |
| AK Other items | | | |
| AL Capacity control | | variable ^(8A) | |
| AP Sound power level, indoors/ outdoors | Lwa | -/66 | dB |
| AQ Emissions of nitrogen oxides | NOx | - | mg/kWh |
| AS For heat pump combination heater | | | |
| AT Declared load profile | | - | |
| AV Daily electricity consumption | Qelec | - | kWh |
| AX Contact details | | http://www.samsung.com | |

| Item ⁽¹⁾ | Symbol ⁽⁶⁾ | Value ⁽²⁾ | Unit ⁽⁶⁾ |
|---|------------------------|----------------------|-----------------------------------|
| P Seasonal space heating energy efficiency | η_s | 112 | % |
| R Declared coefficient of performance or primary energy ratio for part load at indoor temperature 20 °C and outdoor temperature T j | | | |
| - T j = -7 °C | COPd ⁽³⁾ | 1.75 | - |
| - T j = +2 °C | COPd ⁽³⁾ | 2.62 | - |
| - T j = +7 °C | COPd ⁽³⁾ | 3.73 | - |
| - T j = +12 °C | COPd ⁽³⁾ | 6.80 | - |
| T T j = bivalent temperature | COPd ⁽³⁾ | 1.57 | - |
| U T j = operation limit temperature | COPd ⁽³⁾ | 1.57 | - |
| V For air-to-water heat pumps T j = -15 °C (if TOL < -20 °C) | COPd ⁽³⁾ | - | - |
| X For air-to-water heat pumps: Operation limit temperature | TOL | -10 | °C |
| Z Cycling interval efficiency | COPcyc ^(8A) | - | - |
| AC Heating water operating limit temperature | WTOL | - | °C |
| AE Supplementary heater | | | |
| N Rated heat output ⁽¹⁾ | Psup | - | kW |
| AJ Type of energy input | | | |
| AK Other items | | | |
| AN For air-to-water heat pumps : Rated air flow rate, outdoors | - | 108 | m ³ /h ^(8A) |
| AR For water-/brine-to-water heat pumps: Rated brine or water flow rate, outdoor heat exchanger | - | - | m ³ /h ^(8A) |
| AS For heat pump combination heater | | | |
| AU Water heating energy efficiency | η_{wh} | - | % |
| AW Daily fuel consumption | Qfuel | - | kWh |

AY ⁽¹⁾ For heat pump space heaters and heat pump combination heaters, the rated that output Prated is equal to the design load for heating Pdesignh, and the rated heat output of a supplementary heater Psup is equal to the supplementary capacity for heating sup(Tj).

AZ ⁽⁷⁾ If Cdh is not determined by measurement then the default degradation coefficient is Cdh = 0.9.

BA ⁽¹⁾ Precautions as described in the installation/user manual must be taken when assembling, installing and maintaining this product.

BB ⁽²⁾ If you are a professional looking for information on non-destructive disassembly and dismantling, please send an email to: erims.sec@samsung.com



COMMISSION REGULATION (EU) No 813/2013¹⁾

| No | English(EN) | Bulgarian(BG) | Spanish(ES) | Czech(CS) |
|----|---|---|---|---|
| I | COMMISSION REGULATION (EU) No 813/2013 | РЕГЛАМЕНТ (ЕС) № 813/2013 НА КОМИСИЯТА | REGLAMENTO (UE) No 813/2013 DE LA COMISIÓN | NAŘÍZENÍ KOMISE (EU) č. 813/2013 |
| II | ECODESIGN REQUIREMENTS FOR SPACE HEATER | Изискванията за екопроектиране на отоплителен топлоизточник | Los requisitos de diseño ecológico de aparato de calefacción | Požadavky na ekodesign pro vytápění vnitřních prostorů |
| A | Model(s): [information identifying the model(s) to which the information relates] | Модел/моделни: [информация за определяне на модела(ите), за който(ито) тя се отнася] | Modelos: [Datos que identifican el modelo o modelos a que se refiere la información] | Model/y: [informace k určení modelu/ů, na který/ě se informace vztahují] |
| B | Air-to-water heat pump: [yes/no] | Термопомпа „въздух-вода“: [да/не] | Bomba de calor aire-agua: [sí/no] | Teplé čerpadlo vzduch-voda: [ano/ne] |
| C | Water-to-water heat pump: [yes/no] | Термопомпа „вода-вода“: [да/не] | Bomba de calor agua-agua: [sí/no] | Teplé čerpadlo voda-voda: [ano/ne] |
| D | Brine-to-water heat pump: [yes/no] | Термопомпа „солнов разтвор-вода“: [да/не] | Bomba de calor salmuera-agua: [sí/no] | Teplé čerpadlo solanka-voda: [ano/ne] |
| E | Low-temperature heat pump: [yes/no] | Термопомпа за нискотемпературни приложения: [да/не] | Bomba de calor de baja temperatura: [sí/no] | Nizkoteplotní teplé čerpadlo: [ano/ne] |
| F | Equipped with a supplementary heater: [yes/no] | Оборудвана с допълнителен подгревател: [да/не] | Equipado con un calefactor complementario: [sí/no] | Vybavenost přidavným ohřeváčem: [ano/ne] |
| G | Heat pump combination heater: [yes/no] | Комбиниран термопомпен агрегат за отопление и БГВ: [да/не] | Calefactor combinado con bomba de calor: [sí/no] | Kombinovaný ohřeváč s tepelným čerpadlem: [ano/ne] |
| H | Parameters shall be declared for medium-temperature application, except for low-temperature heat pumps. For low-temperature heat pumps, parameters shall be declared for low-temperature application. | Параметрите се обявяват за среднотемпературни приложения, освен при термопомпите с нискотемпературни приложения. При термопомпите с нискотемпературни приложения параметрите се обявяват за нискотемпературните приложения. | Los parámetros se declararán para aplicaciones de media temperatura, excepto si se trata de bombas de calor de baja temperatura. En el caso de las bombas de calor de baja temperatura, los parámetros se declararán para aplicaciones de baja temperatura. | Parametry musí být uvedeny pro středněteplotní aplikaci, s výjimkou nízkoteplotních tepelných čerpadel. U nízkoteplotních tepelných čerpadel musí být parametry uvedeny pro nízkoteplotní aplikaci. |
| I | Parameters shall be declared for average climate conditions. | Параметрите се обявяват за средни климатични условия. | Los parámetros se indicarán para condiciones climáticas medias. | Parametry musí být uvedeny pro průměrné klimatické podmínky. |
| J | Item | Характеристика | Elemento | Položka |
| K | Symbol | Означение | Símbolo | Označení |
| L | Value | Стойност | Valor | Hodnota |
| M | Unit | Мерна единица | Unidad | Jednotka |
| N | Rated heat output(*) | Номинална топлинна мощност(*) | Potencia calorífica nominal (*) | Jmenovitý tepelný výkon (*) |
| O | Prated | Prated | Prated | Prated |
| P | Seasonal space heating energy efficiency | Сезонна енергийна ефективност при отопление | Eficiencia energética estacional de calefacción | Sezónní energetická účinnost vytápění |
| Q | Declared capacity for heating for part load at indoor temperature 20 °C and outdoor temperature Tj | Обявена отоплителна мощност за частичен товар при температура вътре 20 °C и външна температура Tj | Capacidad de calefacción declarada para una carga parcial a una temperatura interior de 20 °C y una temperatura exterior Tj | Deklarovaný topný výkon pro částečné zatížení při vnitřní teplotě 20 °C a venkovní teplotě Tj |
| R | Declared coefficient of performance or primary energy ratio for part load at indoor temperature 20 °C and outdoor temperature Tj | Обявен коефициент на трансформация или коефициент на първичната енергия за частичен товар при температура вътре 20 °C и външна температура Tj | Coefficiente de rendimiento declarado o factor energético primario para una carga parcial a una temperatura interior de 20 °C y una temperatura exterior Tj | Deklarovaný topný faktor či koeficient primární energie pro částečné zatížení při vnitřní teplotě 20 °C a venkovní teplotě Tj |
| S | COPd or PERd | COPd или PERd | COPd o PERd | COPd nebo PERd |
| T | Tj = bivalent temperature | Tj = температура на включване на допълнително подгръване | Tj = temperatura bivalente | Tj = bivalentní teplota |
| U | Tj = operation limit temperature | Tj = гранична работна температура | Tj = temperatura límite de funcionamiento | Tj = mezní provozní teplota |
| V | For air-to-water heat pumps: Tj = – 15 °C (if TOL < – 20 °C) | За термопомпи „въздух-вода“: Tj = – 15 °C (ако TOL < – 20 °C) | Para bombas de calor aire-agua: Tj = – 15 °C (si TOL < – 20 °C) | U tepelných čerpadel vzduch-voda: Tj = – 15 °C (pokud TOL < – 20 °C) |
| W | Bivalent temperature | Температура на включване на допълнително подгръване | Temperatura bivalente | Bivalentní teplota |
| X | For air-to-water heat pumps: Operation limit temperature | За термопомпи „въздух-вода“: гранична работна температура | Para bombas de calor aire-agua: Temperatura límite de funcionamiento | U tepelných čerpadel vzduch-voda: mezní provozní teplota |
| Y | Cycling interval capacity for heating | Мощност при повторно-кратковременен режим на отопление | Eficiencia del intervalo cíclico para calefacción | Topný výkon v cyklickém intervalu |
| Z | Cycling interval efficiency | Ефективност при повторно-кратковременен режим | Eficiencia del intervalo cíclico | Účinnost v cyklickém intervalu |
| AA | COPcyc or PERcyc | COPcyc или PERcyc | COPcyc o PERcyc | COPcyc nebo PERcyc |
| AB | Degradation co-efficient(**) | Коефициент на влошаване на ефективността(**) | Coefficiente de degradación (**) | Koeficient ztráty energie (**) |
| AC | Heating water operating limit temperature | Гранична температура на загряваната вода | Temperatura límite de calentamiento de agua | Mezní provozní teplota ohřívavé vody |



| No | English(EN) | Bulgarian(BG) | Spanish(ES) | Czech(CS) |
|----|--|--|---|--|
| AD | Power consumption in modes other than active mode | Консумирана мощност в режими, различни от работен режим | Consumo de electricidad en modos distintos del activo | Spotřeba elektrické energie v jiných režimech než aktivní režim |
| AE | Supplementary heater | Допълнителен подгревател | Calefactor complementario | Přídavný ohřívač |
| AF | Off mode | Режим „изключен“ | Modo desactivado | Vypnutý stav |
| AG | Thermostat-off mode | Режим „термостатно изключен“ | Modo desactivado por termostato | Stav vypnutého termostatu |
| AH | Standby mode | Режим „в готовност“ | Modo de espera | Pohotovostní režim |
| AI | Crankcase heater mode | Режим „подгръвяне на картера на компресора“ | Modo de calentador del cárter | Režim zahřívání skříně kompresoru |
| AJ | Type of energy input | Вид на постъпващата енергия | Tipo de insumo de energía | Energetický příkon |
| AK | Other items | Други характеристики | Otros elementos | Jiné položky |
| AL | Capacity control | Регулиране на мощността | Control de capacidad | Regulace výkonu |
| AM | fixed/variable | фиксирана/регулируема | fijo/variable | pevná/proměnná |
| AN | For air-to-water heat pumps: Rated air flow rate, outdoors | За термопомпи „въздух-вода“: номинален дебит на въздуха (на открито) | Para bombas de calor aire-agua: Caudal de aire nominal (exterior) | U tepelných čerpadel vzduch-voda: jmenovitý průtok vzduchu ve venkovním prostoru |
| AO | m ³ /h | m ³ /h | m ³ /h | m ³ /h |
| AP | Sound power level, indoors/outdoors | Ниво на шума (вътре/на открито) | Nivel de potencia acústica (interior/exterior) | Hladina akustického výkonu ve vnitřním prostoru/venkovním prostoru |
| AQ | Emissions of nitrogen oxides | Емисии на азотни окиси | Emisiones de óxidos de nitrógeno | Emise oxidů dusíku |
| AR | For water-/brine-to-water heat pumps: Rated brine or water flow rate, outdoor heat exchanger | За термопомпи „вода/солов разтвор-вода“: номинален дебит на соловия разтвор, или водата, външен теплообменник | Para bombas de calor agua/salmuera a agua: Caudal de salmuera o de agua nominal, intercambiador de calor de exterior | U tepelných čerpadel voda-voda/solanka-voda: jmenovitý průtok solanky nebo vody, venkovní výměník tepla |
| AS | For heat pump combination heater: | За комбиниран термопомпен агрегат за отопление и БГ В: | Para calefactores combinados con bomba de calor: | U kombinovaného ohřívače s tepelným čerpadlem: |
| AT | Declared load profile | Обявен товаров профил | Perfil de carga declarado | Deklarovaný zátěžový profil |
| AU | Water heating energy efficiency | Енергийна ефективност при подгръвяне на вода | Eficiencia energética de caldeo de agua | Energetická účinnost ohřevu vody |
| AV | Daily electricity consumption | Дневно електропотребление | Consumo diario de electricidad | Denní spotřeba elektrické energie |
| AW | Daily fuel consumption | Дневно потребление на гориво | Consumo diario de combustible | Denní spotřeba paliva |
| AX | Contact details | Координати за връзка | Datos de contacto | Kontaktní údaje |
| AY | (*) For heat pump space heaters and heat pump combination heaters, the rated that output Prated is equal to the design load for heating Pdesignh, and the rated heat output of a supplementary heater Psup is equal to the supplementary capacity for heating sup(Tj). | (*) За отоплителни термопомпени агрегати и комбиниран термопомпен агрегат, номиналната топлинна мощност Prated е равна на проекцията отоплителен товар Pdesignh, а номиналната топлинна мощност на допълнителния подгревател Psup е равна на допълнителната отоплителна мощност sup(Tj). | (*) Para los aparatos de calefacción con bomba de calor y calefactores combinados con bomba de calor, la potencia calorífica nominal Prated es igual a la carga de calefacción de diseño Pdesignh, y la potencia calorífica nominal de un calefactor complementario Psup es igual a la capacidad complementaria de calefacción sup(Tj). | (*) U ohřívačů pro vytápění vnitřních prostorů s tepelným čerpadlem a kombinovaných ohřívačů s tepelným čerpadlem je jmenovitý tepelný výkon Prated roven návrhovému topnému zatížení Pdesignh a jmenovitý tepelný výkon přídavného ohřívače Psup je roven doplňkovému topnému výkonu sup(Tj). |
| AZ | (**) If Cdh is not determined by measurement then the default degradation coefficient is Cdh = 0.9. | (**) Ако Cdh не е определен чрез измерване, съответната ориентировъчно приемана стойност за коефициента на влошаване на ефективността е Cdh = 0.9. | (**) Si no se determina Cdh por medición, el coeficiente de degradación predeterminado será Cdh = 0.9. | (**) Není-li koeficient ztráty energie Cdh stanoven měřením, má implicitní hodnotu 0.9. |
| BA | 1) Precautions as described in the installation/user manual must be taken when assembling, installing and maintaining this product. | 1) Описаните в ръководството за монтиране/ръководството за потребителя предпазни мерки трябва да се спазват при събиране, монтиране и поддръжка на продукта. | 1) Deben tomarse las precauciones que se indican en el manual de instalación/usuario al montar e instalar el producto, así como al realizar tareas de mantenimiento. | 1) Při montáži, instalaci a údržbě tohoto produktu je třeba se řídit bezpečnostními opatřeními popsanými v instalační a uživatelské příručce. |
| BB | 2) If you are a professional looking for information on non-destructive disassembly and dismantling, please send an email to: erims.sec@samsung.com | 2) Ако сте професионалист и търсите информация относно възможностите за неразрушително разглобяване и демонтаж, моля, изпратете имейл на адрес: erims.sec@samsung.com | 2) Si Usted es un profesional que desea obtener información sobre el desmontaje y desmantelamiento no destructivo de este producto, por favor, dirijase a la siguiente dirección de correo electrónico: erims.sec@samsung.com | 2) Pokud jste odborným pracovníkem a hledáte informace ohledně bezpečné demontáže produktu, napište e-mail na adresu: erims.sec@samsung.com. |



COMMISSION REGULATION (EU) No 813/2013¹⁾

| No | Danish(DA) | German(DE) | Estonian(ET) | Greek(EL) |
|----|---|--|--|--|
| I | KOMMISSIONENS FORORDNING (EU) Nr. 813/2013 | VERORDNUNG (EU) Nr. 813/2013 DER KOMMISSION | KOMISJONI MÄÄRUS (EL) nr 813/2013, | ΚΑΝΟΝΙΣΜΟΣ (ΕΕ) αριθ. 813/2013 ΤΗΣ ΕΠΙΤΡΟΠΗΣ |
| II | Kravene til miljøvenligt design af anlæg til rumopvarmning | Die Ökodesign-Anforderungen an Raumheizgerät | Ökotsaini nõuded ruumi kütmiseks | Οι απαιτήσεις οικολογικού σχεδιασμού για θερμαντήρας χώρου |
| A | Model(ler): [Information, som identificerer den eller de modeller, som oplysningerne vedrører] | Modell(e): [Angaben zur Bestimmung des Modells/der Modelle, auf das/die sich die Angaben beziehen] | Mudel(id): [mudelit (mudeleid) iseloomustavad näitajad] | Μοντέλο(-α): [πληροφορίες για την ταυτοποίηση του μοντέλου (των μοντέλων) που αφορούν οι πληροφορίες] |
| B | Luft-vand-varmepumpe: [ja/nej] | Luft-Wasser-Wärmepumpe: (Ja/Nein) | Õhu-vee-soojuspump: [jah/ei] | Αντλία θερμότητας αέρα-νερού: [ναι/όχι] |
| C | Vand-vand-varmepumpe: [ja/nej] | Wasser-Wasser-Wärmepumpe: (Ja/Nein) | Vee-vee-soojuspump: [jah/ei] | Αντλία θερμότητας νερού-νερού: [ναι/όχι] |
| D | Brine-vand-varmepumpe: [ja/nej] | Sole-Wasser-Wärmepumpe: (Ja/Nein) | Soojuskandja-vee-soojuspump: [jah/ei] | Αντλία θερμότητας αλμής-νερού: [ναι/όχι] |
| E | Lavtemperaturvarmepumpe: [ja/nej] | Niedertemperatur-Wärmepumpe: (Ja/Nein) | Külma kliima soojuspump: [jah/ei] | Αντλία θερμότητας χαμηλής θερμοκρασίας: [ναι/όχι] |
| F | Udstyret med supplerende forsyningsanlæg: [ja/nej] | Mit Zusatzheizgerät: (Ja/Nein) | Koos lisakütteseadmega: [jah/ei] | Εξοπλισμένος με συμπληρωματικό θερμαντήρα: [ναι/όχι] |
| G | Varmpumpeanlæg til kombineret rum- og brugsvarmning: [ja/nej] | Kombiheizgerät mit Wärmepumpe: (Ja/Nein) | Soojuspumbaga veesoojendi-küttesead: [jah/ei] | Θερμαντήρας συνδυασμένης λειτουργίας με αντλία θερμότητας: [ναι/όχι] |
| H | Parametre skal angives for middeltemperaturanvendelse, dog ikke for lavtemperaturvarmepumper. For lavtemperaturvarmepumper angives parametre for lavtemperaturanvendelse. | Die Parameter sind für eine Mitteltemperaturanwendung anzugeben, außer für Niedertemperatur-Wärmepumpen. Für Niedertemperatur-Wärmepumpen sind die Parameter für eine Niedertemperaturanwendung anzugeben. | Näitajad esitatakse keskmise temperatuuriga kasutuse kohta, välja arvatud külma kliima soojuspumbad. Külma kliima soojuspumpade näitajad esitatakse madalatemperatuurilise kasutuse kohta. | Δηλώνονται οι παράμετροι για εφαρμογή μέσης θερμοκρασίας εξαιρουμένων των αντλίων θερμότητας χαμηλής θερμοκρασίας. Για τις αντλίες θερμότητας χαμηλής θερμοκρασίας δηλώνονται οι παράμετροι για εφαρμογή χαμηλής θερμοκρασίας. |
| I | Parametre skal angives for gennemsnitlige klimaforhold. | Die Parameter sind für durchschnittliche Klimaverhältnisse anzugeben: | Näitajad esitatakse keskmiste kliimatingimuste kohta. | Δηλώνονται οι παράμετροι για μέσες κλιματικές συνθήκες. |
| J | Element | Angabe | Näitaja | Χαρακτηριστικό |
| K | Symbol | Symbol | Tähis | Σύμβολο |
| L | Værdi | Wert | Väärtus | Τιμή |
| M | Enhed | Einheit | Ühik | Μονάδα |
| N | Nominel nytteeffekt (*) | Wärmenennleistung (3) | Nimisoojusvõimsus (*) | Ονομαστική θερμική ισχύς (*) |
| O | Prated | Prated | Prated | Prated |
| P | Årsvirkningsgrad ved rumopvarmning | Jahreszeitbedingte Raumheizungs-Energieeffizienz | Kütmise sisseone energiätõhusus | Ενεργειακή απόδοση της εποχιακής θέρμανσης χώρου |
| Q | Angivet varmeydelse for delast ved indetemperatur på 20 °C og udetemperatur på Tj | Angegebene Leistung für Teillast bei Raumlufttemperatur 20 °C und Außenlufttemperatur Tj | Esitatud soojusvõimsus ruumitemperatuurile 20 °C ja välitemperatuurile Tj vastaval (osalise koormuse) võimsustarbel | Δηλωμένη θερμαντική ισχύς για μερικό φορτίο σε θερμοκρασία εσωτερικού χώρου 20 °C και θερμοκρασία εξωτερικού χώρου Tj |
| R | Angivet effektfaktor eller primærenergieffektfaktor for delast ved indetemperatur på 20 °C og udetemperatur på Tj | Angegebene Leistungszahl oder Heizzahl für Teillast bei Raumlufttemperatur 20 °C und Außenlufttemperatur Tj | Esitatud soojustegur (primaarenergiategur) ruumitemperatuurile 20 °C ja välitemperatuurile Tj vastaval (osalise koormuse) võimsustarbel | Δηλωμένος συντελεστής απόδοσης ή λόγος πρωτογενούς ενέργειας σε θερμοκρασία εσωτερικού χώρου 20 °C και θερμοκρασία εξωτερικού χώρου Tj |
| S | COPd eller PERd | COPd oder PERd | COPd või PERd | COPd ή PERd |
| T | Tj = bivalenttemperatur | Tj = Bivalenttemperatur | Tj = tasakaalutemperatuur | Tj = δίτιμη θερμοκρασία |
| U | Tj = temperaturgrænse for drift | Tj = Betriebstemperaturgrenzwert | Tj = piirtootemperatuur | Tj = οριακή θερμοκρασία λειτουργίας |
| V | For luft-vand-varmepumpe: Tj = - 15 °C (hvis TOL < - 20 °C) | Für Luft-Wasser-Wärmepumpen: Tj = - 15 °C (wenn TOL < - 20 °C) | Õhu-vee-soojuspump: Tj = - 15 °C (kui TOL < - 20 °C) | Για αντλίες θερμότητας αέρα-νερού: Tj = - 15 °C (έναν TOL < - 20 °C) |
| W | Bivalenttemperatur | Bivalenztemperatur | Tasakaalutemperatuur | Δίτιμη θερμοκρασία |
| X | For luft-vand-varmepumpe: Temperaturgrænse for drift | Für Luft-Wasser-Wärmepumpen: Betriebsgrenzwert-Temperatur | Õhu-vee-soojuspump: piirtootemperatuur | Για αντλίες θερμότητας αέρα-νερού: Οριακή θερμοκρασία λειτουργίας |
| Y | Cyklusintervalydelse for opvarmning | Leistung bei zyklischem Intervall-Heizbetrieb | Tsükli soojusvõimsus | Θερμαντική ισχύς κατά τη διάρκεια ενός κύκλου |
| Z | Cyklusintervalydelse | Leistungszahl bei zyklischem Intervallbetrieb | Tsükli tõhusus või primaarenergiategur | Απόδοση κατά τη διάρκεια ενός κύκλου |
| AA | COPcyc eller PERcyc | COPcyc oder PERcyc | COPcyc või PERcyc | COPcyc ή PERcyc |
| AB | Koefficient for effektivitetstab (**) | Minderungsfaktor (4) | Kaotegur (**) | Συντελεστής υποβάθμισης (**) |
| AC | Temperaturgrænse for vandopvarmning | Grenzwert der Betriebstemperatur des Heizwassers | Küttevee piirtootemperatuur | Οριακή θερμοκρασία λειτουργίας για θέρμανση νερού |
| AD | Elforbrug i andre tilstande end aktiv tilstand | Stromverbrauch in anderen Betriebsarten als dem Betriebszustand | Võimsustarve ajal, kui seade ei ole aktiivses seisundis | Κατανάλωση ισχύος σε καταστάσεις πλην της ενεργού κατάστασης |



| No | Danish(DA) | German(DE) | Estonian(ET) | Greek(EL) |
|----|--|--|---|---|
| AE | Supplerende forsyningsanlæg | Zusatzheizgerät | Lisaküttesead | Συμπληρωματικός θερμαντήρας |
| AF | Slukket tilstand | Aus-Zustand | Väljalülitatud seisund | Κατάσταση εκτός λειτουργίας |
| AG | Termostat fra-tilstand | Thermostat-aus-Zustand | Termostaadiga välja lülitatud seisund | Κατάσταση χωρίς λειτουργία θερμοστάτη |
| AH | Standbytilstand | Bereitschaftszustand | Ooteseisund | Κατάσταση αναμονής |
| AI | Krumtaphusopvarmningsstilstand | Betriebszustand mit Kurbelgehäuseheizung | Kambrikütte seisund | Λειτουργία θερμαντήρα στροφαλοθαλάμου |
| AJ | Energiinputtype | Art der Energiezufuhr | Sisendenergia liik | Τύπος εισερχόμενης ενέργειας |
| AK | Andre elementer | Sonstige Angaben | Muud näitajad | Άλλα χαρακτηριστικά |
| AL | Ydelsesregulering | Leistungssteuerung | Võimsuse reguleerimine | Ρύθμιση ισχύος |
| AM | fast/variabel | fest/veränderlich | Muutumatu/muudetav | σταθερή/μεταβλητή |
| AN | For luft-vand-varmepumper: Nominel luftgennemstrømning, ude | Für Luft-Wasser-Wärmepumpen: Nenn-Luftdurchsatz, außen | Õhu-vee-soojuspump: õhu nimivooluhulk, väliskeskkonnas | Για αντλίες θερμότητας αέρα-νερού: Ονομαστική παροχή αέρα, εξωτερικού χώρου |
| AO | m ³ /h | m ³ /h | m ³ /h | m ³ /h |
| AP | Lydeffektniveau, inde/ude | Schalleistungspegel, innen/außen | Müravõimsustase, siseruumis/väliskeskkonnas | Στάθμη ηχητικής ισχύος, εσωτερικού/ εξωτερικού χώρου |
| AQ | Emissioner af kvælstofilter | Stickoxidausstoß | Lämmastikoksiidide heide | Εκπομπές οξειδίου του αζώτου |
| AR | For vand/brine-vand-varmepumper: nominel brine- eller vandgennemstrømning, varmeksler, ude | Für Wasser/Sole-Wasser-Wärmepumpen: Wasser- oder Sole-Neendurchsatz | Vee-soojuskandja-vee-soojuspump: soojuskandja või vee nimivooluhulk, soojusvaheti väljas | Για αντλίες θερμότητας νερού-/άλης-νερού: Ονομαστική παροχή άλης ή νερού, εναλλάκτη θερμότητας εξωτερικού χώρου |
| AS | For varmepumpeanlæg til kombineret rum- og brugs Vandopvarmning: | Kombiheizgerät mit Wärmepumpe | Soojuspumbaga vee-soojendite-küttesead | Για θερμαντήρα συνδυασμένης λειτουργίας με αντλία θερμότητας |
| AT | Angivet forbrugsprofil | Angegebenes Lastprofil | Esitatud koormusprofiil | Δηλωμένο προφίλ φορτίου |
| AU | Energieeffektivitet ved vandopvarmning | Warmwasserbereitungs-Energieeffizienz | Vee soojendamise kasutegur | Ενεργειακή απόδοση θέρμανσης νερού |
| AV | Dagligt elforbrug | Täglicher Stromverbrauch | Päevane elektrienergiatarve | Ημερήσια κατανάλωση ηλεκτρικής ενέργειας |
| AW | Dagligt brændselsforbrug | Täglicher Brennstoffverbrauch | Päevane kütteennergiatarve | Ημερήσια κατανάλωση καυσίμου |
| AX | Kontaktoplysninger | Kontakt | Kontaktandmed | Στοιχεία επικοινωνίας |
| AY | (*) For varmepumpeanlæg til rumopvarmning og varmepumpeanlæg til kombineret rum- og brugs vandopvarmning er den nominelle nytteeffekt Prated lig med den dimensionerende last for opvarmning Pdesignh, og den nominelle nytteeffekt for et supplerende forsyningsanlæg Pspup er lig med den supplerende varmeydelse sup(Tj). | (*) Für Heizgeräte und Kombiheizgeräte mit Wärmepumpe ist die Wärmenennleistung Prated gleich der Auslegungslast im Heizbetrieb Pdesignh und die Wärmenennleistung eines Zusatzheizgerätes Pspup gleich der zusätzlichen Heizleistung sup(Tj). | (*) Soojuspumbaga kütteseadmete ja soojuspumbaga vee-soojendite-kütteseadmete nimisoojusvõimsus Prated on võrdne arvutusliku soojusvõimsusega Pdesignh, lisakütteseadme Pspup nimisoojusvõimsus on võrdne lisakütteseadme soojusvõimsusega sup(Tj). | (*) Για θερμαντήρες χώρου με αντλία θερμότητας και θερμαντήρες συνδυασμένης λειτουργίας με αντλία θερμότητας, η ονομαστική θερμική ισχύς Prated ισούται με το θερμοαντικό φορτίο σχεδιασμού Pdesignh, και η ονομαστική θερμική ισχύς του συμπληρωματικού θερμαντήρα Pspup ισούται με τη συμπληρωματική θερμαντική ισχύ sup(Tj). |
| AZ | (**) Hvis Cdh ikke bestemmes ved måling, er koeficienten for effektivitetstab som standard Cdh = 0,9. | (**) Wird der Cdh-Wert nicht durch Messung bestimmt, gilt für den Minderungsfaktor der Vorgabewert Cdh = 0,9. | (**) Kui tegur Cdh on määramata, võetakse vaikimisi Cdh = 0,9. | (**) Εάν ο Cdh δεν προσδιορίζεται με μέτρηση, ο εξορισμού συντελεστής υποβάθμισης είναι Cdh = 0,9. |
| BA | 1) Du skal tage de forholdsregler, der er beskrevet i installations-/brugervejledningen, når du samler, installerer og vedligeholder dette produkt. | 1) Beim Montieren, Installieren und Warten des Geräts müssen die im Installations-/ Benutzerhandbuch beschriebenen Vorsichtsmaßnahmen eingehalten werden. | 1) Seadme kokkupanekul, paigaldamisel ja hooldusel tuleb rakendada paigaldus-/kasutusjuhendis kirjeldatud ettevaatusabinõusid | 1) Όταν συναρμολογείτε, εγκαθιστάτε και συντηρείτε αυτό το προϊόν, πρέπει να λαμβάνετε τις προφυλάξεις που περιγράφονται στο εγχειρίδιο εγκατάστασης/χρήσης. |
| BB | 2) Hvis du er en erhvervsdrivende, der søger information om, hvordan man afmonterer støvsugerens uden at ødelægge nogle dele, bedes du sende en e-mail til: erims.sec@samsung.com | 2) Wenn Sie als Fachkraft Informationen zu zerstörungsfreier Demontage und Zerlegung benötigen, schreiben Sie bitte eine E-Mail an: erims.sec@samsung.com. | 2) Kui olete professionaal, kes otsib teavet mittekahjustava lahivõtmise ja demonteerimise kohta, saatke palun e-kiri aadressil: erims.sec@samsung.com. | 2) Εάν είστε επαγγελματίας και αναζητάτε πληροφορίες σχετικά με την αποσυναρμολόγηση χωρίς να προκληθούν καταστροφές, στείλετε μήνυμα ηλεκτρονικού ταχυδρομείου στη διεύθυνση: erims.sec@samsung.com |



COMMISSION REGULATION (EU) No 813/2013¹⁾

| No | French(FR) | Croatian(HR) | Italian(IT) | Latvian(LV) |
|----|---|---|--|--|
| I | RÈGLEMENT (UE) No 813/2013 DE LA COMMISSION | UREDBA KOMISIJE (EU) br. 813/2013 | REGOLAMENTO (UE) N. 813/2013 DELLA COMMISSIONE | KOMISIJAS REGULA (ES) Nr. 813/2013 |
| II | Les exigences d'écoconception applicables aux dispositifs de chauffage des locaux | Zahtjevi za ekološki dizajn grijač prostora | Le specifiche per la progettazione ecocompatibile per apparecchio il riscaldamento d'ambiente | Ekodizaina prasības par telpu sildītājs |
| A | Modèle(s): [informations d'identification du ou des modèles concernés] | Model(i): [informacije za identifikaciju modela na koji(-e) se informacije odnose] | Modelli: [Informazioni per identificare i modelli cui sono riferibili le informazioni] | Modelis(-i): [informācija, ar ko identificē modeļ(-i)us, uz kuri(-iem) informācija attiecas] |
| B | Pompes à chaleur air-eau: [oui/non] | Toplinska crpka zrak-voda: [da/ne] | Pompa di calore aria/acqua: [sì/no] | Gaiss-ūdens siltumsūknis: [jā/nē] |
| C | Pompes à chaleur eau-eau: [oui/non] | Toplinska crpka voda-voda: [da/ne] | Pompa di calore acqua/acqua: [sì/no] | Ūdens-ūdens siltumsūknis: [jā/nē] |
| D | Pompe à chaleur eau glycolée-eau: [oui/non] | Toplinska crpka slāna voda-voda: [da/ne] | Pompa di calore salamoia/acqua: [sì/no] | Sālsūdens-ūdens siltumsūknis: [jā/nē] |
| E | Pompes à chaleur basse température: [oui/non] | Niskotemperatūra toplinska crpka: [da/ne] | Pompa di calore a bassa temperatura: [sì/no] | Zemas temperatūras diapazona siltumsūknis: [jā/nē] |
| F | Équipée d'un dispositif de chauffage d'appoint: [oui/non] | Opremljena dodatnim grijačem: [da/ne] | Con riscaldatore supplementare: [sì/no] | Aprīkots ar papildu sildītāju: [jā/nē] |
| G | Dispositif de chauffage mixte par pompe à chaleur: [oui/non] | Kombinirani grijači s toplinskom crpkom: [da/ne] | Apparecchio misto a pompa di calore: [sì/no] | Siltumsūkņa kombinētais sildītājs: [jā/nē] |
| H | Les paramètres sont déclarés pour l'application à moyenne température, excepté pour les pompes à chaleur basse température. Pour les pompes à chaleur basse température, les paramètres sont déclarés pour l'application à basse température. | Parametri se navode za uporabu pri srednjoj temperaturi, osim za niskotemperaturne toplinske crpkе. Za niskotemperaturne toplinske crpkе parametri se navode za uporabu pri niskoj temperaturi. | I parametri sono dichiarati per l'applicazione a temperatura media, tranne per le pompe di calore a bassa temperatura. Per le pompe di calore a bassa temperatura, i parametri sono dichiarati per l'applicazione a bassa temperatura. | Parametrus deklarē izmantošanai vidējās temperatūras diapazonā, izņemot zemas temperatūras diapazona siltumsūknēm. Zemas temperatūras diapazona siltumsūknēm parametrus deklarē izmantošanai zemas temperatūras diapazonā. |
| I | Les paramètres sont déclarés pour les conditions climatiques moyennes. | Parametri se navode za prosječne klimatske uvjete. | I parametri sono dichiarati per condizioni climatiche medie. | Parametrus deklarē vidējiem klimatiskajiem apstākļiem. |
| J | Caractéristique | Stavka | Elemento | Pozicija |
| K | Symbole | Oznaka | Simbolo | Apzīmējums |
| L | Valeur | Vrijednost | Valore | Vertība |
| M | Unité | Jedinica | Unità | Vienība |
| N | Puissance thermique nominale (*) | Nazivna toplinska snaga (*) | Potenza termica nominale (*) | Nominālā siltuma jauda (*) |
| O | Prated | Prated | Pnominale | Prated |
| P | Efficacité énergétique saisonnière pour le chauffage des locaux | Sezonska energetska učinkovitost grijanja prostora | Efficienza energetica stagionale del riscaldamento d'ambiente | Telpu apsildes sezonas energoefektivitāte |
| Q | Puissance calorifique déclarée à charge partielle pour une température intérieure de 20 °C et une température extérieure Tj | Deklarirani ogrijevni kapacitet za djelomično opterećenje pri unutarnjoj temperaturi od 20 °C i vanjskoj temperaturi Tj | Capacità di riscaldamento dichiarata a carico parziale, con temperatura interna pari a 20 °C e temperatura esterna Tj | Deklarētā jauda sildīšanai pie daļējas slodzes, ja temperatūra telpās ir 20 °C un ārējais temperatūra ir Tj |
| R | Coefficient de performance déclaré ou coefficient sur énergie primaire déclaré à charge partielle pour une température intérieure de 20 °C et une température extérieure Tj | Deklarirani koeficijent učinkovitosti ili omjer primarne energije za djelomično opterećenje pri unutarnjoj temperaturi od 20 °C i vanjskoj temperaturi Tj | Coefficiente di prestazione dichiarato o indice di energia primaria per carico parziale, con temperatura interna pari a 20 °C e temperatura esterna Tj | Deklarētais lietderības koeficients vai primārās enerģijas patēriņa rādītājs pie daļējas slodzes, ja temperatūra telpā ir 20 °C un ārējais temperatūra ir Tj |
| S | COPd ou PERd | COPd ili PERd | COPd oppure PERd | COPd vai PERd |
| T | Tj = température bivalente | Tj = bivalentna temperatura | Tj = temperatura bivalente | Tj = bivalentā temperatūra |
| U | Tj = température limite de fonctionnement | Tj = granična radna temperatura | Tj = temperatura limite di esercizio | Tj = darba režīma robežtemperatūra |
| V | Pour les pompes à chaleur air-eau: Tj = -15 °C (si TOL < -20 °C) | Za toplinske crpkе zrak-voda: Tj = -15 °C (ako je TOL < -20 °C) | Per le pompe di calore aria/acqua: Tj = -15 °C (se TOL < -20 °C) | Gaiss-ūdens siltumsūkņiem: Tj = -15 °C (ja TOL < -20 °C) |
| W | Température bivalente | Bivalentna temperatura | Temperatura bivalente | Bivalentā temperatūra |
| X | Pour les pompes à chaleur air-eau: température limite de fonctionnement | Za toplinske crpkе zrak-voda: Granična radna temperatura | Per le pompe di calore aria/acqua: temperatura limite di esercizio | Gaiss-ūdens siltumsūkņiem: darba režīma robežtemperatūra |
| Y | Puissance calorifique sur un intervalle cyclique | Ogrijevni kapacitet intervala ciklusa | Ciclicità degli intervalli di capacità per il riscaldamento | Cikliskā intervāla jauda sildīšanai |
| Z | Efficacité sur un intervalle cyclique | Učinkovitost intervala ciklusa | Efficienza della ciclicità degli intervalli | Cikliskā intervāla efektivitāte |
| AA | COPcyc ou PERcyc | COPcyc ili PERcyc | COPcyc oppure PERcyc | COPcyc vai PERcyc |
| AB | Coefficient de dégradation (**) | Koeficijent degradacije (**) | Coefficiente di degradazione (**) | Pazeminājuma koeficients (**) |
| AC | Température maximale de service de l'eau de chauffage | Granična radna temperatura za grijanje vode | Temperatura limite di esercizio di riscaldamento dell'acqua | Ūdens uzsildīšanas darba režīma robežtemperatūra |



| No | French(FR) | Croatian(HR) | Italian(IT) | Latvian(LV) |
|----|--|--|---|---|
| AD | Consommation d'électricité dans les modes autres que le mode actif | Potrošnja energije u načinima koji ne uključuju aktivni način rada | Consumo energetico in modi diversi dal modo attivo | Jauda režims, kas nav darba režims |
| AE | Dispositif de chauffage d'appoint | Dodatni grijač | Riscaldatore supplementare | Papildu sildītājs |
| AF | Mode arrêt | Stanje isključenosti | Modo spento | Izslēgts režims |
| AG | Mode arrêt par thermostat | Stanje isključenosti termostata | Modo termostato spento | Izslēgta termostata režims |
| AH | Mode veille | Stanje mirovanja | Modo stand-by | Gaidstāves režims |
| AI | Mode résistance de carter active | Način rada grijača kućišta | Modo riscaldamento del carter | Kartera sildītāja režims |
| AJ | Type d'énergie utilisée | Vrsta utrošene energije | Tipo di alimentazione energetica | Pievadītās enerģijas veids |
| AK | Autres caractéristiques | Druge stavke | Altri elementi | Citas pozīcijas |
| AL | Régulation de la puissance | Upravljanje kapacitetom | Controllo della capacità | Jaudas regulēšana |
| AM | fixe/variable | fiksno/promjenjivo | fisso/variabile | fiksēta/maināma jauda |
| AN | Pour les pompes à chaleur air-eau: débit d'air nominal, à l'extérieur | Za toplinski crpku zrak-voda: Nazivna stopa protoka zraka, na otvorenom | Per le pompe di calore aria/acqua: portata d'aria, all'esterno | Gaiss-ūdens siltumsūkņiem: nominālā gaisa caurplūde, ārpus telpām |
| AO | m³/h | m³/h | m³/h | m³/h |
| AP | Niveau de puissance acoustique, à l'intérieur/à l'extérieur | Razina zvučne snage, unutra/vani | Livello della potenza sonora, all'interno/ all'esterno | Akustiskās jaudas līmenis telpās/ārpus telpām |
| AQ | Émissions d'oxydes d'azote | Emisija dušikogov oksida | Emissioni di ossidi di azoto | Slāpekļa oksīdu emisijas |
| AR | Pour les pompes à chaleur eau-eau ou eau glycolée-eau: débit nominal d'eau glycolée ou d'eau, échangeur thermique extérieur | Za toplinske crpke voda/slana voda-voda: Nazivna stopa protoka slane vode ili vode, na vanjskom izmjenjivaču topline | Per le pompe di calore acqua/acqua e salamoia/acqua: flusso di salamoia o acqua nominale, scambiatore di calore all'esterno | Ūdens vai sālsūdens-ūdens siltumsūkņiem: nominālā sālsūdens vai ūdens caurplūde, ārēliem siltummaini |
| AS | Pour les dispositifs de chauffage mixtes par pompe à chaleur: | Za kombinirane grijače s toplinskom crpkom: | Per gli apparecchi di riscaldamento misti a pompa di calore: | Siltumsūkņa kombinētajam sildītājam: |
| AT | Profil de soutirage déclaré | Deklarirani profil opterećenja | Profilo di carico dichiarato | Deklarētais slodzes profils |
| AU | Efficacité énergétique pour le chauffage de l'eau | Energetiska učinkovitost zagrijavanja vode | Efficienza energetica di riscaldamento dell'acqua | Ūdens uzsildīšanas energoefektivitāte |
| AV | Consommation journalière d'électricité | Dnevna potrošnja električne energije | Consumo quotidiano di energia elettrica | Dienas elektroenerģijas patēriņš |
| AW | Consommation journalière de combustible | Dnevna potrošnja goriva | Consumo quotidiano di combustibile | Dienas kurināmā patēriņš |
| AX | Coordonnées de contact | Podaci za kontakt | Recapiti | Kontakta informācija |
| AY | (*) Pour les dispositifs de chauffage des locaux par pompe à chaleur et les dispositifs de chauffage mixtes par pompe à chaleur, la puissance thermique nominale Prated est égale à la charge calorifique nominale Pdesignh et la puissance thermique nominale d'un dispositif de chauffage d'appoint Psup est égale à la puissance calorifique d'appoint sup(Tj). | (*) Za toplinske crpke za grijanje prostora i kombinirane grijače s toplinskom crpkom nazivna toplinska snaga Prated jednaka je projektnom ogrjevnom opterećenju Pdesignh, a nazivna toplinska snaga dodatnog grijača Psup jednaka je dodatnom ogrjevnom kapacitetu sup(Tj). | (*) Per gli apparecchi a pompa di calore per il riscaldamento d'ambiente e gli apparecchi di riscaldamento misti a pompa di calore, la potenza termica nominale Pnominale è pari al carico teorico per il riscaldamento Pdesignh e la potenza termica nominale di un riscaldatore supplementare Psup è pari alla capacità supplementare di riscaldamento sup(Tj). | (*) Siltumsūkņa telpu sildītājiem un siltumsūkņa kombinētajiem sildītājiem nominālā siltuma jauda Prated ir vienāda ar aprēķina slodzi sildīšanai Pdesignh un papildu sildītāja nominālā siltuma jauda Psup ir vienāda ar sildīšanas papildu jaudu sup(Tj). |
| AZ | (**) Si le Cdh n'est pas déterminé par des mesures, le coefficient de dégradation par défaut est Cdh = 0,9. | (**) Ako Cdh nije određen mjerenjem, standardni koeficijent degradacije je Cdh = 0,9. | (**) Se Cdh non è determinato mediante misurazione, il coefficiente di degradazione è Cdh = 0,9. | (**) Ja Cdh nenosaka, izmantojot mērījumus, tad standarta pazeminājuma koeficients ir Cdh = 0,9. |
| BA | 1) Des précautions, comme décrit dans le manuel d'installation/d'utilisation, doivent être prises lors du montage, de l'installation et de l'entretien de l'appareil. | 1) Prilikom sastavljanja, instalacije i održavanja proizvoda potrebno je poduzeti mjere opreza navedene u priručniku za instalaciju / korisničkom priručniku. | 1) Durante l'assemblaggio, l'installazione e la manutenzione di questo apparecchio vanno poste in atto tutte le avvertenze e le precauzioni che sono indicate nei manuali di installazione e per l'utente. | 1) Montāža un produkta apkope jāveic saskaņā ar montāžas/lietošanas instrukciju. |
| BB | 2) Si vous êtes un professionnel à la recherche des informations sur le démontage et le démantèlement, veuillez envoyer un e-mail à l'adresse: erims.sec@samsung.com | 2) Ako ste stručnjak u potrazi za informacijama o nerazomom rastavljanju i rasklapanju, pošaljite elektroničku poruku na adresu: erims.sec@samsung.com | 2) Se sei un tecnico e vuoi sapere come smontare in modo accurato e non distruttivo il prodotto, invia una email all'indirizzo: erims.sec@samsung.com | 2) Ja esat meistars, kas meklē informāciju, kā demontēt un izjaukt ierīci, to nesabojājot, sūtiet e-pasta vēstuli uz adresi: erims.sec@samsung.com. |



COMMISSION REGULATION (EU) No 813/2013¹⁾

| No | Lithuanian(LT) | Hungarian(HU) | Maltese(MT) | Dutch(NL) |
|----|---|--|--|--|
| I | KOMISIJOS REGLAMENTAS (ES) Nr. 813/2013 | A BIZOTTSÁG 813/2013/EU RENDELETE | REGOLAMENT TAL-KUMMISSJONI (UE) Nru 813/2013 | VERORDENING (EU) Nr. 813/2013 VAN DE COMMISSIE |
| II | Ekologinio projektavimo reikalavimai už patalpų šildytuvus | A környezetzetudatos tervezésére vonatkozó követelményeket helyiségfűtő berendezés | Rekwiziti tal-ekodisinn għall hiter tal-post | De eisen inzake ecologisch ontwerp voor ruimteverwarmingstoestel |
| A | Modelis (-ia) [modelio (-ų), kuriam (-iems) taikoma informacija, identifikavimo duomenys] | Modell(ek); [az információk tárgyát képező modell(ek) megjelölése] | Mudell(i); [tagħrif li bih jiġi identifikat il-mudell/jiġu identifikati l-mudelli li magħhom huwa relatat dan it-tagħrif] | Model(len); [informatie ter bepaling van het model waarop de informatie betrekking heeft] |
| B | Oro-vandens šilumos siurblys [taip / ne] | Levegő-víz típusú hőszivattyú; [igen/nem] | Pompa tas-shana arja-ilma; [iva/le] | Lucht/water-warmtepomp; [ja/neen] |
| C | Vandens-vandens šilumos siurblys [taip / ne] | Víz-víz típusú hőszivattyú; [igen/nem] | Pompa tas-shana ilma-ilma; [iva/le] | Water/water-warmtepomp; [ja/neen] |
| D | Tirpalo-vandens šilumos siurblys [taip / ne] | Sós víz-víz típusú hőszivattyú; [igen/nem] | Pompa tas-shana salmura-ilma; [iva/le] | Pekel/water-warmtepomp; [ja/neen] |
| E | Žematemperatūros šilumos siurblys [taip / ne] | Alacsony hőmérsékletű hőszivattyú; [igen/nem] | Pompa tas-shana b'temperatura baxxa; [iva/le] | Lagetemperaaturwarmtepomp; [ja/neen] |
| F | Ar yra papildomas šildytuvus [taip / ne] | Rendelkezik-e kiegészítő fűtőberendezéssel; [igen/nem] | Mgħammar b'hiter supplementari; [iva/le] | Uitgerust met aanvullend verwarmingstoestel; [ja/neen] |
| G | Kombinuotasis šildytuvus su šilumos siurbliu [taip / ne] | Hőszivattyús kombinált fűtőberendezés; [igen/nem] | Hiter ikkombinatt b'pompa tas-shana; [iva/le] | Combinatieverwarmingstoestel met warmtepomp; [ja/neen] |
| H | Pateikiami naudojimo esant vidutinei temperatūrai parametrai, išskyrus atvejus, kai teikiama informacija apie žematemperatūrinį šilumos siurblių, žematemperatūrinį šilumos siurblių atvejų pateikiami naudojimo esant žemai temperatūrai parametrai. | A paramétereket az alacsony hőmérsékletű hőszivattyúk kivételével a közepes hőmérsékletű használatra vonatkozóan kell megadni. Az alacsony hőmérsékletű hőszivattyúk esetében a paramétereket az alacsony hőmérsékletű használatra vonatkozóan kell megadni. | Il-parametri għandhom jingħataw għal applikazzjoni b'temperatura medja, hliief għall-pompi tas-shana b'temperatura baxxa. Għall-pompi tas-shana b'temperatura baxxa, il-parametri għandhom jingħataw għal applikazzjoni b'temperatura baxxa. | Parameters moeten worden opgegeven voor toepassing op middelhoge temperatuur, uitgezonderd voor lagetemperaaturwarmtepompen. Voor lagetemperaaturwarmtepompen moeten parameters worden opgegeven bij toepassing op lage temperatuur. |
| I | Pateikiami naudojimo vidutinėmis klimato sąlygomis parametrai. | A paramétereket az átlagos éghajlati viszonyokra vonatkozóan kell megadni. | Il-parametri għandhom jingħataw għall-kundizzjonijiet klimatiki medji. | Parameters moeten worden opgegeven voor gemiddelde klimaatomstandigheden. |
| J | Parametras | Elem | Fattur | Kenmerk |
| K | Sutartinis ženklas | Jel | Simbolu | Symbol |
| L | Vertė | Érték | Valur | Waarde |
| M | Vienetai | Mértékegység | Unità | Eenheid |
| N | Vardinis šilumos atidavimas (*) | Mért hőteljesítmény (*) | Potenza termika nominali (*) | Nominale warmteafgifte (*) |
| O | Prated | Prated | Prated | Prated |
| P | Sezoninis energijos patalpos šildyti vartojimo efektyvumas | Szezonális helyiségfűtési hatásfok | Effiċjenza enerġetika staġonali tat-tishin tal-post | Seizoensgebonden energie-efficiëntie van ruimteverwarming |
| Q | Deklaruotasis šildymo pajėgumas su daline aprova, esant 20 °C patalpų temperatūrai ir lauko temperatūrai Tj. | Névleges fűtőteljesítmény részterhelés mellett, 20 °C beltéri és Tj kültéri hőmérsékleten: | Kapaċità tat-tishin iddikjarat għal tagħbijja parzjali b'temperatura ta' gewwa ta' 20 °C u temperatura ta' barra ta' Tj | Opgegeven verwarmingsvermogen voor deellast bij een binnentemperatuur van 20 °C en een buitentemperatuur Tj |
| R | Deklaruotasis veiksmingumo koeficientas arba pirminės energijos santykis su daline aprova, esant 20 °C patalpų temperatūrai ir lauko temperatūrai Tj. | Névleges fűtési jóságfok vagy primerenergia-hányados részterhelés mellett, 20 °C beltéri és Tj kültéri hőmérsékleten | Koeffiċjent iddikjarat tal-prestazzjoni jew proporzjon iddikjarat tal-enerġija primarja għal tagħbijja parzjali b'temperatura ta' gewwa ta' 20 °C u temperatura ta' barra ta' Tj | Opgegeven prestatiecoëfficiënt of primaire-energie-verhouding voor deellast bij een binnentemperatuur van 20 °C en buitentemperatuur Tj |
| S | COPd arba PERd | COPd vagy PERd | COPd jew PERd | COPd or PERd |
| T | Tj = perėjimo į dviejopo šildymo režimą temperatūra | Tj = bivalens hőmérséklet | Tj = temperatura bivalenti | Tj = bivalente temperatuur |
| U | Tj = ribinė veikimo temperatūra | Tj = megengedett üzemi hőmérséklet | Tj = temperatura tal-limitu tat-thaddim | Tj = uiterste bedrijfstemperatuur |
| V | Oro-vandens šilumos siurblių atveju – Tj = –15 °C (jei TOL < –20 °C) | Levegő-víz típusú hőszivattyúk esetében: Tj = –15 °C (ha TOL < –20 °C) | Għall-pompi tas-shana arja-ilma: Tj = –15 °C (jekk TOL < –20 °C) | Voor lucht/water-warmtepompen: Tj = –15 °C (als TOL < –20 °C) |
| W | Perėjimo į dviejopo šildymo režimą temperatūra | Bivalens hőmérséklet | Temperatura bivalenti | Bivalente temperatuur |
| X | Oro-vandens šilumos siurblių atveju – Ribinė veikimo temperatūra | Levegő-víz típusú hőszivattyúk esetében: Megengedett üzemi hőmérséklet | Għall-pompi tas-shana arja-ilma: Temperatura tal-limitu tat-thaddim | Voor lucht/water-warmtepompen: uiterste bedrijfstemperatuur |
| Y | Ciklinis pajėgumas šildymo režimu | Fűtési ciklusteljesítmény | Kapaċità tal-intervall cikliku għat-tishin | Cyclisch-intervalvermogen voor verwarming |
| Z | Ciklinis efektyvumas | Ciklikus jóságfok | Effiċjenza tal-intervall cikliku | Cyclisch-intervalefficiëntie |
| AA | COPcyc arba PERcyc | COPcyc vagy PERcyc | COPcyc jew PERcyc | COPcyc or PERcyc |
| AB | Blogėjimo koeficientas (**) | Degradációs tényező (**) | Koeffiċjent ta' degradazzjoni (**) | Verliescoëfficiënt (**) |
| AC | Šildymo vandens ribinė veikimo temperatūra | Fűtővíz megengedett üzemi hőmérséklete | Temperatura limitu tat-thaddim għall-ilma tat-tishin | Uiterste bedrijfstemperatuur van sanitair water |



| No | Lithuanian(LT) | Hungarian(HU) | Maltese(MT) | Dutch(NL) |
|----|---|--|---|--|
| AD | Vartojamoji galia ne aktyviaja veiksen | Energiafogyasztás a főfunkción kívüli üzemmódokban | Konsum ta-enerġija fil-modalitajiet minbarra dik attiva | Elektriciteitsverbruik in andere standen dan de actieve modus |
| AE | Papildomas šildytuv | Kiegészítő fűtőberendezés | Hitler supplementari | Aanvullend verwarmings toestel |
| AF | Išjungties veiksen | Kikapcsolt üzemmód | Modalità Mitfi | Uit-stand |
| AG | Termostato išjungties veiksen | Termosztát által kikapcsolt üzemmód | Modalità bit-termostat mitfi | Thermostaat-uit-stand |
| AH | Budėjimo veiksen | Készenléti üzemmód | Modalità Stennija | Stand-by-stand |
| AI | Karterio šildymo veiksen | Forgattyűház-fűtési üzemmód | Modalità tal-hiter tal-kisi tal-krank | Carterverwarming-stand |
| AJ | Tiekiamos energijos rūšis | Energiabevitel jellege | Tip ta' kontribut tal-enerġija | Soort energie-input |
| AK | Kiti parametrai | További elemek | oġġetti oħra | Andere kenmerken |
| AL | Pajėgumo valdymas | Teljesítményszabályozás | Kontroll tal-kapaċità | Vermogenscontrole |
| AM | pastovus/kintamas | rögzített/állítható | fiss/varjabbli | vast/variabel |
| AN | Oro vandens šilumos siurbliu atveju – vardinis oro srautas (lauke) | Levegő-víz típusú hőszivattyúk esetében: Mért légtömegáram, kültéri | Ghall-pompi tas-shana arja-ilma: Rata nominali ta' fluss tal-aria fuq barra | Voor lucht/water-warmtepompen: nominaal luchtdebiet, buiten |
| AO | m³/h | m³/h | m³/h | m³/h |
| AP | Garso galios lygis (patalpoje/lauke) | Hangteljesítményszint, beltéri/kültéri | Livell ta' qawwa tal-hoss, fuq barra/fuq gewwa | Geluidsvermogensniveau, binnen/buiten |
| AQ | Išmetamų azoto oksidų kiekis | Nitrogén-oxid-kibocsátás | Emissjonijiet tal-ossidi tan-nitrogenu | Emissies van stikstofoxiden |
| AR | Vandens vandens ir tirpalo vandens šilumos siurbliu atveju – vardinis tirpalo arba vandens srautas (lauko šilumokaityje) | Víz-/sós víz-víz típusú hőszivattyúk esetében: Mért sósvíz- vagy vízáramlási sebesség, kültéri hőcserélővel | Ghall-pompi tas-shana ilma-/salmura-ilma: Rata nominali ta' fluss tal-ilma jew tas-salmura, skambjatur tas-shana li jkun jinsab fuq barra | Voor water/water- en pekel/water-warmtepompen: nominaal pekel- of waterdebiet, warmtewisselaar buiten |
| AS | Kombinuotojo šildytuvo su šilumos siurbliu atveju | Hőszivattyús kombinált fűtőberendezés esetében: | Ghall-hiters ikkombinati b'pompa tas-shana: | Voor combinatieverwarmingstoestellen met warmtepomp: |
| AT | Deklaruotasis apkrovos profilis | Névleges terhelési profil | Profil tat-tagħbija ddikjarat | Opgeven capaciteitsprofiel |
| AU | Energijos vandeniu šildyti vartojimo efektyvumas | Vizmelegítési hatásfok | Effiċjenza enerġetika tat-tishin tal-ilma | Energie-efficiëntie van waterverwarming |
| AV | Elektros energijos suvartojimas per parą | Napi villamosenergia-fogyasztás | Konsum ta' kuljum tal-elettriku | Dagelijks elektriciteitsverbruik |
| AW | Kuro suvartojimas per parą | Napi tüzelőanyag-fogyasztás | Konsum ta' kuljum tal-fjuwil | Dagelijks brandstofverbruik |
| AX | Kontaktiniai duomenys | Elérhetőség | Dettagli ta' kuntatt | Contactgegevens |
| AY | (*) Patalpų šildytuvų su šilumos siurbliu ir kombinuotojų šildytuvų su šilumos siurbliu atveju vardinis šilumos atidavimas Prated lygus projekinei apkrovai šildymo režimu Pdesignh, o papildomo šildytuvo vardinis šilumos atidavimas Psup lygus papildomam šildymo pajėgumui sup(Tj). | (*) Hőszivattyús helyiségfűtő berendezések és hőszivattyús kombinált fűtőberendezések esetében a Prated mért hőteljesítmény egyenlő a Pdesignh tervezési fűtési terheléssel, emellett a kiegészítő fűtőberendezés Psup mért hőteljesítménye megegyezik a sup(Tj) kiegészítő fűtőteljesítménnyel. | (*) Ghall-hiters tal-post b'pompa tas-shana u ghall-hiters ikkombinati b'pompa tas-shana, il-potenza termika nominali, Prated, hija daqs it-tagħbija tad-disinn għat-tishin, Pdesignh, u l-potenza termika nominali ta' hiter supplementari, Psup, hija daqs il-kapaċità supplementari tat-tishin, sup(Tj). | (*) Voor ruimteverwarmingstoestellen met warmtepomp en combinatieverwarmingstoestellen met warmtepomp, is de nominale warmteafgifte Prated gelijk aan de ontwerpbelasting voor verwarming Pdesignh, en is de nominale warmteafgifte van een aanvullend verwarmingstoestel Psup gelijk aan het aanvullend vermogen voor verwarming sup(Tj). |
| AZ | (**) Jei Cdh nenustatomas matuojant, naudojama numatytoji blogėjimo koeficiento vertė Cdh = 0,9. | (**) Amennyiben a Cdh értéket nem mérésrel állapítják meg, akkor az alapértelmezett degradációs tényező: Cdh = 0,9. | (**) Jekk il-koeffiċjent ta' degradazzjoni, Cdh, ma jigix stabbilt bil-kejl, b'mod awtomatiku jitqies li huwa ta' Cdh = 0,9. | (**) Als Cdh niet door meting is bepaald, is de standaardwaarde van de verliescoëfficiënt Cdh = 0,9. |
| BA | 1) Atliekiant montavimo ir aptarnavimo darbus privaloma laikytis atsargumo priemonių, nurodytų diegimo/vartotojo vadove. | 1) A termék összeszerelése, telepítése és a karbantartása során tartsa be a telepítési/használati útmutatóban leírt óvintézkedéseket. | 1) Prekawzjonijiet kif deskritt fl-installazzjoni u l-utent manwali għandhom jittiehd meta jlaqqa l-installazzjoni, u z-zamma dan il-prodott | 1) De voorzorgsmaatregelen die in de gebruikershandleiding worden beschreven, moeten in acht worden genomen bij montage, installatie en onderhoud van dit product. |
| BB | 2) Jei esate specialistas ir ieškote informacijos kaip išardyti įrangą jos nepažeidžiant, parašykite el. laišką adresu: erims.sec@samsung.com | 2) Ha Ön szakember, és információt keres az ártalmatlan szétszereléssel és bontással kapcsolatban, kérjük, küldjön egy e-mailt az: erims.sec@samsung.com címre. | 2) Jekk inti persuna professjonali u qed tifttex informazzjoni fuq armar u z-zarmar li ma jagħmlix dannji, jekk jogħbok ibagħat email fuq: erims.sec@samsung.com | 2) Als u als professional op zoek bent naar informatie over de niet-destructieve demontage en ontmanteling, stuur dan een e-mail naar: erims.sec@samsung.com |



COMMISSION REGULATION (EU) No 813/2013¹⁾

| No | Polish(PL) | Portuguese(PT) | Romanian(RO) | Slovak(SK) |
|----|---|--|--|---|
| I | ROZPORZĄDZENIE KOMISJI (UE) NR 813/2013 | REGULAMENTO (UE) N.º 813/2013 DA COMISSÃO | NARIADENIE KOMISIE (EÚ) č. 813/2013 | NARIADENIE KOMISIE (EÚ) č. 813/2013 |
| II | Wymogi dotyczące ekoprojektu dla ogrzewaczy pomieszczeń | Os requisitos de conceção ecológica para aquecedor de ambiente | Požadavky na ekodizajn tepelný zdroj na vykurovanie priestoru | Požadavky na ekodizajn tepelný zdroj na vykurovanie priestoru |
| A | Model(-e): [dane określające modele, do których odnoszą się informacje] | Modelo(s): [dados de identificação do(s) modelo(s) a que se refere a informação] | Model(-y): [informácie na určenie modelu(-ov), ktorého(-ých) sa informácie týkajú] | Model(-y): [informácie na určenie modelu(-ov), ktorého(-ých) sa informácie týkajú] |
| B | Pompa ciepła powietrze/woda: [tak/nie] | Bomba de calor ar-água: [sim/não] | Tepelné čerpadlo vzduch – voda: [áno/nie] | Tepelné čerpadlo vzduch – voda: [áno/nie] |
| C | Pompa ciepła woda/woda: [tak/nie] | Bomba de calor água-água: [sim/não] | Tepelné čerpadlo voda – voda: [áno/nie] | Tepelné čerpadlo voda – voda: [áno/nie] |
| D | Pompa ciepła solanka/woda: [tak/nie] | Bomba de calor salmoura-água: [sim/não] | Tepelné čerpadlo slaná voda – voda: [áno/nie] | Tepelné čerpadlo studničná voda – voda: [áno/nie] |
| E | Niskotemperaturowa pompa ciepła: [tak/nie] | Bomba de calor de baixa temperatura: [sim/não] | Nizkotéplotné tepelné čerpadlo: [áno/nie] | Nizkotéplotné tepelné čerpadlo: [áno/nie] |
| F | Wyposażona w dodatkowy ogrzewacz: [tak/nie] | Equipada com um aquecedor suplementar: [sim/não] | Vybavené dodatočným tepelným zdrojom: [áno/nie] | Vybavené dodatočným tepelným zdrojom: [áno/nie] |
| G | Wielofunkcyjny ogrzewacz z pompą ciepła: [tak/nie] | Aquecedor combinado com bomba de calor: [sim/não] | Kombinovaný tepelný zdroj – tepelné čerpadlo: [áno/nie] | Kombinovaný tepelný zdroj – tepelné čerpadlo: [áno/nie] |
| H | Parametry podaje się dla zastosowań w średnich temperaturach, z wyjątkiem niskotemperaturowych pomp ciepła. W przypadku niskotemperaturowych pomp ciepła parametry podaje się dla zastosowań w niskich temperaturach. | Devem ser indicados parâmetros para aplicação a média temperatura, exceto para as bombas de calor de baixa temperatura. Para as bombas de calor de baixa temperatura, devem ser indicados parâmetros para aplicação a baixa temperatura. | Parametre sa deklarujú pre použitie pri stredných teplotách, okrem tepelných čerpadiel pre nízke teploty. V prípade tepelných čerpadiel pre nízke teploty sa parametre deklarujú pre použitie pri nízkych teplotách. | Parametre majú byť deklarované pre použitie pri stredných teplotách, okrem tepelných čerpadiel pre nízke teploty. V prípade tepelných čerpadiel pre nízke teploty sa parametre majú byť deklarované pre použitie pri nízkych teplotách. |
| I | Parametry są deklarowane dla warunków klimatu umiarkowanego. | Os parâmetros declarados devem corresponder a condições climáticas médias. | Parametre sa deklarujú pre priemerné klimatické podmienky. | Parametre majú byť deklarované pre priemerné klimatické podmienky. |
| J | Parametr | Elemento | Položka | Položka |
| K | Symbol | Símbolo | Symbol | Symbol |
| L | Wartość | Valor | Hodnota | Hodnota |
| M | Jednostka | Unidade | Jednotka | Jednotka |
| N | Znamionowa moc cieplna (*) | Potência calorífica nominal (*) | Menovitý tepelný výkon (*) | Menovitý tepelný výkon (*) |
| O | Prated | Prated | Prated | Prated |
| P | Sezonowa efektywność energetyczna ogrzewania pomieszczeń | Eficiência energética do aquecimento ambiente sazonal | Sezónna energetická účinnosť vykurovania | Sezónna energetická účinnosť vykurovania |
| Q | Deklarowana wydajność grzewcza przy częściowym obciążeniu w temperaturze pomieszczenia 20 °C i temperaturze zewnętrznej Tj | Capacidade declarada para aquecimento a carga parcial a uma temperatura interior de 20 °C e a uma temperatura exterior Tj | Deklarovaný tepelný výkon pre čiastočné zaťaženie pri vnútornej teplote 20 °C a vonkajšej teplote Tj | Deklarovaný tepelný výkon pre čiastočné zaťaženie pri vnútornej teplote 20 °C a vonkajšej teplote Tj |
| R | Deklarowany wskaźnik efektywności lub wskaźnik zużycia energii pierwotnej przy częściowym obciążeniu w temperaturze pomieszczenia 20 °C i temperaturze zewnętrznej Tj | Coeficiente de desempenho declarado ou rácio de energia primária a carga parcial a uma temperatura interior de 20 °C e a uma temperatura exterior Tj | Deklarovaný vykurovací súčiniteľ alebo súčiniteľ využitia primárnej energie pre čiastočné zaťaženie pri vnútornej teplote 20 °C a vonkajšej teplote Tj | Deklarovaný vykurovací súčiniteľ alebo súčiniteľ využitia primárnej energie pre čiastočné zaťaženie pri vnútornej teplote 20 °C a vonkajšej teplote Tj |
| S | COPd lub PERd | COPd ou PERd | COPd alebo PERd | COPd alebo PERd |
| T | Tj = temperatura dwuwartościowa | Tj = temperatura bivalente | Tj = bivalentná teplota | Tj = teplota bivalencie |
| U | Tj = graniczna temperatura robocza | Tj = temperatura-limite de funcionamento | Tj = prevádzková hraničná teplota | Tj = hraničná prevádzková teplota |
| V | Pompy ciepła powietrze/woda: Tj = – 15 °C (jeżeli TOL < – 20 °C) | Para bombas de calor ar-água: Tj = – 15 °C (se TOL < – 20 °C) | Pre tepelné čerpadlá vzduch – voda: Tj = – 15 °C (ak TOL < – 20 °C) | Pre tepelné čerpadlá vzduch – voda: Tj = – 15 °C (ak TOL < – 20 °C) |
| W | Temperatura dwuwartościowa | Temperatura bivalente | Bivalentná teplota | Teplota bivalencie |
| X | Pompy ciepła powietrze/woda: Graniczna temperatura robocza | Para bombas de calor ar-água: Temperatura-limite de funcionamento | Pre tepelné čerpadlá vzduch – voda: Hraničná prevádzková teplota | Pre tepelné čerpadlá vzduch – voda: Hraničná prevádzková teplota |
| Y | Wydajność w okresie cyklu w interwale dla ogrzewania | Capacidade de aquecimento em intervalo cíclico | Výkon v rámci cyklického intervalu pre vykurovanie | Výkon v rámci cyklického intervalu pre vykurovanie |
| Z | Wydajność w okresie cyklu w interwale | Eficiência em intervalo cíclico | Súčiniteľ v rámci cyklického intervalu | Súčiniteľ v rámci cyklického intervalu |
| AA | COPcyc lub PERcyc | COPcyc ou PERcyc | COPcyc alebo PERcyc | COPcyc alebo PERcyc |
| AB | Współczynnik strat (**) | Coeficiente de degradação (**) | Súčiniteľ straty účinnosti (**) | Súčiniteľ straty účinnosti (**) |
| AC | Graniczna temperatura robocza dla podgrzewania wody | Temperatura-limite de funcionamento para água de aquecimento | Hraničná prevádzková teplota pre ohrev úžitkovej vody | Hraničná prevádzková teplota pre ohrev vody |



| No | Polish(PL) | Portuguese(PT) | Romanian(RO) | Slovak(SK) |
|----|--|---|--|--|
| AD | Pobór mocy w trybach innych niż aktywny | Consumo energético em modos distintos do modo ativo | Elektrický príkon v iných režimoch ako aktívny režim | Spotreba el. energie v iných režimoch ako aktívnych |
| AE | Ogrzewacz dodatkowy | Aquecedor suplementar | Dodatočný tepelný zdroj | Dodatočný tepelný zdroj |
| AF | Tryb wyłączenia | Modo desligado | Režim vypnutia | Režim vypnutia |
| AG | Tryb wyłączzonego termostatu | Modo termóstato desligado | Režim vypnutia termostatu | Režim vypnutia termostatu |
| AH | Tryb czuwania | Modo de vigília | Pohotovostný režim | Pohotovostný režim |
| AI | Tryb włączonej grzałki karteru | Modo de resistência do cárter | Režim ohrevu klukovej skrine | Režim nahrievania oleja |
| AJ | Rodzaj pobieranej energii | Tipo de alimentação de energia | Typ elektrického príkonu | Typ elektrického príkonu |
| AK | Inne parametry | Outros elementos | Alți parametri | Iné položky |
| AL | Regulacja wydajności | Controlo de capacidade | Regulácia výkonu | Regulácia výkonu |
| AM | wydajność stała/zmienna | fixo/variável | Pevná/premenlivá | Pevná/premenlivá |
| AN | Pompy ciepła powietrze/woda: znamionowy przepływ powietrza na zewnątrz | Para bombas de calor ar-água: Caudal de ar nominal, exterior | Pre tepelné čerpadlá vzduch – voda: Menovitý prietok vzduchu, von | Pre tepelné čerpadlá vzduch – voda: Menovitý prietok vzduchu, exteriér |
| AO | m ³ /h | m ³ /h | m ³ /h | m ³ /h |
| AP | Poziom mocy akustycznej w pomieszczeniu/ na zewnątrz | Nível de potência sonora interior/exterior | Vnúťorná/vonkajšia hladina akustického výkonu | Vnúťorná/vonkajšia hladina akustického výkonu |
| AQ | Emisje tlenków azotu | Emissões de óxidos de azoto | Emisie oxidov dusika | Emisie oxidov dusika |
| AR | Pompy ciepła woda/solanka-woda: znamionowe natężenie przepływu solanki lub wody, zewnętrzny wymiennik ciepła | Para bombas de calor água/salmoura-água: Caudal nominal de salmoura ou água, permutador térmico exterior | Pre tepelné čerpadlá voda/slaná voda – voda: Menovitý prietok slanej vody alebo vody, vonkajší výmenník tepla | Pre tepelné čerpadlá voda/studničná voda – voda: Menovitý prietok studničnej vody alebo vody, vonkajší výmenník tepla |
| AS | Wielofunkcyjne ogrzewacze z pompą ciepła: | Para aquecedores combinados com bomba de calor: | Pre kombinovaný tepelný zdroj – tepelné čerpadlo: | Pre kombinovaný tepelný zdroj tepelného čerpadla: |
| AT | Deklarowany profil obciążeń | Perfil de carga declarado | Deklarowany profil zaťaženia | Deklarovaný profil zaťaženia |
| AU | Efektywność energetyczna podgrzewania wody | Eficiência energética do aquecimento de água | Energetická účinnosť prípravy teplej vody | Energetická účinnosť prípravy teplej vody |
| AV | Dziennie zużycie energii elektrycznej | Consumo diário de eletricidade | Denná spotreba elektrickéj energie | Denná spotreba elektrickéj energie |
| AW | Dziennie zużycie paliwa | Consumo diário de combustível | Denná spotreba paliva | Denná spotreba paliva |
| AX | Dane kontaktowe | Elementos de contacto | Kontaktné údaje | Kontaktné údaje |
| AY | (*) W przypadku ogrzewaczy pomieszczeń z pompą ciepła i wielofunkcyjnych ogrzewaczy z pompą ciepła znamionowa moc cieplna Prated jest równa obciążeniu obliczeniowemu dla trybu ogrzewania Pdesignh, a znamionowa moc cieplna ogrzewacza dodatkowego Psup jest równa dodatkowej wydajności grzewczej dla trybu ogrzewania sup(Tj). | (*) Para aquecedores de ambiente com bomba de calor e aquecedores combinados com bomba de calor, a potência calorífica nominal Prated é igual à carga de projeto para aquecimento Pdesignh e a potência calorífica nominal de um aquecedor suplementar Psupp é igual à capacidade de aquecimento suplementar sup(Tj). | (*) Pre tepelné zdroje na vykurovanie priestoru – tepelné čerpadlá a kombinované tepelné zdroje – tepelné čerpadlá sa menovitý tepelný výkon Prated rovná projektovanému vykurovaciemu zaťaženiu Pdesignh, a menovitý tepelný výkon dodatčného tepelného zdroja Psup sa rovná dodatčnému tepelnému výkonu sup(Tj). | (*) Pre tepelné zdroje na vykurovanie priestoru – tepelné čerpadlá a kombinované tepelné zdroje sa menovitý tepelný výkon Prated rovná projektovanému vykurovaciemu zaťaženiu Pdesignh a menovitý tepelný výkon dodatčného tepelného zdroja Psup sa rovná dodatčnému tepelnému výkonu sup(Tj). |
| AZ | (**) Jeżeli współczynnik Cdh nie został wyznaczony przez pomiar, współczynnik strat przyjmuje wartość domyślną Cdh = 0,9. | (**) Se não se determinar Cdh por medição, o coeficiente de degradação predefinido é Cdh = 0,9. | (**) Ak Cdh nie je určené meraním, implicitný súčinitel straty účinnosti je Cdh = 0,9. | (**) Ak Cdh nie je určené meraním, potom predvolený súčinitel straty účinnosti je Cdh = 0,9. |
| BA | 1) W trakcie montażu, instalacji i obsługi tego produktu należy zachować zasady bezpieczeństwa opisane w instrukcji instalacji/obsługi. | 1) As precauções descritas no manual de instalação/instruções dever ser adotadas durante a montagem, instalação ou manutenção do produto. | 1) Trebuie să fiți precauți conform manualului de utilizare/instalare în timpul asamblării, instalării și întreinerii acestui produs. | 1) Výstrahy ako sú popísané v inšalačnom/ užívateľskom manuáli musia byť uvažované pri montáži, inštalácii a starostlivosti o produkt. |
| BB | 2) Jeśli jesteś profesjonalistą szukającym informacji dotyczących nieniszczących metod demontażu i rozbiórki, uprzejmie prosimy o wysłanie wiadomości email na adres: erims.sec@samsung.com | 2) Se é um profissional e pretende obter informações sobre desmontagem e desmantelamento não destrutivos, envie um e-mail para: erims.sec@samsung.com | 2) Odborní pracovníci môžu získať informácie týkajúce sa nedeštruktívnej demontáže na nasledujúcej e-mailovej adrese: erims.sec@samsung.com. | 2) Odborní pracovníci môžu získať informácie týkajúce sa správnej demontáže na nasledujúcej e-mailovej adrese: erims.sec@samsung.com. |





COMMISSION REGULATION (EU) No 813/2013¹⁾

| No | Slovenian(SL) | Finnish(FI) | Swedish(SV) |
|----|--|---|---|
| I | UREDBA KOMISIJE (EU) št. 813/2013 | KOMISSION ASETUS (EU) No 813/2013, | KOMMISSIONENS FÖRORDNING (EU) nr 813/2013 |
| II | Okoljsko primerno zasnovo zahteve za grelnik prostorov | Ekosuunnitteluvaatimukset varten tilälämmittimellä | Ekodesignkraven för rumsuppvärmning |
| A | Model(-i): [informacije za identifikacijo modela(-lov), na katere se informacije nanašajo] | Malli(t): [tiedot sen mallin (niiden mallien) yksilöimiseksi, joita tiedot koskevat] | Modell(er): [Information som identifierar den modell (de modeller) som informationen gäller] |
| B | Toplotna črpalka zrak-voda: [da/ne] | Ilma-vesi-lämpöpumppu: [kyllä/ei] | Luft-till-vatten-värmepump: [ja/nej] |
| C | Toplotna črpalka voda-voda: [da/ne] | Vesi-vesi-lämpöpumppu: [kyllä/ei] | Vatten-till-vatten-värmepump: [ja/nej] |
| D | Toplotna črpalka slanica-voda: [da/ne] | Suolavesi-vesi-lämpöpumppu: [kyllä/ei] | Saltlösning-till-vatten-värmepump: [ja/nej] |
| E | Nizkotemperaturna toplotna črpalka: [da/ne] | Matalan lämpötilan lämpöpumppu: [kyllä/ei] | Lågttemperaturvärmepump: [ja/nej] |
| F | Opremljena z dodatnim grelnikom: [da/ne] | Varustettu lisälämmittimellä: [kyllä/ei] | Utrustad med extra värmegenerator: [ja/nej] |
| G | Kombinirani grelnik s toplotno črpalko: [da/ne] | Lämpöpumppuyhdistelmälämmitin: [kyllä/ei] | Pannor med inbyggd tappvarmvattenberedning och med värmepump: [ja/nej] |
| H | Parametri se navedejo za uporabo pri srednji temperaturi, razen za nizkotemperaturne toplotne črpalke. Parametri za nizkotemperaturne toplotne črpalke se navedejo za uporabo pri nizki temperaturi. | Parametrit ilmoitetaan keskilämpötilan sovelluksesta, lukuun ottamatta matalan lämpötilan lämpöpumppeja. Matalan lämpötilan lämpöpumpuista parametrit ilmoitetaan matalan lämpötilan sovelluksesta. | Parametrar ska anges för mediumtemperaturlämplning, utom för lågttemperaturvärmepumpar. För lågttemperaturvärmepumpar ska parametrarna anges för lågttemperaturapplikationer. |
| I | Parametri se navedejo za povprečne podnebne razmere. | Parametrit ilmoitetaan keskimääräisissä ilmasto-olosuhteissa. | Parametrarna ska anges för genomsnittliga klimatförhållanden. |
| J | Postavka | Kohta | Post |
| K | Oznaka | Symboli | Beteckning |
| L | Vrednost | Arvo | Värde |
| M | Enota | Yksikkö | Enhet |
| N | Nazivna izhodna toplota (*) | Nimellislämpöteho (*) | Nominell given värmeeffekt (*) |
| O | Prated | Prated | Pmärk |
| p | Sezonska energijska učinkovitost ogrevanja prostorov | Tilälämmityksen kausittainen energiatehokkuus | Säsongsnedverkningsgrad för rumsuppvärmning |
| Q | Prijavljena zmogljivost ogrevanja za delno obremenitev pri temperaturi v notranjih prostorih 20 °C in temperaturi na prostem T _j | Ilmoitettu lämmitysteho osakuomalla sisälämpötilassa 20 °C ja ulkolämpötilassa T _j | Deklarerad kapacitet för uppvärmning för delbelastning vid innetemperatur 20 °C och utetemperatur T _j |
| R | Prijavljen koeficient učinkovitosti ali razmerje primarne energije za delno obremenitev pri temperaturi v notranjih prostorih 20 °C in temperaturi na prostem T _j | Ilmoitettu lämpökertoin tai primärenergiakerroin osakuomalla sisälämpötilassa 20 °C ja ulkolämpötilassa T _j | Deklarerad värmefaktor eller primärenergifaktor för delbelastning vid en inomhustemperatur på 20 °C och en utomhustemperatur T _j |
| S | COPd ali PERd | COPd tai PERd | COPd eller PERd |
| T | T _j = bivalentna temperatura | T _j = kaksiarvoinen lämpötila | T _j = bivalenttemperatur |
| U | T _j = mejna delovna temperatura | T _j = toimintarajalämpötila | T _j = gränstemperatur för drift |
| V | Za toplotne črpalke zrak-voda: T _j = -15 °C (če je TOL < -20 °C) | Ilma-vesi-lämpöpumppu: T _j = -15 °C (jos TOL < -20 °C) | För luft-till-vatten-värmepumpar: T _j = -15 °C (om TOL < -20 °C) |
| W | Bivalentna temperatura | Kaksiarvoinen lämpötila | Bivalenttemperatur |
| X | Za toplotne črpalke zrak-voda: mejna delovna temperatura | Ilma-vesi-lämpöpumppu: Toimintarajalämpötila | För luft-till-vatten-värmepumpar: Gränstemperatur för drift |
| Y | Zmogljivost intervala cikla za ogrevanje | Lämmityksen vuorottelujaksoteho | Cykelintervallets uppvärmningskapacitet |
| Z | Učinkovitost intervala cikla | Vuorottelujakson energiatehokkuus | Cykelintervallets verkningsgrad |
| AA | COP _{cyc} ali PER _{cyc} | COP _{cyc} tai PER _{cyc} | COP _{cyc} eller PER _{cyc} |
| AB | Koeficient degradacije (**) | Alenemiskerroin (**) | Degraderingskoefficient (**) |
| AC | Mejna delovna temperatura za ogrevanje vode | Lämmitysveden toimintarajalämpötila | Uppvärmningsvattnets gränstemperatur för drift |
| AD | Poraba energije v načinih, ki ne vključujejo načina aktivnega delovanja | Tehonkulutus muissa tiloissa kuin aktiivisessa toimintatilassa | Effektförbrukning i andra lägen än aktivt läge |
| AE | Dodatni grelnik | Lisälämmitin | Extra värmegenerator |
| AF | Stanje izključenosti | Pois päältä -tila | Frånläge |





| No | Slovenian(SL) | Finnish(FI) | Swedish(SV) |
|----|--|---|--|
| AG | Stanje izključnosti termostata | Termostaatti pois päältä -tila | Termostatfrånläge |
| AH | Stanje pripravljenosti | Valmiustila | Standbyläge |
| AI | Näčin grelnika ohitja | Kampikammion lämmitys -tila | Vevhusvärmärläge |
| AJ | Vrsta dovedene energije | Ottoenergian tyyppi | Typ av tillförd energi |
| AK | Druge postavke | Muut kohdat | Andra poster |
| AL | Upravljanje zmogljivosti | Tehonsäätö | Kapacitetsreglering |
| AM | stalna/spremenljiva | kiinteä/muuttuva | fast/variabel |
| AN | Za toplotne črpalke zrak-voda: nazivna stopnja pretoka zraka, zunanja | Ilma-vesi-lämpöpumput: nimellisilmavirta, ulkona | För luft-till-vatten-värmepumpar: Nominellt luftflöde (ute) |
| AO | m ³ /h | m ³ /h | m ³ /h |
| AP | Nivo zvokovne moči, v notranjih prostorih/na prostem | Äänitehotaso, sisällä/ulkona | Ljudeffektivä, inomhus/utomhus |
| AQ | Emisije dušikovih oksidov | Typen oksidien päästöt | Utsläpp av kväveoxider |
| AR | Za toplotne črpalke voda/slanica-voda: nazivna stopnja pretoka slanice ali vode, zunanji izmenjevalnik toplote | Vesi-/suolavesi-vesi-lämpöpumput: suolaveden tai veden nimellisvirtaus, ulkolämmönsiirrin | För vatten-/saltlösning-till-vatten-värmepumpar: Nominellt saltlösning- eller vattenflöde, värmeväxlare utomhus |
| AS | Za kombinirani grelnik s toplotno črpalko: | Lämpöpumppuyhdistelmälämmitin: | För pannor med inbyggd tappvarmvattenberedning och med värmepump: |
| AT | Določeni profil rabe | Ilmoitettu kuormitusprofiili | Deklarerad belastningsprofil |
| AU | Energijska učinkovitost ogrevanja vode | Vedenlämmityksen energiatehokkuus | Energieffektivitet vid uppvärmning av vatten |
| AV | Dnevna poraba električne energije | Vuorokautinen sähkönkulutus | Daglig elförbrukning |
| AW | Dnevna poraba goriva | Vuorokautinen polttoaineenkulutus | Daglig bränsleförbrukning |
| AX | Kontaktni podatki | Yhteystiedot | Kontakt |
| AY | (*) Za toplotne črpalke za ogrevanje prostorov in kombinirane grelnike s toplotno črpalko je nazivna izhodna toplota Prated enaka nazivni obremenitvi za ogrevanje Pdesignh, nazivna izhodna toplota dodatnega grelnika Psup pa je enaka dodatni zmogljivosti ogrevanja sup(Tj). | (*) Lämpöpumppuyhdistelmälämmittimillä ja lämpöpumppuyhdistelmälämmittimillä nimellislämpöteho Prated on yhtä suuri kuin lämmityksen mitoituskuorma Pdesignh ja lisälämmittimen nimellislämpöteho Psup on yhtä suuri kuin lisälämmitysteho sup(Tj). | (*) För värmare med värmepump för rumsuppvärmning och pannor med inbyggd tappvarmvattenberedning och med värmepump är den nominella agivna värmeeffekten Prated lika med den dimensionerade värmekapaciteten Pdesignh, och den nominella agivna värmeeffekten hos en extra värmegenerator Psup är lika med den kompletterande uppvärmningskapaciteten sup(Tj). |
| AZ | (**) Če Cdh ni določen z meritvami, privzeti koeficient degradacije znaša Cdh = 0,9. | (**) Jos Cdh:n arvoa ei määritetä mittaamalla, alenemiskertoimen oletusarvo on Cdh = 0,9. | (**) Om Cdh inte bestäms genom mätningar ska degraderingskoefficienten vara Cdh = 0,9. |
| BA | 1) Pri sestavljanju, nameščanju ter vzdrževanju izdelka upoštevajte previdnostne ukrepe, ki so navedeni v priročniku za uporabo in namestitev. | 1) Asennus- tai käyttöoppaassa kuvattuja turvaohjeita on noudatettava laitteen kokoamisen, asentamisen ja huollon aikana. | 1) Försiktighetsåtgärderna som beskrivs i installationsmanualen/bruksanvisningen måste följas vid monteringen, installation och underhåll av denna produkt. |
| BB | 2) Če ste strokovnjak in iščete informacije o neporušitvenem razstavljanju in demontaži, pošljite e-pošto sporočilo na: erims.sec@samsung.com | 2) Jos olet ammattiasentaja ja haluat lisätietoja asennuksen turvallisesta purkamisesta, lähettäkää sähköpostia osoitteeseen erims.sec@samsung.com | 2) Om du är en professionell användare som letar efter information om icke-destruktiv demontering och isärtagande av dammsugaren, kan du skicka ett e-postmeddelande till: erims.sec@samsung.com |



COMMISSION DELEGATED REGULATION (EU) No 811/2013ⁱ⁾

PRODUCT FICHE (ENERGY LABELLING OF SPACE HEATERS)ⁱⁱ⁾

| a | Supplier's name or trademark | | Samsung Electronics Co., Ltd. | Samsung Electronics Co., Ltd. | Samsung Electronics Co., Ltd. | Samsung Electronics Co., Ltd. |
|---|--|-----------------------------------|-------------------------------|-------------------------------|-------------------------------|-------------------------------|
| b | Supplier's model identifier | | AE090JXYDEH | AE090JXYDGH | AE120JXYDEH | AE120JXYDGH |
| c | Seasonal space heating energy efficiency class | Medium-temperature ⁽⁴⁾ | - | A++ | A+ | A+ |
| | | Low-temperature ⁽⁴⁾ | - | A++ | A++ | A++ |
| d | Rated heat output (Average) | Medium-temperature ⁽⁴⁾ | kW | 6 | 5 | 8 |
| | | Low-temperature ⁽⁴⁾ | kW | 7 | 6 | 11 |
| e | Seasonal space heating energy efficiency (Average) | Medium-temperature ⁽⁴⁾ | % | 126 | 125 | 115 |
| | | Low-temperature ⁽⁴⁾ | % | 176 | 176 | 178 |
| f | Annual energy consumption (Average) | Medium-temperature ⁽⁴⁾ | kWh | 2764 | 2236 | 3889 |
| | | Low-temperature ⁽⁴⁾ | kWh | 2159 | 1778 | 3327 |
| g | L _{WA} (sound power level, indoor) | | dB | - | - | - |
| h | Specific precautions ¹⁾ | | - | - | - | - |
| i | Rated heat output (Colder) | Medium-temperature ⁽⁴⁾ | kW | 6 | 5 | 8 |
| | | Low-temperature ⁽⁴⁾ | kW | 6 | 6 | 11 |
| j | Rated heat output (Warmer) | Medium-temperature ⁽⁴⁾ | kW | 6 | 5 | 8 |
| | | Low-temperature ⁽⁴⁾ | kW | 7 | 6 | 11 |
| k | Seasonal space heating energy efficiency (Colder) | Medium-temperature ⁽⁴⁾ | % | 113 | 106 | 99 |
| | | Low-temperature ⁽⁴⁾ | % | 158 | 156 | 152 |
| l | Seasonal space heating energy efficiency (Warmer) | Medium-temperature ⁽⁴⁾ | % | 157 | 147 | 160 |
| | | Low-temperature ⁽⁴⁾ | % | 246 | 200 | 214 |
| m | Annual energy consumption (Colder) | Medium-temperature ⁽⁴⁾ | kWh | 4155 | 3868 | 6774 |
| | | Low-temperature ⁽⁴⁾ | kWh | 3235 | 3008 | 5843 |
| n | Annual energy consumption (Warmer) | Medium-temperature ⁽⁴⁾ | kWh | 2209 | 2054 | 2933 |
| | | Low-temperature ⁽⁴⁾ | kWh | 1548 | 1733 | 2989 |
| o | L _{WA} (sound power level, outdoor) | | dB | 63 | 63 | 64 |

| a | Supplier's name or trademark | | Samsung Electronics Co., Ltd. | Samsung Electronics Co., Ltd. | Samsung Electronics Co., Ltd. | Samsung Electronics Co., Ltd. | Samsung Electronics Co., Ltd. |
|---|--|-----------------------------------|-------------------------------|-------------------------------|-------------------------------|-------------------------------|-------------------------------|
| b | Supplier's model identifier | | AE140JXYDEH | AE140JXYDGH | AE160JXYDEH | AE160JXYDGH | AE050JXYDEH |
| c | Seasonal space heating energy efficiency class | Medium-temperature ⁽⁴⁾ | - | A+ | A+ | A+ | A++ |
| | | Low-temperature ⁽⁴⁾ | - | A++ | A++ | A++ | A++ |
| d | Rated heat output (Average) | Medium-temperature ⁽⁴⁾ | kW | 9 | 9 | 10 | 5 |
| | | Low-temperature ⁽⁴⁾ | kW | 12 | 12 | 13 | 5 |
| e | Seasonal space heating energy efficiency (Average) | Medium-temperature ⁽⁴⁾ | % | 114 | 114 | 112 | 125 |
| | | Low-temperature ⁽⁴⁾ | % | 177 | 177 | 176 | 180 |
| f | Annual energy consumption (Average) | Medium-temperature ⁽⁴⁾ | kWh | 4175 | 4175 | 4750 | 2102 |
| | | Low-temperature ⁽⁴⁾ | kWh | 3634 | 3634 | 3968 | 1556 |
| g | L _{WA} (sound power level, indoor) | | dB | - | - | - | - |
| h | Specific precautions ¹⁾ | | - | - | - | - | - |
| i | Rated heat output (Colder) | Medium-temperature ⁽⁴⁾ | kW | 9 | 9 | 10 | 4 |
| | | Low-temperature ⁽⁴⁾ | kW | 12 | 12 | 13 | 4 |
| j | Rated heat output (Warmer) | Medium-temperature ⁽⁴⁾ | kW | 9 | 9 | 10 | 5 |
| | | Low-temperature ⁽⁴⁾ | kW | 12 | 12 | 13 | 5 |
| k | Seasonal space heating energy efficiency (Colder) | Medium-temperature ⁽⁴⁾ | % | 98 | 98 | 107 | 100 |
| | | Low-temperature ⁽⁴⁾ | % | 153 | 153 | 160 | 149 |
| l | Seasonal space heating energy efficiency (Warmer) | Medium-temperature ⁽⁴⁾ | % | 162 | 162 | 164 | 158 |
| | | Low-temperature ⁽⁴⁾ | % | 214 | 214 | 209 | 242 |
| m | Annual energy consumption (Colder) | Medium-temperature ⁽⁴⁾ | kWh | 7256 | 7256 | 7444 | 3012 |
| | | Low-temperature ⁽⁴⁾ | kWh | 6305 | 6305 | 6579 | 2252 |
| n | Annual energy consumption (Warmer) | Medium-temperature ⁽⁴⁾ | kWh | 3241 | 3241 | 3551 | 1635 |
| | | Low-temperature ⁽⁴⁾ | kWh | 3245 | 3245 | 3587 | 1159 |
| o | L _{WA} (sound power level, outdoor) | | dB | 65 | 65 | 66 | 61 |

r ¹⁾ Precautions as described in the installation/user manual must be taken when assembling, installing and maintaining this product.

**PRODUCT FICHE (ENERGY LABELLING OF PACKAGES OF SPACE HEATER) ⁱⁱⁱ⁾**

| a | Supplier's name or trademark | | Samsung Electronics Co., Ltd. | Samsung Electronics Co., Ltd. | Samsung Electronics Co., Ltd. | Samsung Electronics Co., Ltd. |
|---|---|---|-------------------------------|-------------------------------|-------------------------------|-------------------------------|
| b | Supplier's model identifier | | AE090JXYDEH | AE090JXYDGH | AE120JXYDEH | AE120JXYDGH |
| s | Seasonal space heating energy efficiency (Preferential space heater) | % | 128 | 127 | 117 | 117 |
| t | Factor for weighting the heat output (Preferential space heater) | - | 0 | 0 | 0 | 0 |
| u | Mathematical expression : $294 / (11 \cdot \text{Prated})^{1)}$ | - | 4.5 | 5.3 | 3.3 | 3.3 |
| v | Mathematical expression : $115 / (11 \cdot \text{Prated})^{2)}$ | - | 1.7 | 2.1 | 1.3 | 1.3 |
| w | The difference between the seasonal space heating energy efficiencies under average and colder climate conditions ³⁾ | % | 13 | 19 | 16 | 16 |
| x | The difference between the seasonal space heating energy efficiencies under warmer and average climate conditions ⁴⁾ | % | 31 | 22 | 45 | 45 |

| a | Supplier's name or trademark | | Samsung Electronics Co., Ltd. | Samsung Electronics Co., Ltd. | Samsung Electronics Co., Ltd. | Samsung Electronics Co., Ltd. | Samsung Electronics Co., Ltd. |
|---|---|---|-------------------------------|-------------------------------|-------------------------------|-------------------------------|-------------------------------|
| b | Supplier's model identifier | | AE140JXYDEH | AE140JXYDGH | AE160JXYDEH | AE160JXYDGH | AE050JXYDEH |
| s | Seasonal space heating energy efficiency (Preferential space heater) | % | 116 | 116 | 114 | 114 | 127 |
| t | Factor for weighting the heat output of the preferential and supplementary heaters | - | 0 | 0 | 0 | 0 | 0 |
| u | Mathematical expression : $294 / (11 \cdot \text{Prated})^{1)}$ | - | 3.0 | 3.0 | 2.7 | 2.7 | 5.3 |
| v | Mathematical expression : $115 / (11 \cdot \text{Prated})^{2)}$ | - | 1.2 | 1.2 | 1.0 | 1.0 | 2.1 |
| w | The difference between the seasonal space heating energy efficiencies under average and colder climate conditions ³⁾ | % | 16 | 16 | 5 | 5 | 25 |
| x | The difference between the seasonal space heating energy efficiencies under warmer and average climate conditions ⁴⁾ | % | 48 | 48 | 52 | 52 | 33 |

y ¹⁾ Whereby Prated is related to the preferential space heater.z ²⁾ Whereby Prated is related to the preferential space heater.aa ^{3), 4)} For preferential heat pump space heaters.**PRODUCT FICHE (ENERGY LABELLING OF TEMPERATURE CONTROLS) ^{iv)}**

| | | | | |
|----|---|---|-------------------------------|-------------------------------|
| a | Supplier's name or trademark | - | Samsung Electronics Co., Ltd. | Samsung Electronics Co., Ltd. |
| b | Supplier's model identifier | - | MIM-E03AN | MIM-E03BN |
| ab | The class of the temperature control | - | Class II | Class II |
| ac | The contribution of the temperature control to seasonal space heating energy efficiency | % | 2 | 2 |



COMMISSION DELEGATED REGULATION (EU) No 811/2013ⁱ⁾

| No | English(EN) | Bulgarian(BG) | Spanish(ES) | Czech(CS) |
|-----|--|---|---|--|
| i | COMMISSION DELEGATED REGULATION (EU) No 811/2013 | ДЕЛЕГИРАН РЕГЛАМЕНТ (ЕС) № 811/2013 НА КОМИСИЯТА | REGLAMENTO DELEGADO (UE) No 811/2013 DE LA COMISIÓN | NAŘÍZENÍ KOMISE V PŘENESENÉ PRÁVOMOCI (EU) č. 811/2013 |
| ii | PRODUCT FICHE (ENERGY LABELLING OF SPACE HEATERS) | Продуктов фиш (енергийното етикетирание на отоплителни топлоизточници) | Ficha del producto (etiquetado energético de aparatos de calefacción) | Informační list výrobku (energie na energetických štítcích ohřivačů pro vytápění vnitřních prostorů) |
| iii | PRODUCT FICHE (ENERGY LABELLING OF PACKAGES OF SPACE HEATER) | Продуктов фиш (енергийното етикетирание на комплекти от отоплителен топлоизточник) | Ficha del producto (etiquetado energético de EQUIPOS COMBINADOS DE APARATO DE CALEFACCIÓN) | Informační list výrobku (energie na energetických štítcích ohřivačů pro souprav sestávajících z ohřivače pro vytápění vnitřních prostorů) |
| iv | PRODUCT FICHE (ENERGY LABELLING OF TEMPERATURE CONTROLS) | Продуктов фиш (енергийното етикетирание на | Ficha del producto (etiquetado energético de CONTROLES DE TEMPERATURA) | Informační list výrobku (energie na energetických štítcích ohřivačů pro regulátoru teploty) |
| a | Supplier's name or trademark | наименование или търговска марка на доставчика | nombre o marca comercial del proveedor | název nebo ochranná známka dodavatele |
| b | Supplier's model identifier | идентификатор на доставчика за модела | identificador del modelo del proveedor | identifikační značka modelu používaná dodavatelem |
| c | Seasonal space heating energy efficiency class | класът на сезонна отоплителна енергийна ефективност | la clase de eficiencia energética estacional de calefacción | třída sezonní energetické účinnosti vytápění |
| d | Rated heat output (Average) | номиналната топлинна мощност (средни) | la potencia calorífica nominal (medias) | jmenovitý tepelný výkon (průměrných) |
| e | Seasonal space heating energy efficiency (Average) | сезонната енергийна ефективност при отопление (средни) | la eficiencia energética estacional de calefacción (medias) | sezonní energetická účinnost vytápění (průměrných) |
| f | Annual energy consumption (Average) | годишното потребление на енергия (средни) | el consumo anual de energía (medias) | roční spotřeba energie (průměrných) |
| g | L _{WA} (sound power level, indoors) | L _{WA} (ниво на звуковата мощност, на закрито) | LWA (el nivel de potencia acústica, en interiores) | L _{WA} (případně hladina akustického výkonu, vnitřním prostorem) |
| h | Specific precautions ¹⁾ | специфични предпазни ¹⁾ | precauciones específicas ¹⁾ | konkrétní preventivní opatření ¹⁾ |
| i | Rated heat output (Colder) | номиналната топлинна мощност (по-студени) | la potencia calorífica nominal (l) | jmenovitý tepelný výkon (chladnějších) |
| j | Rated heat output (Warmer) | номиналната топлинна мощност (по-топли) | la potencia calorífica nominal (l) | jmenovitý tepelný výkon (teplejších) |
| k | Seasonal space heating energy efficiency (Colder) | сезонната енергийна ефективност при отопление (по-студени) | la eficiencia energética estacional de calefacción (más frías) | sezonní energetická účinnost vytápění (chladnějších) |
| l | Seasonal space heating energy efficiency (Warmer) | сезонната енергийна ефективност при отопление (по-топли) | la eficiencia energética estacional de calefacción (más cálidas) | sezonní energetická účinnost vytápění (teplejších) |
| m | Annual energy consumption (Colder) | годишното потребление на енергия (по-студени) | el consumo anual de energía (más frías) | roční spotřeba energie (chladnějších) |
| n | Annual energy consumption (Warmer) | годишното потребление на енергия (по-топли) | el consumo anual de energía (más cálidas) | roční spotřeba energie (teplejších) |
| o | L _{WA} (sound power level, outdoors) | L _{WA} (ниво на звуковата мощност, на открито) | LWA (el nivel de potencia acústica, en exteriores) | L _{WA} (případně hladina akustického výkonu, venkovním prostorem) |
| p | Medium-temperature | средотемпературни | de temperatura media | středněteplotní |
| q | Low-temperature | нискотемпературни | de baja temperatura | nízkoteplotním |
| r | ¹⁾ Precautions as described in the installation/user manual must be taken when assembling, installing and maintaining this product. | ¹⁾ Описаните в ръководството за монтиране/ръководството за потребителя предпазни мерки трябва да се спазват при сглобяване, монтиране и поддръжка на продукта. | ¹⁾ Las precauciones descritas en los manuales de usuario e instalación deben tomarse cuando se ensambla, instala y mantiene este producto | ¹⁾ Při montáži, instalaci a údržbě tohoto produktu je třeba se řídit bezpečnostními opatřeními popsanými v instalační a uživatelské příručce. |
| s | Seasonal space heating energy efficiency (Preferential space heater) | сезонната енергийна ефективност при отопление (приоритетно използвания отоплителен топлоизточник) | la eficiencia energética estacional de calefacción (aparato de calefacción preferente) | Sezonní space heating energy efficiency (preferovaného ohřivače pro vytápění vnitřních prostorů) |
| t | Factor for weighting the heat output of the preferential and supplementary heaters | тепловият коефициент за претегляне на топлинната енергия, произведена от приоритетно използвания и от допълнителния подгревател на даден комплект | el factor de ponderación de la potencia calorífica de los calefactores preferente y complementario de un equipo combinado | faktor pro porovnání tepelného výkonu preferovaného ohřivače a přidávajících ohřivačů soupravy |
| u | Mathematical expression : 294 / (11 • Prated) ¹⁾ | математически израз : 294 / (11 • Prated) ¹⁾ | la expresión matemática : 294 / (11 • Prated) ¹⁾ | hodnotu matematického výrazu : 294 / (11 • Prated) ¹⁾ |
| v | Mathematical expression : 115 / (11 • Prated) ²⁾ | математически израз : 115 / (11 • Prated) ²⁾ | la expresión matemática : 115 / (11 • Prated) ²⁾ | hodnotu matematického výrazu : 115 / (11 • Prated) ²⁾ |
| w | The difference between the seasonal space heating energy efficiencies under average and colder climate conditions ³⁾ | разликата между сезонната отоплителна енергийна ефективност при средни климатични условия и тази при по-студени климатични условия ³⁾ | la diferencia entre las eficiencias energéticas estacionales de calefacción en condiciones climáticas medias y más frías, expresado en porcentaje ³⁾ | rozdíl mezi sezonními energetickými účinnostmi vytápění za průměrných a chladnějších klimatických podmínek ³⁾ |
| x | The difference between the seasonal space heating energy efficiencies under warmer and average climate conditions ⁴⁾ | разликата между сезонната отоплителна енергийна ефективност при по-топли климатични условия и тази при средни климатични условия ⁴⁾ | la diferencia entre las eficiencias energéticas estacionales de calefacción en condiciones climáticas más cálidas y medias, expresado en porcentaje ⁴⁾ | rozdíl mezi sezonními energetickými účinnostmi vytápění za teplejších a průměrných klimatických podmínek ⁴⁾ |
| y | ¹⁾ Whereby Prated is related to the preferential space heater. | ¹⁾ където Prated е свързана с приоритетно използвания отоплителен топлоизточник | ¹⁾ donde la Prated está relacionada con el aparato de calefacción preferente | ¹⁾ přičemž Prated se vztahuje k preferovanému ohřivači pro vytápění vnitřních prostorů |
| z | ²⁾ Whereby Prated is related to the preferential space heater. | ²⁾ където Prated е свързана с приоритетно използвания отоплителен топлоизточник | ²⁾ donde la Prated está relacionada con el aparato de calefacción preferente | ²⁾ preferovanému ohřivači pro vytápění vnitřních prostorů |
| aa | ³⁾ ⁴⁾ For preferential heat pump space heaters | ³⁾ ⁴⁾ за приоритетно използвани отоплителни термопомпени агрегати | ³⁾ ⁴⁾ en lo que respecta a los aparatos de calefacción preferentes con bomba de calor | ³⁾ ⁴⁾ preferovaných ohřivačů pro vytápění vnitřních prostorů s tepelným čerpadlem navíc |
| ab | The class of the temperature control | класът на регулатора на температурата | la clase del control de temperatura | třída regulátoru teploty |
| ac | The contribution of the temperature control to seasonal space heating energy efficiency | приносът на регулатора на температурата към сезонната енергийна ефективност при отопление | la contribución del control de temperatura a la eficiencia energética estacional de calefacción | přínos regulátoru teploty k sezonní energetické účinnosti vytápění |



| No | Danish(DA) | German(DE) | Estonian(ET) | Greek(EL) |
|-----|--|---|--|---|
| i | KOMMISSIONENS DELEGEREDE FORORDNING (EU) Nr. 811/2013 | DELEGIERTE VERORDNUNG (EU) Nr. 811/2013 DER KOMMISSION | KOMISJONI DELEGEERITUD MÄÄRUS (EL) nr 811/2013 | ΚΑΤ' ΕΥΧΡΩΣΤΟΛΟΤΗΤΗ ΚΑΝΟΝΙΣΜΟΣ (ΕΕ) αριθ. 811/2013 ΤΗΣ ΕΠΙΤΡΟΠΗΣ |
| ii | Produktdatablad (energimærkning af anlæg til rumopvarmning) | Produktdatenblatt (Energiekennzeichnung von Raumheizgeräten) | Tootekirjeldus (energiamärgistusega kohta kütteseadmest) | Δελτίο προϊόντος (ενεργειακή επισήμανση των θερμαντήρων χώρου) |
| iii | Produktdatablad (energimærkning af anlæg til pakker med anlæg til rumopvarmning) | Produktdatenblatt (Energiekennzeichnung von Verbundanlagen aus Raumheizgeräten) | Tootekirjeldus (energiamärgistusega kohta kütteseadme, komplekt) | Δελτίο προϊόντος (ενεργειακή επισήμανση των των των συγκροτημάτων θερμαντήρα χώρου) |
| iv | Produktdatablad (energimærkning af anlæg til temperaturstyring) | Produktdatenblatt (Energiekennzeichnung von Temperaturreglern) | Tootekirjeldus (energiamärgistusega kohta temperatuuriregulaatorist) | Δελτίο προϊόντος (ενεργειακή επισήμανση των ρυθμιστή θερμοκρασίας) |
| a | leverandørens navn eller varemærke | Name oder Warenzeichen des Lieferanten | tamija nimi või kaubamärk | το όνομα/η επωνυμία του προμηθευτή ή εμπορικό σήμα |
| b | leverandørens modelidentifikation | Modellkennung des Lieferanten | tamija mudelitähis | το αναγνωριστικό μοντέλου από τον προμηθευτή |
| c | klasse for årsvirkningsgrad ved rumopvarmning fastslået | die Klasse für die jahreszeitbedingte Raumheizungs-Energieeffizienz | kütmise seosoonse energiatõhususe klass | η τάξη ενεργειακής απόδοσης της εποχιακής θέρμανσης χώρου |
| d | den nominelle nytteeffekt (gennemsnitlige) | die Wärmenennleistung (durchschnittlichen) | nimisoojusvõimsus (keskmistel) | η ονομαστική θερμική ισχύς (μέσες) |
| e | årsvirkningsgraden ved rumopvarmning (gennemsnitlige) | die jahreszeitbedingte Raumheizungs-Energieeffizienz (durchschnittlichen) | kütmise seosoonse energiatõhusus (keskmistel) | η ενεργειακή απόδοση της εποχιακής θέρμανσης χώρου σε (μέσες) |
| f | det årlige energiforbrug (gennemsnitlige) | den jährlichen Energieverbrauch (durchschnittlichen) | aastane energiatarbimine (keskmistel) | ετήσια κατανάλωση ενέργειας (μέσες) |
| g | LWA (lydeffektniveauet, inde) | LWA (den Schalleistungspegel, in Innenräumen) | LWA (müraavõimsustase, siseruumis) | LWA (η στάθμη ηχητικής ισχύος, εσωτερικού χώρου) |
| h | specifikke forholdsregler ¹⁾ | besonderen Vorkehrungen ¹⁾ | ettevaatusmeetmed kütteseadme koostamisel ¹⁾ | ειδικές προφυλάξεις ¹⁾ |
| i | den nominelle nytteeffekt (koldere) | die Wärmenennleistung (kälteren) | nimisoojusvõimsus (külmema) | η ονομαστική θερμική ισχύς (ψυχρότερες) |
| j | den nominelle nytteeffekt (varmere) | die Wärmenennleistung (wärmeren) | nimisoojusvõimsus (soojema) | η ονομαστική θερμική ισχύς (θερμότερες) |
| k | årsvirkningsgraden ved rumopvarmning (koldere) | die jahreszeitbedingte Raumheizungs-Energieeffizienz (kälteren) | kütmise seosoonse energiatõhusus (külmema) | η ενεργειακή απόδοση της εποχιακής θέρμανσης χώρου σε (ψυχρότερες) |
| l | årsvirkningsgraden ved rumopvarmning (varmere) | die jahreszeitbedingte Raumheizungs-Energieeffizienz (wärmeren) | kütmise seosoonse energiatõhusus (soojema) | η ενεργειακή απόδοση της εποχιακής θέρμανσης χώρου σε (θερμότερες) |
| m | det årlige energiforbrug (koldere) | den jährlichen Energieverbrauch (kälteren) | aastane energiatarbimine (külmema) | ετήσια κατανάλωση ενέργειας (ψυχρότερες) |
| n | det årlige energiforbrug (varmere) | den jährlichen Energieverbrauch (wärmeren) | aastane energiatarbimine (soojema) | ετήσια κατανάλωση ενέργειας (θερμότερες) |
| o | L _w (lydeffektniveauet, ude) | L _w (den Schalleistungspegel, im Freien) | L _w (müraavõimsustase, väljas) | L _w (η στάθμη ηχητικής ισχύος, εξωτερικού χώρου) |
| p | middeitemperatur | Mitteltemperatur | keskmisel temperatuuril | μέσες θερμοκρασίας |
| q | lavtemperatur | Niedertemperatur | külma kliima | χαμηλές θερμοκρασίες |
| r | ¹⁾ Du skal tage de forholdsregler, der er beskrevet i installations-/brugervejledningen, når du samler, installerer og vedligeholder dette produkt. | ¹⁾ Beim Montieren, Installieren und Warten des Geräts müssen die im Installations-/Benutzerhandbuch beschriebenen Vorsichtsmaßnahmen eingehalten werden. | ¹⁾ Toote kokkupanekul, installimisel ja hooldamisel järgige paigaldus-/kasutusjuhendis kirjeldatud ettevaatusabinõusid. | ¹⁾ Όταν συναρμολογείτε, εγκαθιστάτε και συντηρείτε αυτό το προϊόν, πρέπει να λαμβάνετε τις προφυλάξεις που περιγράφονται στο εγχειρίδιο εγκατάστασης/χρήσης. |
| s | årsvirkningsgraden ved rumopvarmning (det primære anlæg til rumopvarmning) | Seasonal space heating energy efficiency (Vorzugsraumheizgerätes) | kütmise seosoonse energiatõhusus (põhikütteseadme) | η ενεργειακή απόδοση της εποχιακής θέρμανσης χώρου σε (προτιμώμενο θερμαντήρα χώρου) |
| t | faktoren for vægtning af den nominelle nytteeffekt af primære og supplerende forsyningsanlæg i en pakke | Faktor zur Gewichtung der Wärmeleistung der Vorzugs- und Zusatzheizgeräte | komplekti põhi- ja täiendavate kütteseadmete soojusvõimsuse kaalumistegur vastavalt käesoleva | ο συντελεστής στάθμησης της θερμικής ισχύος του προτιμώμενου και του συμπληρωματικού θερμαντήρα του συγκροτήματος |
| u | værdien af det matematiske udtryk : 294 / (11 • Prated) ¹⁾ | Wert des mathematischen Ausdrucks : 294 / (11 • Prated) ¹⁾ | matemaatilise avaldise : 294 / (11 • Prated) ¹⁾ | η τιμή του μαθηματικού τύπου : 294 / (11 • Prated) ¹⁾ |
| v | værdien af det matematiske udtryk : 115 / (11 • Prated) ²⁾ | Wert des mathematischen Ausdrucks : 115 / (11 • Prated) ²⁾ | matemaatilise avaldise : 115 / (11 • Prated) ²⁾ | η τιμή του μαθηματικού τύπου : 115 / (11 • Prated) ²⁾ |
| w | værdien af forskellen mellem årsvirkningsgraden ved rumopvarmning under gennemsnitlige og koldere klimaforhold ³⁾ | Wert der Differenz zwischen der jahreszeitbedingten Raumheizungs-Energieeffizienz bei durchschnittlichen und derjenigen bei kälteren Klimaverhältnissen ³⁾ | keskmistel kliimatingimustel ja külmema kliima korral leitud kütmise seosoonsete energiatõhususte vahe ³⁾ | διαφοράς της ενεργειακής απόδοσης της εποχιακής θέρμανσης χώρου υπό μέσες και ψυχρότερες κλιματικές συνθήκες ³⁾ |
| x | værdien af forskellen mellem årsvirkningsgraden ved rumopvarmning under varmere og gennemsnitlige klimaforhold ⁴⁾ | Wert der Differenz zwischen der jahreszeitbedingten Raumheizungs-Energieeffizienz bei wärmeren und derjenigen bei durchschnittlichen Klimaverhältnissen ⁴⁾ | soojema kliima korral ja keskmistel kliimatingimustel leitud kütmise seosoonsete energiatõhususte vahe ⁴⁾ | διαφοράς της ενεργειακής απόδοσης της εποχιακής θέρμανσης χώρου υπό θερμότερες και μέσες κλιματικές συνθήκες ⁴⁾ |
| y | ¹⁾ hvor Prated vedrører det primære anlæg til rumopvarmning | ¹⁾ wobei sich Prated auf das Vorzugsraumheizgerät bezieht | ¹⁾ siin Prated iseloomustab põhikütteseadet | ¹⁾ όπου Prated αφορά τον προτιμώμενο θερμαντήρα χώρου |
| z | ²⁾ hvor Prated vedrører det primære anlæg til rumopvarmning | ²⁾ wobei sich Prated auf das Vorzugsraumheizgerät bezieht | ²⁾ siin Prated iseloomustab põhikütteseadet | ²⁾ όπου Prated αφορά τον προτιμώμενο θερμαντήρα χώρου |
| aa | ³⁾ ⁴⁾ for primære varmepumpeanlæg til rumopvarmning | ³⁾ ⁴⁾ für Vorzugsraumheizgeräte mit Wärmepumpe | ³⁾ ⁴⁾ soojuspumbaga põhikütteseadmete kohta | ³⁾ ⁴⁾ για τους προτιμώμενους θερμαντήρες χώρου με αντλία θερμότητας |
| ab | klasse for temperaturstyring | die Klasse des Temperaturreglers | temperatuuri regulaatori klass | η τάξη του ρυθμιστή θερμοκρασίας |
| ac | temperaturstyringens andel af årsvirkningsgraden ved rumopvarmning i procent afrundet til en decimal | Beitrag des Temperaturreglers zur jahreszeitbedingten Raumheizungs-Energieeffizienz | temperatuuriregulaatori osa kütmise seosoonse energiatõhususes | το μερίδιο του ρυθμιστή θερμοκρασίας στην ενεργειακή απόδοση της εποχιακής θέρμανσης χώρου |



COMMISSION DELEGATED REGULATION (EU) No 811/2013ⁱ⁾

| No | French(FR) | Croatian(HR) | Italian(IT) | Latvian(LV) |
|-----|---|--|--|---|
| i | RÈGLEMENT DÉLÉGUÉ (UE) No 811/2013 DE LA COMMISSION | DELEGIRANA UREDBA KOMISJE (EU) br. 811/2013 | REGOLAMENTO DELEGATO N. 811/2013 DELLA COMMISSIONE EUROPEA | KOMISIJAS DELEĢĒTĀ REGULĀ (ES) Nr. 811/2013 |
| ii | Fiche de produit (l'étiquetage énergétique des dispositifs de chauffage des locaux) | Informacijski list proizvoda (označivanja energetske učinkovitosti grijača prostora) | Scheda prodotto (l'etichetta indica il consumo d'energia degli apparati per il riscaldamento) | Ražojuma datu lapa (energomarķējumu uz telpu sildītāju) |
| iii | Fiche de produit (l'étiquetage énergétique des produit combiné constitué d'un dispositif de chauffage des locaux) | Informacijski list proizvoda (označivanja energetske učinkovitosti kompleta koji sadržavaju grijač prostora) | Scheda prodotto (l'etichetta indica il consumo d'energia degli insiemi di apparati per il riscaldamento) | Ražojuma datu lapa (energomarķējumu uz telpu sildītāja iekārtas, komplektu) |
| iv | Fiche de produit (l'étiquetage énergétique des d'un régulateur de température) | Informacijski list proizvoda (označivanja energetske učinkovitosti uređaj za upravljanje temperaturom) | Scheda prodotto (l'etichetta indica il consumo d'energia dispositivi di controllo della temperatura) | Ražojuma datu lapa (energomarķējumu uz temperatūras regulatori) |
| a | le nom du fournisseur ou la marque commerciale | naživi ili zaštitni znak dobavljača | il nome o marchio del fornitore | piegādātāja nosaukums vai preču zīme |
| b | la référence du modèle donnée par le fournisseur | dobavljačeva identifikacijska oznaka modela | Identificativo del modello del fornitore | piegādātāja modeļa identifikators |
| c | la classe d'efficacité énergétique saisonnière, pour le chauffage des locaux | razred sezone energetske učinkovitosti pri zagrijavanju prostora | la classe di efficienza energetica stagionale di riscaldamento | telpu apsildes sezonas energoefektivitātes klase |
| d | la puissance thermique nominale (moyennes) | nazivna toplinska snaga (prosječnih) | la potenza termica nominale (medie) | nominalā siltuma jauda (vidējos) |
| e | l'efficacité énergétique saisonnière pour le chauffage des locaux (moyennes) | sezonska energetska učinkovitost pri zagrijavanju prostora (prosječnih) | l'efficienza energetica stagionale di riscaldamento dell'ambiente (medie) | telpu apsildes sezonas energoefektivitāte (vidējos) |
| f | la consommation annuelle d'énergie (moyennes) | godišnja potrošnja energije (prosječnih) | il consumo annuo di energia (medie) | gada enerģijas patēriņš (vidējos) |
| g | L _{wa} (le niveau de puissance acoustique, à l'intérieur) | L _{wa} (razina zvučne snage, u zatvorenom) | LWA (il livello di potenza sonora, interna) | L _{wa} (akustiskās jaudas līmenis, telpās) |
| h | les précautions particulières ¹⁾ | posebne mjere opreza ¹⁾ | eventuali precauzioni ¹⁾ | īpaši piesardzības pasākumi ¹⁾ |
| i | la puissance thermique nominale (plus froides) | nazivna toplinska snaga (hladnijim) | la potenza termica nominale (più fredde) | nominalā siltuma jauda (aukstākos) |
| j | la puissance thermique nominale (plus chaudes) | nazivna toplinska snaga (toplijim) | la potenza termica nominale (più calde) | nominalā siltuma jauda (siltākos) |
| k | l'efficacité énergétique saisonnière pour le chauffage des locaux (plus froides) | sezonska energetska učinkovitost pri zagrijavanju prostora (hladnijim) | l'efficienza energetica stagionale di riscaldamento (più fredde) | telpu apsildes sezonas energoefektivitāte (aukstākos) |
| l | l'efficacité énergétique saisonnière pour le chauffage des locaux (plus chaudes) | sezonska energetska učinkovitost pri zagrijavanju prostora (toplijim) | l'efficienza energetica stagionale di riscaldamento (più calde) | telpu apsildes sezonas energoefektivitāte (siltākos) |
| m | la consommation annuelle d'énergie (plus froides) | godišnja potrošnja energije (hladnijim) | il consumo annuo di energia (più fredde) | gada enerģijas patēriņš (aukstākos) |
| n | la consommation annuelle d'énergie (plus chaudes) | godišnja potrošnja energije (toplijim) | il consumo annuo di energia (più calde) | gada enerģijas patēriņš (siltākos) |
| o | L _{wa} (le niveau de puissance acoustique, à l'extérieur) | L _{wa} (razina zvučne snage, na otvorenom) | LWA (il livello di potenza sonora, all'esterno) | L _{wa} (akustiskās jaudas līmenis, ārpus telpām) |
| p | moyenne température | srednjim temperaturama | media temperatura | vidējās temperatūras |
| q | basse température | nisko temperatura | bassa temperatura | zemas temperatūras |
| r | ¹⁾ Des précautions, comme décrit dans le manuel d'installation/ d'utilisation, doivent être prises lors du montage, de l'installation et de l'entretien de l'appareil. | ¹⁾ Prilikom sastavljanja, instalacije i održavanja proizvoda potrebno je poduzeti mjere opreza navedene u priručniku za instalaciju / korisničkom priručniku. | ¹⁾ Le precauzioni descritte nel manuale Installazione/utente devono essere rispettate in fase di montaggio, installazione e manutenzione del prodotto | ¹⁾ Izstrādājuma salikšanas, uzstādīšanas un apkopes laikā jāievēro uzstādīšanas/lietošanas rokasgrāmātā norādītie piesardzības pasākumi. |
| s | l'efficacité énergétique saisonnière pour le chauffage des locaux (du dispositif de chauffage des locaux utilisé à titre principal) | sezonska energetska učinkovitost pri zagrijavanju prostora (primarnog grijača prostora) | l'efficienza energetica stagionale di riscaldamento (preferenziale per il riscaldamento) | telpu apsildes sezonas energoefektivitāte (preferenciālā telpu sildītāja) |
| t | le coefficient de pondération de la puissance thermique du dispositif de chauffage utilisé à titre principal et du dispositif de chauffage d'appoint d'un produit combiné | težinski faktor toplinske snage primarnog ili dodatnih grijača u kompletu | il fattore di ponderazione della potenza termica degli apparecchi di riscaldamento preferenziali o supplementari di un insieme | koeficients komplekta preferenciālā un papildu sildītāja siltuma jaudas svērtības vērtības iegūšanai |
| u | l'expression mathématique : 294 / (11 + Prated) ¹⁾ | matematičke formule : 294 / (11 + Prated) ¹⁾ | espressione matematica : 294 / (11 + Prated) ¹⁾ | matemātiskās izteiksmes : 294 / (11 + Prated) ¹⁾ |
| v | l'expression mathématique : 115 / (11 + Prated) ²⁾ | matematičke formule : 115 / (11 + Prated) ²⁾ | espressione matematica : 115 / (11 + Prated) ²⁾ | matemātiskās izteiksmes : 115 / (11 + Prated) ²⁾ |
| w | la différence entre les efficacités énergétiques saisonnières pour le chauffage des locaux dans les conditions climatiques moyennes et plus froides ³⁾ | razlike između sezonskih energetske učinkovitosti pri zagrijavanju prostora u prosječnim i hladnijim klimatskim uvjetima ³⁾ | Differenza tra l'efficienza energetica stagionale del riscaldamento in condizioni climatiche medie e più fredde ³⁾ | atšķirībai starp telpu apsildes sezonas energoefektivitāti vidējos un aukstākos apstākļos ³⁾ |
| x | la différence entre les efficacités énergétiques saisonnières pour le chauffage des locaux dans les conditions climatiques plus chaudes et moyennes ⁴⁾ | razlike između sezonskih energetske učinkovitosti pri zagrijavanju prostora u toplijim i prosječnim klimatskim uvjetima ⁴⁾ | Differenza tra l'efficienza energetica stagionale del riscaldamento in condizioni climatiche più calde e medie ⁴⁾ | atšķirībai starp telpu apsildes sezonas energoefektivitāti siltākos un vidējos apstākļos ⁴⁾ |
| y | ¹⁾ dans laquelle Prated renvoie au dispositif de chauffage des locaux utilisé à titre principal | ¹⁾ pri čemu se Prated odnosi na primarni grijač prostora | ¹⁾ dove Prominale si riferisce all'apparecchio per il riscaldamento preferenziale | ¹⁾ vērtība, kur Prated attiecas uz preferenciālo telpu sildītāju |
| z | ²⁾ dans laquelle Prated renvoie au dispositif de chauffage des locaux utilisé à titre principal | ²⁾ pri čemu se Prated odnosi na primarni grijač prostora | ²⁾ dove Prominale si riferisce all'apparato per il riscaldamento preferenziale | ²⁾ vērtība, kur Prated attiecas uz preferenciālo telpu sildītāju |
| aa | ³⁾ ⁴⁾ pour les dispositifs de chauffage des locaux par pompe à chaleur utilisés à titre principal | ³⁾ ⁴⁾ za primarne toplinske crpke za grijanje prostora | ³⁾ ⁴⁾ per gli apparati per il riscaldamento preferenziali a pompa di calore | ³⁾ ⁴⁾ preferenciālajiem siltumsūkņa telpu sildītājiem |
| ab | la classe du régulateur de température | razred uređaja za upravljanje temperaturom | la classe del dispositivo di controllo della temperatura | temperatūras regulatora klase |
| ac | la contribution du régulateur de température à l'efficacité énergétique saisonnière pour le chauffage des locaux | doprinos uređaja za upravljanje temperaturom sezonskoj energetske učinkovitosti pri zagrijavanju prostora | il contributo del dispositivo di controllo della temperatura all'efficienza energetica stagionale di riscaldamento | temperatūras regulatora devums telpu apsildes sezonas energoefektivitātē |



| No | Lithuanian(LT) | Hungarian(HU) | Maltese(MT) | Dutch(NL) |
|-----|--|--|---|---|
| i | KOMISIJS DELEGUOTASIS REGLAMENTAS (ES) Nr. 811/2013 | A BIZOTTSÁG 811/2013/EU FELHATALMAZÁSON ALAPULÓ RENDELETE | REGOLAMENT TA' DELEGA TAL-KUMMISSJONI (UE) Nru 811/2013 | GEDELEGEEDE VERORDENING (EU) Nr. 811/2013 VAN DE COMMISSIE |
| ii | Gaminio vardiniiu parametru lentelė (energijos vartojimo efektyvumo ženklinimo dėl patalpų šildytuvų) | Termékmértető adatlap (energiafogyasztásának címkézése a helyiségűtő berendezések) | L-iskeda tat-taġhirfal tal-prodott (tikkettar enerġetiku ta' hiters tal-post) | Productkaart (de energie-etikettering van ruimteverwarmingstoestellen) |
| iii | Gaminio vardiniiu parametru lentelė (energijos vartojimo efektyvumo ženklinimo dėl patalpų šildytuvų, komplektų) | Termékmértető adatlap (energiafogyasztásának címkézése a helyiségűtő berendezésből) | L-iskeda tat-taġhirfal tal-prodott (tikkettar enerġetiku ta' pakketti magħmulin minn hiters tal-post) | Productkaart (de energie-etikettering van pakketten van ruimteverwarmingstoestellen) |
| iv | Gaminio vardiniiu parametru lentelė (energijos vartojimo efektyvumo ženklinimo dėl temperatūros regulatoriaus) | Termékmértető adatlap (energiafogyasztásának címkézése a hőmérséklet-szabályozóból) | L-iskeda tat-taġhirfal tal-prodott (tikkettar enerġetiku ta' regulator tat-temperatura) | Productkaart (de energie-etikettering van temperatuurregelaars) |
| a | tiekejo pavadinimas arba prekės ženklas | a beszállító neve vagy védjegye | isem il-fornitur jew il-marka kummerċjali tiegħu | de naam van de leverancier of het handelsmerk |
| b | tiekejo modelo žymuo | a beszállító által megadott modellazonosító | l-identifikatur tal-mudell tal-fornitur | de typeaanduiding van de leverancier |
| c | sezoninio energijos patalpoms šildyti vartojimo efektyvumo klasė | sezonális helyiségűtési energiahatekynysági osztálya | il-klassi tal-effiċjenza enerġetika staġonali tat-tishin tal-post | de seizoensgebonden energie-efficiëntieklasse voor ruimteverwarming |
| d | vardinis šilumos atidavimas (vidutinio) | a mért hőteljesítmény (átlagos) | il-potenza termika nominali (medji) | de nominale warmteafgifte (gemiddelde) |
| e | sezoninis energijos patalpoms šildyti vartojimo efektyvumas (vidutinio) | a sezonális helyiségűtési hatások (átlagos) | l-effiċjenza enerġetika staġonali tat-tishin tal-post (medji) | de seizoensgebonden energie-efficiëntie voor ruimteverwarming (gemiddelde) |
| f | metinis energijos suvartojimas (vidutinio) | az éves energiafogyasztás (átlagos) | il-konsum annwali tal-enerġija (medji) | het jaarlijkse energieverbruik (gemiddelde) |
| g | L _{wa} (garso galios lygis, patalpoje decibelais) | L _{wa} (hangteljesítményszint, beltéri) | L _{wa} (il-livell ta' qawwa tal-hoss, fuq għewwa) | L _{wa} (het geluidsvormogensniveau, binnen) |
| h | specialios atsargumo priemonės ³⁾ | külön óvintézkedések ³⁾ | prekawżjoni speċifika ³⁾ | specifieke voorzorgsmaatregelen ³⁾ |
| i | vardinis šilumos atidavimas (šaltiesnio) | a mért hőteljesítmény (hidegebb) | il-potenza termika nominali (ikšah) | de nominale warmteafgifte (koude) |
| j | vardinis šilumos atidavimas (šiltiesnio) | a mért hőteljesítmény (melegebb) | il-potenza termika nominali (išan) | de nominale warmteafgifte (warmere) |
| k | sezoninis energijos patalpoms šildyti vartojimo efektyvumas (šaltiesnio) | a sezonális helyiségűtési hatások (hidegebb) | l-effiċjenza enerġetika staġonali tat-tishin tal-post (ikšah) | de seizoensgebonden energie-efficiëntie voor ruimteverwarming (koude) |
| l | sezoninis energijos patalpoms šildyti vartojimo efektyvumas (šiltiesnio) | a sezonális helyiségűtési hatások (melegebb) | l-effiċjenza enerġetika staġonali tat-tishin tal-post (išan) | de seizoensgebonden energie-efficiëntie voor ruimteverwarming (warmere) |
| m | metinis energijos suvartojimas (šaltiesnio) | az éves energiafogyasztás (hidegebb) | il-konsum annwali tal-enerġija (ikšah) | het jaarlijkse energieverbruik (koude) |
| n | metinis energijos suvartojimas (šiltiesnio) | az éves energiafogyasztás (melegebb) | il-konsum annwali tal-enerġija (išan) | het jaarlijkse energieverbruik (warmere) |
| o | L _{wa} (garso galios lygis, lauke decibelais) | L _{wa} (hangteljesítményszint, kültéri) | L _{wa} (il-livell ta' qawwa tal-hoss, fuq barra) | L _{wa} (het geluidsvormogensniveau, buiten) |
| p | vidutinė temperatūra | közepes hőmérsékletű | b/temperatura medja | midde temperatuur |
| q | žematemperatūra | alacsony hőmérsékletű | b/temperatura baxxa | lagetemperatuur |
| r | ¹⁾ Montuojant įrenginį šį produktą, taip pat atliekiant jo techninę priežiūrą, būtina atsižvelgti į montavimo / naudojimo vadovė aprašytas atsargumo priemones. | ¹⁾ A termék összeszerelése, telepítése és a karbantartása során tartsa be a telepítési/használati útmutatóban leírt óvintézkedéseket. | ¹⁾ Prekawżjonijet kif deskritt il-installazzjoni u l-utent manwali għandhom jittiedu meta jaqqa l'installazzjoni, u z-żamma dan il-prodott | ¹⁾ De voorzorgsmaatregelen die in de gebruikershandleiding worden beschreven, moeten in acht worden genomen bij montage, installatie en onderhoud van dit product. |
| s | sezoninis energijos patalpoms šildyti vartojimo efektyvumas (pirmiausia naudojama patalpų šildytuvų) | a sezonális helyiségűtési hatások (az elsődleges helyiségűtő berendezés) | l-effiċjenza enerġetika staġonali tat-tishin tal-post (tat-tishin tal-post tal-hiter tal-post preferenzjali) | de seizoensgebonden energie-efficiëntie voor ruimteverwarming (ruimteverwarming van de hoofdverwarming) |
| t | komplekto pirmiausia naudojamo ir papildomo šildytuvų šilumos atidavimo šiluminis koeficientas | a csomagban található elsődleges és kiegészítő fűtőberendezések hőteljesítményének súlyozására szolgáló tényező | il-fattur għall-ippazar tal-potenza termika tal-hiters preferenzjali u tal-hiters supplementari ta' pakkett | de factor voor het wegen van de warmteafgifte van hoofd- en aanvullende verwarmingstoestellen van een pakket |
| u | matematinio reikškinio : 294 / (11 • Prated) ¹⁾ | matematikai kifejezés : 294 / (11 • Prated) ¹⁾ | tal-formola matematika : 294 / (11 • Prated) ¹⁾ | de wiskundige formule : 294 / (11 • Prated) ¹⁾ |
| v | matematinio reikškinio : 115 / (11 • Prated) ²⁾ | matematikai kifejezés : 115 / (11 • Prated) ²⁾ | tal-formola matematika : 115 / (11 • Prated) ²⁾ | de wiskundige formule : 115 / (11 • Prated) ²⁾ |
| w | sezoninių energijos patalpoms šildyti vartojimo efektyvum skirtumo vidutinio ir šaltiesnio klimato sąlygomis ³⁾ | az átlagos és a hidegebb éghajlati viszonyok mellett mért szezonális helyiségűtési hatások közötti különbség ³⁾ | tad-differenza bejn l-effiċjenza enerġetika staġonali tat-tishin tal-post f'kundizzjonijiet klimatiċi medji u dik f'kundizzjonijiet klimatiċi ikšah ³⁾ | het verschil tussen de seizoensgebonden energie-efficiënties voor ruimteverwarming onder warmere en gemiddelde klimaatomstandigheden ³⁾ |
| x | sezoninių energijos patalpoms šildyti vartojimo efektyvum skirtumo šiltiesnio ir vidutinio klimato sąlygomis ⁴⁾ | a melegebb és az átlagos éghajlati viszonyok mellett mért szezonális helyiségűtési hatások közötti különbség ⁴⁾ | tad-differenza bejn l-effiċjenza enerġetika staġonali tat-tishin tal-post f'kundizzjonijiet klimatiċi medji u dik f'kundizzjonijiet klimatiċi išan ⁴⁾ | het verschil tussen de seizoensgebonden energie-efficiënties voor ruimteverwarming onder gemiddelde en koudere klimaatomstandigheden ⁴⁾ |
| y | ¹⁾ kur Prated yra susijęs su pirmiausia naudojamu patalpų šildytuvu | ¹⁾ ahol a Prated az elsődleges helyiségűtő berendezésre vonatkozik | ¹⁾ fejn il-valur ta' Prated huwa marbut mal-hiter tal-post preferenzjali | ¹⁾ waarbij Prated is gerelateerd aan het ruimteverwarmingstoestel als hoofdverwarming |
| z | ²⁾ kur Prated yra susijęs su pirmiausia naudojamu patalpų šildytuvu | ²⁾ ahol a Prated az elsődleges helyiségűtő berendezésre vonatkozik | ²⁾ fejn il-valur ta' Prated huwa marbut mal-hiter tal-post preferenzjali | ²⁾ waarbij Prated is gerelateerd aan het ruimteverwarmingstoestel als hoofdverwarming |
| aa | ³⁾ , ⁴⁾ pirmiausia naudojama patalpų šildytuvų su šilumos siurbliu | ³⁾ , ⁴⁾ elsődleges hőszivattyús helyiségűtő berendezések esetében | ³⁾ , ⁴⁾ għall-hiters tal-post preferenzjali b'pompa tas-shana | ³⁾ , ⁴⁾ voor ruimteverwarmingstoestellen met warmtepomp als hoofdverwarming |
| ab | temperatūros regulatoriaus klasė | a hőmérséklet-szabályozó osztálya | il-klassi tar-regolatur tat-temperatura | de klasse van de temperatuurregelaar |
| ac | temperatūros regulatoriaus sandas sezoniniam energijos patalpoms šildyti vartojimo efektyvumui | a hőmérséklet-szabályozó szezonális helyiségűtési hatásokhoz való hozzájárulásának | il-kontribut tar-regolatur tat-temperatura għall-effiċjenza enerġetika staġonali tat-tishin tal-post | de bijdrage van de temperatuurregelaar aan de seizoensgebonden energie-efficiëntie voor ruimteverwarming |



COMMISSION DELEGATED REGULATION (EU) No 811/2013¹⁾

| No | Polish(PL) | Portuguese(PT) | Romanian(RO) | Slovak(SK) |
|-----|--|--|---|--|
| i | ROZPORZĄDZENIE DELEGOWANE KOMISJI (UE) NR 811/2013 | REGULAMENTO DELEGADO (UE) Nº 811/2013 DA COMISSÃO | REGULAMENTUL DELEGAT AL COMISIEI (UE) NR. 811/2013 | DELEGOVANÉ NARIADENIE KOMISIE (EÚ) č. 811/2013 |
| ii | Karta produktu (w odniesieniu do etykiety efektywności energetycznej dla ogrzewaczy pomieszczeń) | Ficha de produto (rotulagem energética dos aquecedores de ambiente) | Fișa produsului (ce privește clasa de energie a instalatilor pentru încălzirea incintelor) | Informačný list (energetické označovanie tepelných zdrojov na vykurovanie priestoru) |
| iii | Karta produktu (w odniesieniu do etykiety efektywności energetycznej dla zestawów zawierających ogrzewacz pomieszczeni) | Ficha de produto (rotulagem energética dos sistemas mistos de aquecedor de ambiente) | Fișa produsului (ce privește clasa de energie a instalatilor pentru încălzirea incintelor) | Informačný list (energetické označovanie tepelných zdrojov na vykurovanie priestoru) |
| iv | Karta produktu (w odniesieniu do etykiety efektywności energetycznej dla regulatorów temperatury) | Ficha de produto (rotulagem energética dos dispositivos de controlo de temperatura) | Fișa produsului (ce privește etichetarea energetică a reglatoarelor de temperatură) | Informačný list (energetické označovanie regulátorov teploty) |
| a | nazwa dostawcy lub jego znak towarowy | Nome do fornecedor | Denumirea sau marca comercială a furnizorului | meno dodávateľa alebo ochranná známka |
| b | identyfikator modelu dostawcy | Modelo | Modelul identificator al furnizorului | identifikačný kód modelu |
| c | klasa sezonowej efektywności energetycznej ogrzewania pomieszczeń | Classe de eficiência energética do aquecimento ambiente sazonal | Clasa de eficiență energetică sezonieră aferentă încălzirii incintelor | trieda sezónnej energetickej účinnosti vykurovania priestoru |
| d | Znamionowa moc cieplna (uśredniona) | Potência calorífica nominal (condições climáticas médias) | Puterea termică nominală (medie) | menovitý tepelný výkon (priemerný) |
| e | Sezonowa efektywność energetyczna ogrzewania pomieszczeń (uśredniona) | Eficiência energética do aquecimento ambiente sazonal (condições climáticas médias) | Eficiență energetică sezonieră aferentă încălzirii incintelor (medie) | sezónna energetická účinnosť vykurovania priestoru (priemerná) |
| f | Roczne zużycie energii (uśrednione) | Consumo anual de energia (condições climáticas médias) | Consumul anual de energie (medie) | ročná spotreba energie (priemerná) |
| g | LWA (poziom mocy akustycznej, w pomieszczeniu) | LWA (Nivel de potencia sonora, no interior) | LWA (nivelul de putere acustică, la interior) | LWA (hladina akustického výkonu, vnitorná jednotky) |
| h | Szczególne środki ostrożności ¹⁾ | Precauções específicas ¹⁾ | Măsură de precauție specifică ¹⁾ | osobitné bezpečnostné opatrenie ¹⁾ |
| i | znamionowa moc cieplna (chłodnego) | Potência calorífica nominal (condições climáticas mais frias) | Puterea termică nominală (mai reci) | menovitý tepelný výkon (chladnejší) |
| j | znamionowa moc cieplna (ciepłego) | Potência calorífica nominal (condições climáticas mais quentes) | Puterea termică nominală (mai calde) | menovitý tepelný výkon (teplejší) |
| k | sezonowa efektywność energetyczna ogrzewania pomieszczeń (chłodnego) | Eficiência energética do aquecimento ambiente sazonal (condições climáticas mais frias) | Eficiență energetică sezonieră aferentă încălzirii incintelor (mai reci) | sezónna energetická účinnosť vykurovania priestoru (chladnejší) |
| l | sezonowa efektywność energetyczna ogrzewania pomieszczeń (ciepłego) | Eficiência energética do aquecimento ambiente sazonal (condições climáticas mais quentes) | Eficiență energetică sezonieră aferentă încălzirii incintelor (mai calde) | sezónna energetická účinnosť vykurovania priestoru (teplejší) |
| m | roczne zużycie energii (chłodnego) | Consumo anual de energia (condições climáticas mais frias) | Consum anual de energie (mai reci) | ročná spotreba energie (chladnejší) |
| n | roczne zużycie energii (ciepłego) | Consumo anual de energia (condições climáticas mais quentes) | Consum anual de energie (mai calde) | ročná spotreba energie (teplejších) |
| o | LWA (poziom mocy akustycznej, na zewnątrz) | LWA (Nivel de potencia sonora, no exterior) | LWA (nivelul de putere acustică, la exterior) | LWA (hladina akustického výkonu, vonkajšie jednotky) |
| p | średnotemperaturowe | média temperatura | Temperatură medie | stredná teplota |
| q | niskotemperaturowe | baixa temperatura | Temperatură scăzută | nízokteplotné |
| r | ¹⁾ Podczas montażu, instalacji oraz serwisowaniu produktu należy stosować szczególne środki ostrożności zgodnie z informacjami zawartymi w instrukcji instalacji/podreczniku użytkownika. | ¹⁾ As precauções descritas no manual de instalação/ instruções dever ser adotadas durante a montagem, instalação ou manutenção do produto. | ¹⁾ Atenționări, descrise în manualul de instalare/ operare, ce trebuie luate în considerare când se asamblează, instalează sau întreține acest produs. | ¹⁾ Bezpečnostné opatrenia, ktoré sú popísané v inštalácii/používateľskej príručke, sa musia vykonať pri inštalácii a údržbe tohto produktu. |
| s | sezonowa efektywność energetyczna ogrzewania pomieszczeń (podstawowego ogrzewacza pomieszczeń) | Eficiência energética do aquecimento ambiente sazonal (do aquecedor de ambiente preferencial) | Eficiență energetică sezonieră aferentă încălzirii incintelor (al instalatije preferențiale pentru încălzirea incintelor) | sezónna energetická účinnosť vykurovania priestoru (uprednostňovaného tepelného zdroja na vykurovanie priestoru) |
| t | współczynnik wiążący moc cieplną ogrzewaczy podstawowych oraz ogrzewaczy dodatkowych w zestawie | o fator de ponderação da potência calorífica do aquecedor preferencial e dos aquecedores complementares de um sistema misto | factorul de ponderare a puterii termice a instalatilor de încălzire preferențiale și suplimentare din cadrul unui pachet | súčiniteľ na väzanie tepelného výkonu uprednostňovaného tepelného zdroja a dodatočných tepelných zdrojov |
| u | Wartość wyrażenia matematycznego: $294 / (11 \cdot Prated)$ ²⁾ | Expressão matemática: $294 / (11 \cdot Prated)$ ²⁾ | Valoarea expresiei matematice: $294 / (11 \cdot Prated)$ ²⁾ | matematický výraz: $294 / (11 \cdot Prated)$ ²⁾ |
| v | Wartość wyrażenia matematycznego: $115 / (11 \cdot Prated)$ ³⁾ | Expressão matemática: $115 / (11 \cdot Prated)$ ³⁾ | Valoarea expresiei matematice: $115 / (11 \cdot Prated)$ ³⁾ | matematický výraz: $115 / (11 \cdot Prated)$ ³⁾ |
| w | Różnica między sezonowymi efektywnościami energetycznymi ogrzewania pomieszczeń w warunkach klimatu umiarkowanego i chłodnego ³⁾ | Diferença entre as eficiências energéticas do aquecimento ambiente sazonal em condições climáticas médias e em condições climáticas mais frias ³⁾ | Diferența dintre eficiența energetică sezonieră aferentă încălzirii incintelor în condiții climatice medii și mai reci ³⁾ | hodnota rozdielu sezónnych energetických účinností vykurovania priestoru za priemerných a chladnejších podmienok ³⁾ |
| x | Różnica między sezonowymi efektywnościami energetycznymi ogrzewania pomieszczeń w warunkach klimatu ciepłego i umiarkowanego ⁴⁾ | Diferença entre as eficiências energéticas do aquecimento ambiente sazonal em condições climáticas mais quentes e em condições climáticas médias ⁴⁾ | Diferența dintre eficiența energetică sezonieră aferentă încălzirii incintelor în condiții climatice calde și medii ⁴⁾ | hodnota rozdielu sezónnych energetických účinností vykurovania priestoru za teplejších a priemerných podmienok ⁴⁾ |
| y | ¹⁾ gdzie Prated dotyczy podstawowego ogrzewacza pomieszczeń | ¹⁾ em que Prated diz respeito ao aquecedor de ambiente preferencial | ¹⁾ Unde Prated se referă la instalația preferențială pentru încălzirea incintelor. | ¹⁾ kde Prated súvisí s uprednostňovaným tepelným zdrojom na vykurovanie priestoru |
| z | ²⁾ gdzie Prated dotyczy podstawowego ogrzewacza pomieszczeń | ²⁾ em que Prated diz respeito ao aquecedor de ambiente preferencial | ²⁾ Unde Prated se referă la instalația preferențială pentru încălzirea incintelor. | ²⁾ kde Prated súvisí s uprednostňovaným tepelným zdrojom na vykurovanie priestoru |
| aa | ³⁾ ⁴⁾ Dla podstawowych ogrzewaczy pomieszczeń z pompą ciepła | ³⁾ ⁴⁾ para os aquecedores de ambiente preferenciais com bomba de calor | ³⁾ ⁴⁾ Pentru instalatiile preferențiale cu pompă de căldură pentru încălzirea incintelor. | ³⁾ ⁴⁾ pre uprednostňované tepelné zdroje na vykurovanie priestoru – tepelné čerpadlá |
| ab | klasa regulatora temperatury | A classe do dispositivo de controlo de temperatura | Clasa regulatorului de temperatură | trieda regulatora teploty |
| ac | udział regulatora temperatury w sezonowej efektywności energetycznej ogrzewania pomieszczeń | A contribuição do dispositivo de controlo de temperatura para a eficiência energética do aquecimento ambiente sazonal | Contribuția regulatorului de temperatură la eficiența energetică sezonieră aferentă încălzirii incintelor | príspevok regulatora teploty k sezónnej energetickej účinnosti vykurovania priestoru |



| No | Slovenian(SL) | Finnish(FI) | Swedish(SV) |
|-----|---|---|--|
| i | DELEGIRANA UREDBA KOMISIJE (EU) št. 811/2013 | KOMISSION DELEGOITU ASETUS (EU) N:o 811/2013 | KOMMISSIONENS DELEGERADE FÖRORDNING (EU) nr 811/2013 |
| ii | Podatkovni list izdelka (energijskega označevanja grelnikov prostorov) | Tuoteseloste (tilalämmittimien, energiamerkinnän) | Produktblad (energimärkning av pannor och värmepumpar för rumsuppvärmning) |
| iii | Podatkovni list izdelka (energijskega označevanja komplektov grelnika prostorov) | Tuoteseloste (tilalämmittimestä, energiamerkinnän) | Produktblad (energimärkning av paket med pannor och värmepumpar för rumsuppvärmning) |
| iv | Podatkovni list izdelka (energijskega označevanja naprave za uravnavanje temperature) | Tuoteseloste (lämmönsäätölaitteesta, energiamerkinnän) | Produktblad (energimärkning av temperaturregulator) |
| a | dobaviteljevo ime ali blagovna znamka | tavarantoimittajan nimi tai tavaramerkki | Leverantörens namn eller varumärke |
| b | dobaviteljeva identifikacijska oznaka modela | tavarantoimittajan mallitunniste | Leverantörens modellbeteckning |
| c | razred sezonske energijske učinkovitosti pri ogrevanju prostorov | tilalämmityksen kausittainen energiatehokkuusluokka | säsongrelaterade energieffektivitetsklass vid rumsuppvärmning |
| d | nazivna izhodna toplota (povprečnih) | niemelislämpöteho, mukaan lukien mahdollisen lisälämmittimen niemelislämpöteho (keskimääräisissä) | Den nominella avgivna värmeeffekten (genomsnittliga) |
| e | sezonska energijska učinkovitost pri ogrevanju prostorov (povprečnih) | tilalämmityksen kausittainen energiatehokkuus (keskimääräisissä) | Säsongmedelverkningsgrad för rumsuppvärmning (genomsnittliga) |
| f | letna poraba energije (povprečnih) | vuotuinen energiankulutus (keskimääräisissä) | Årlig energiförbrukning (genomsnittliga) |
| g | L_{w} (raven zvočne moči, notranja) | L_{w} (äänitehotas, sisällä desibeleinä) | L_{w} (Ljudeffektivit, inomhus) |
| h | posebni varnostni ukrepi ¹⁾ | erityiset varotoimenpiteet ¹⁾ | särskilda försiktighetsåtgärder ¹⁾ |
| i | nazivna izhodna toplota (hladnejših) | niemelislämpöteho, mukaan lukien mahdollisen lisälämmittimen niemelislämpöteho (kylmissä) | Den nominella avgivna värmeeffekten (kallare) |
| j | nazivna izhodna toplota (toplejših) | niemelislämpöteho, mukaan lukien mahdollisen lisälämmittimen niemelislämpöteho (lämpimissä) | Den nominella avgivna värmeeffekten (varmare) |
| k | sezonska energijska učinkovitost pri ogrevanju prostorov (hladnejših) | tilalämmityksen kausittainen energiatehokkuus (kylmissä) | Säsongmedelverkningsgrad för rumsuppvärmning (kallare) |
| l | sezonska energijska učinkovitost pri ogrevanju prostorov (toplejših) | tilalämmityksen kausittainen energiatehokkuus (lämpimissä) | Säsongmedelverkningsgrad för rumsuppvärmning (varmare) |
| m | letna poraba energije (hladnejših) | vuotuinen energiankulutus (kylmissä) | Årlig energiförbrukning (kallare) |
| n | letna poraba energije (toplejših) | vuotuinen energiankulutus (lämpimissä) | Årlig energiförbrukning (varmare) |
| o | L_{w} (raven zvočne moči, zunanja) | L_{w} (äänitehotas, ulkona desibeleinä) | L_{w} (Ljudeffektivit, utomhus) |
| p | srednjih temperaturah | keskilämpötilan | mediumtemperatur |
| q | nizkotemperaturna | matalan lämpötilan | lågtemperatur |
| r | ¹⁾ Pri sestavljanju, nameščanju ter vzdrževanju izdelka upoštevajte previdnostne ukrepe, ki so navedeni v priložnici za uporabo in namestitve. | ¹⁾ Asennus- tai käyttöoppaassa kuvattuja turvaohjeita on noudatettava laitteen kokoamisen, asentamisen ja huollon aikana. | ¹⁾ Försiktighetsåtgärder som beskrivs i installationsmanualen/bruksanvisningen måste följas vid montering, installation och underhåll av denna produkt. |
| s | sezonska energijska učinkovitost pri ogrevanju prostorov (za prednostni grelnik prostorov) | tilalämmityksen kausittainen energiatehokkuus (ensisijaisen tilalämmittimen tilalämmityksen) | Säsongmedelverkningsgrad för rumsuppvärmning (primära pannans eller värmepumpens) |
| t | ensisijaisen lämmittimen ja lisälämmittimen lämpötehon painotuskerroin | ensisijaisen lämmittimen ja lisälämmittimen lämpötehon painotuskerroin | Viktningfaktor för primär- och tillsatsvärmarens värmeproduktion för paket |
| u | matematične enačbe : $294 / (11 \cdot Prated)$ ¹⁾ | matemaattisen ilmaisin : $294 / (11 \cdot Prated)$ ¹⁾ | matematiska formeln : $294 / (11 \cdot Prated)$ ¹⁾ |
| v | matematične enačbe : $115 / (11 \cdot Prated)$ ²⁾ | matemaattisen ilmaisin : $115 / (11 \cdot Prated)$ ²⁾ | matematiska formeln : $115 / (11 \cdot Prated)$ ²⁾ |
| w | razlike med sezonskima energijskima učinkovitostma pri ogrevanju prostorov v povprečnih in hladnejših podnebnih razmerah ³⁾ | keskimääräisissä ja kylmissä ilmastolo-olosuhteissa saavutettavien tilalämmityksen kausittaisten energiatehokkuuksien ero ³⁾ | Skillnaden mellan den säsongrelaterade energieffektiviteten vid rumsuppvärmning under genomsnittliga och kallare klimatförhållanden ³⁾ |
| x | razlike med sezonskima energijskima učinkovitostma pri ogrevanju prostorov v toplejših in povprečnih podnebnih razmerah ⁴⁾ | lämpimissä ja keskimääräisissä ilmastolo-olosuhteissa saavutettavien tilalämmityksen kausittaisten energiatehokkuuksien ero ⁴⁾ | Skillnaden mellan den säsongrelaterade energieffektiviteten vid rumsuppvärmning under varmare och genomsnittliga klimatförhållanden ⁴⁾ |
| y | ¹⁾ pri čemer se Prated navezuje na prednostni grelnik prostorov | ¹⁾ jossa Prated liittyy ensisijaiseen tilalämmittimeen | ¹⁾ där Prated är relaterat till den primära pannan eller värmepumpen |
| z | ²⁾ pri čemer se Prated navezuje na prednostni grelnik prostorov | ²⁾ jossa Prated liittyy ensisijaiseen tilalämmittimeen | ²⁾ där Prated är relaterat till den primära pannan eller värmepumpen |
| aa | ³⁾ , ⁴⁾ prednostne toplotne črpalke za ogrevanje prostorov | ³⁾ , ⁴⁾ ensisijaisista lämpöpumppu-tilalämmittimestä | ³⁾ , ⁴⁾ för primära värmare med värmepump för rumsuppvärmning |
| ab | razred naprave za uravnavanje temperature | lämmönsäätölaitteen luokka | Temperaturregulatorns klass |
| ac | prispevek naprave za uravnavanje temperature k sezonski energijski učinkovitosti pri ogrevanju prostorov | lämmönsäätölaitteen vaikutus tilalämmityksen kausittaiseen energiatehokkuuteen | Temperaturregulatorns bidrag till säsongmedelverkningsgraden för rumsuppvärmning |





SAMSUNG

